



SOCE029 106CM Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

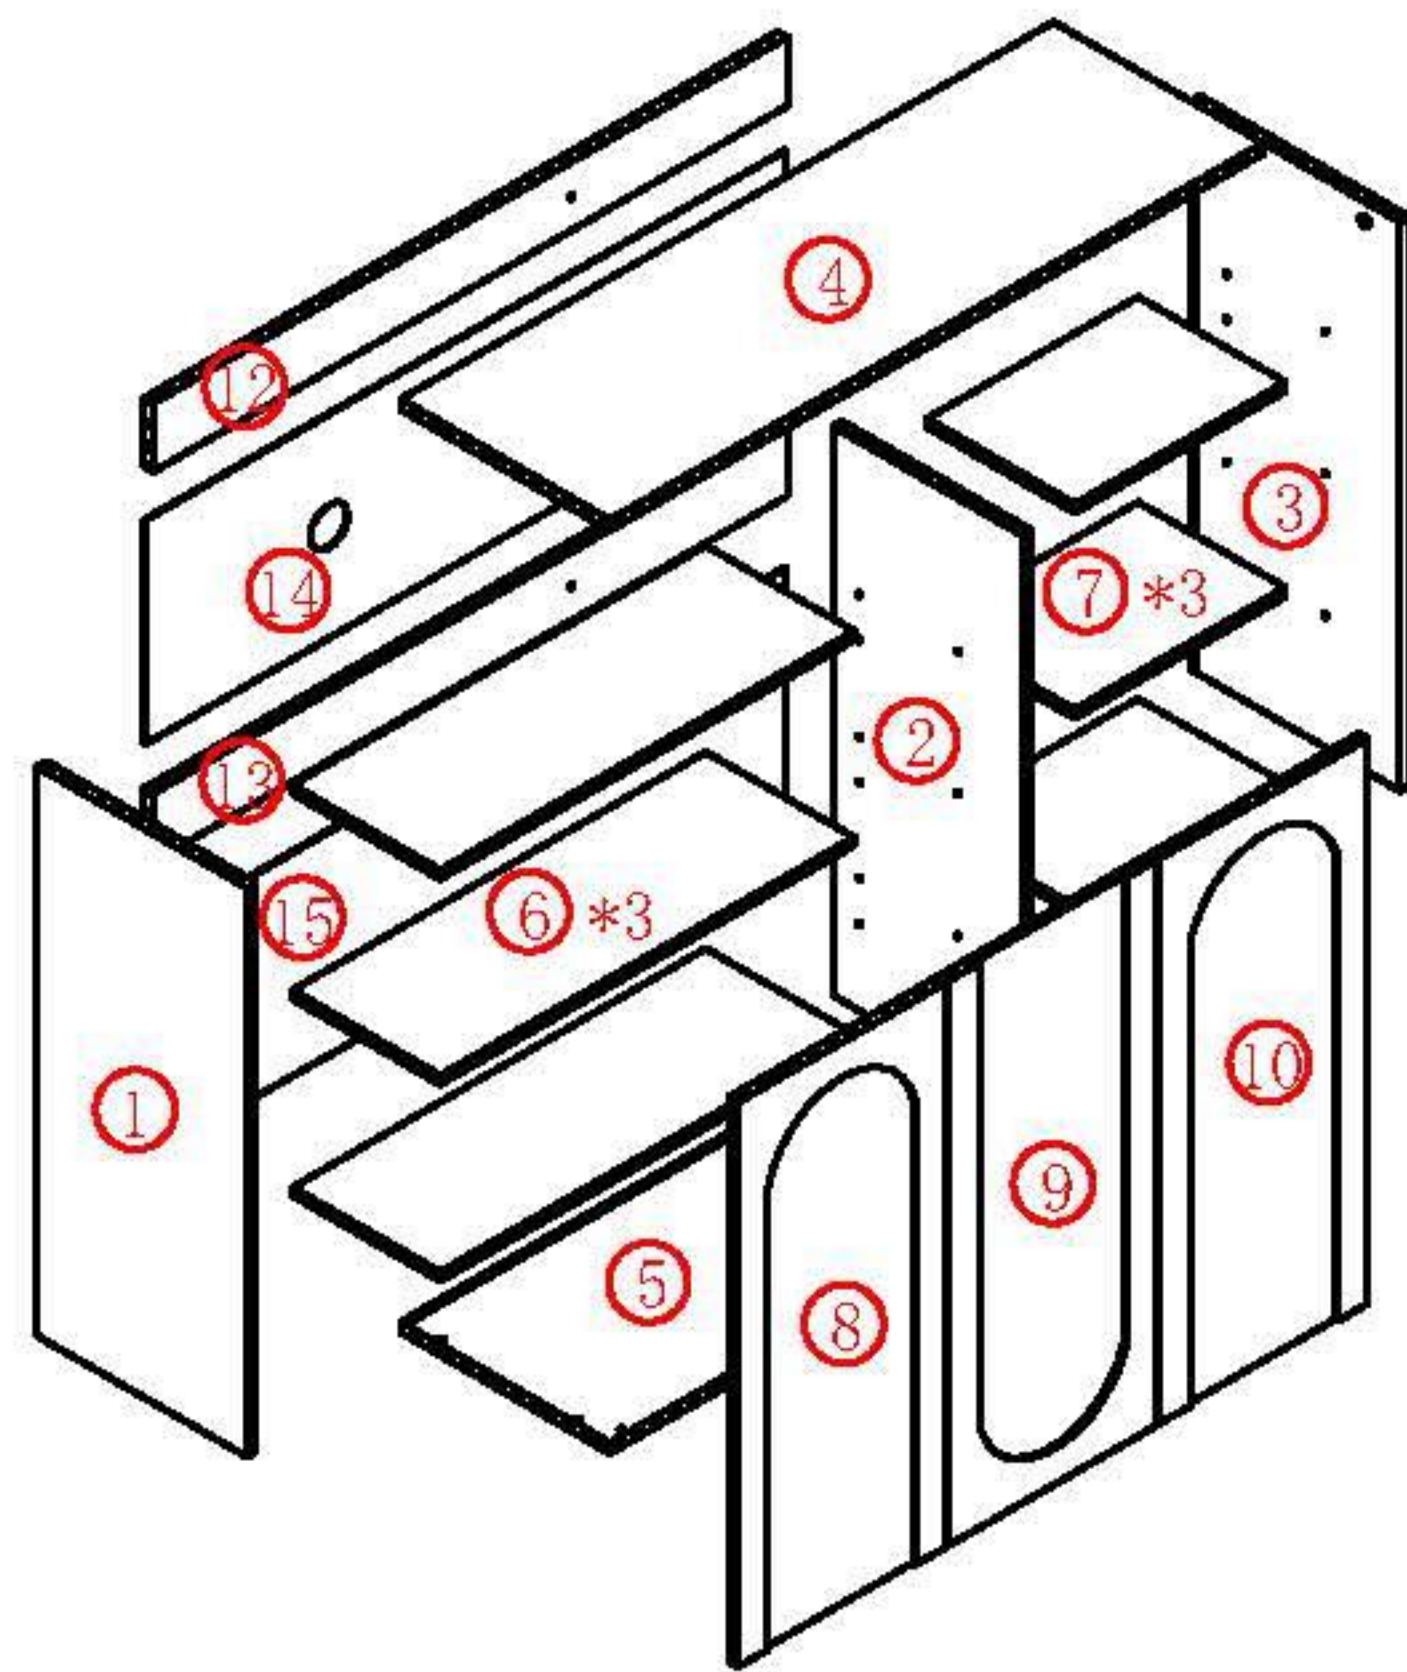


- ☆ 1. The panels and screws are not used. Please read the instructions carefully before installation and distinguish each panel components and screws.
- ☆ 2. When installing the towel, please tighten the screws to 70% first, and then tighten all the screws after all installation is completed.

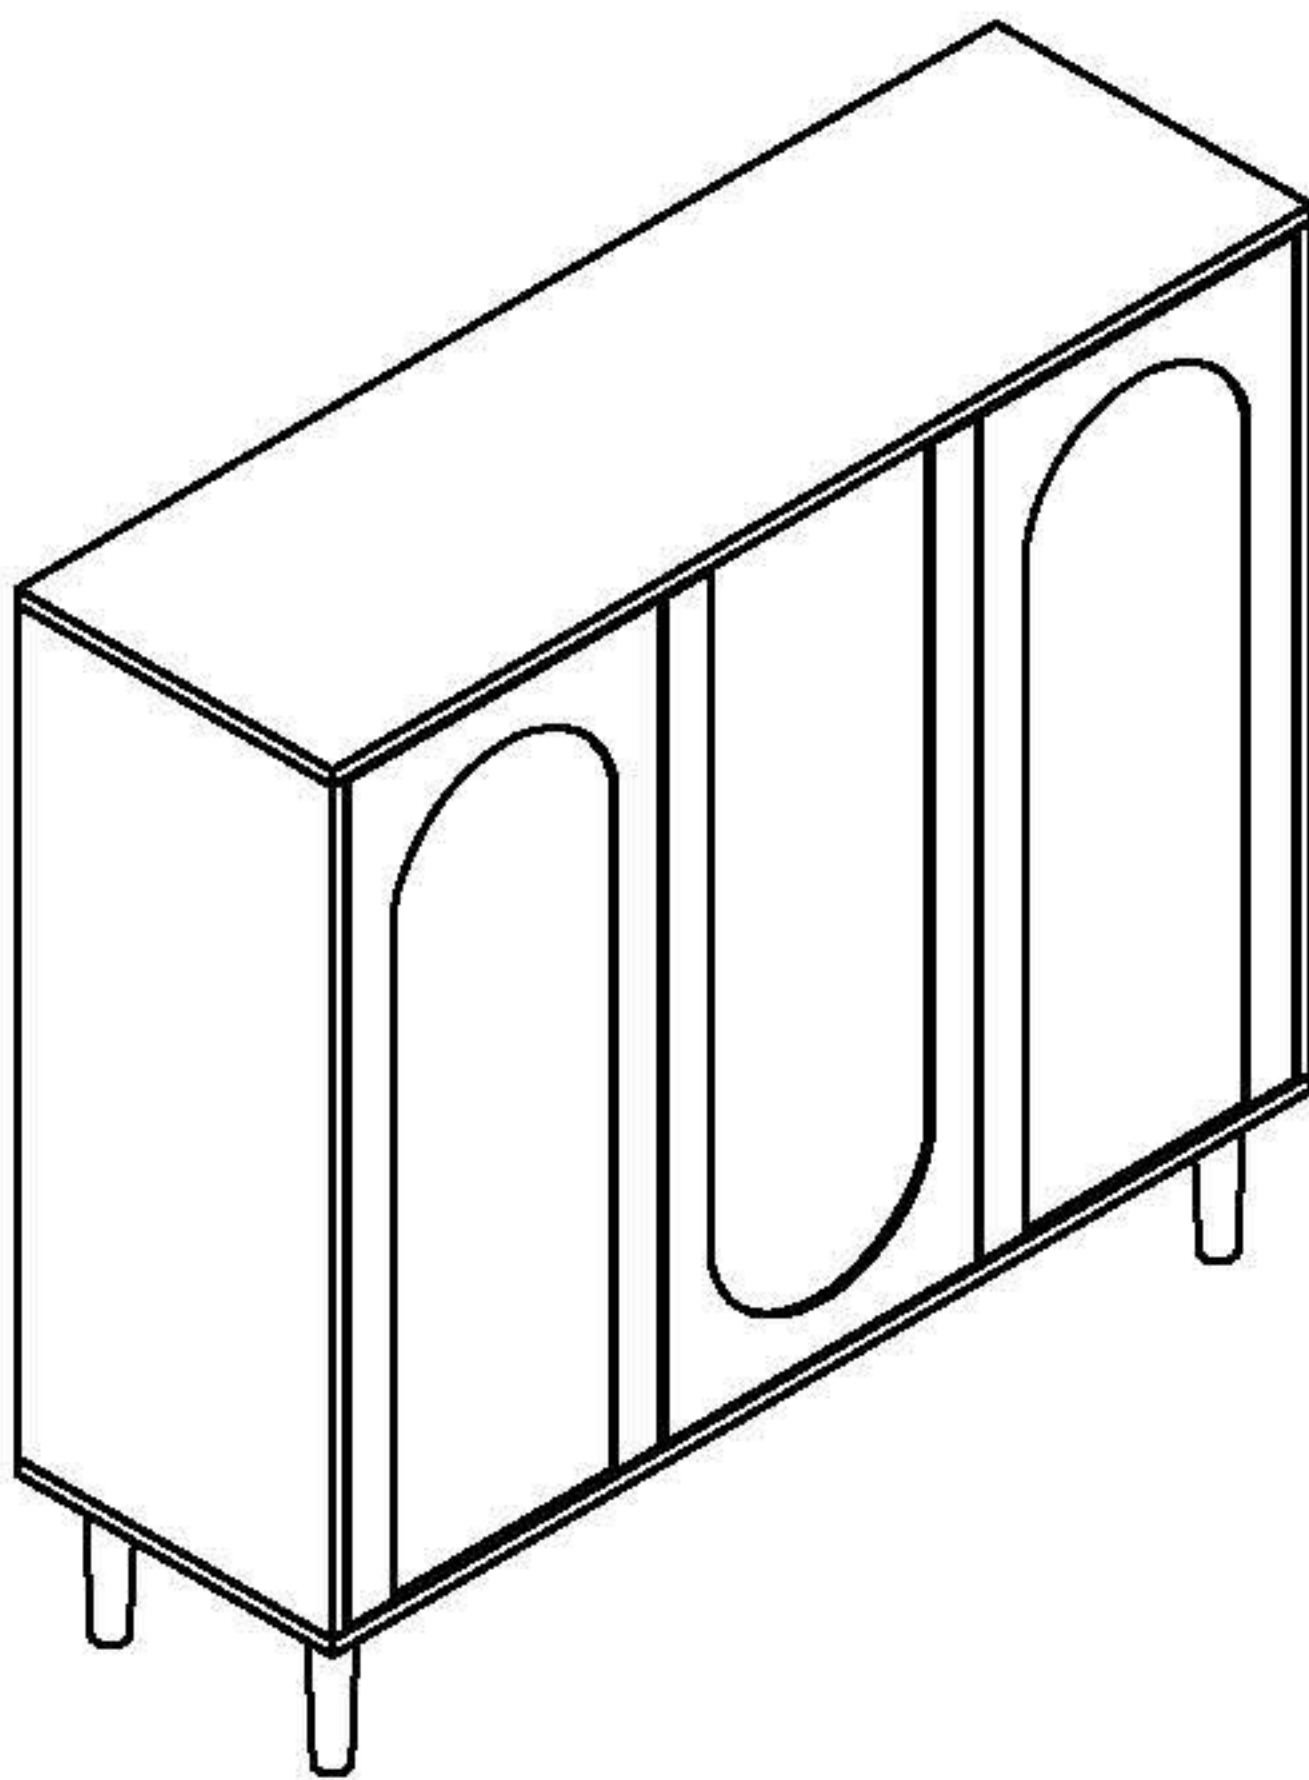

Inner Hexagonal Wrench *1

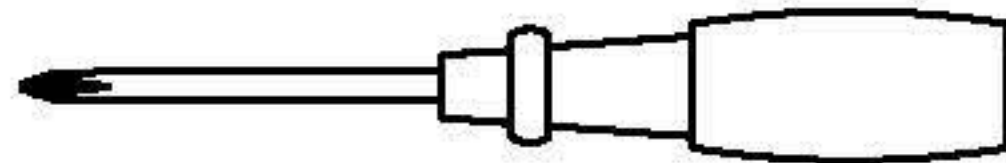

Screwdriver*1

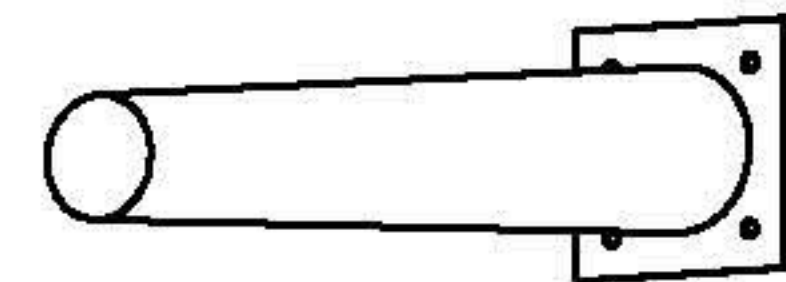

M44*5




C6*9



D0*16



A1*39

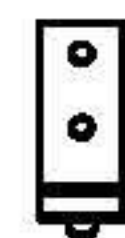

K2*3



K11*2



K0*29




S32*1




S33*1




L19*3

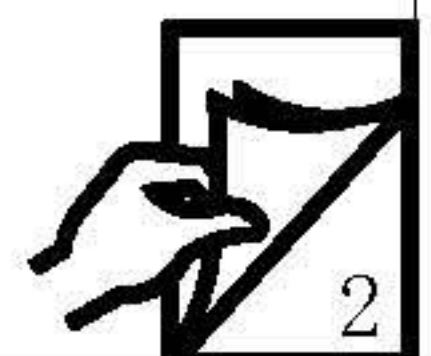


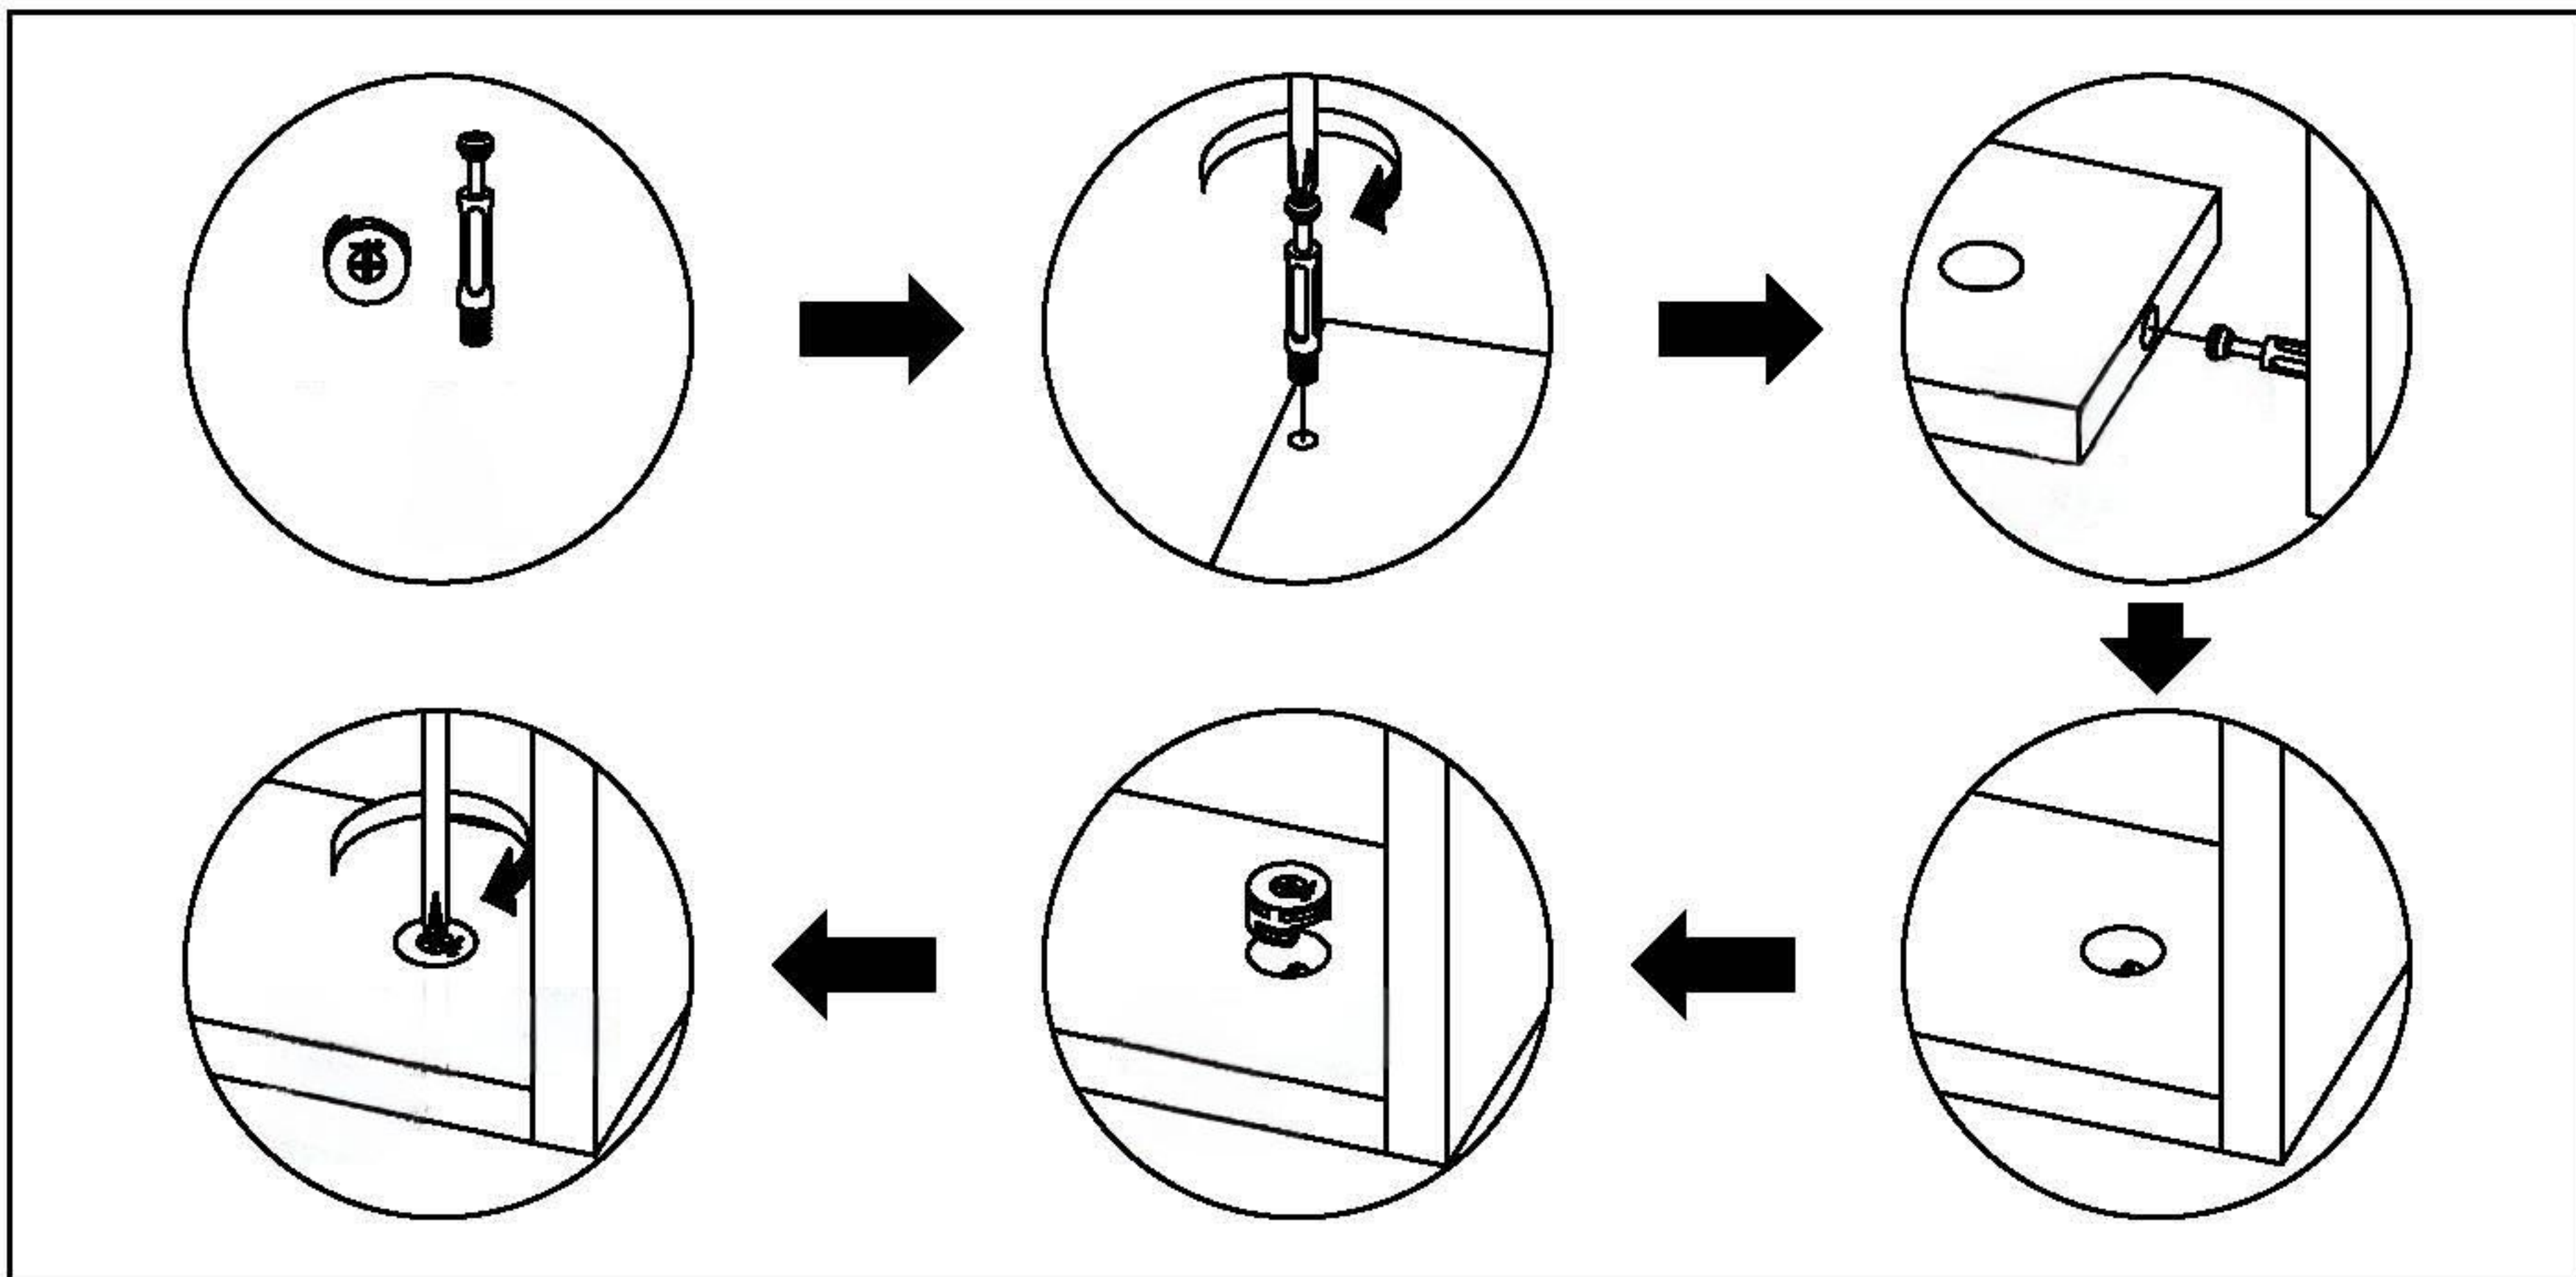


Step 1

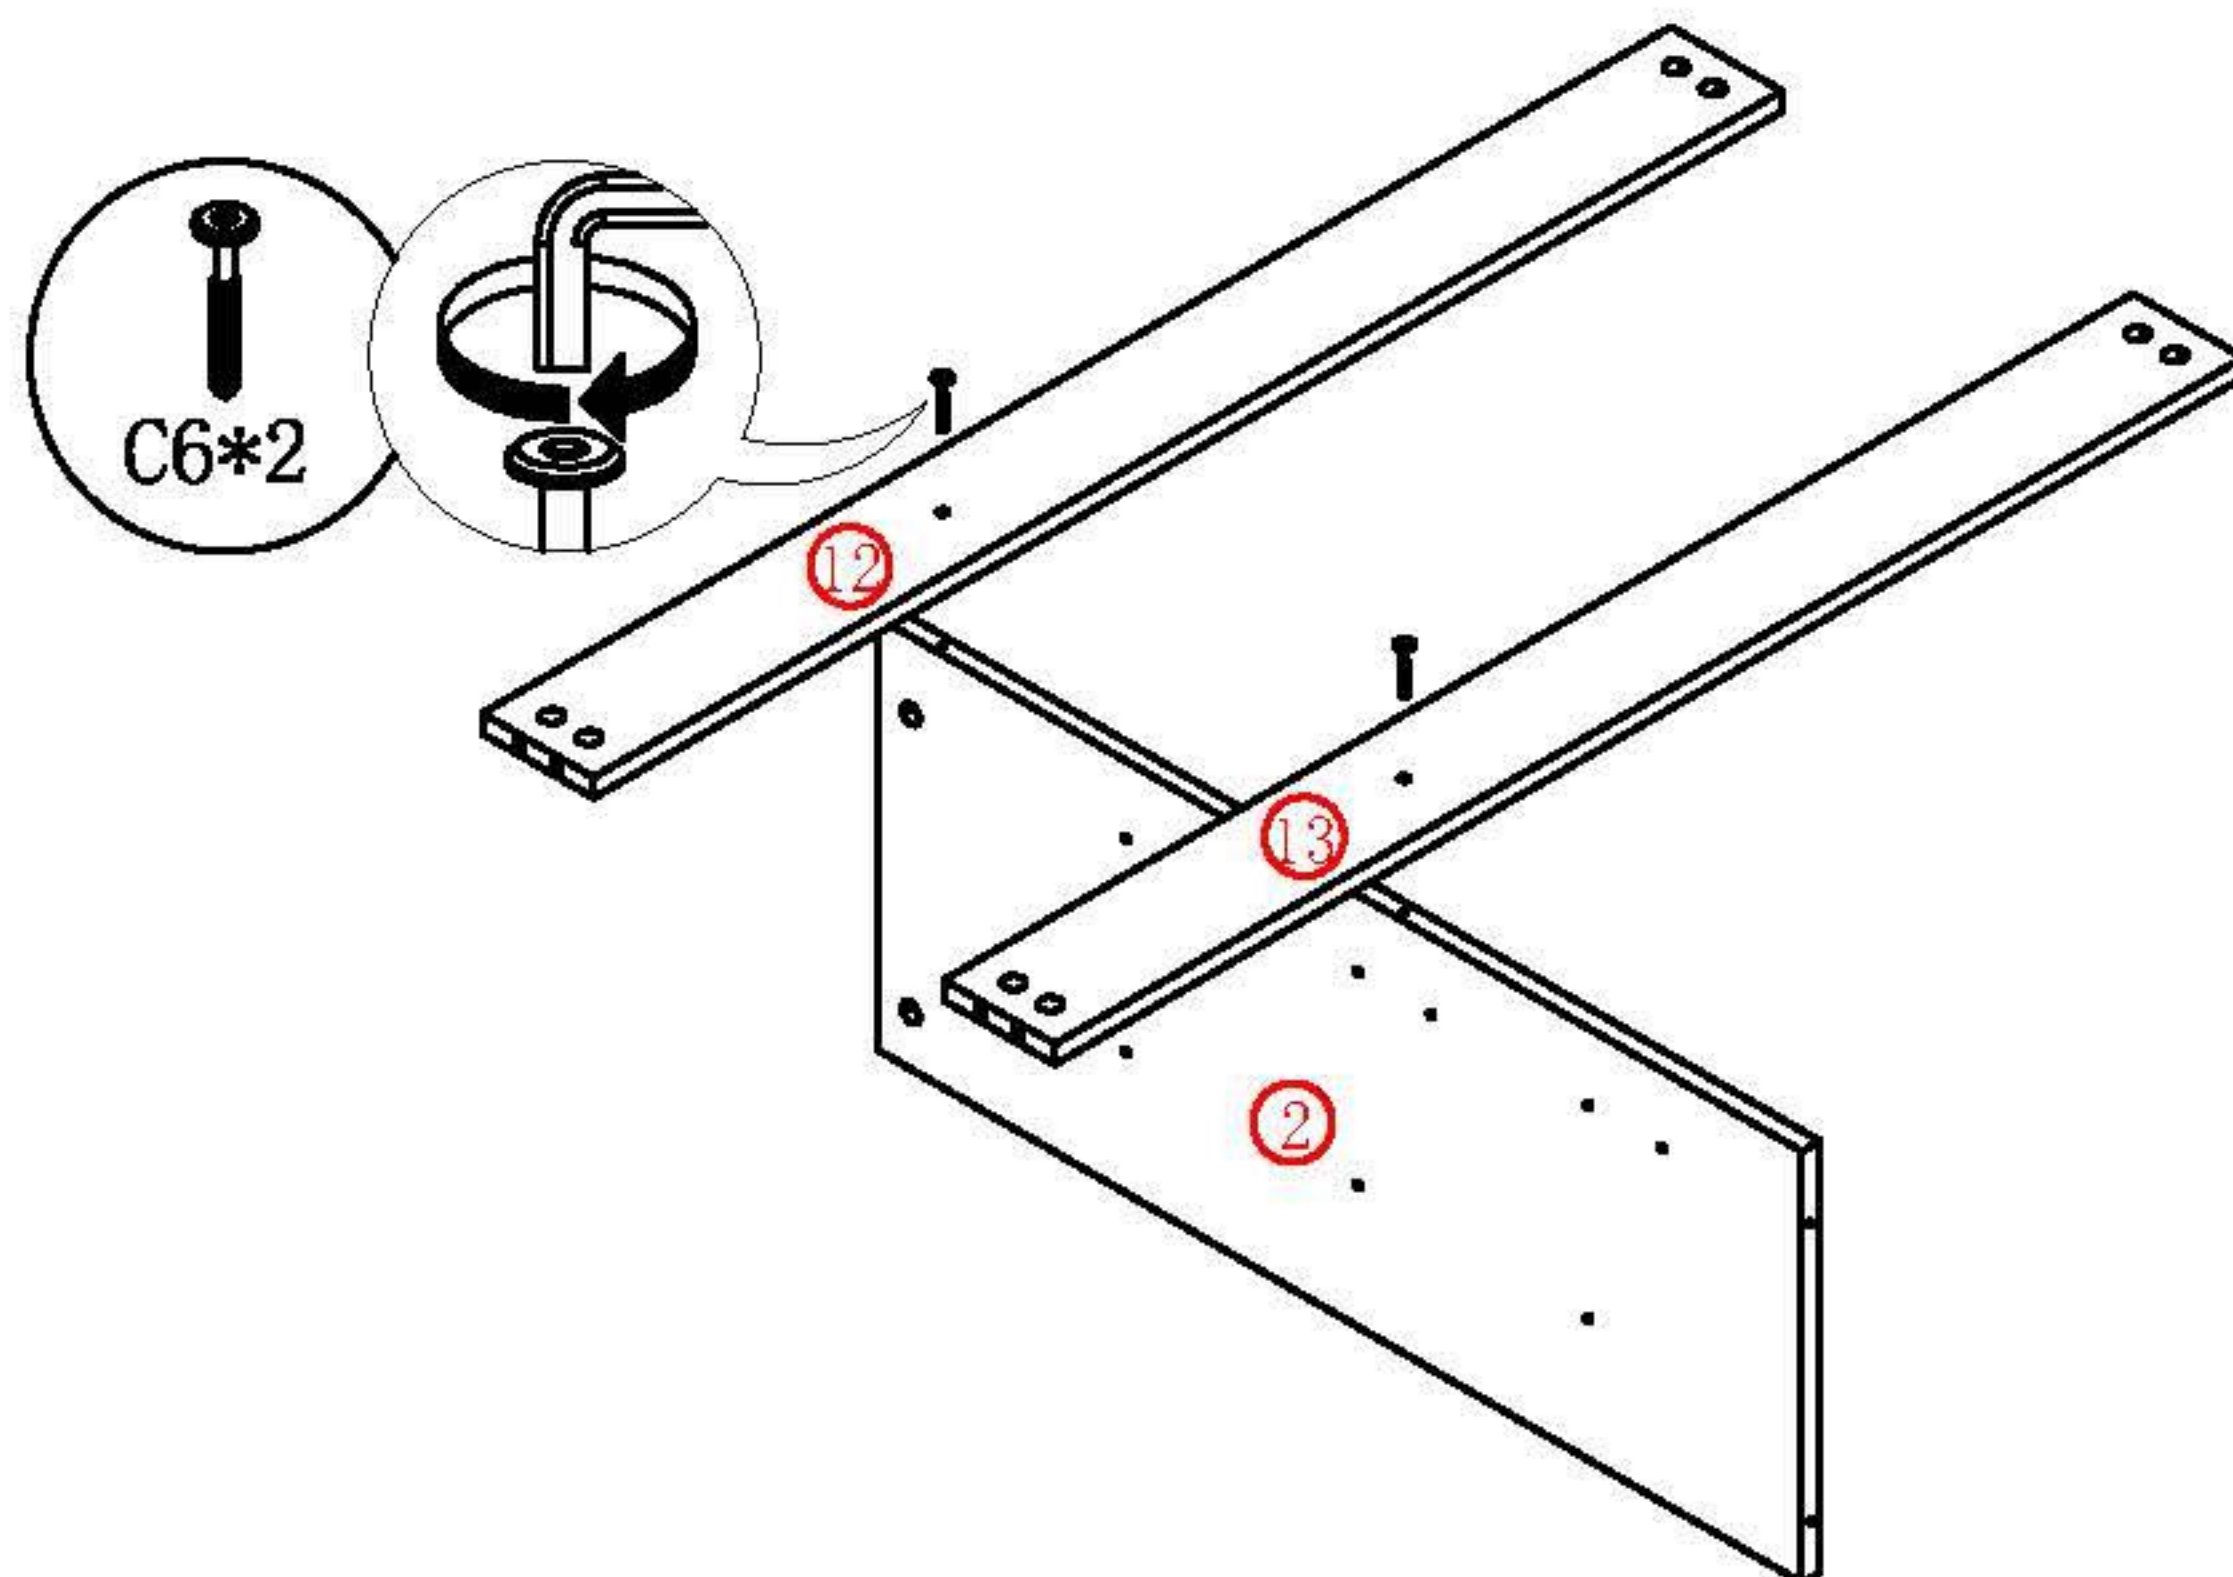


Step 2

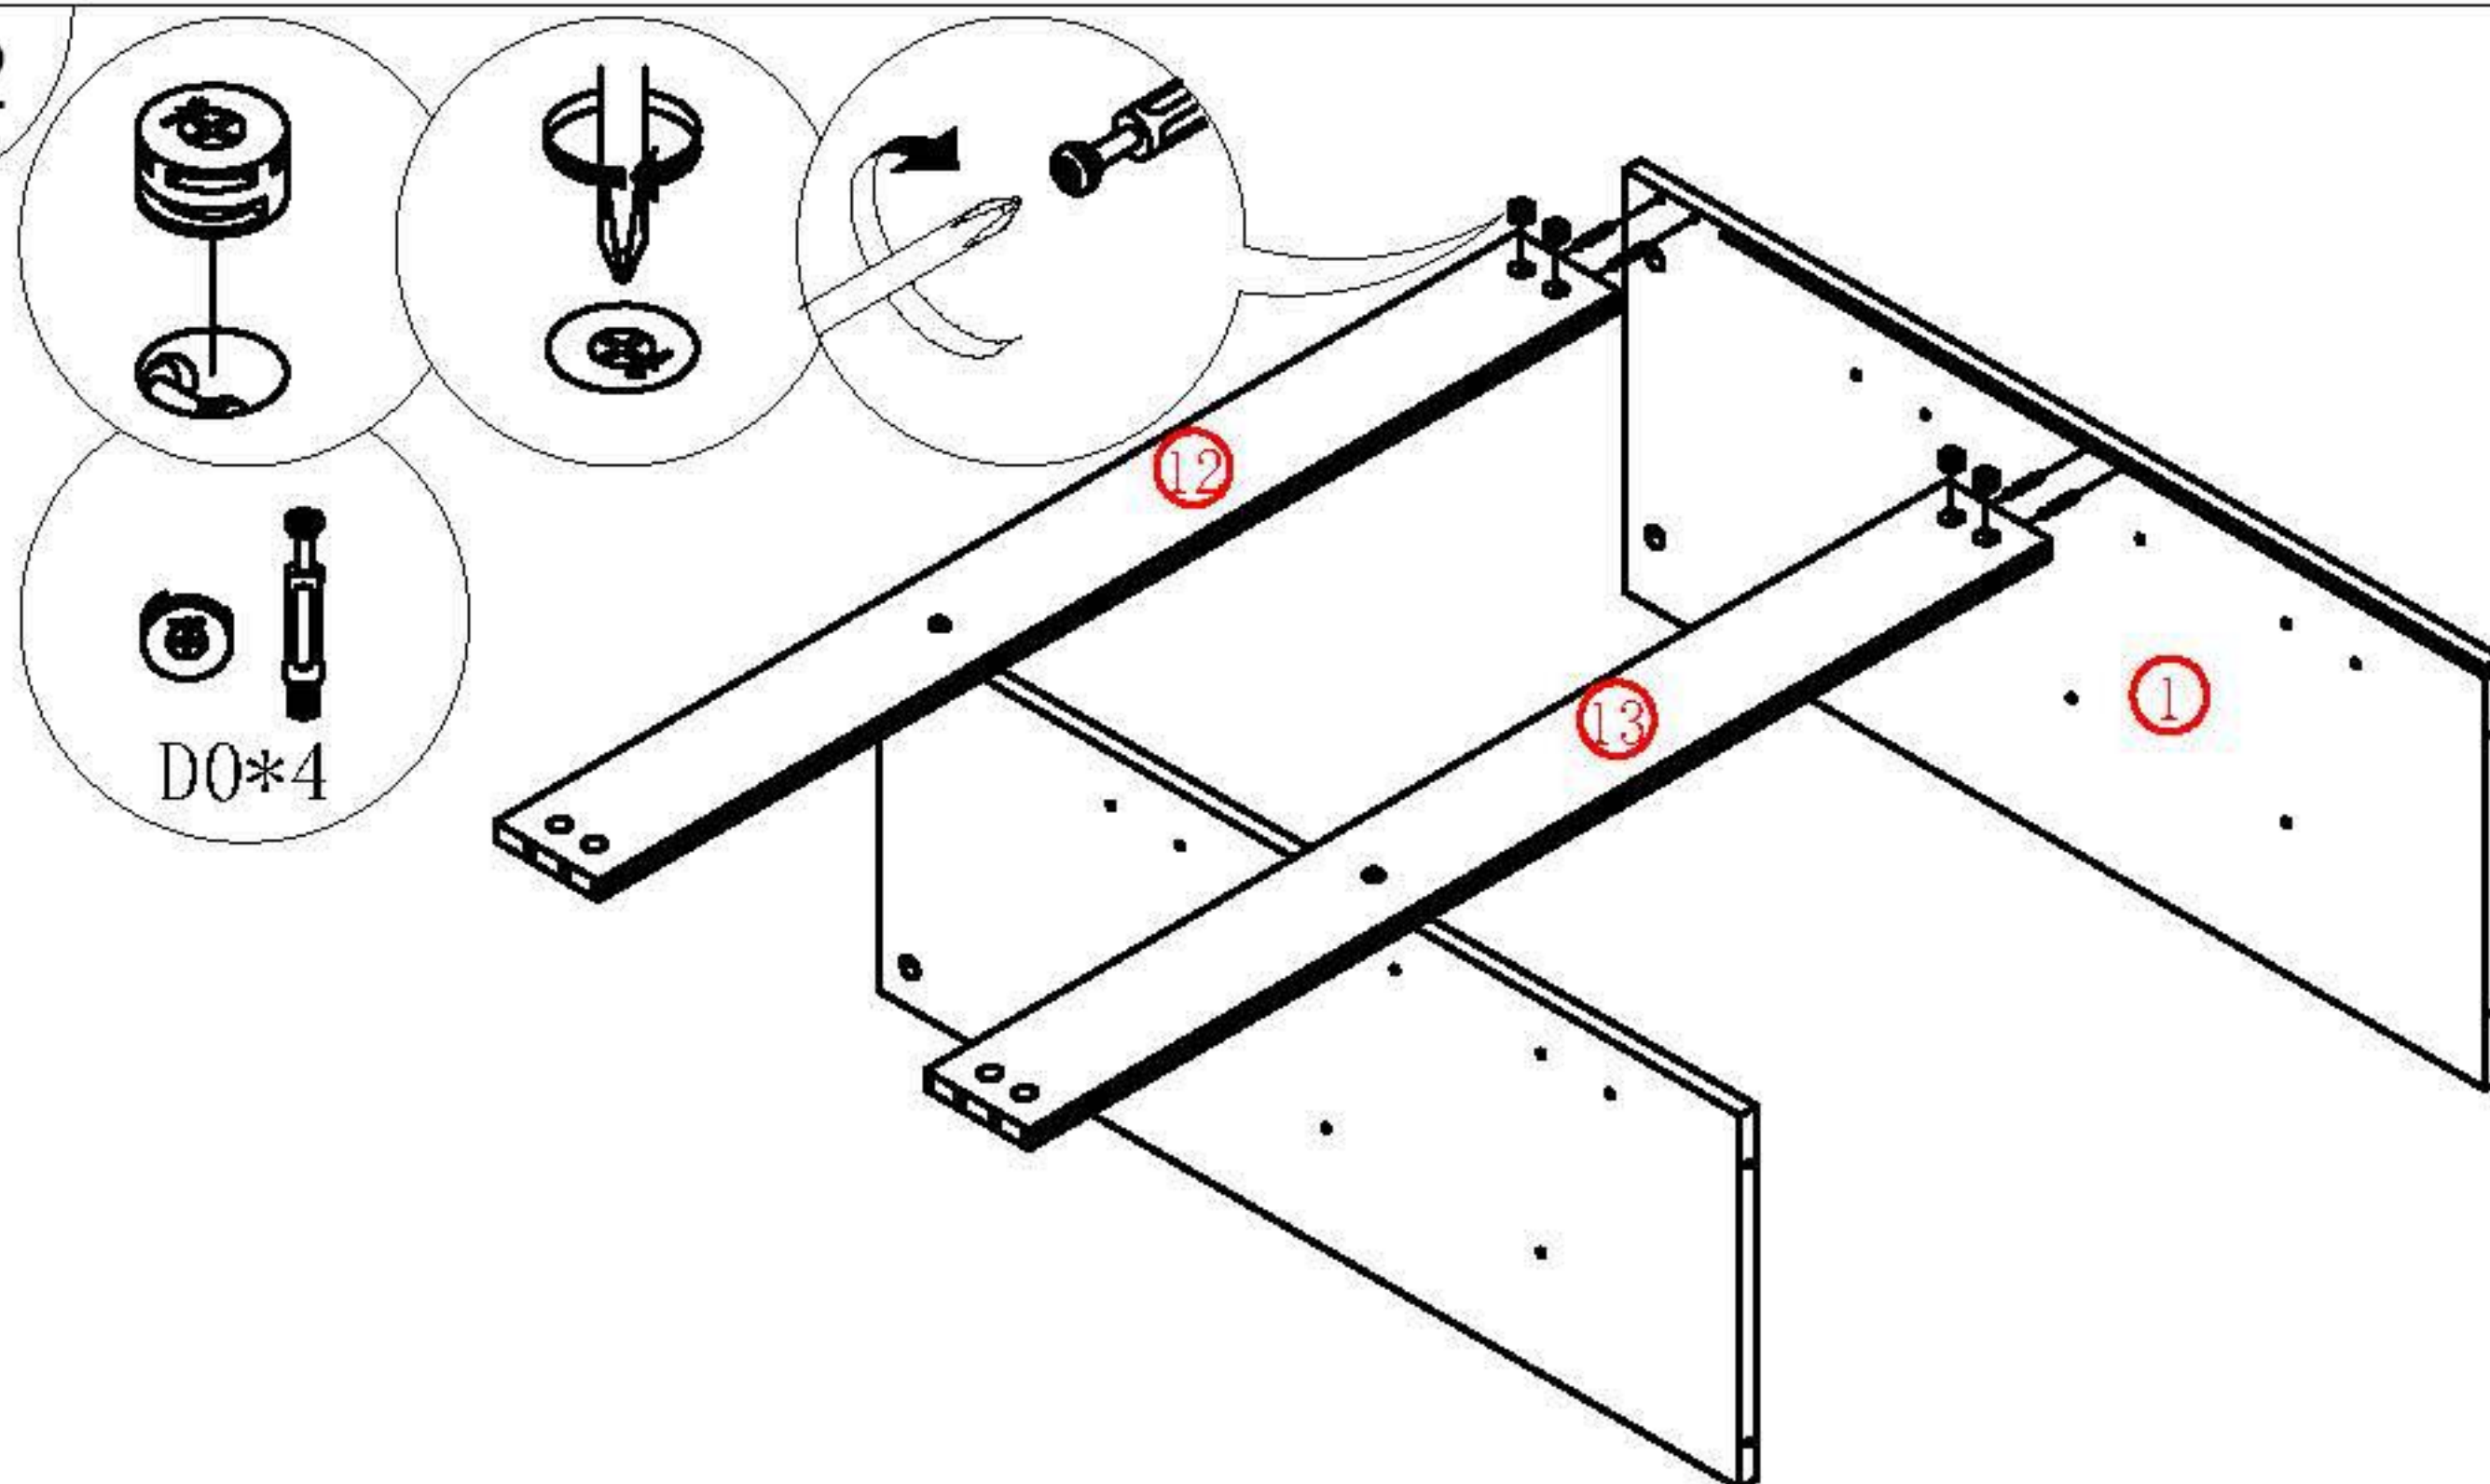



Step 3

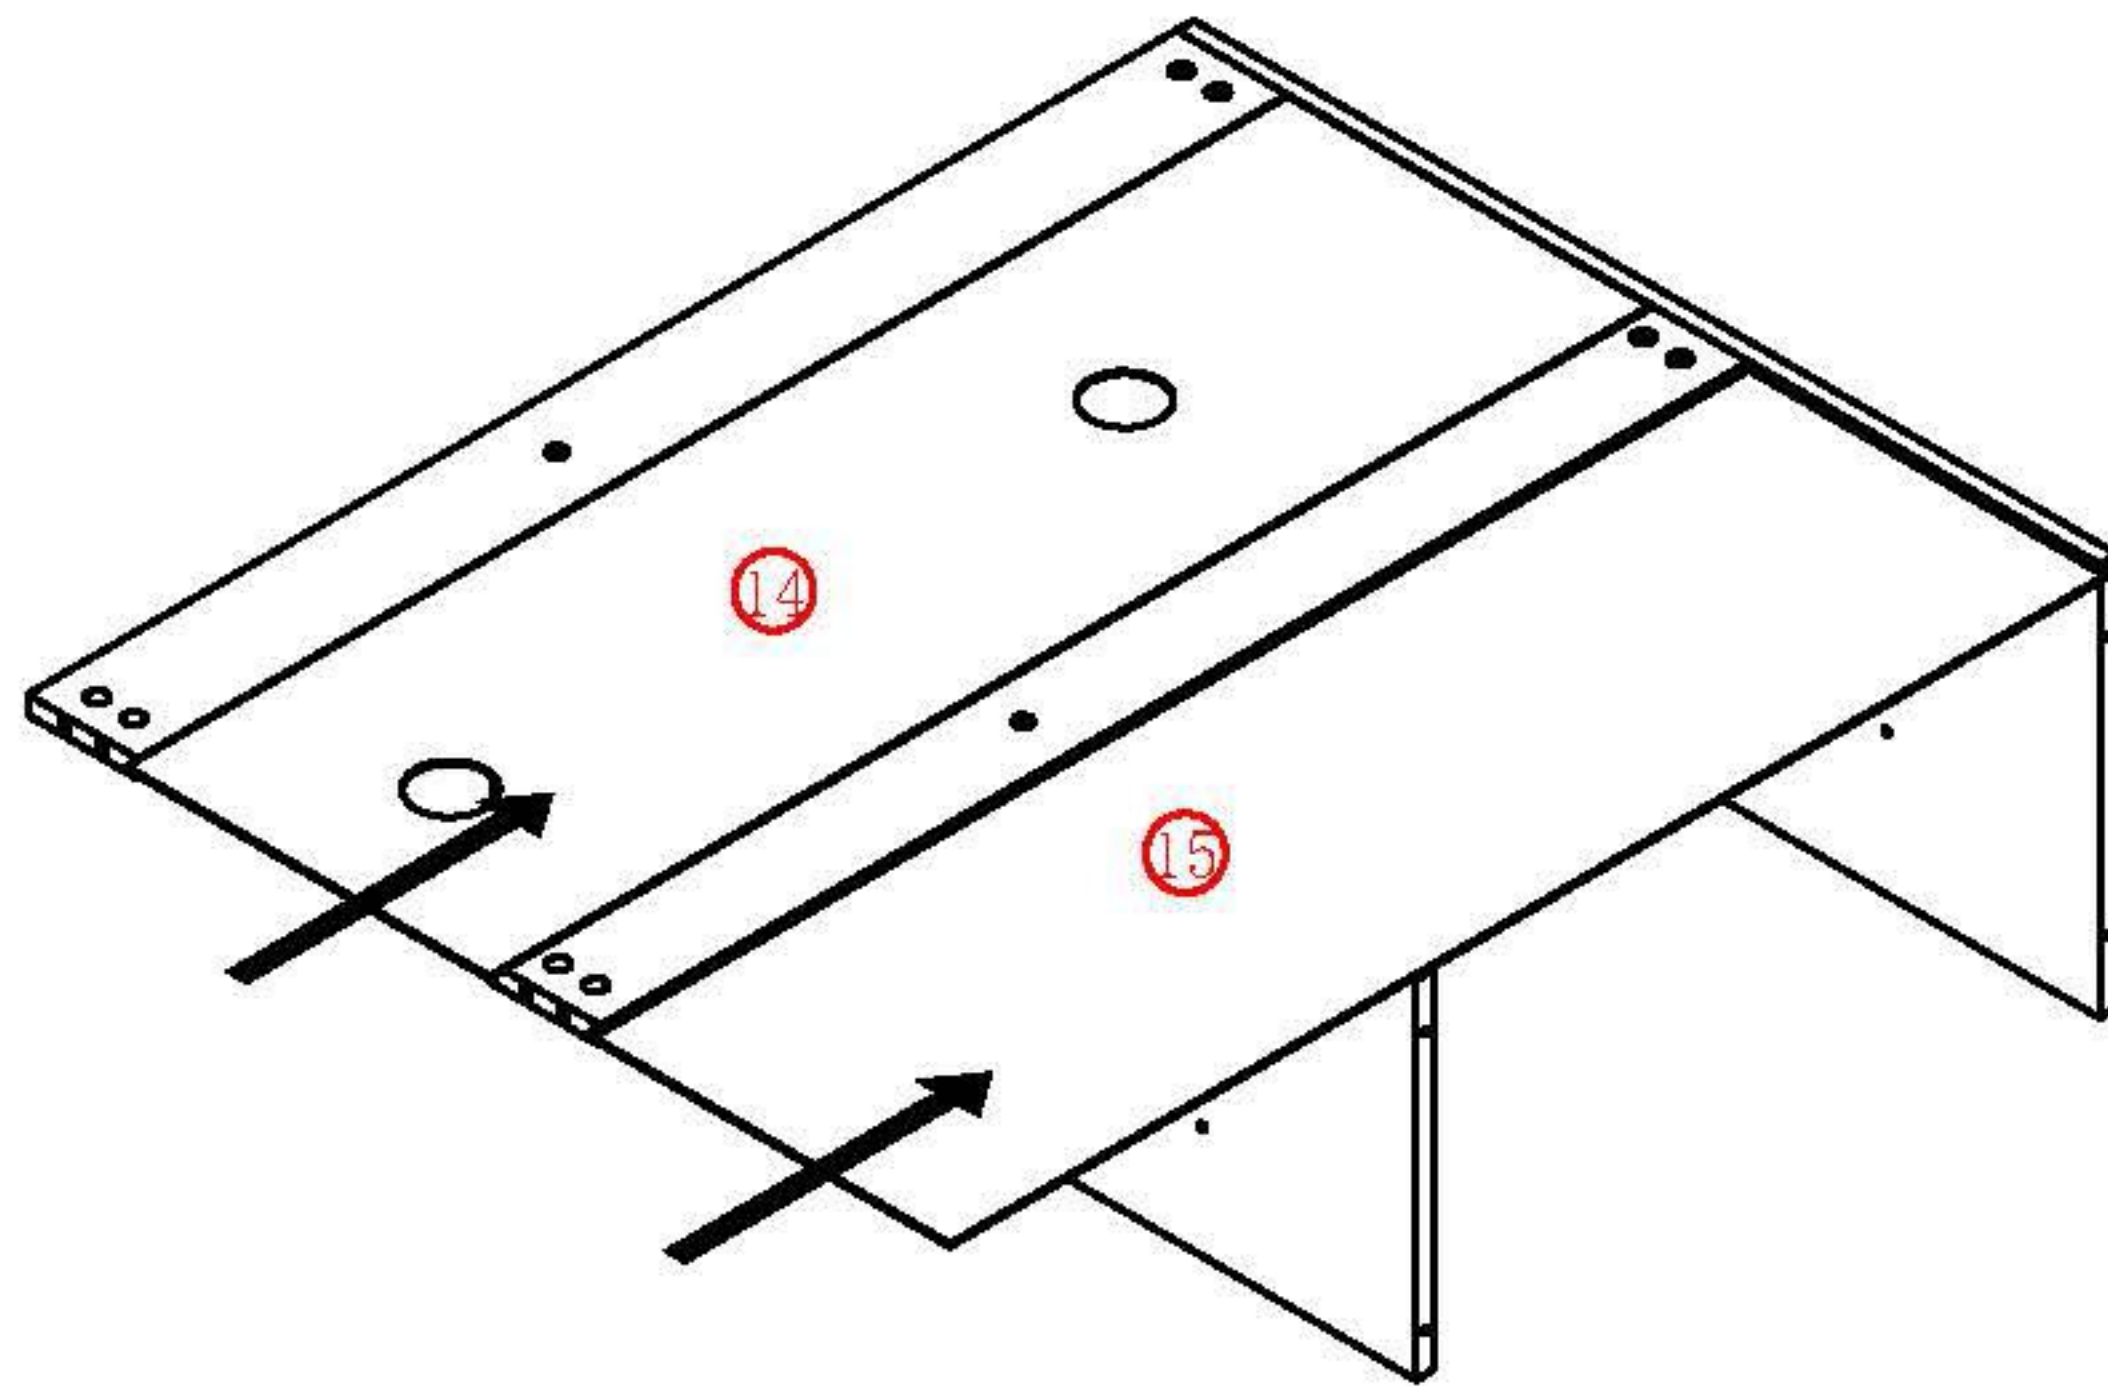


Step 4

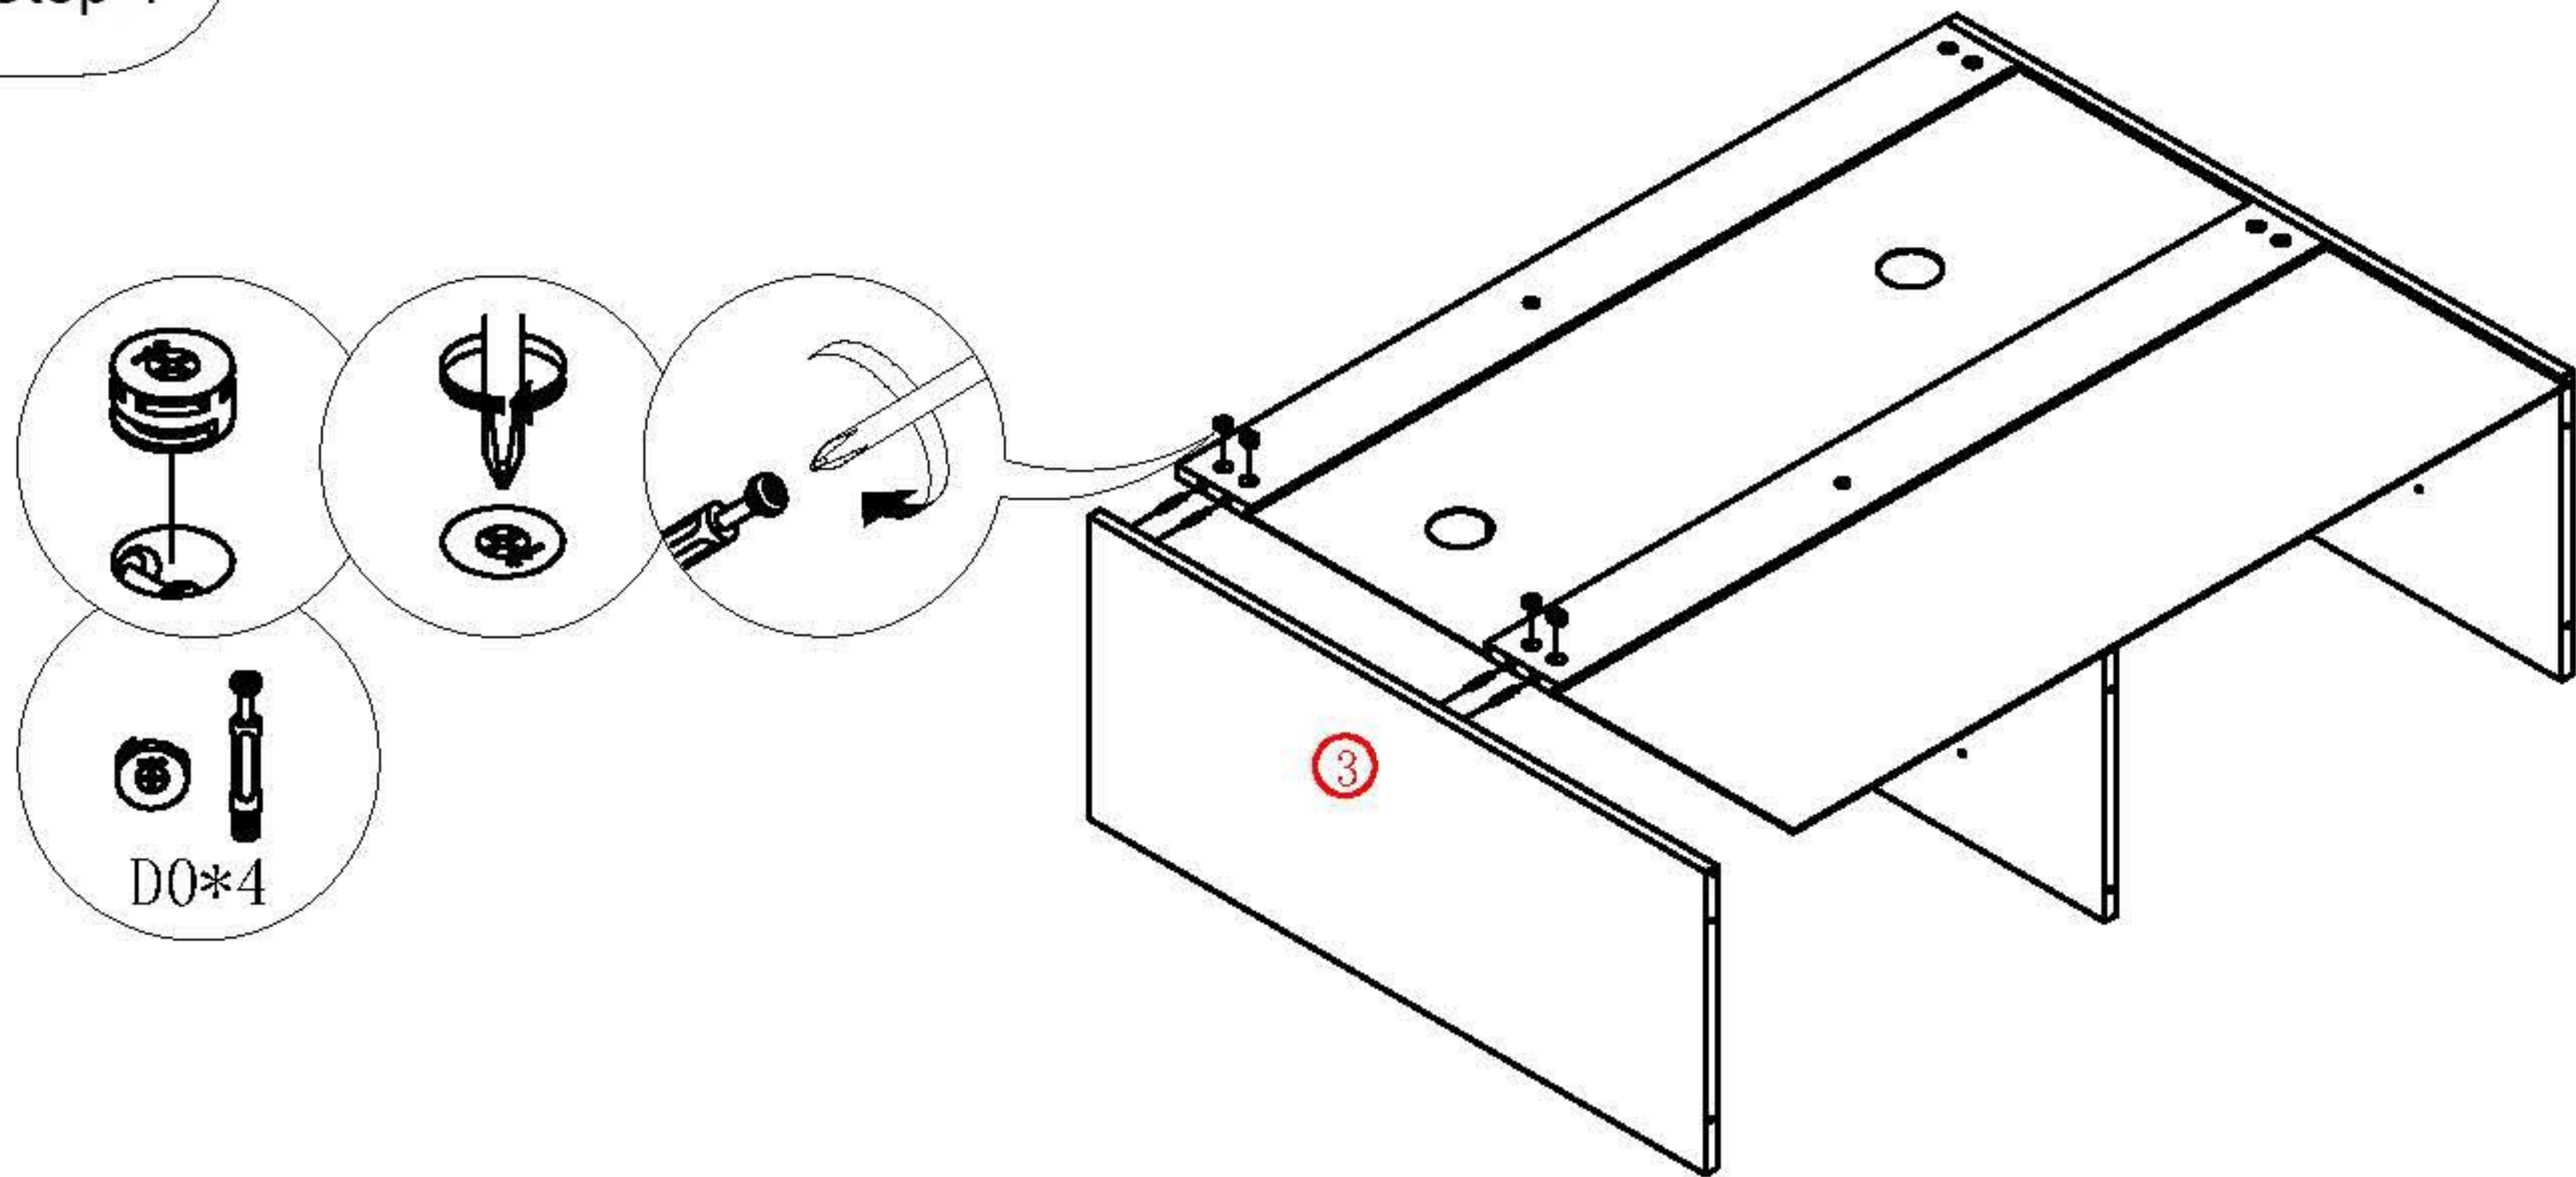


Step 5

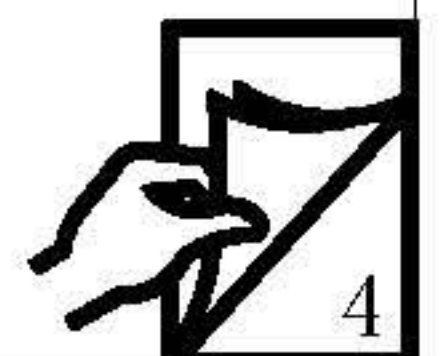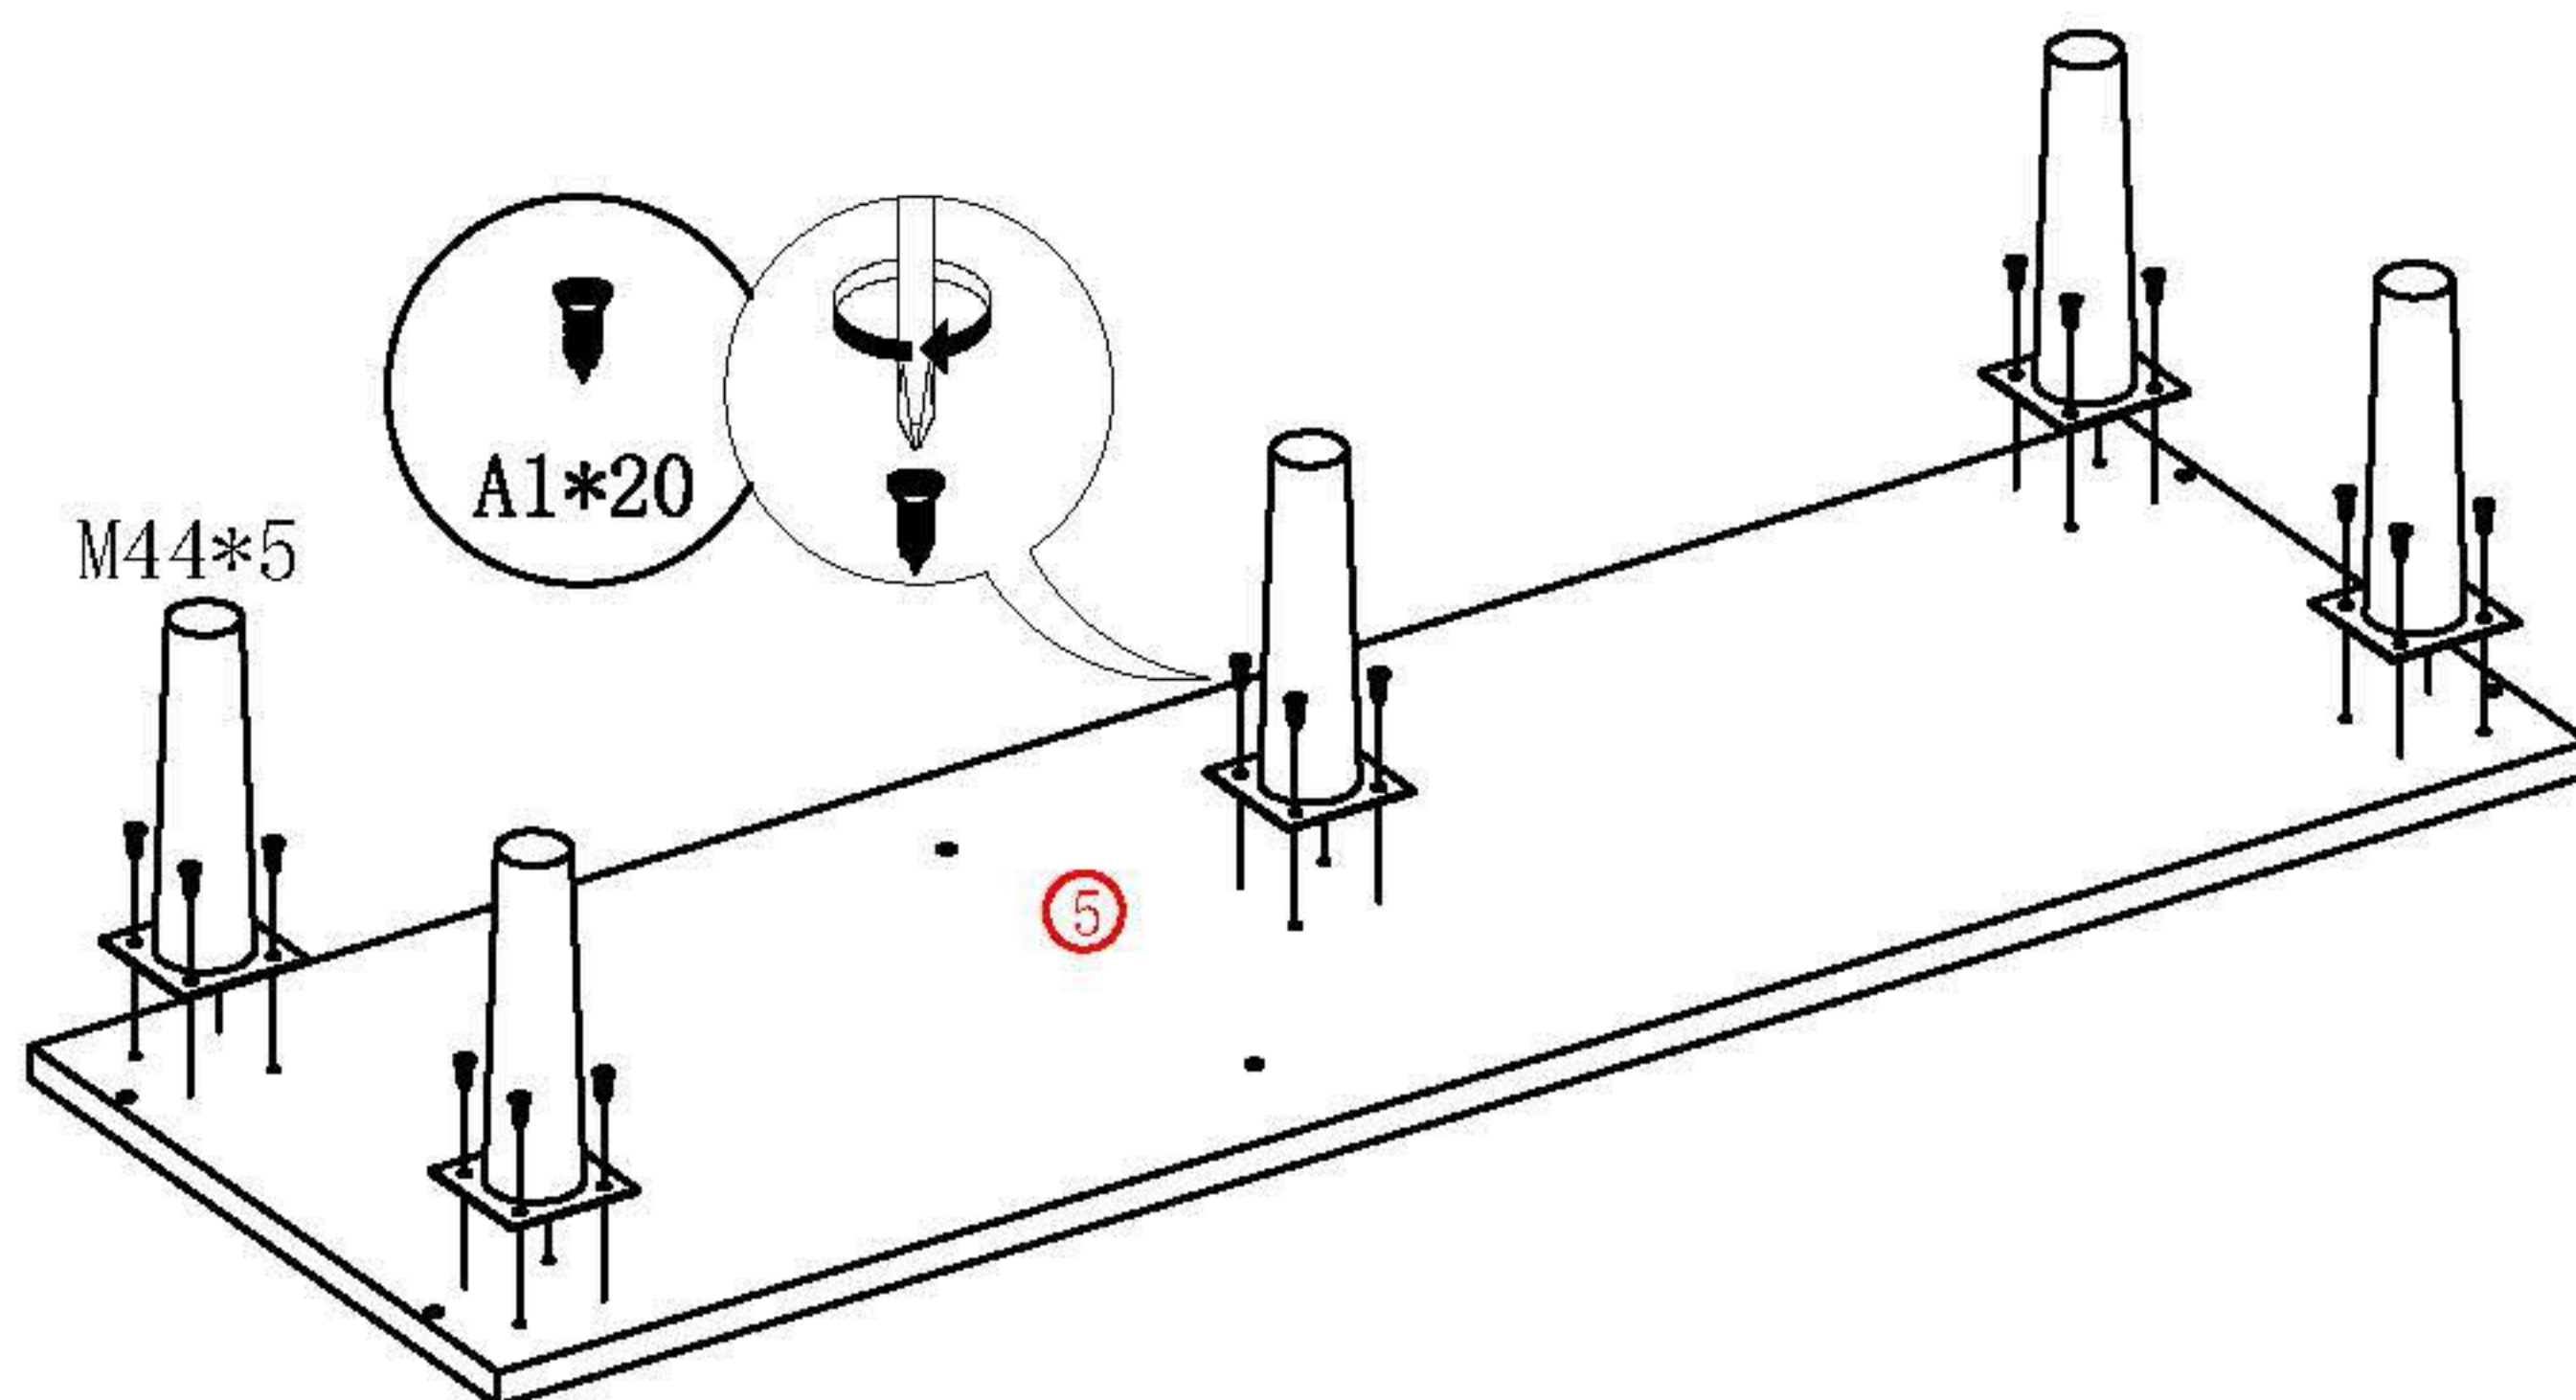



Step 6

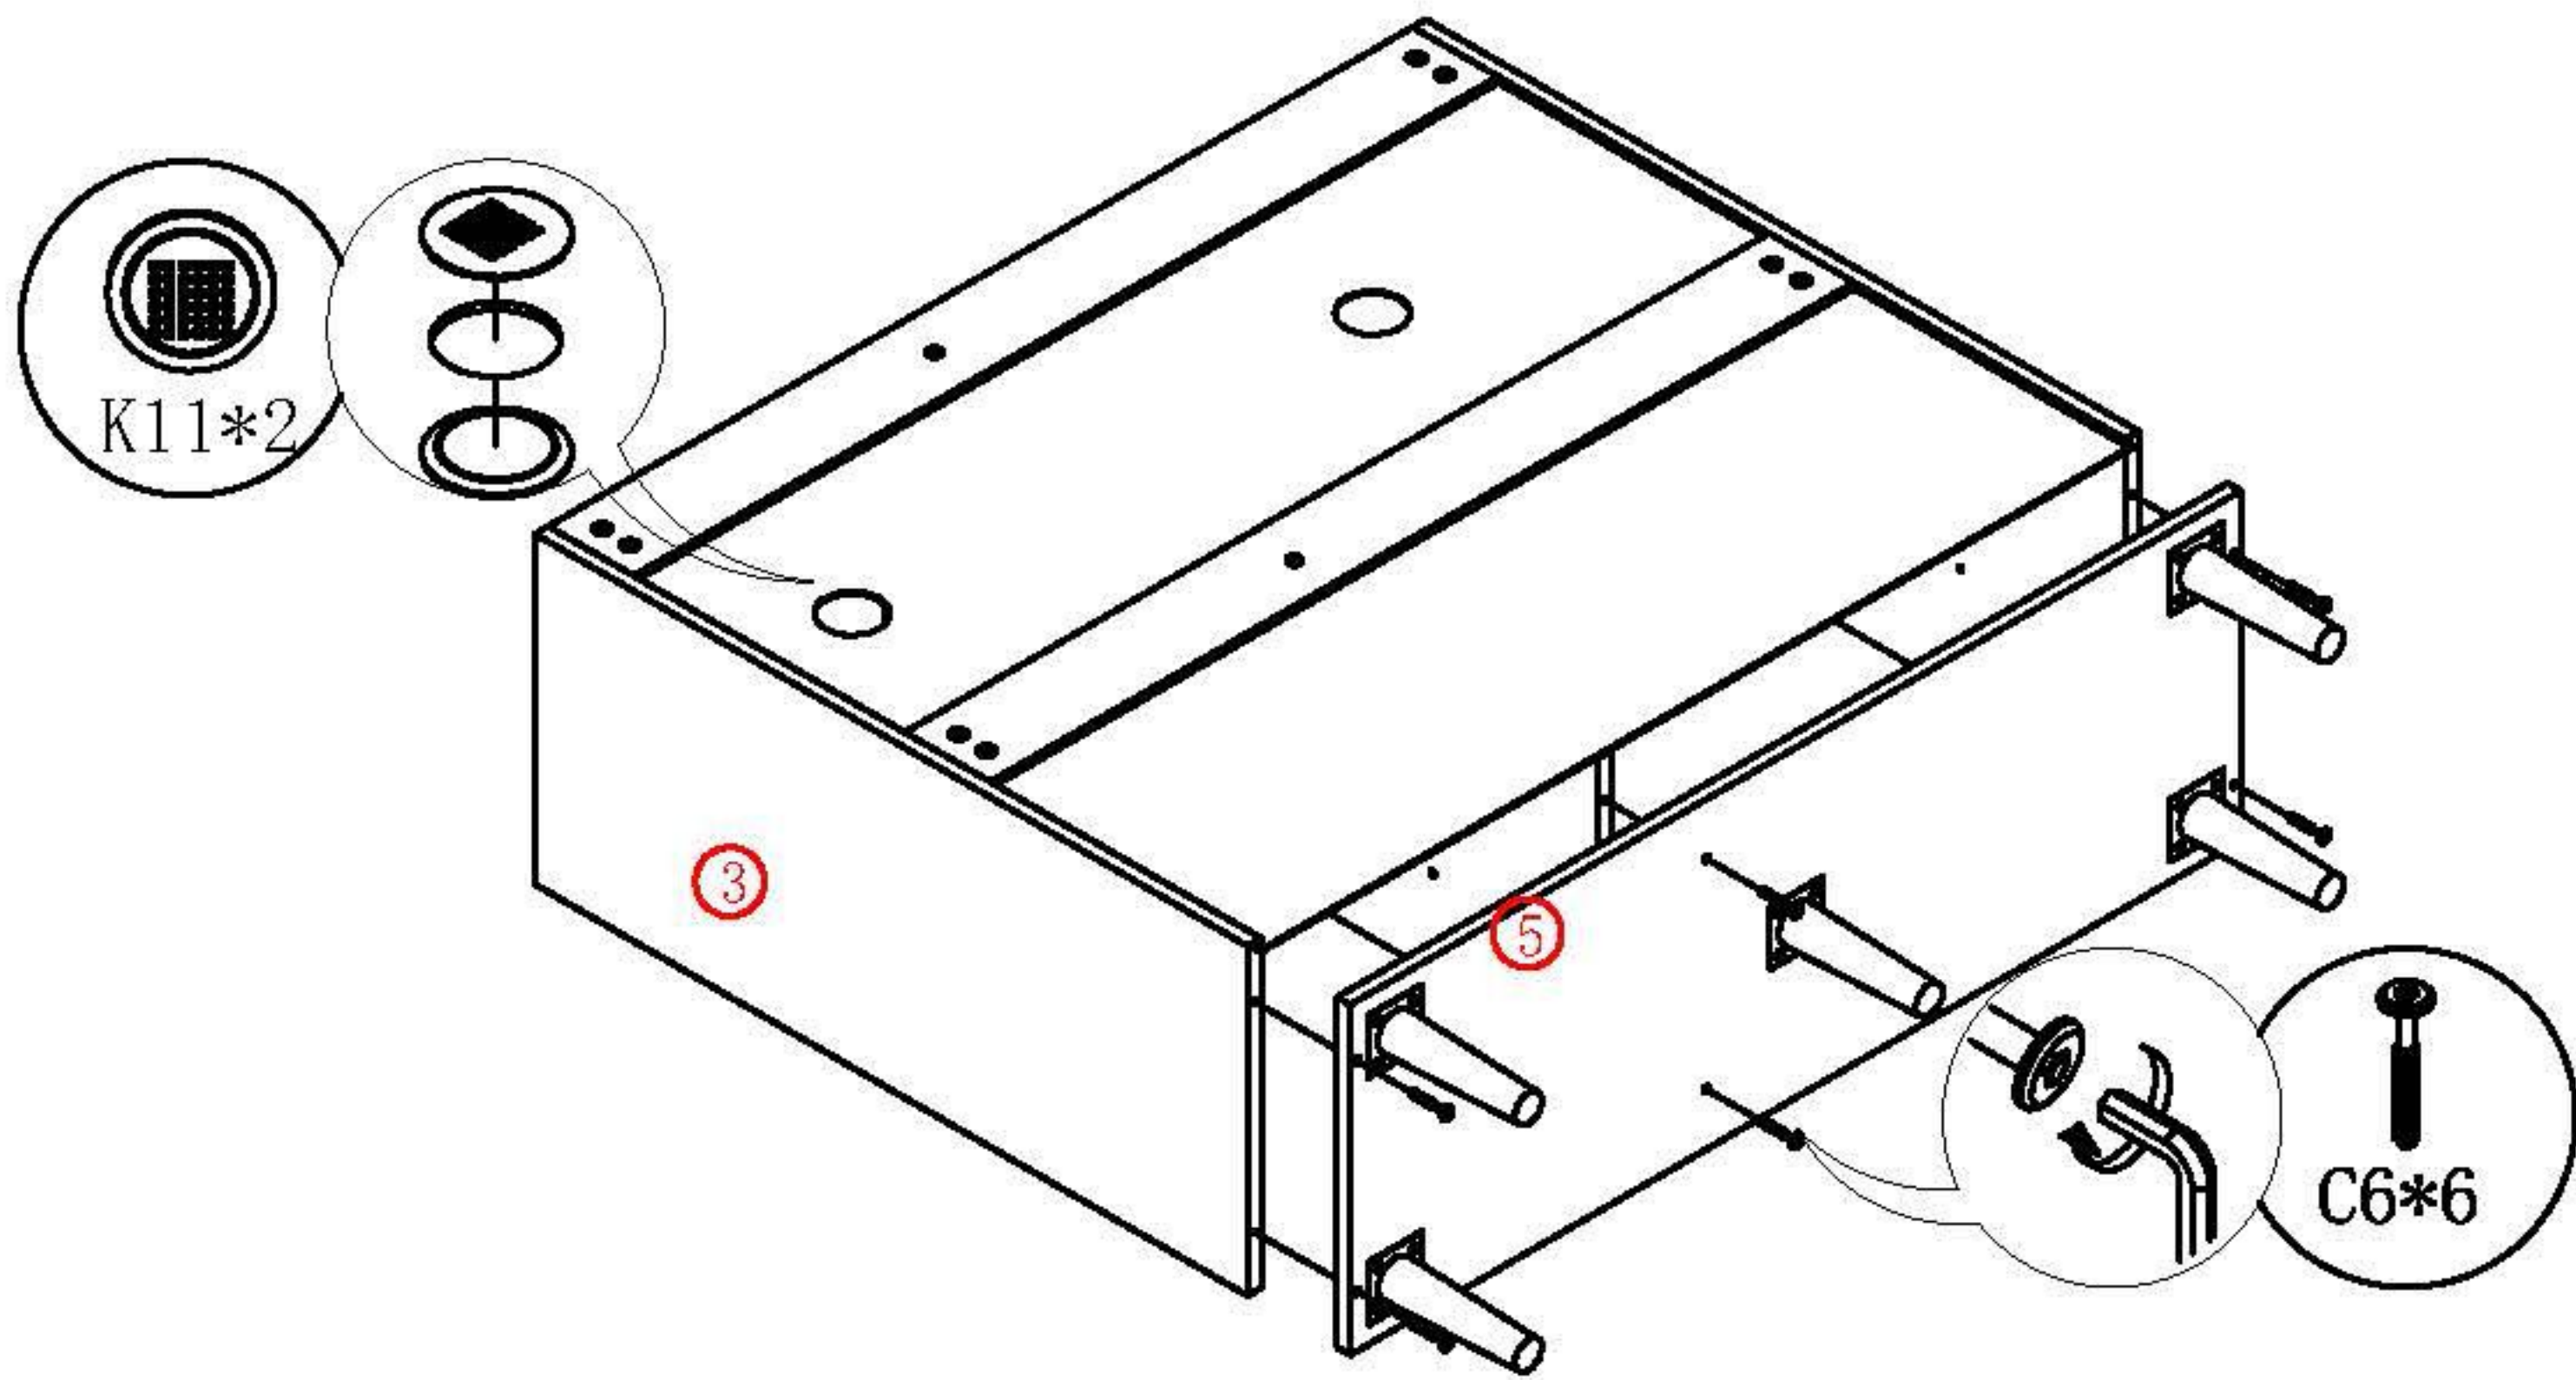


Step 7

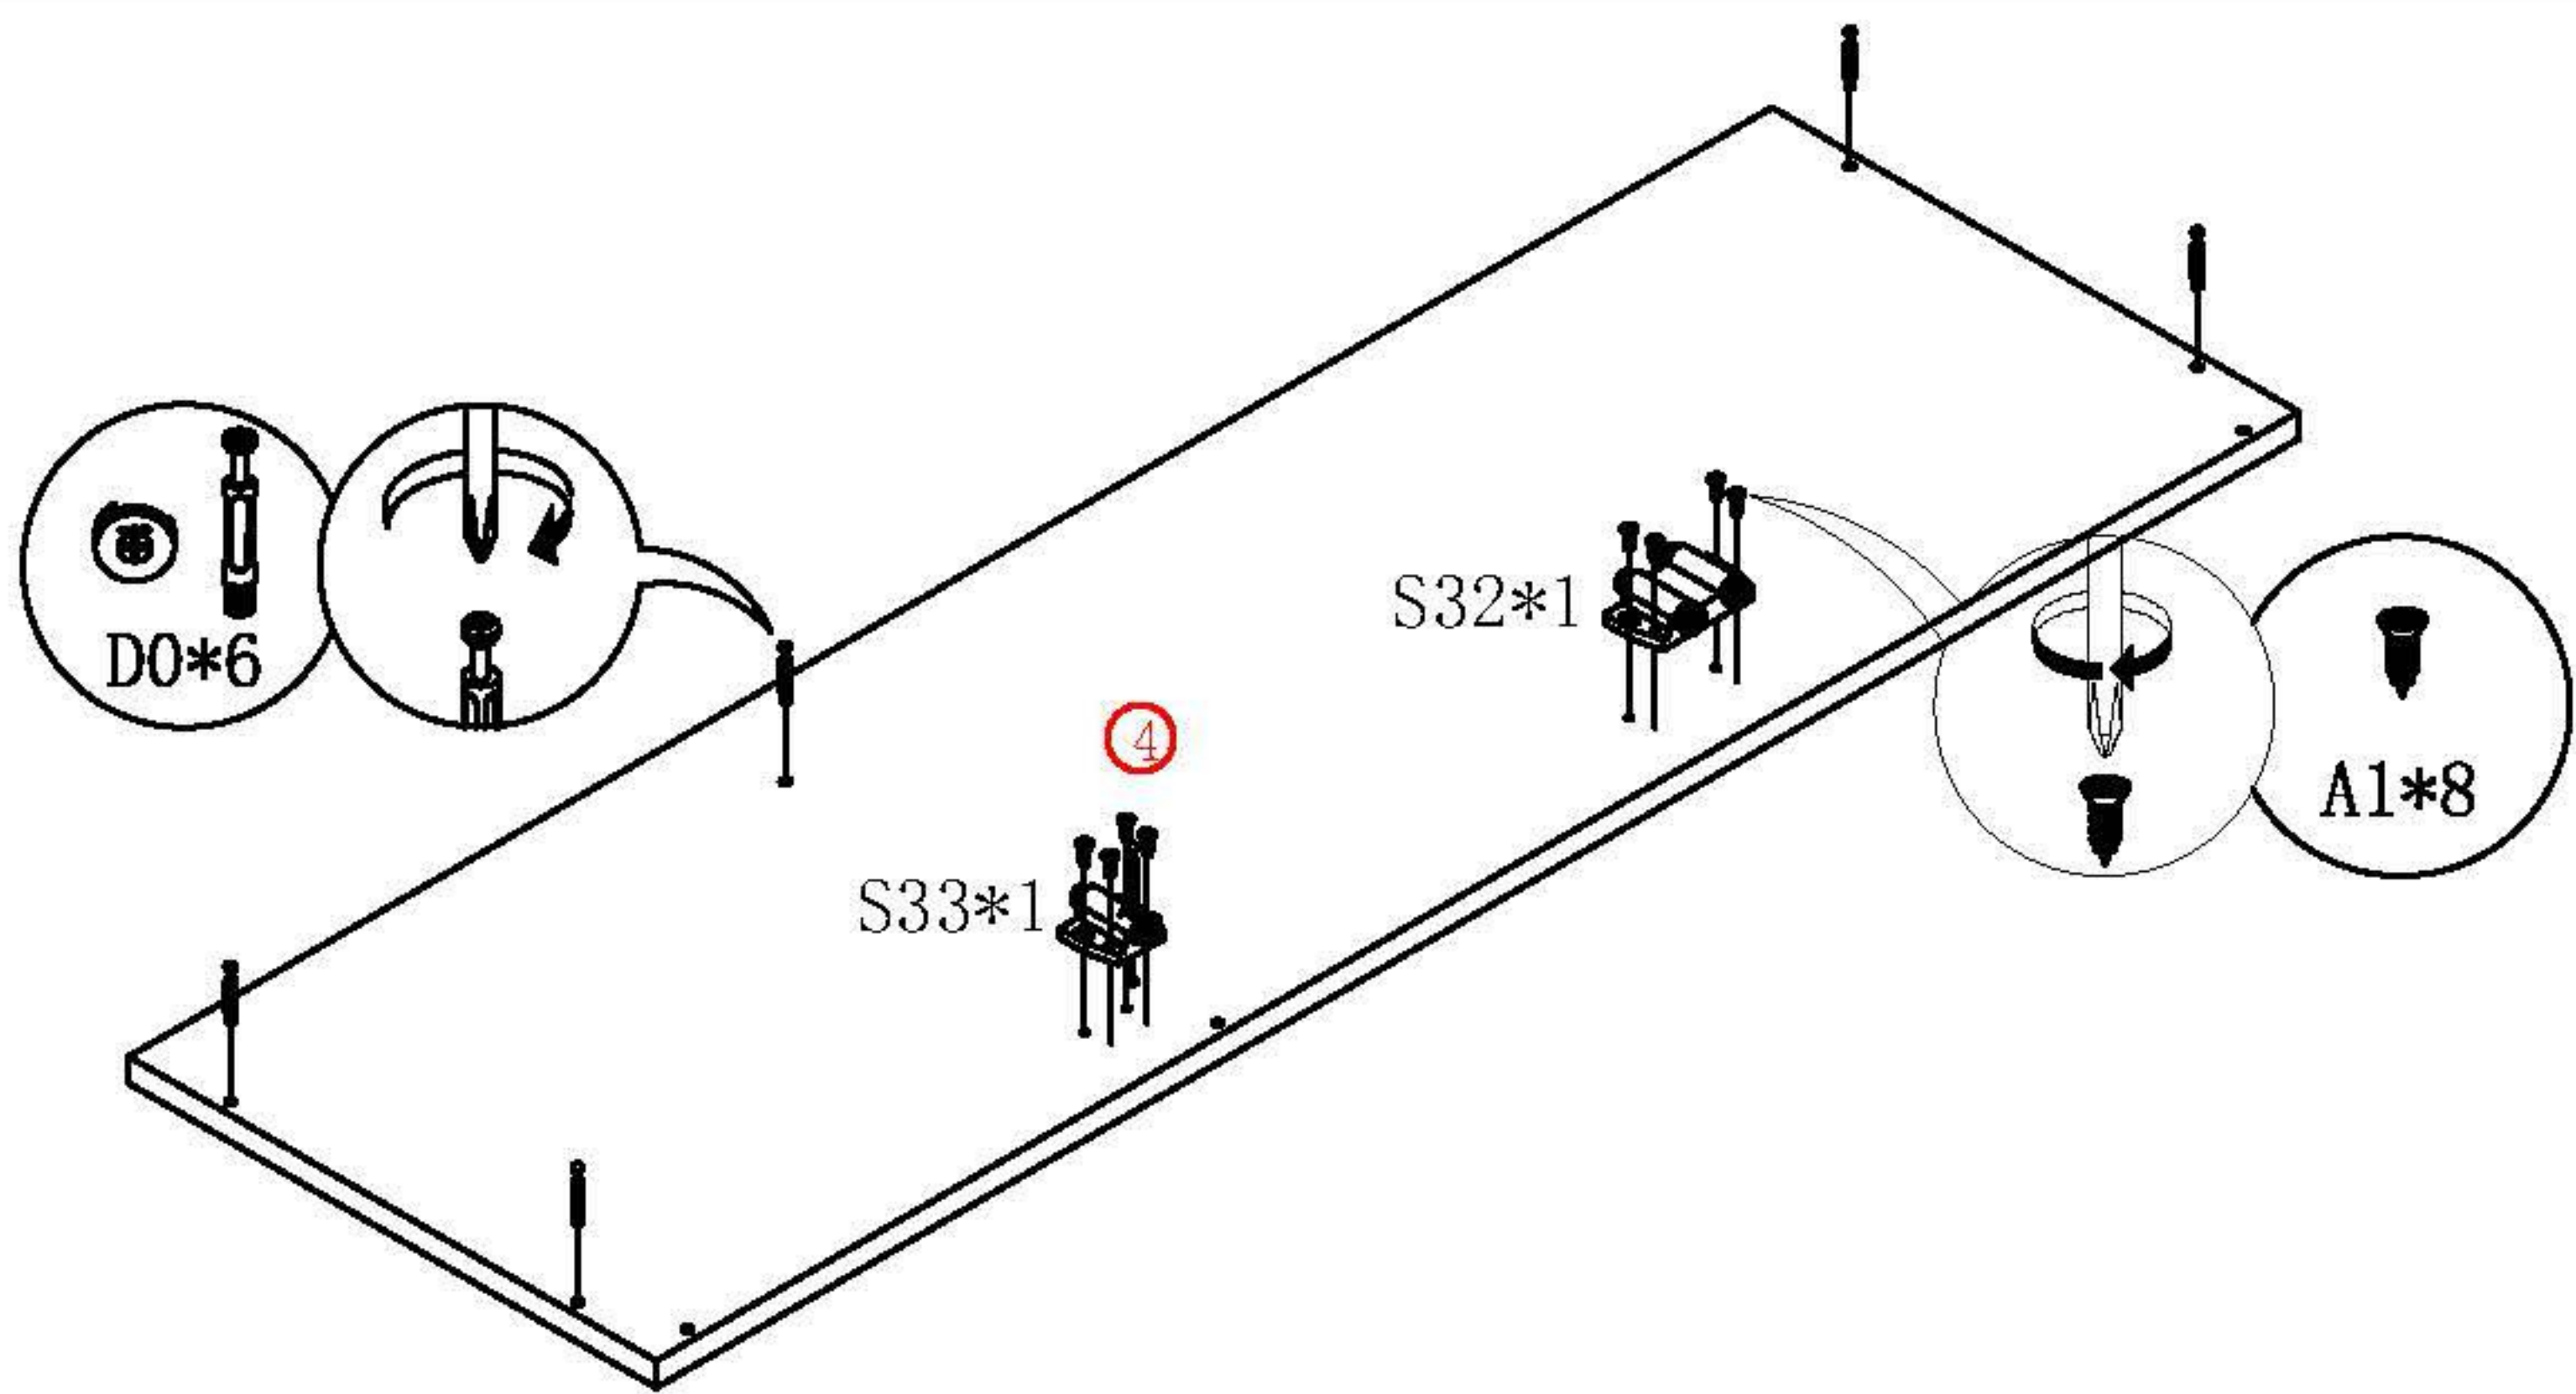


Step 8

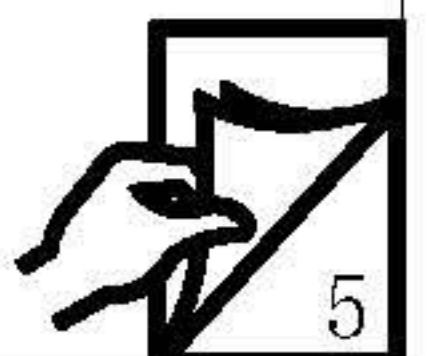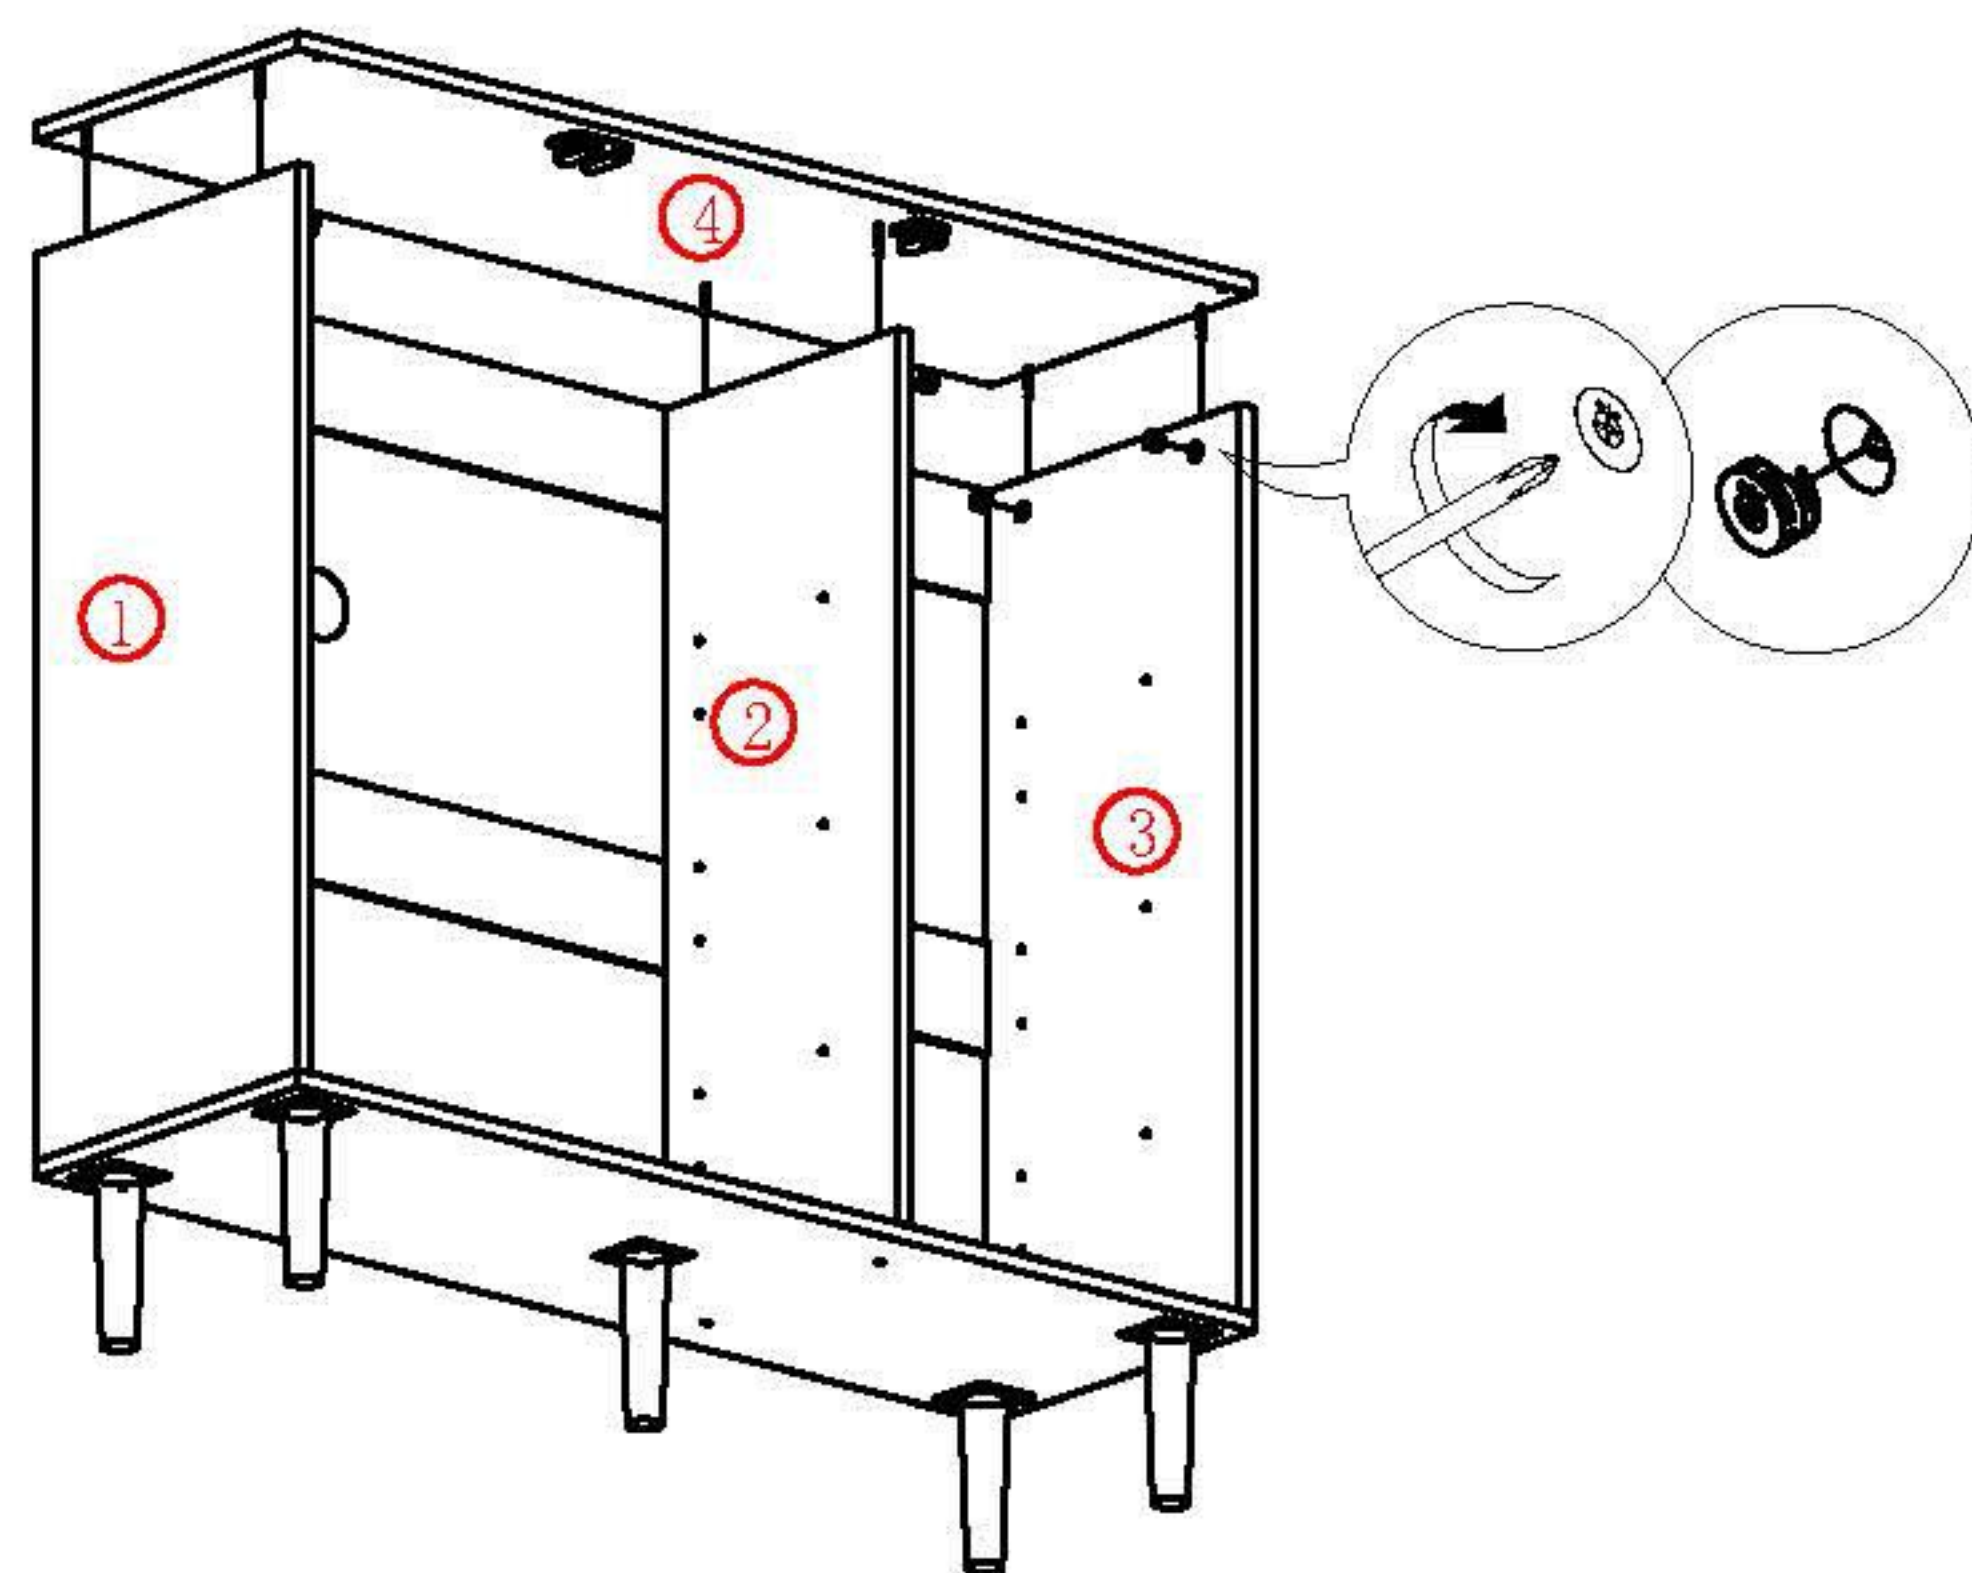

Step 9

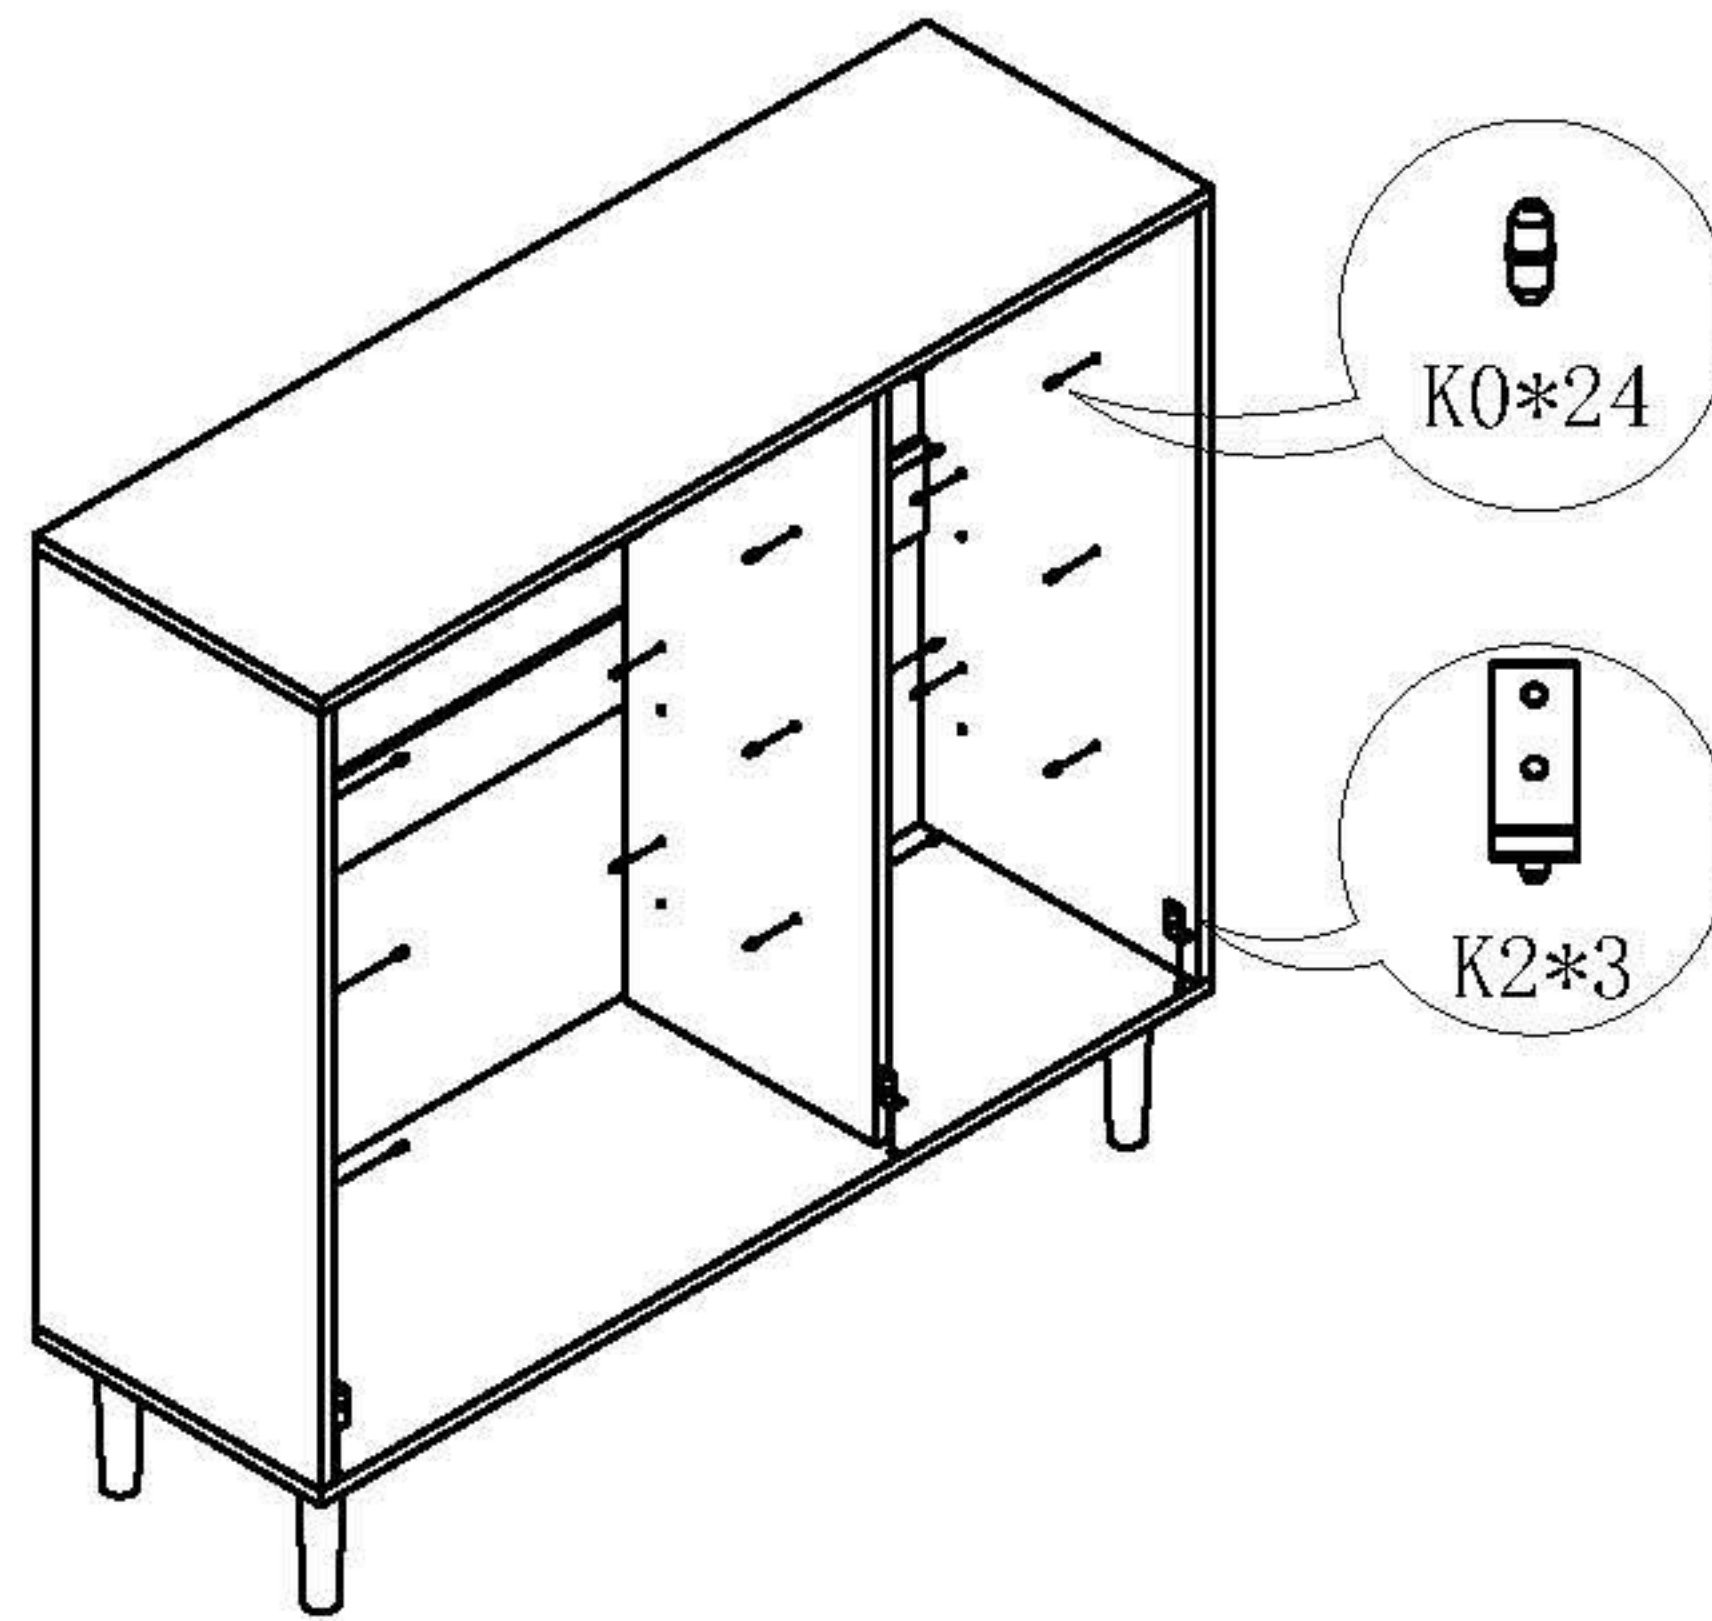

Step 10

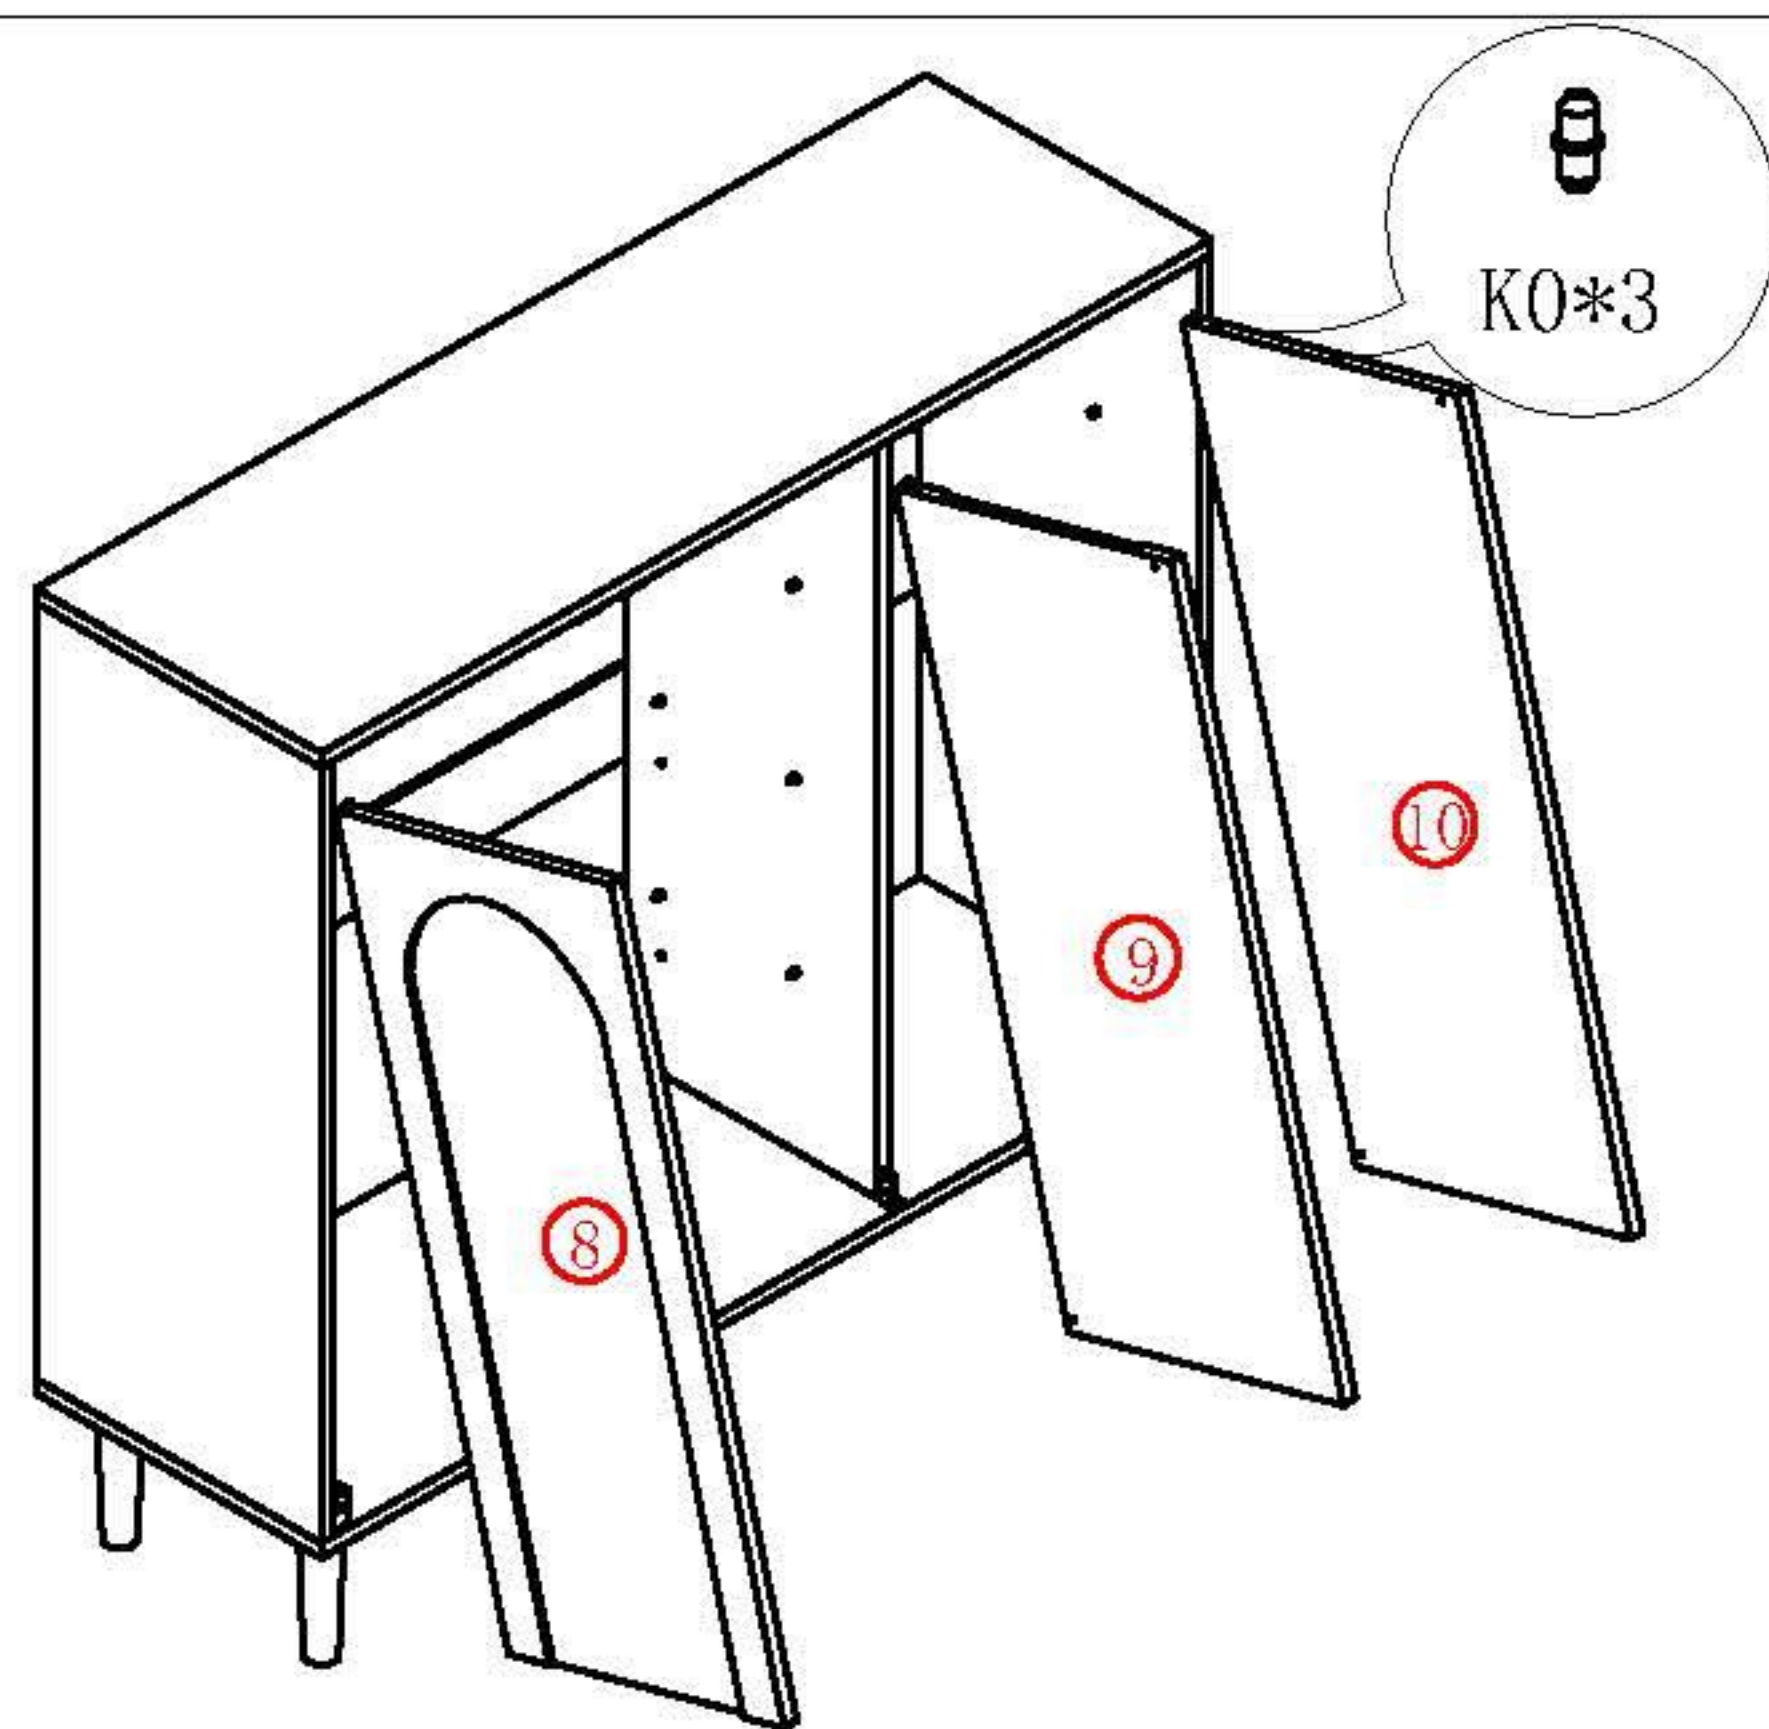

Step 11

