



SOCE008 25CM Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

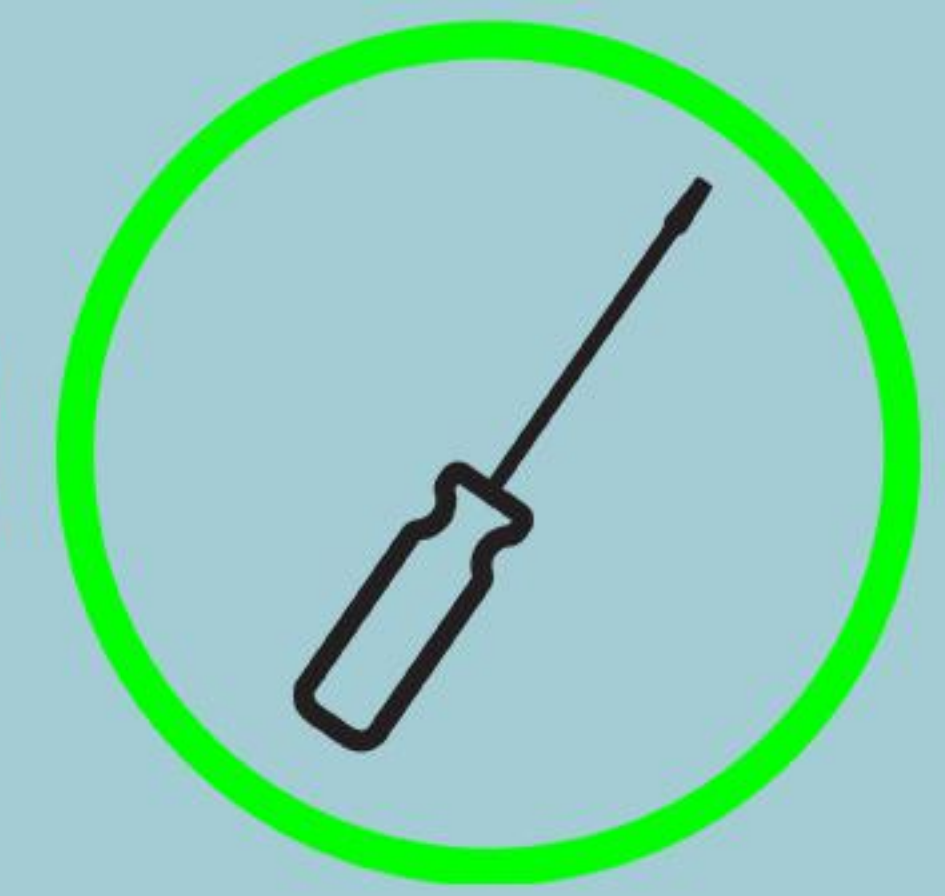

Eccentric screw	Eccentric Bolt	air hole	handle kit	handle screw	shaft	Smallest self-tapping screw	Anti-dumping device	3.5CM self-tapping screw	cork
A*26	B*20	C*3	D*3	E*6	F*6	G*58	H*1	I*4	J*6






Eccentric installation principle : **Kind tips** : Tighten the screws seven times when installing , and then tighten it after everything is done!

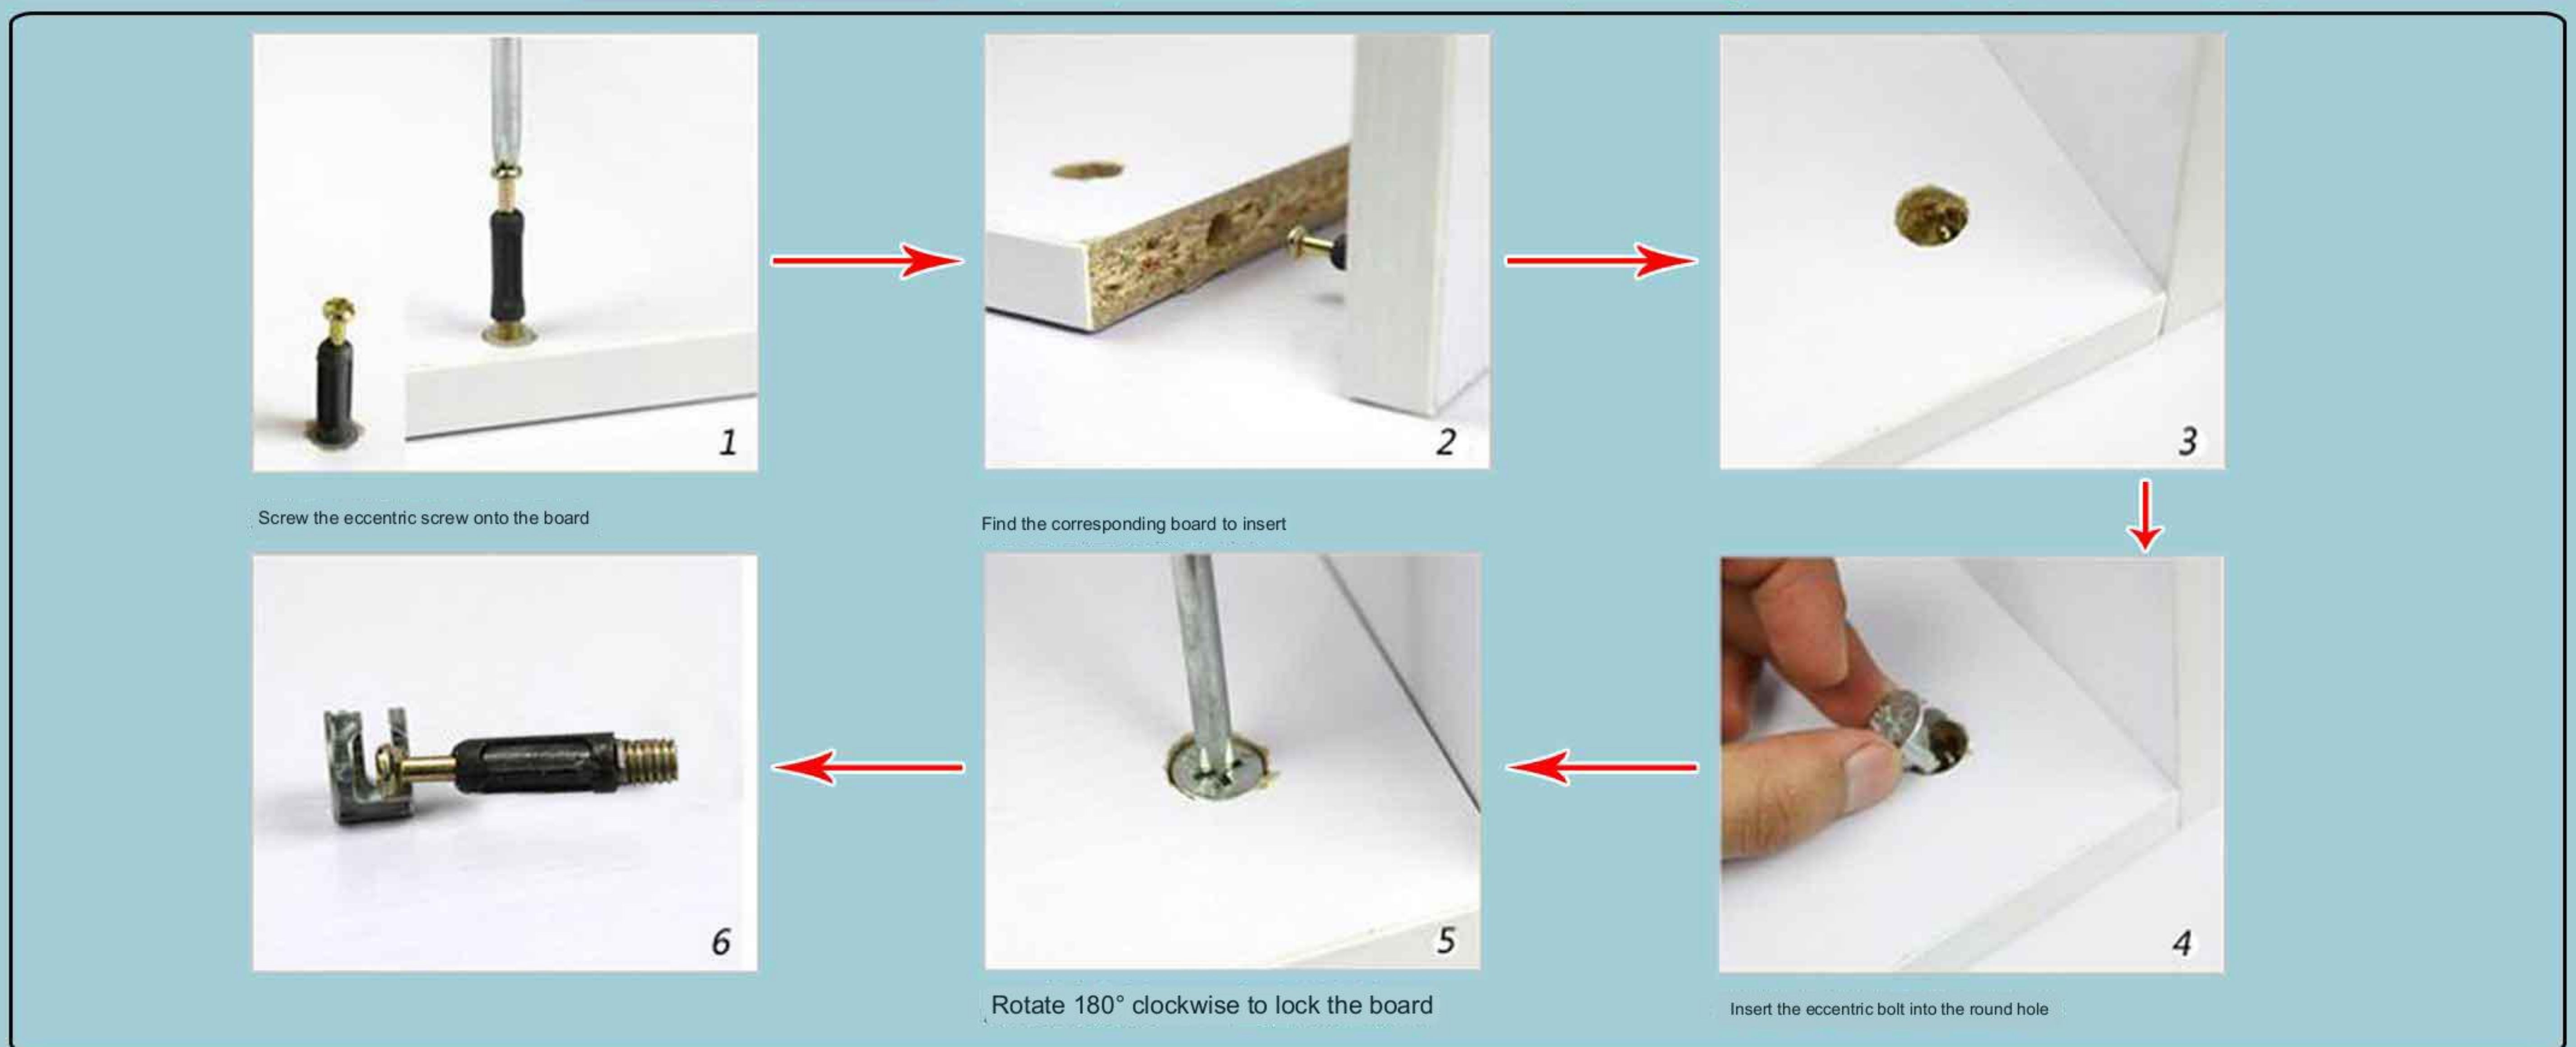

Board name and serial number:


The serial number sequence in the installation diagram is not a lack of boards, you only need to install it according to the serial number



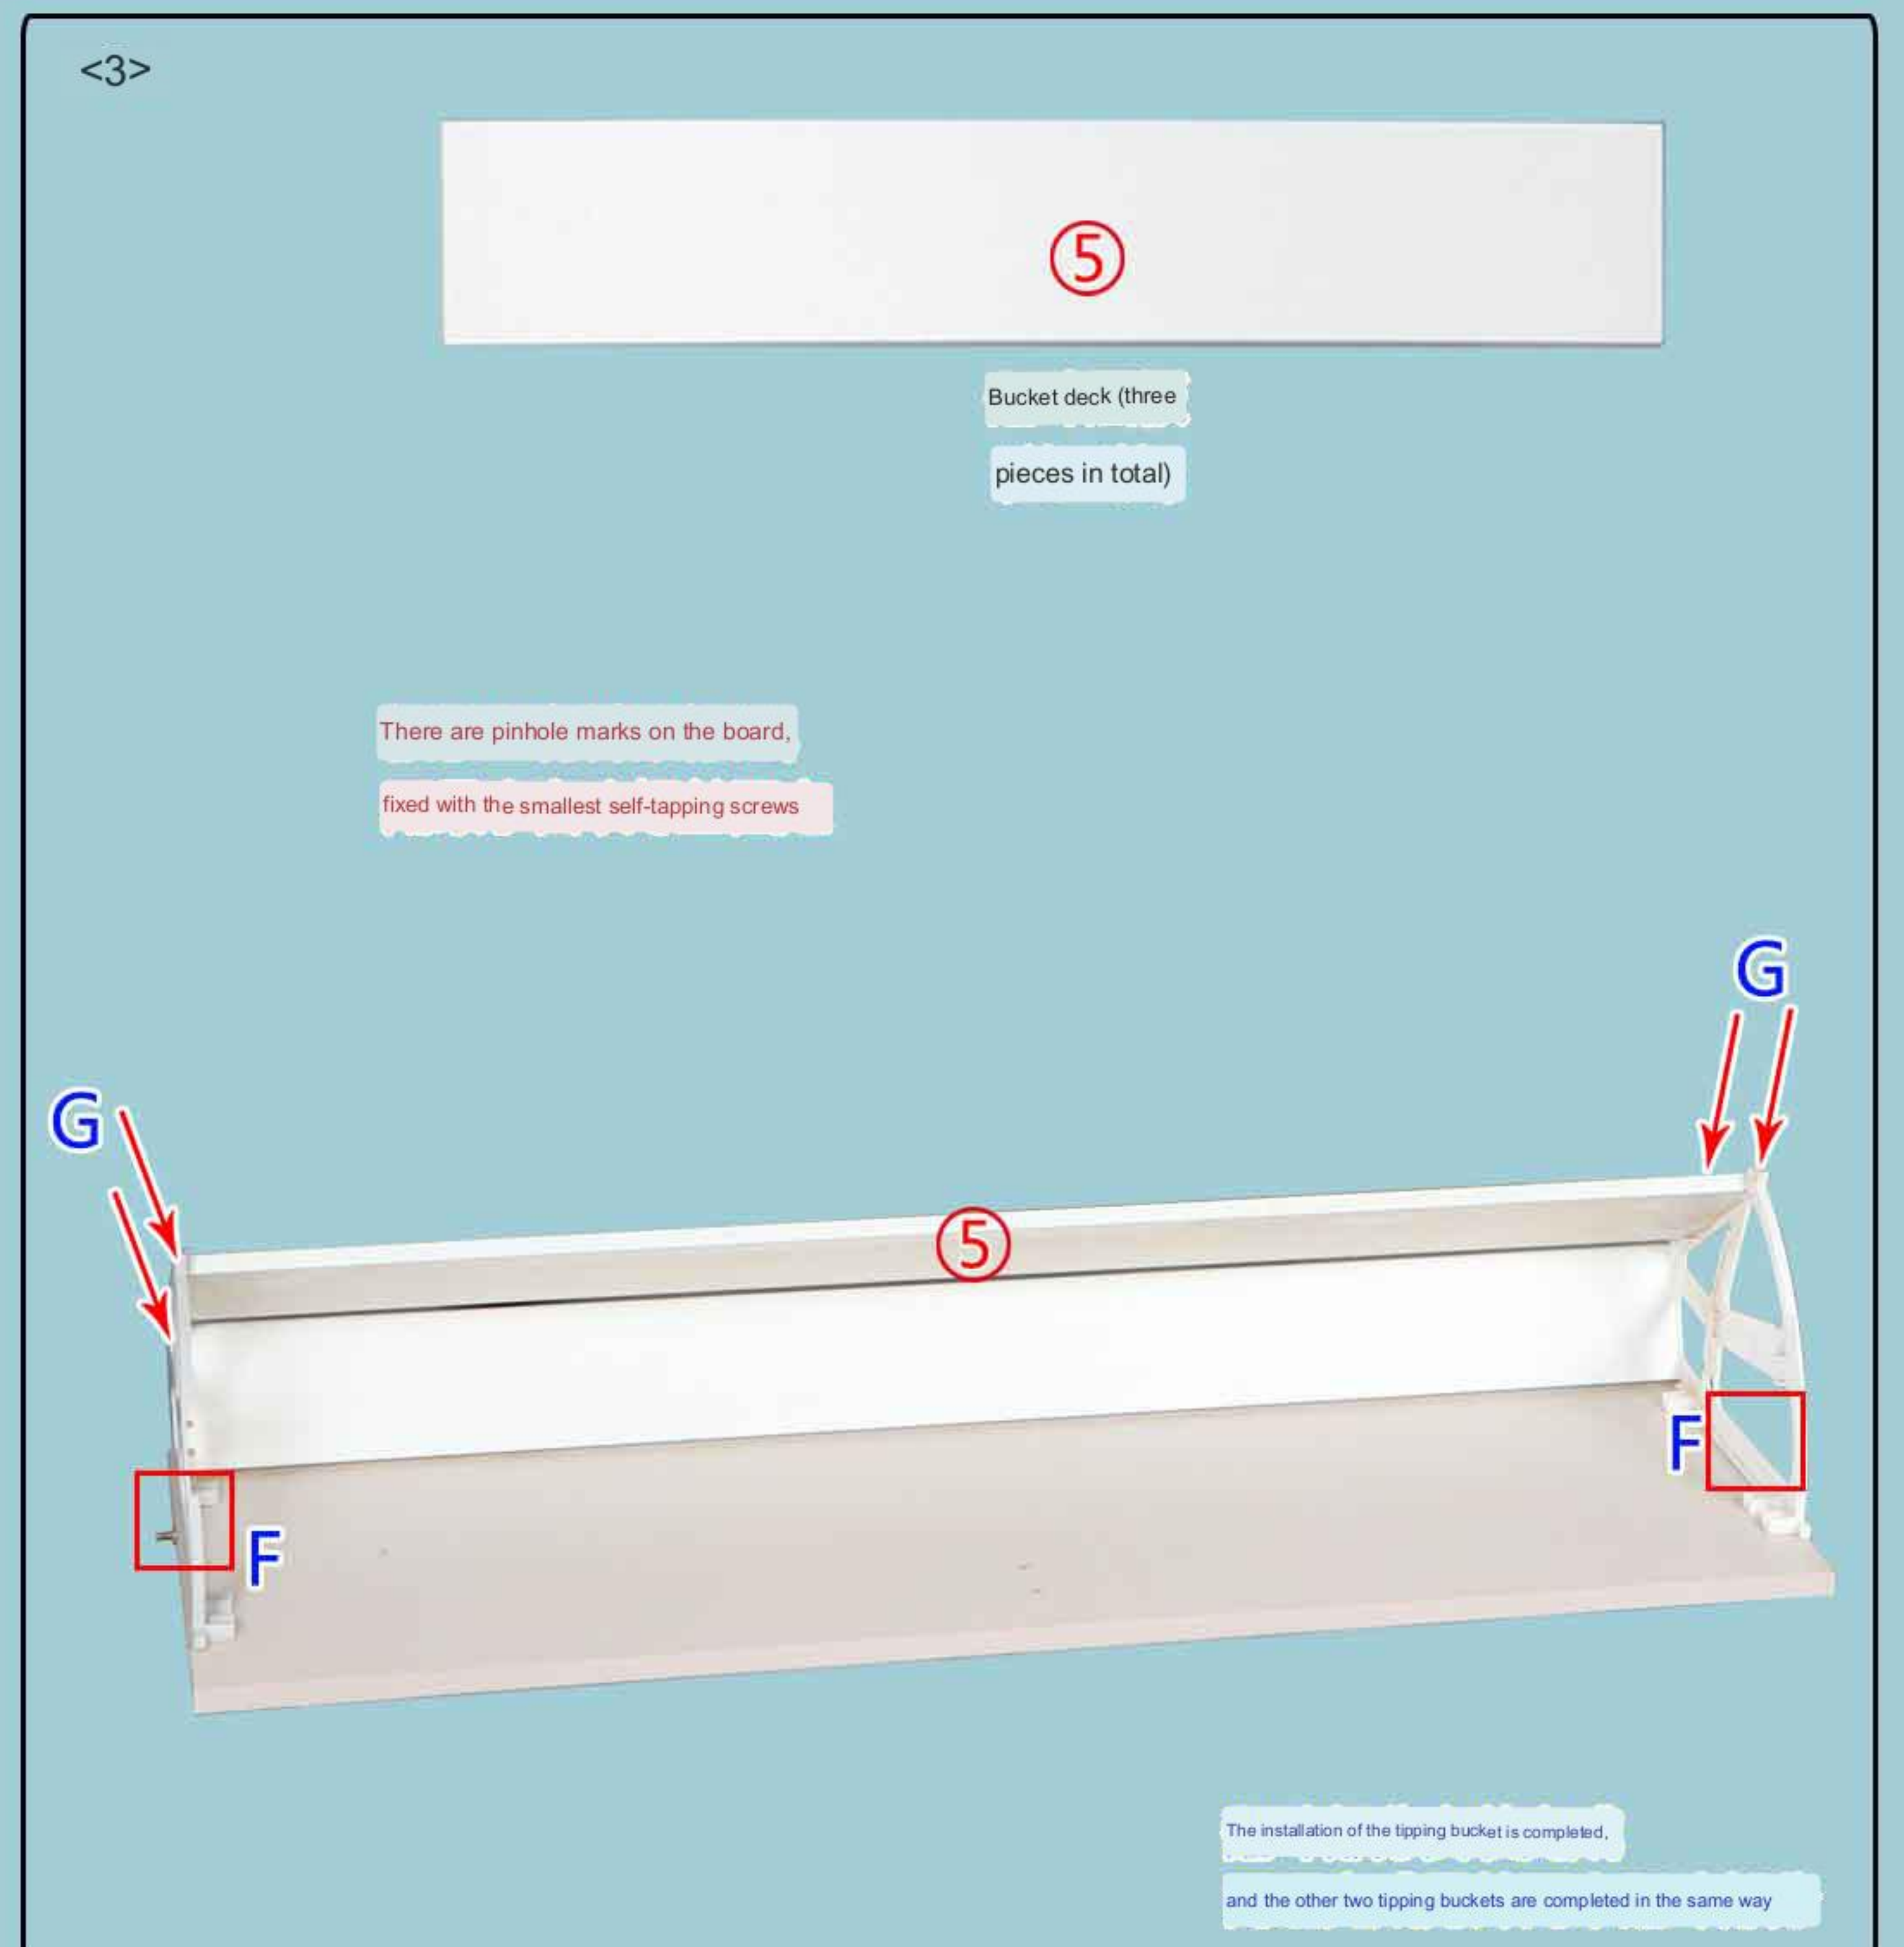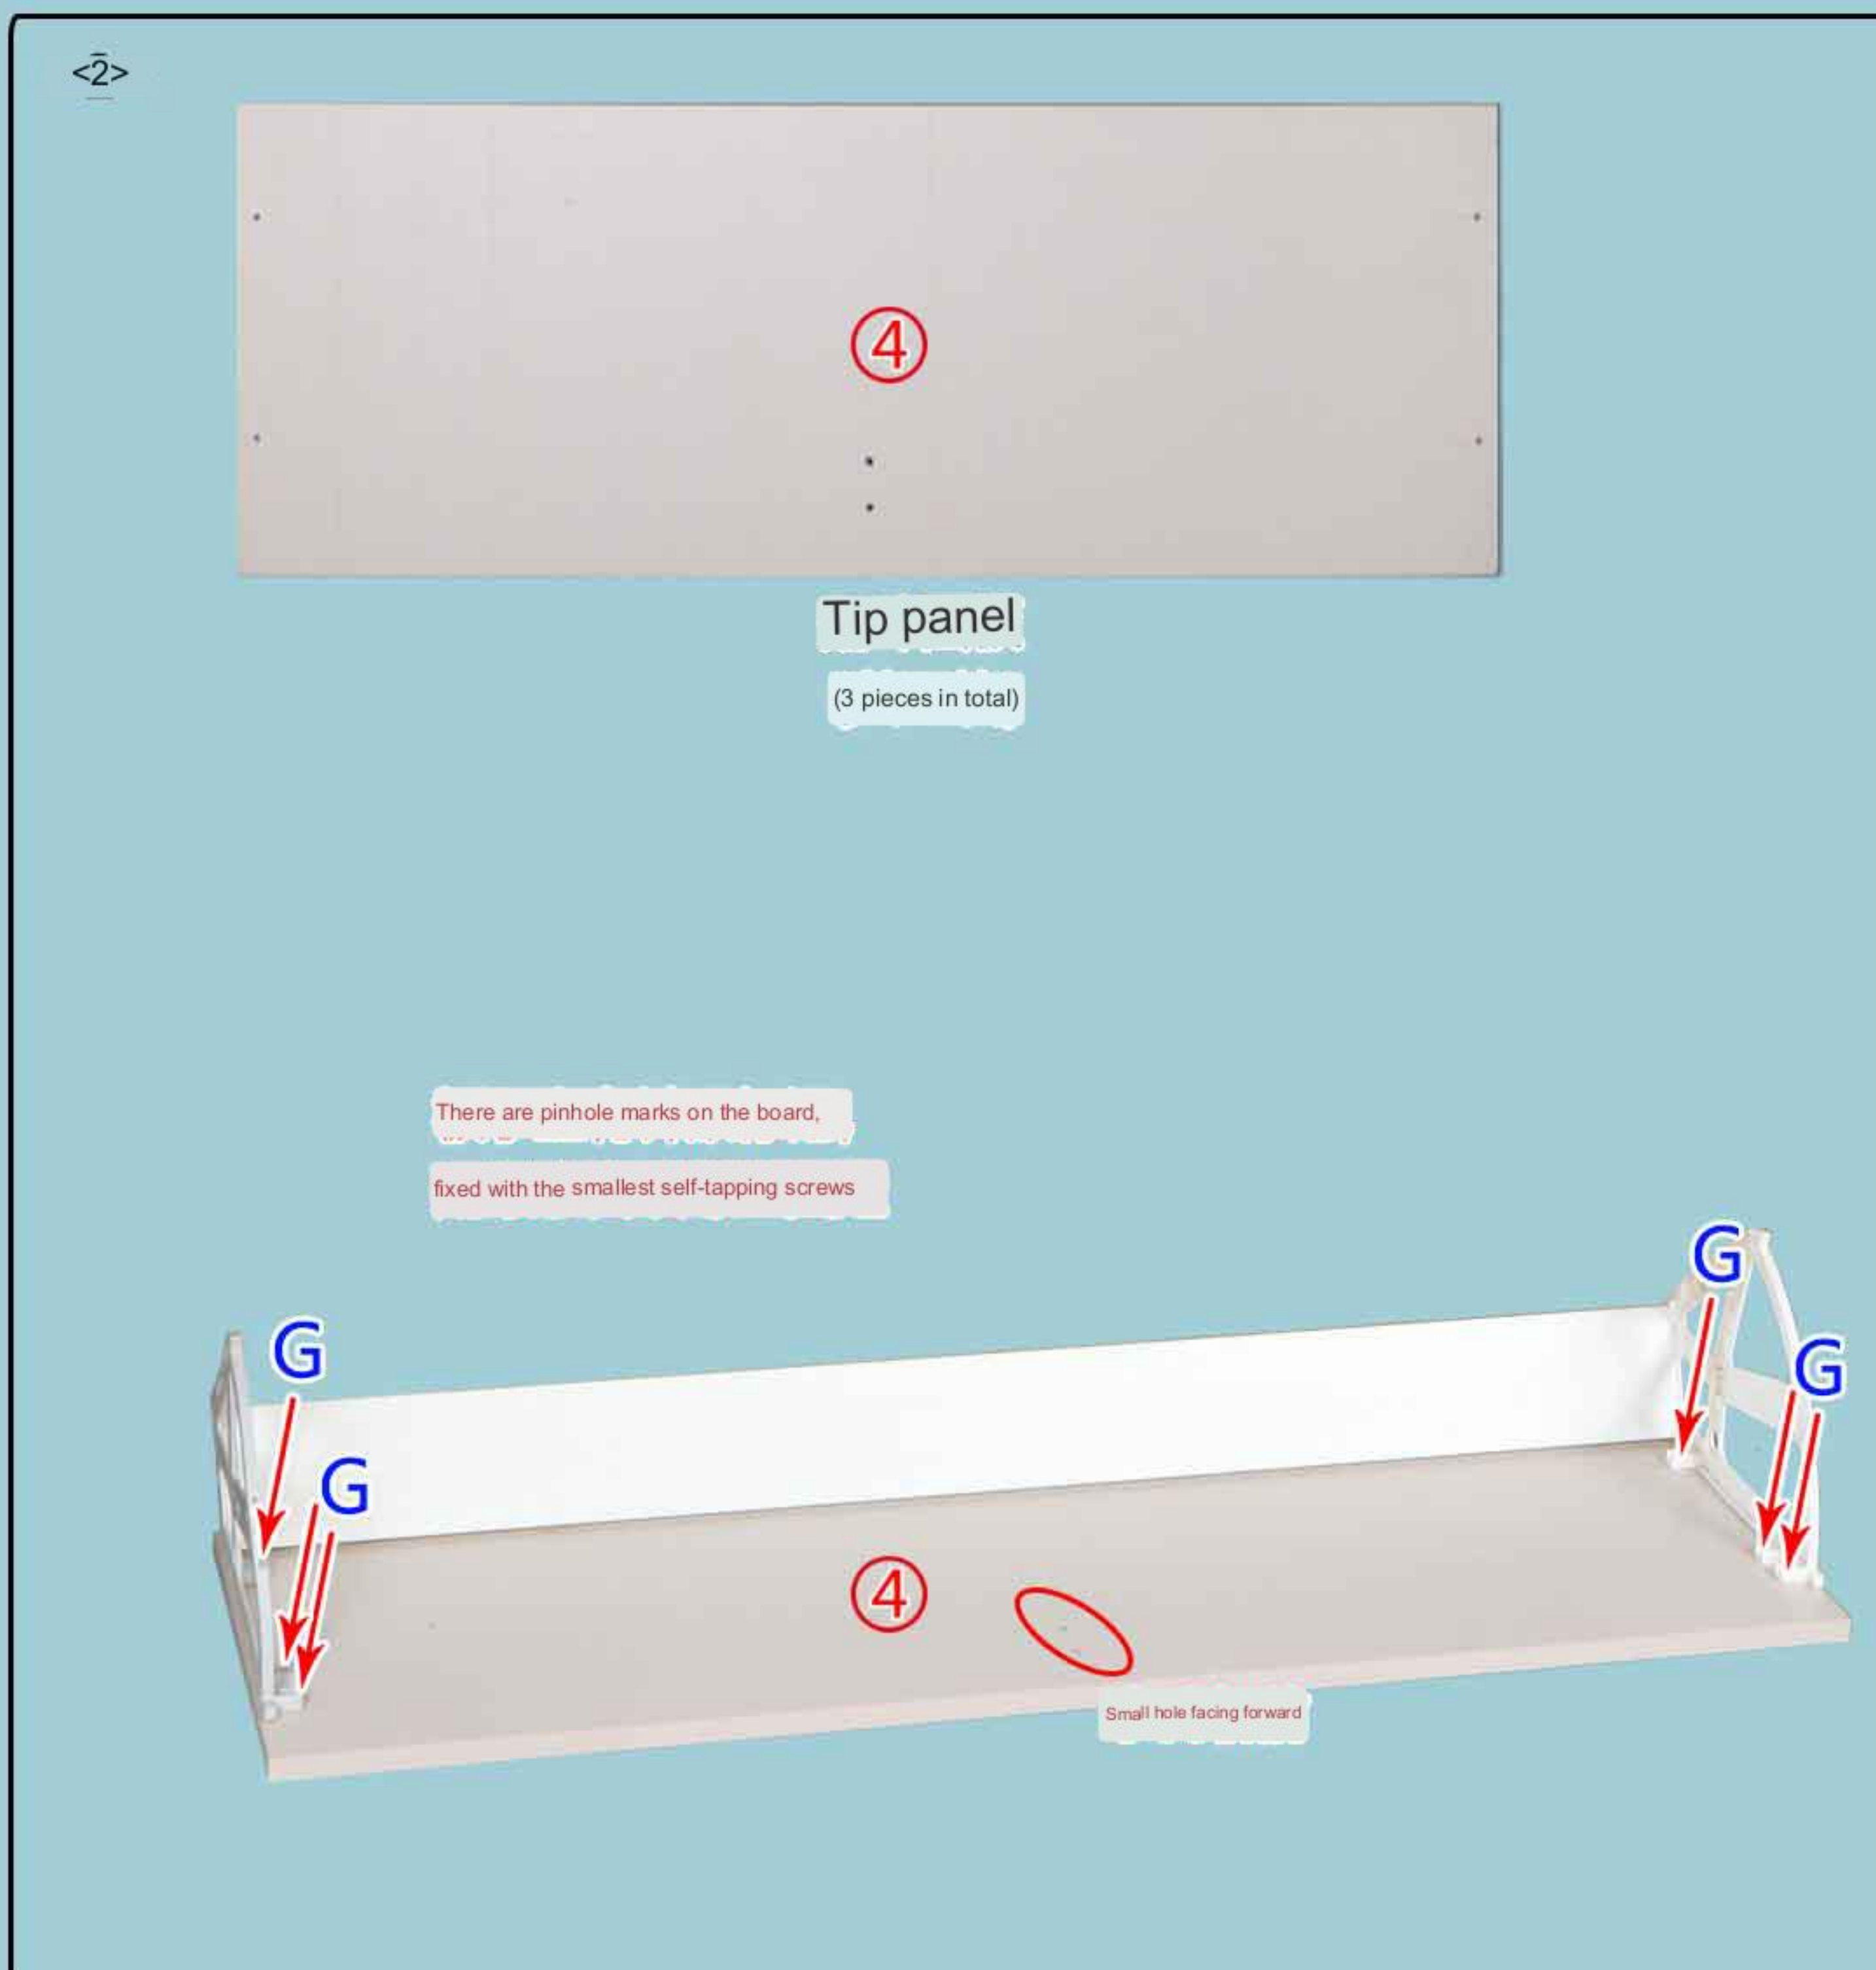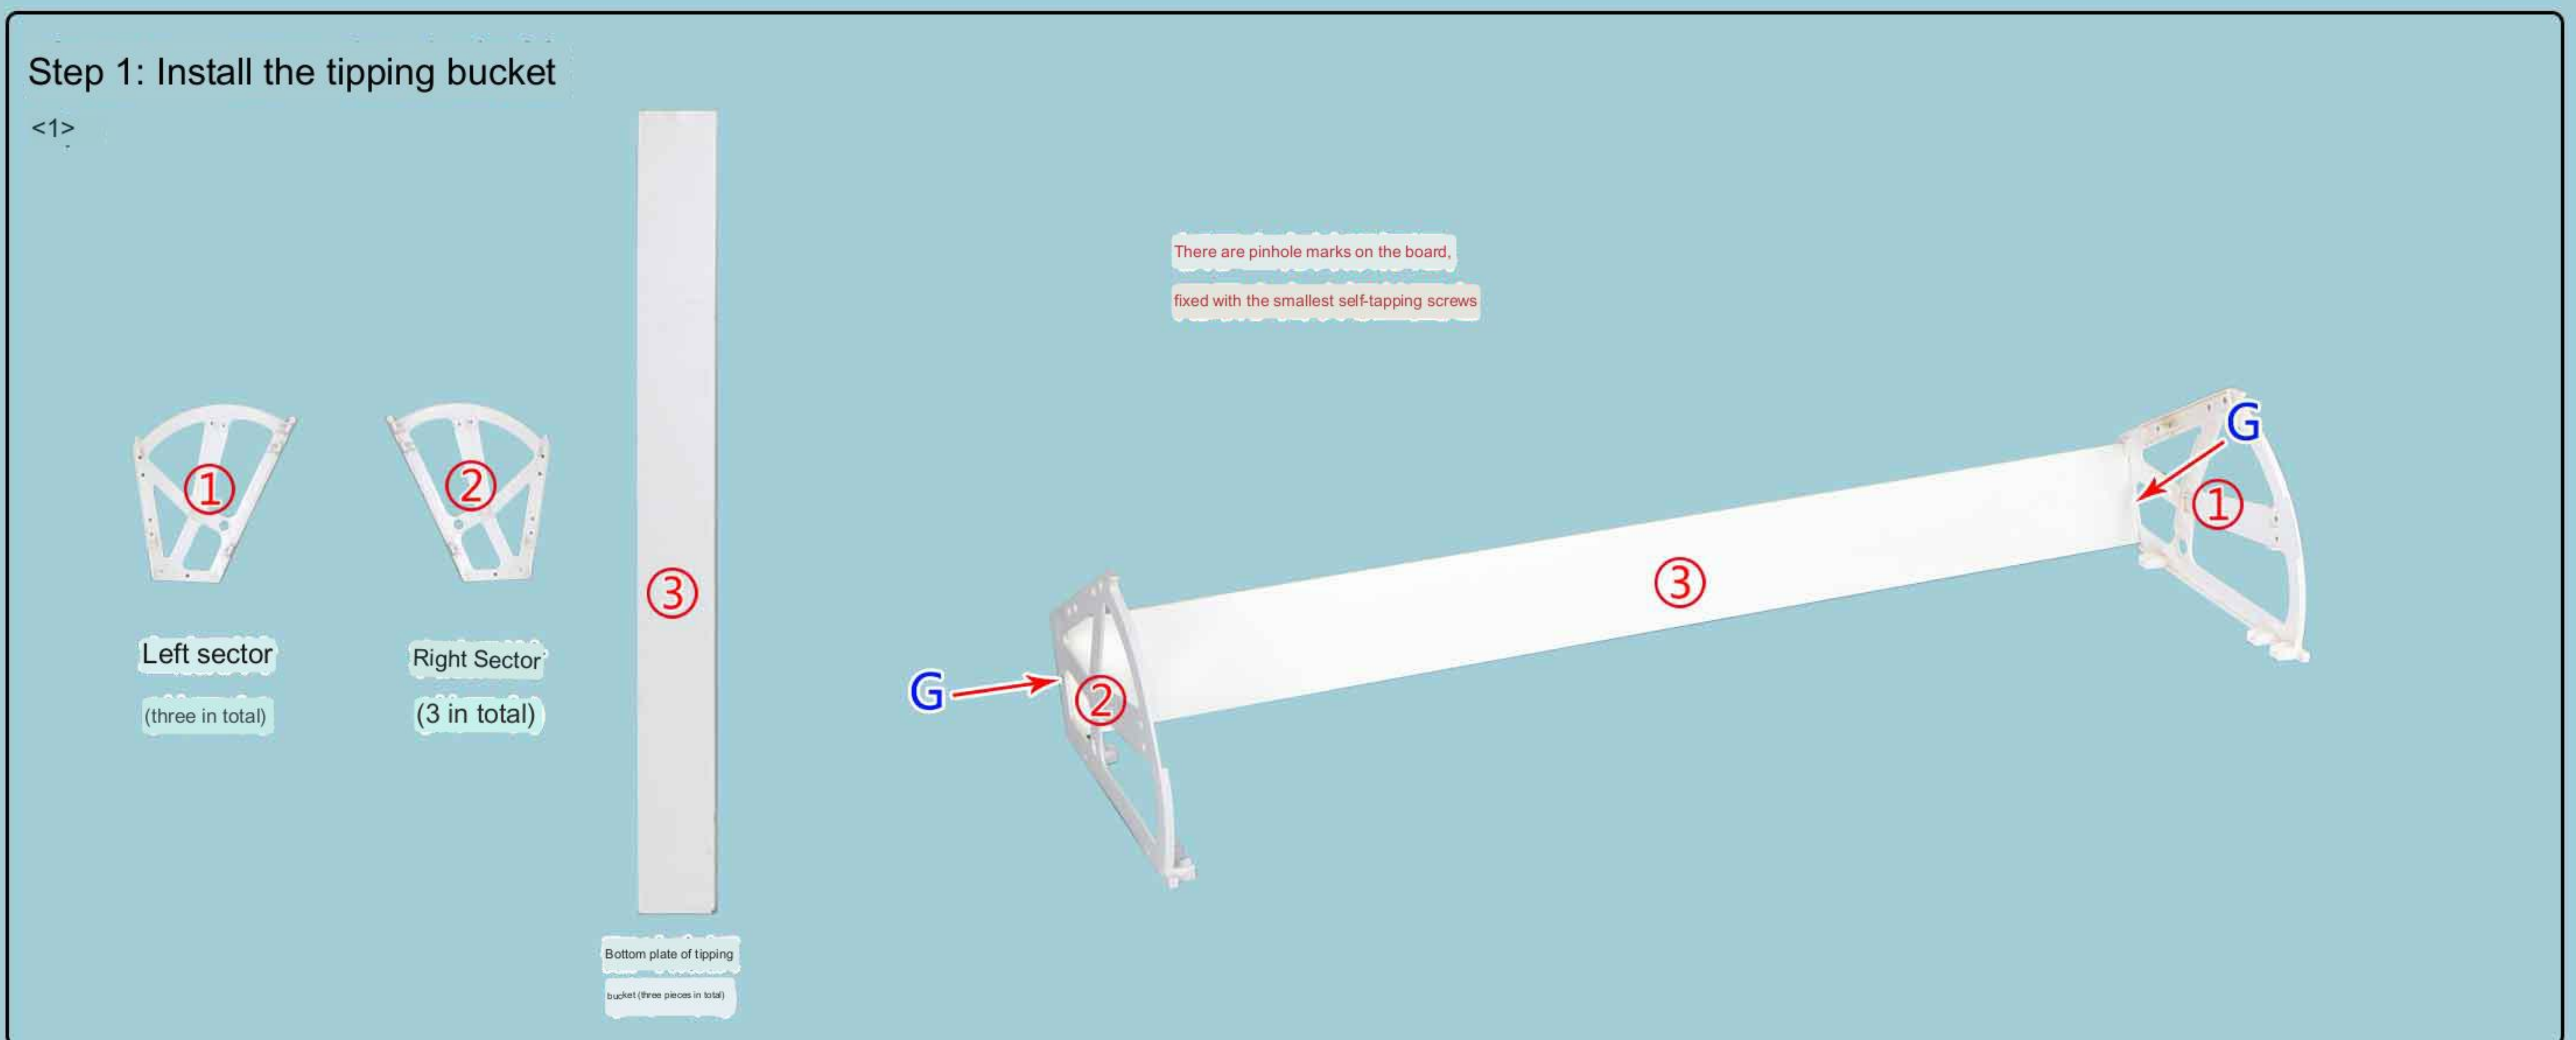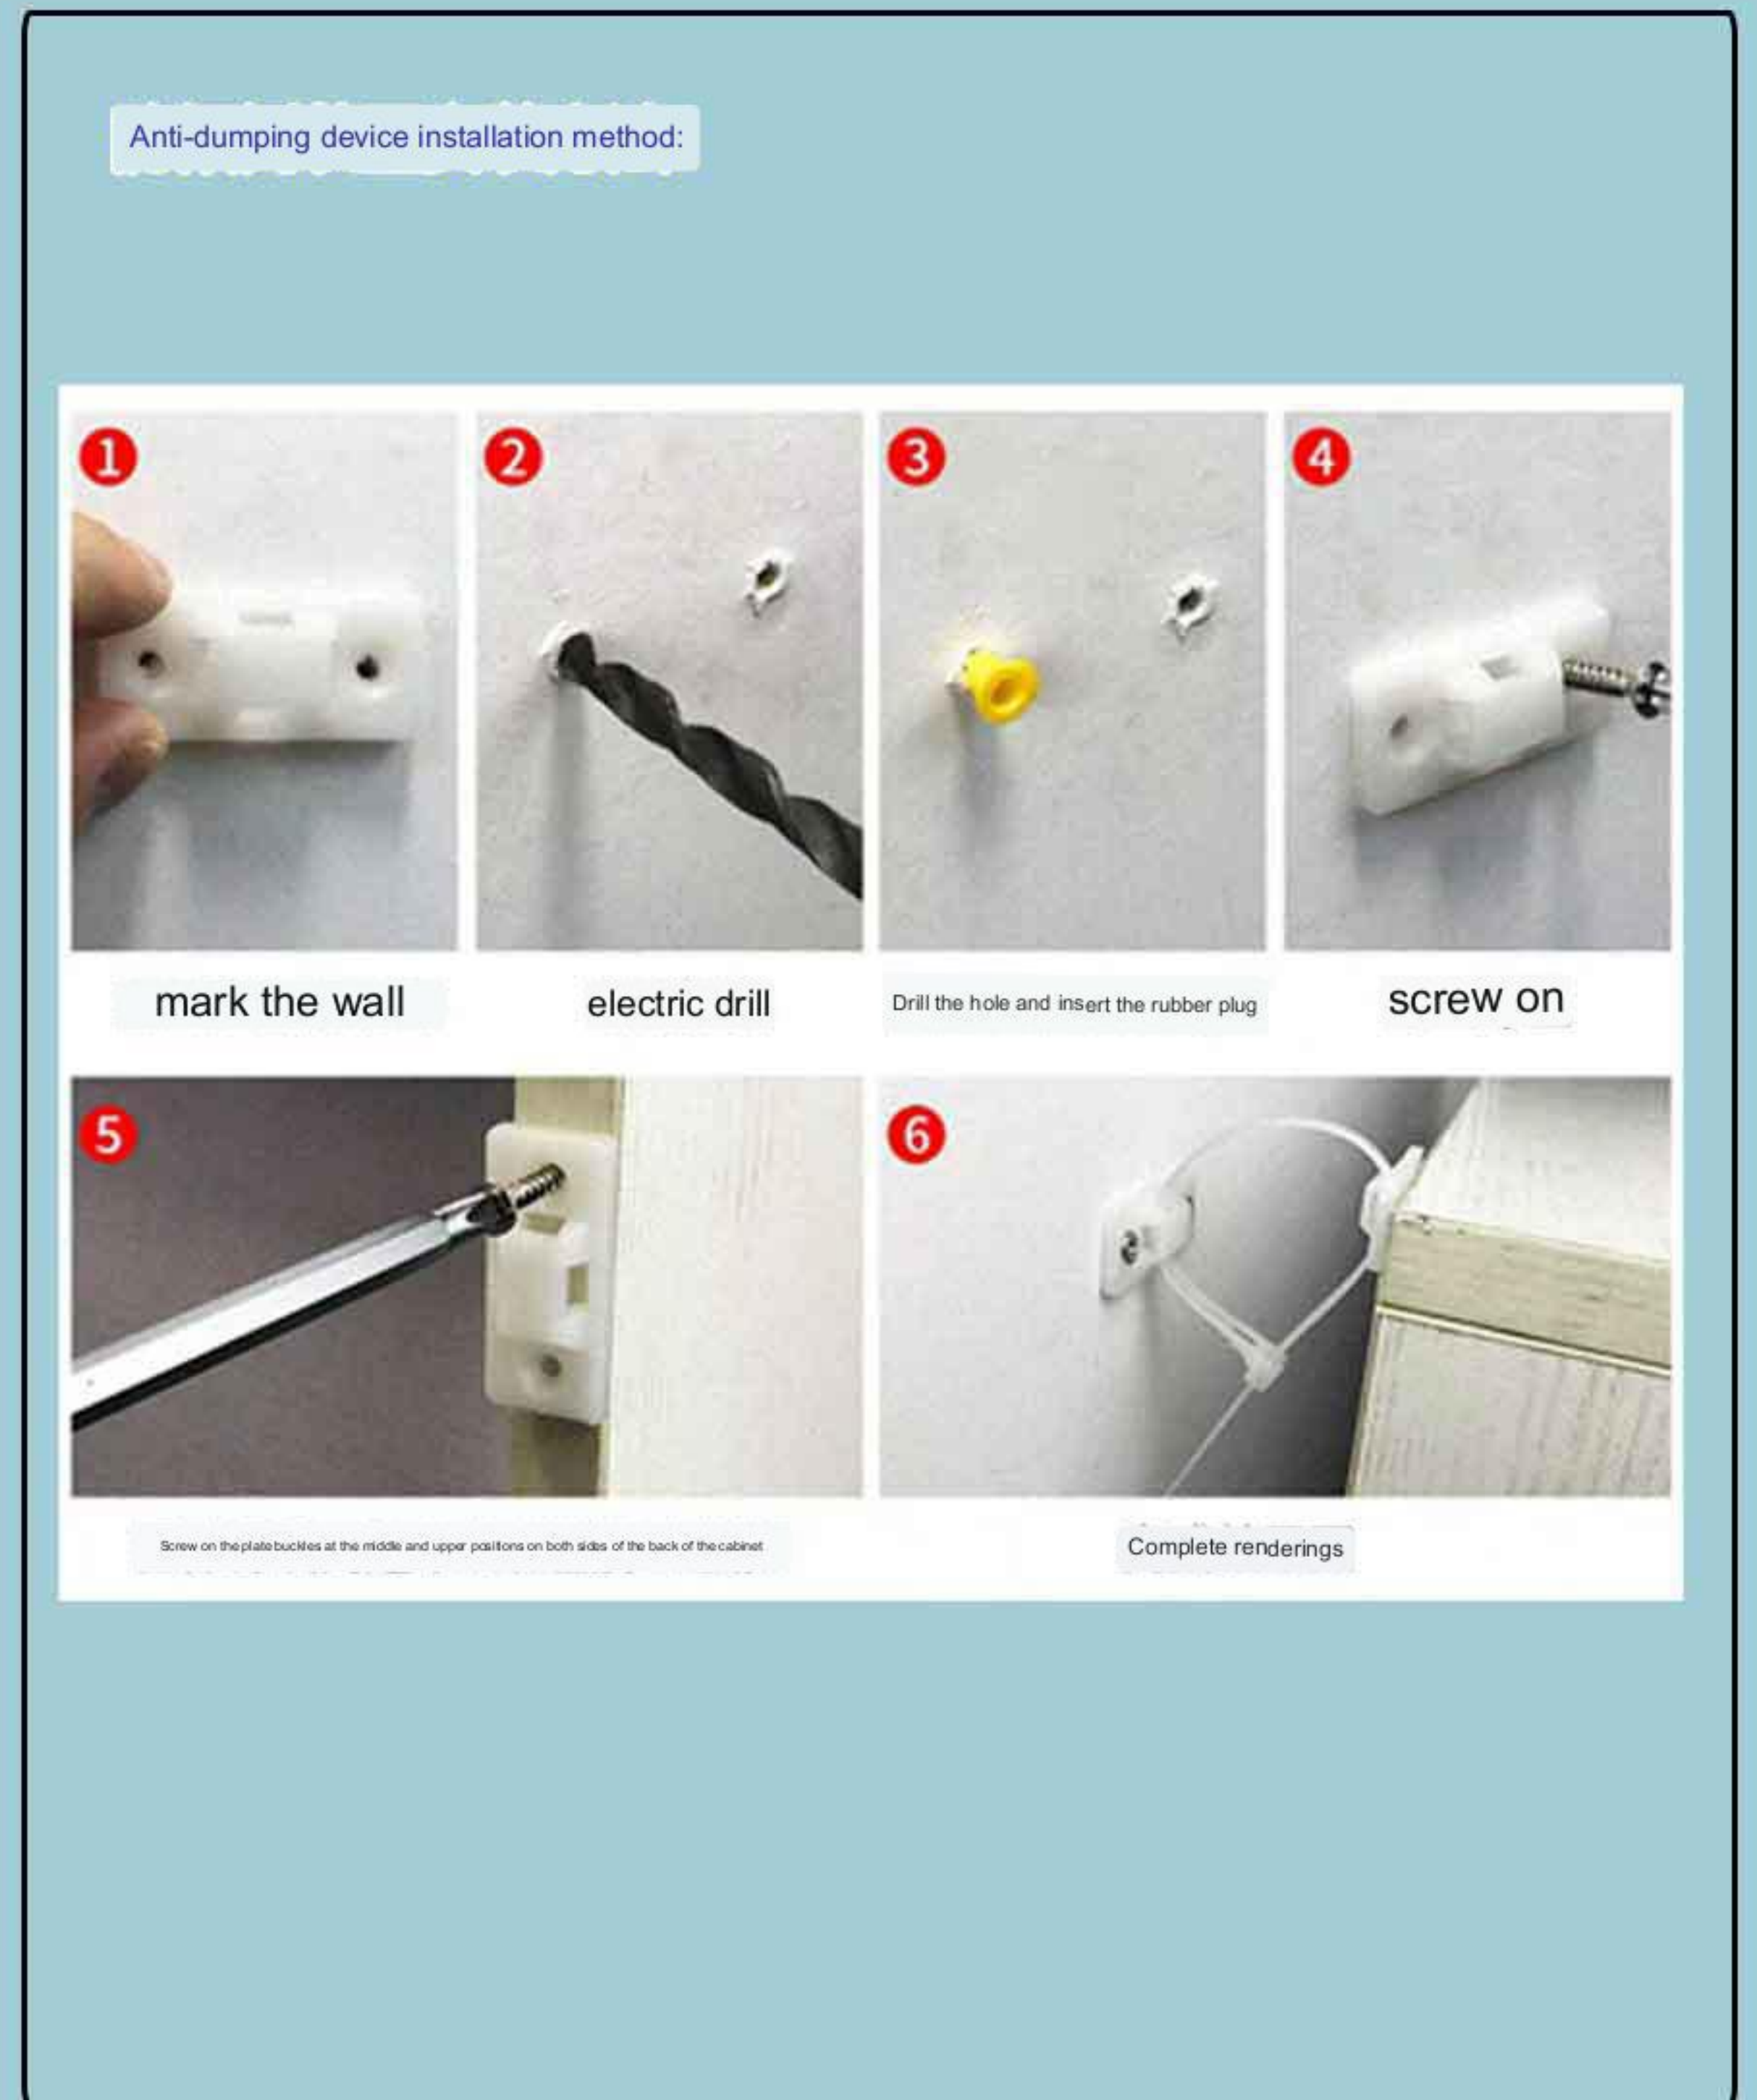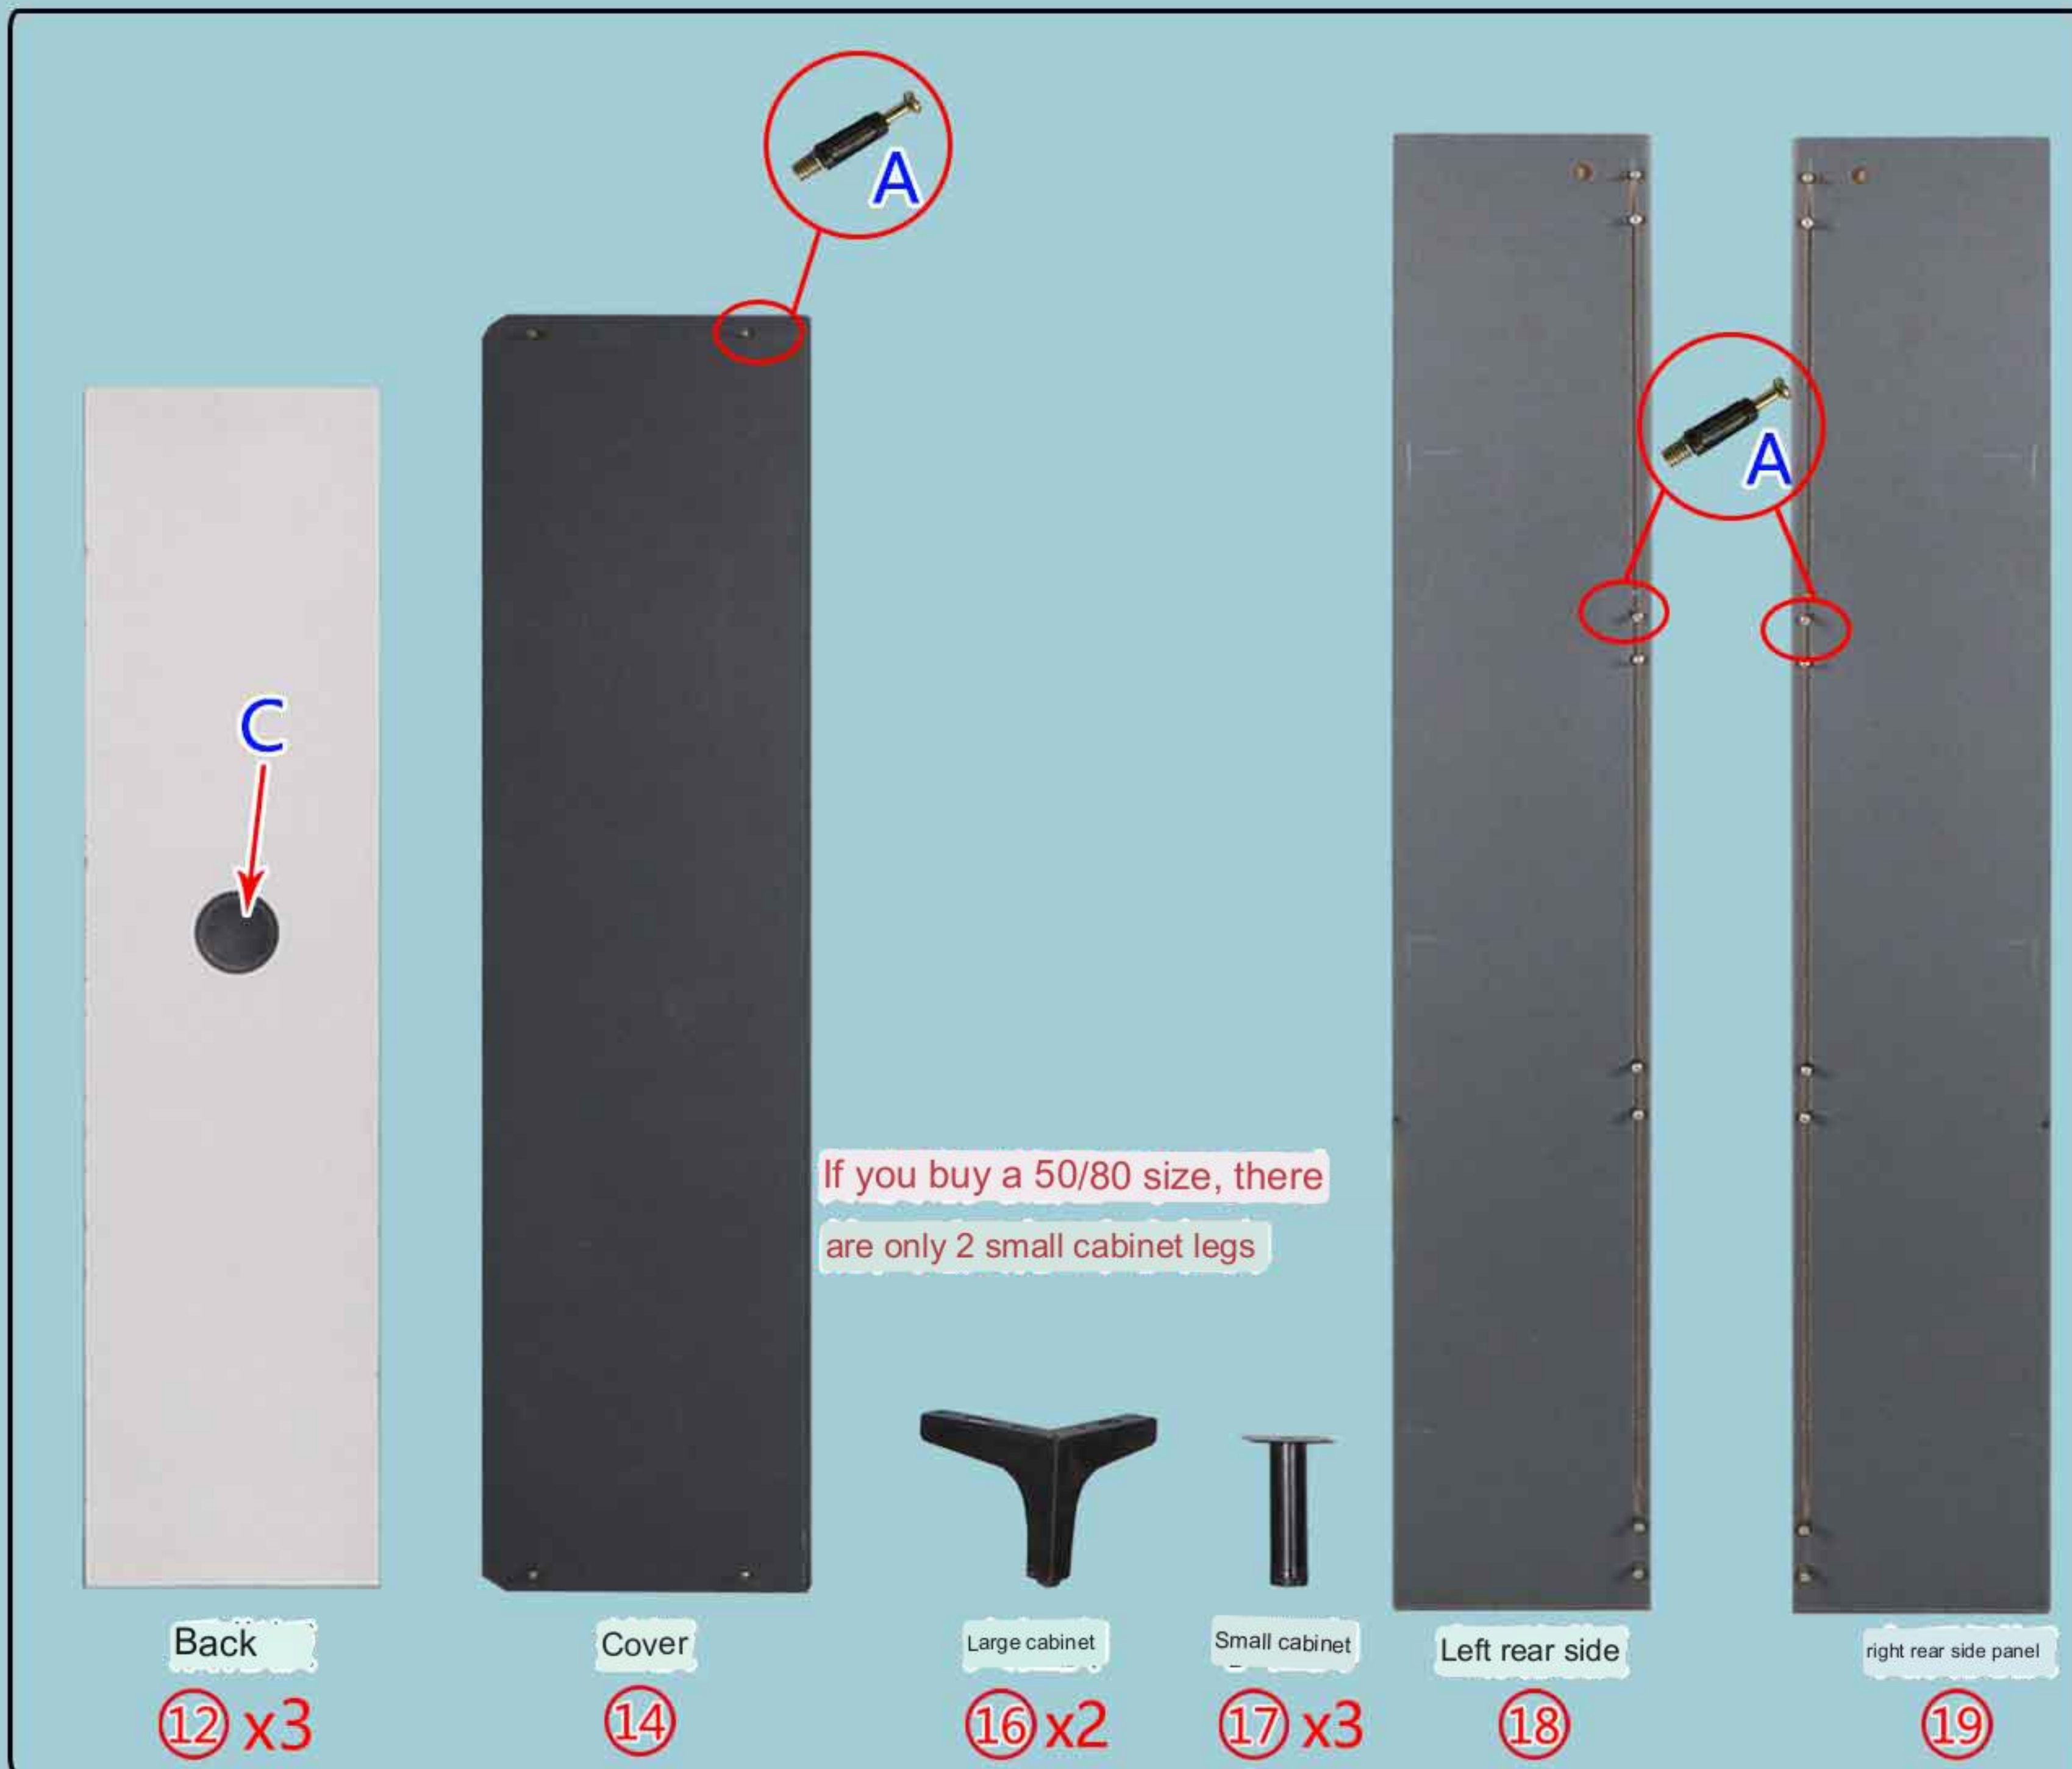


Step 2: Install the whole part

<1>

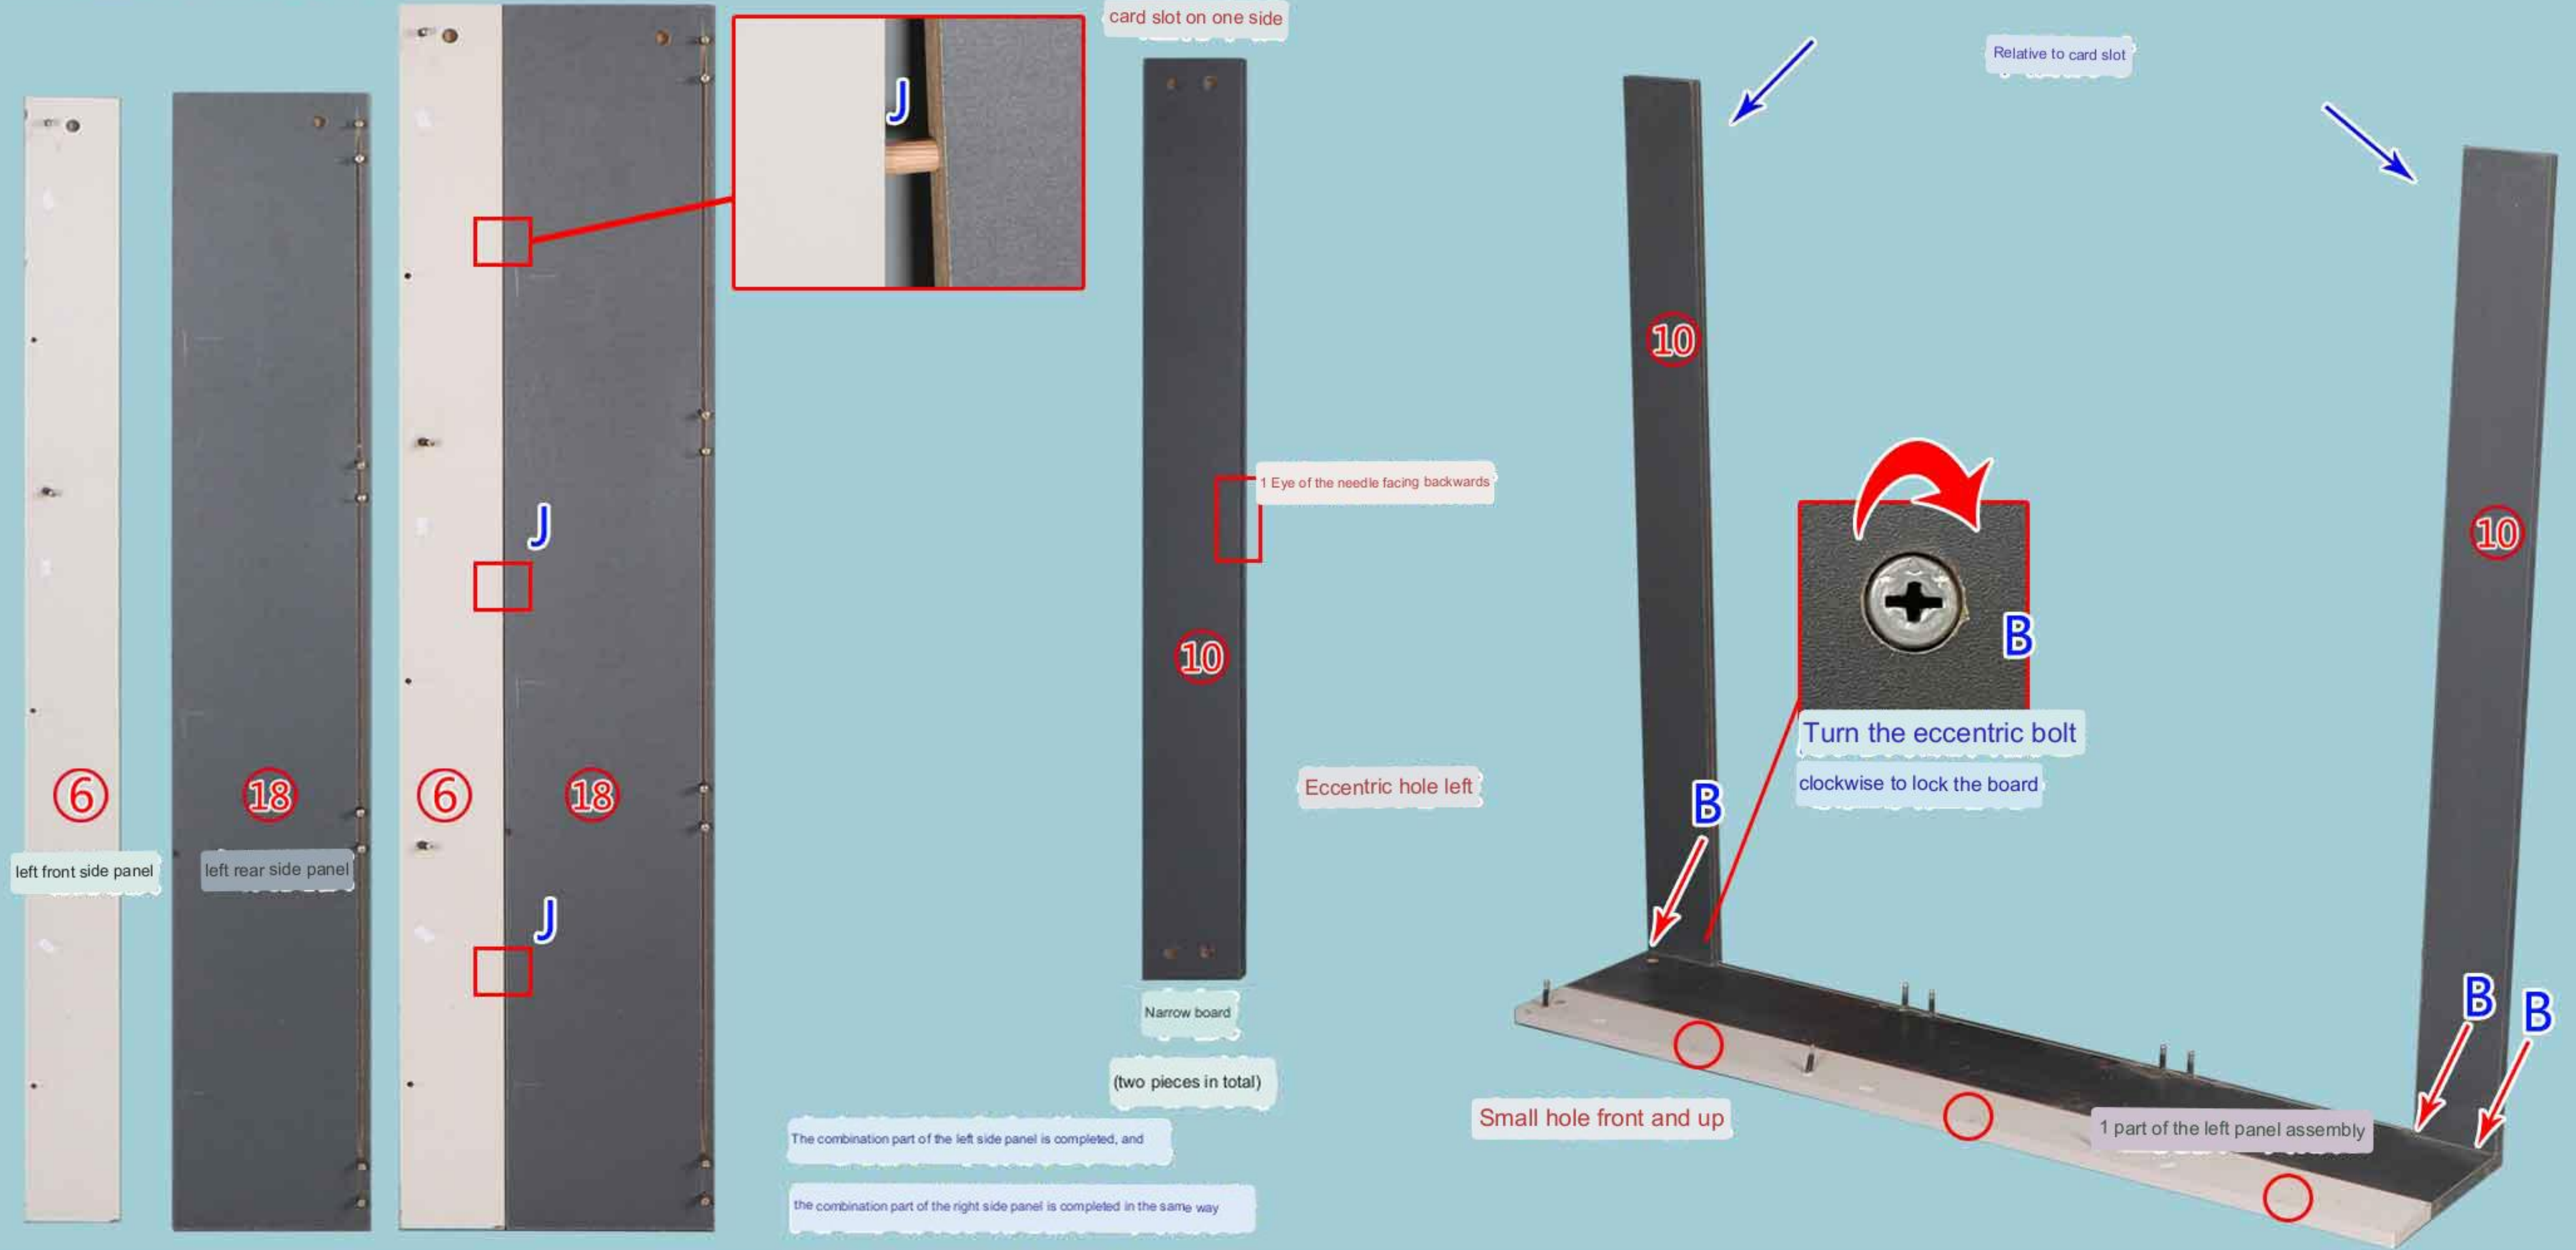

The combination part of the left side panel is completed, and the combination part of the right side panel is completed in the same way

<2>

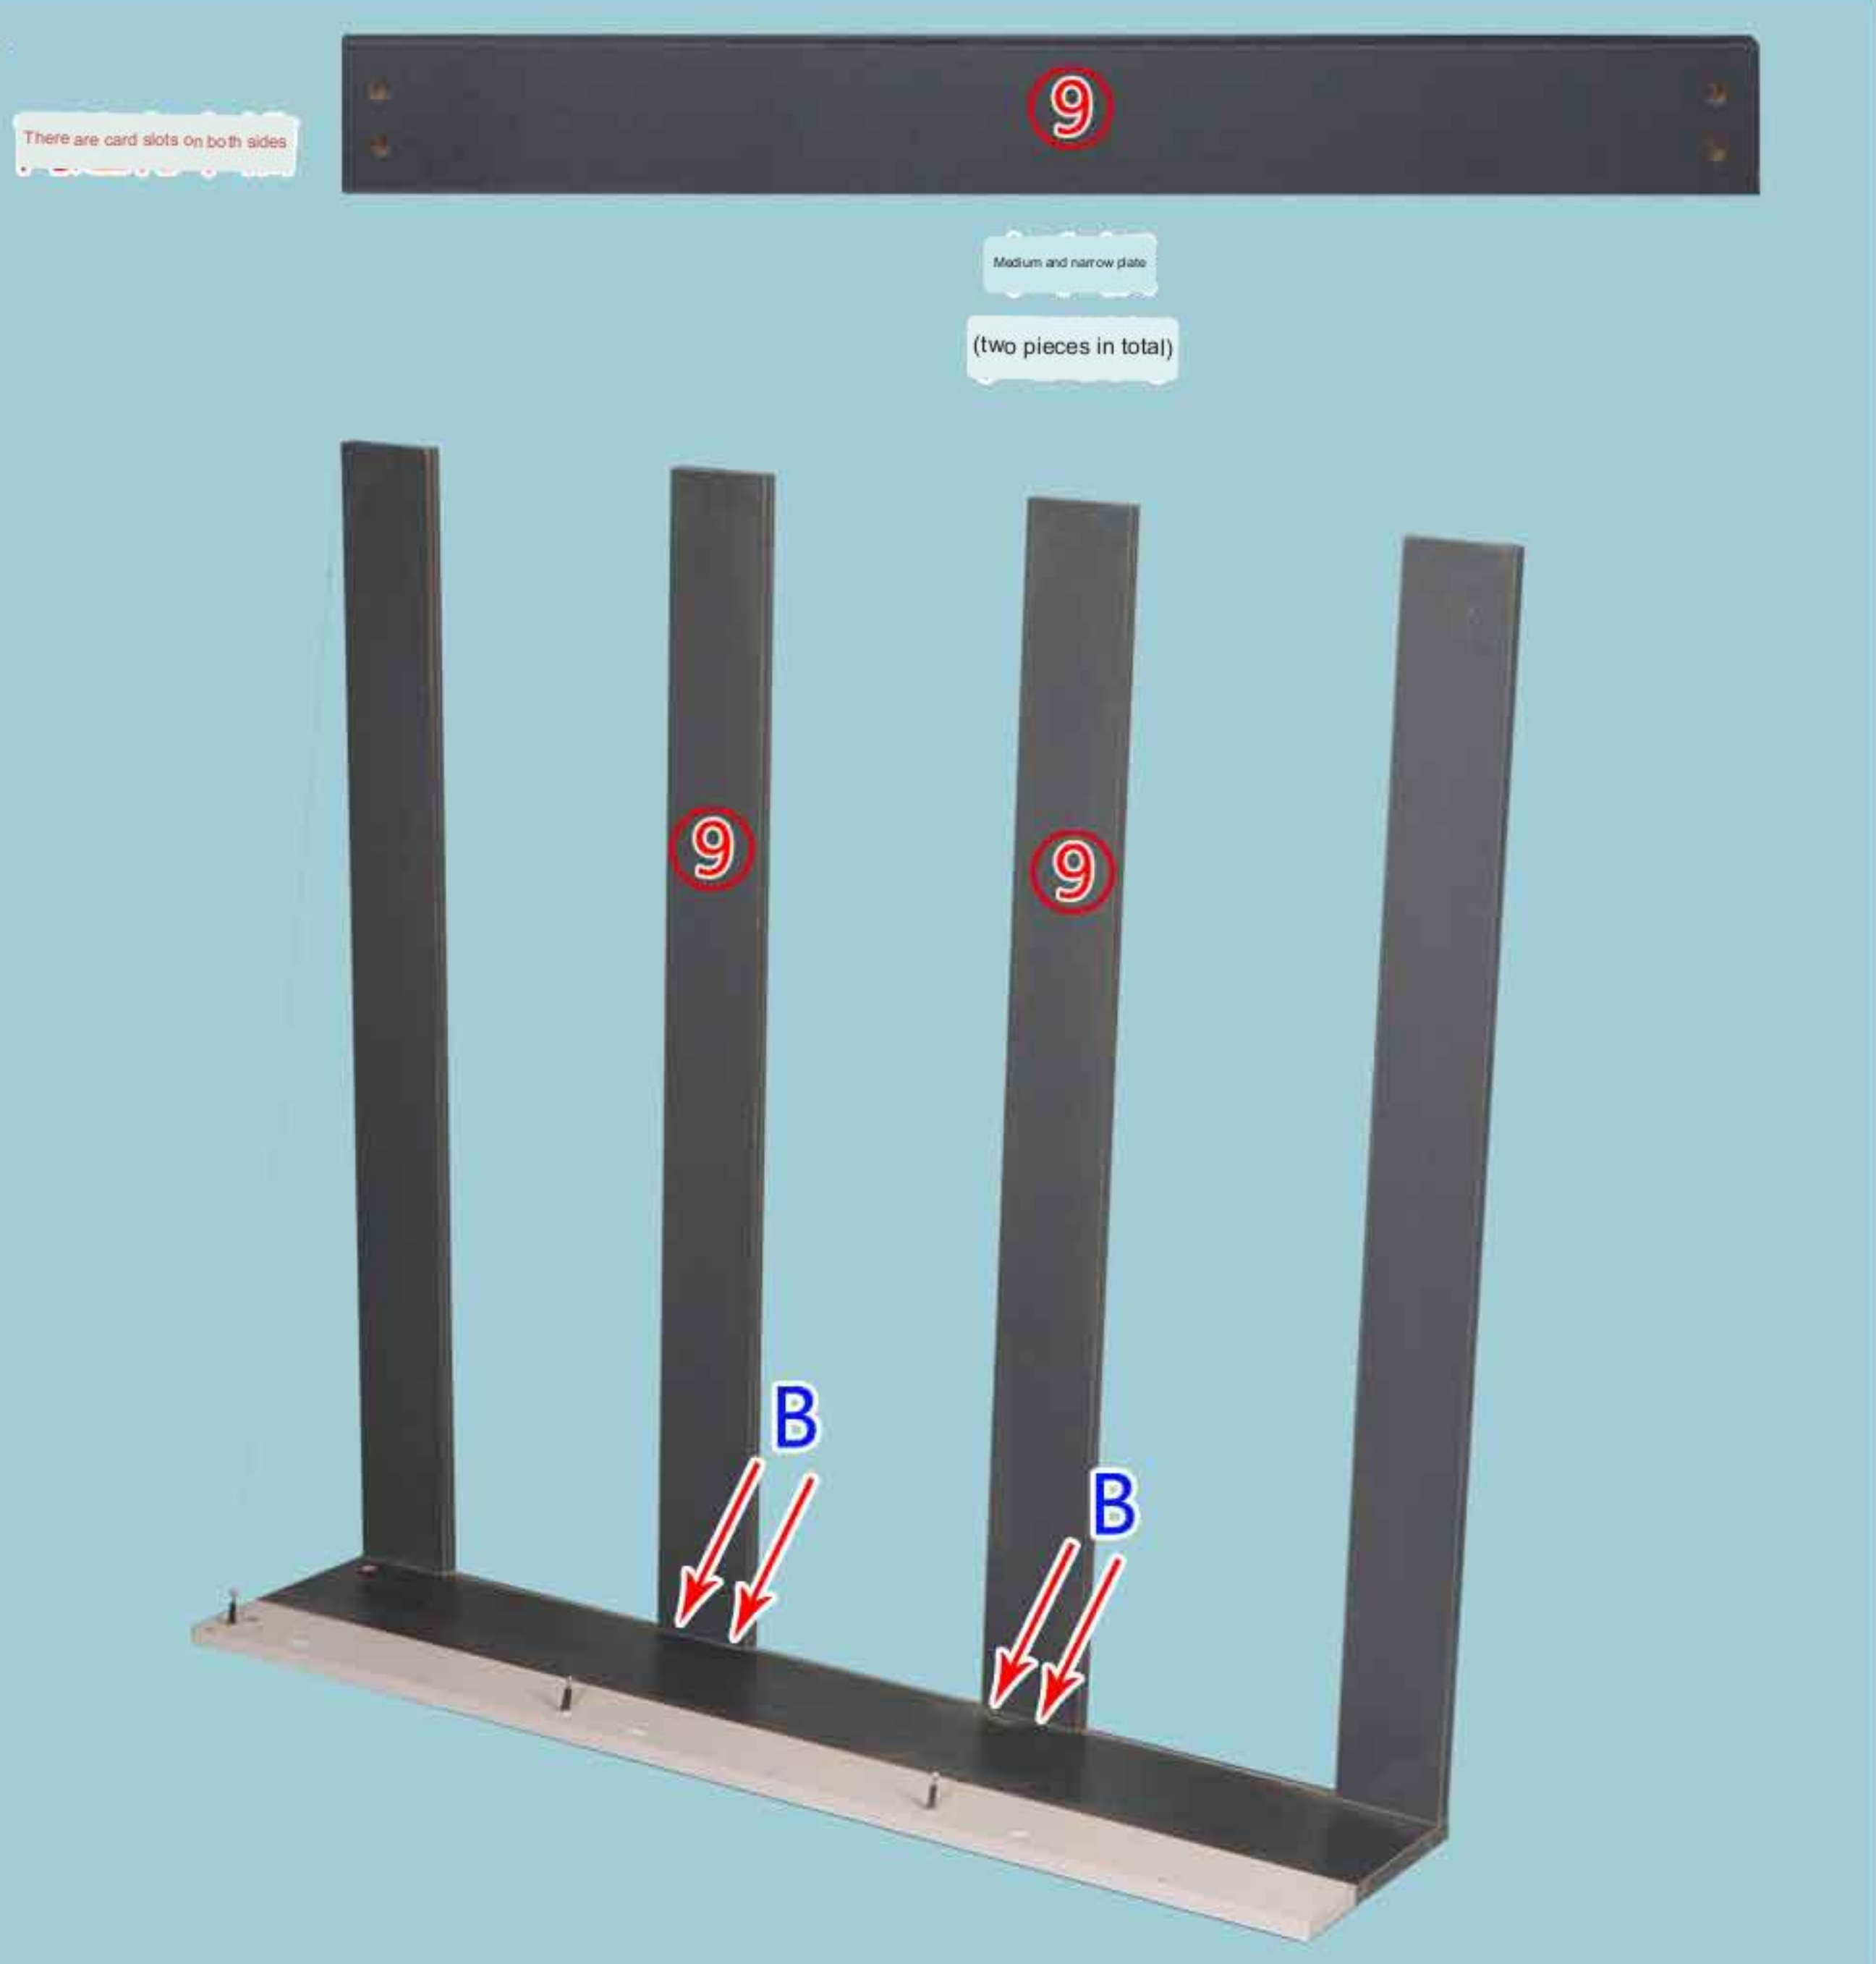

<3>



<4>



Align the rotating shaft of the tipping bucket with the small hole on the left front panel and insert

<5>

