

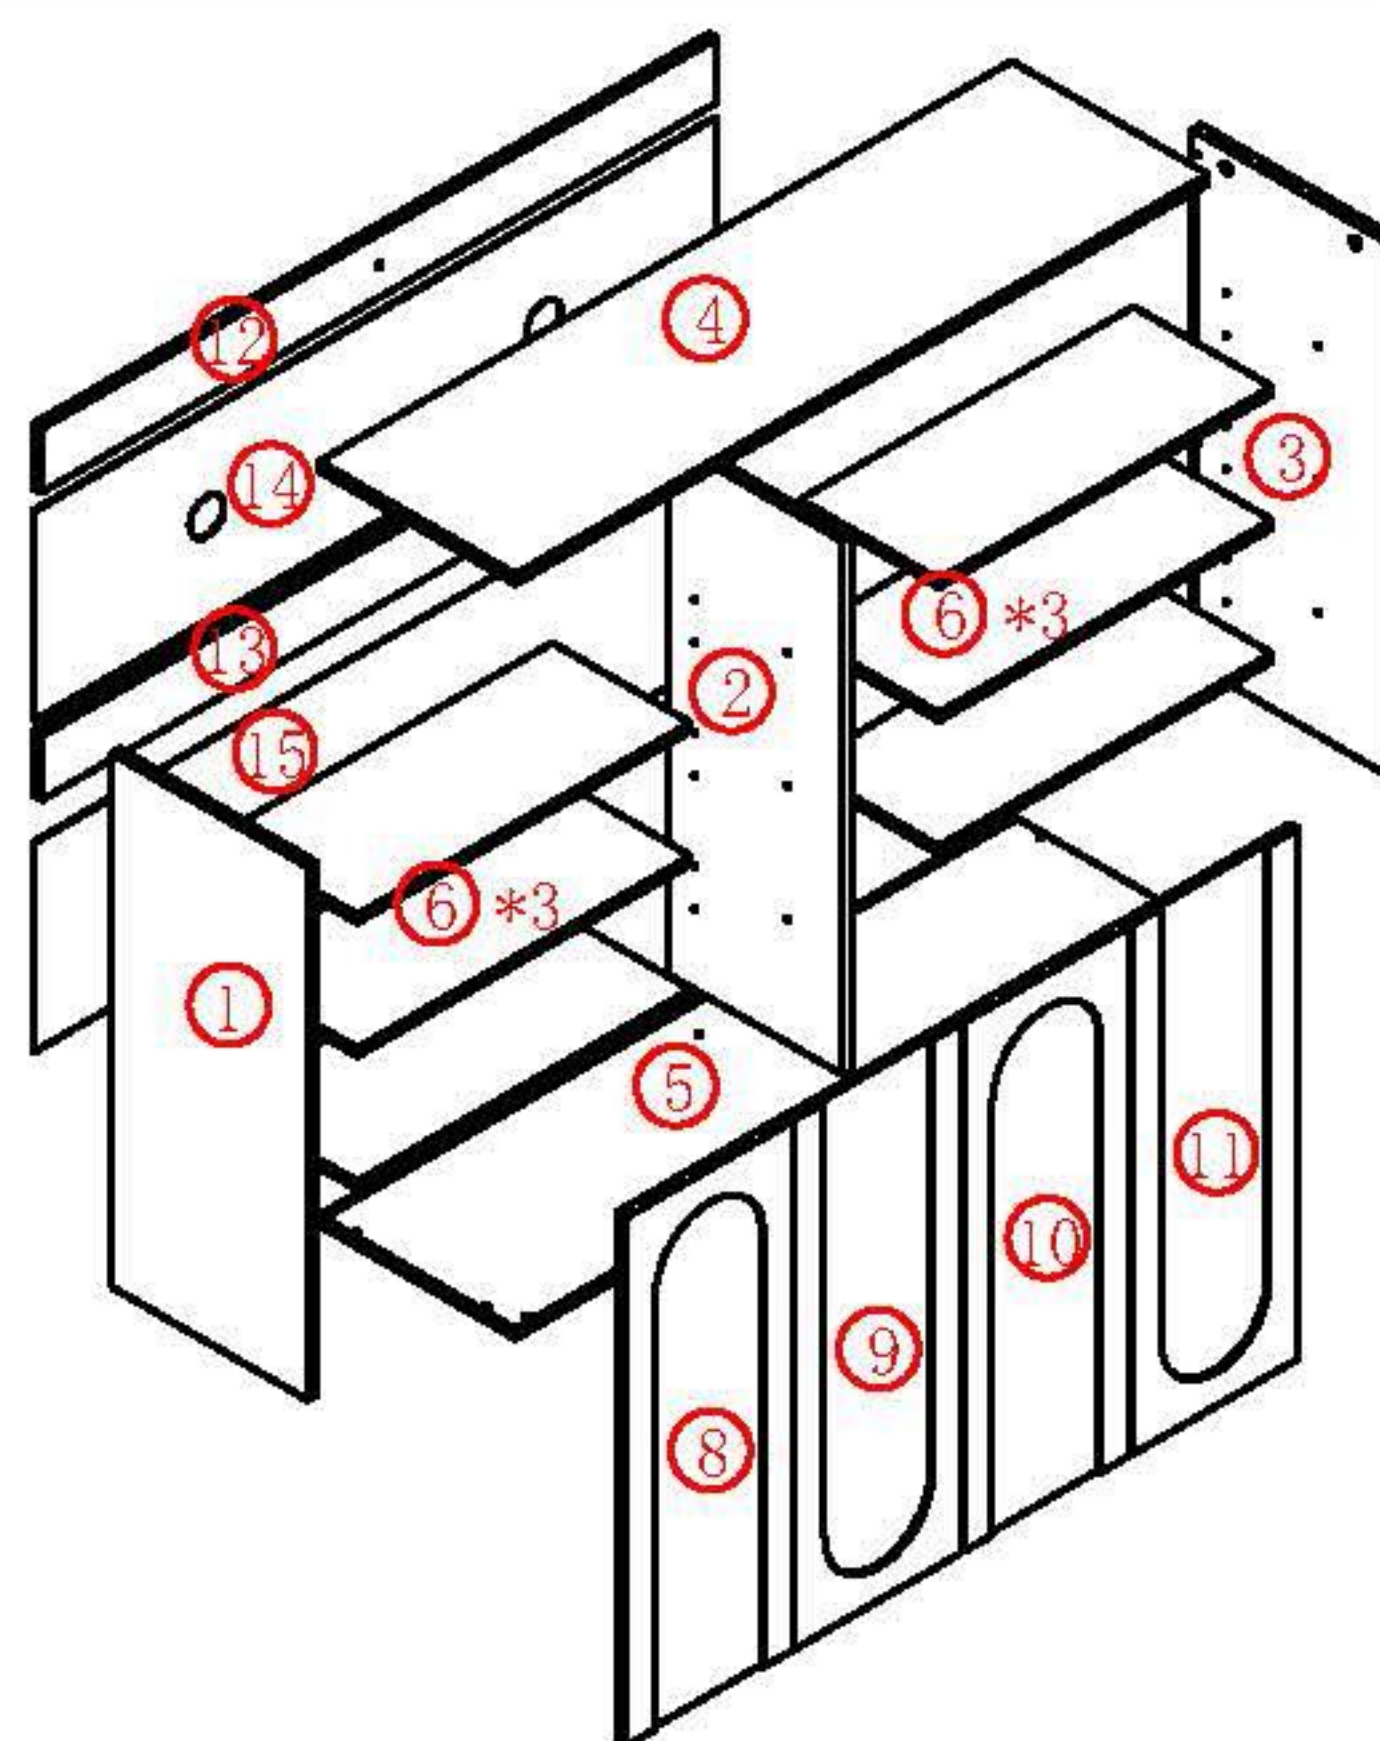


# SOCE029 120/140CM Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

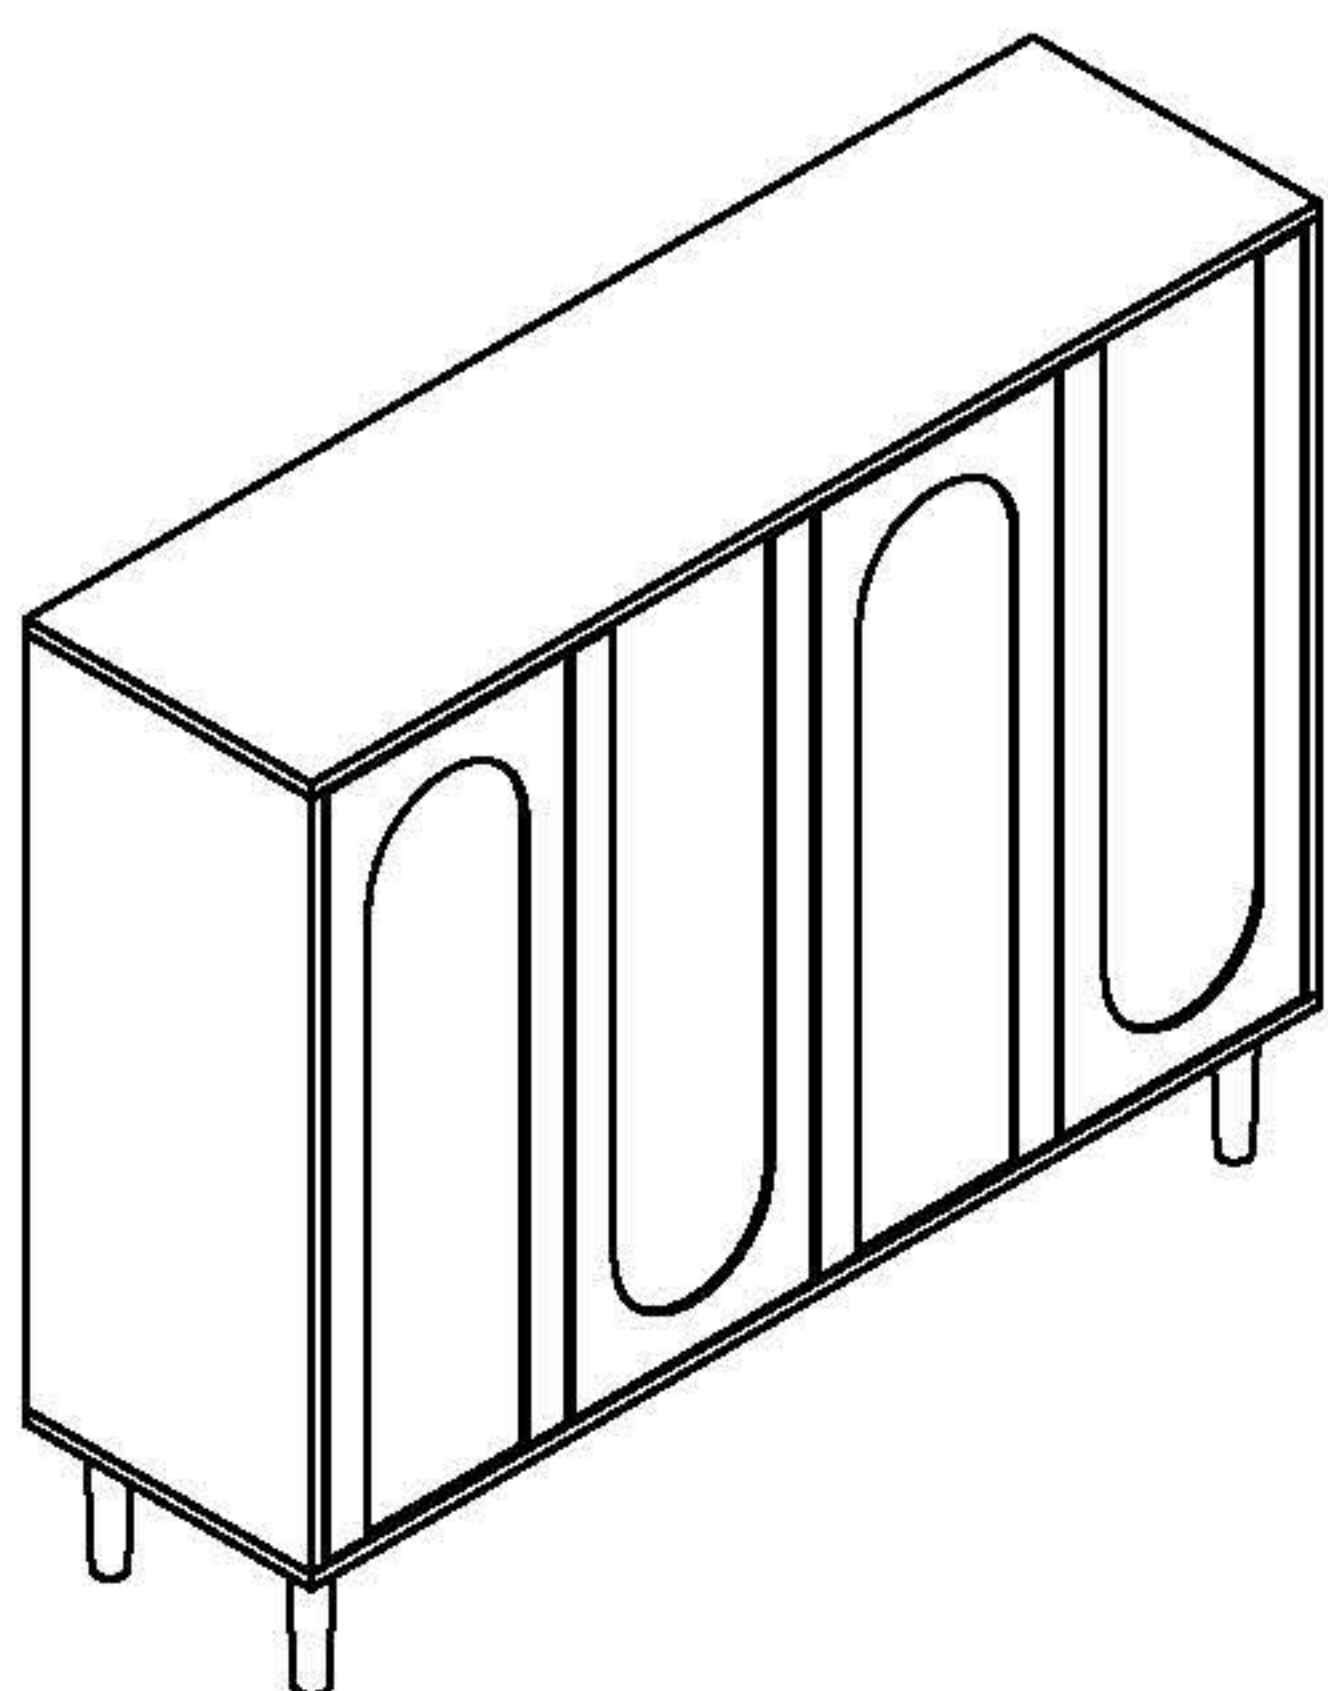


- ☆ 1. The panels and screws are not used. Please read the instructions carefully before installation and distinguish each panel components and screws.
- ☆ 2. When installing the towel, please tighten the screws to 70% first, and then tighten all the screws after all installation is completed.

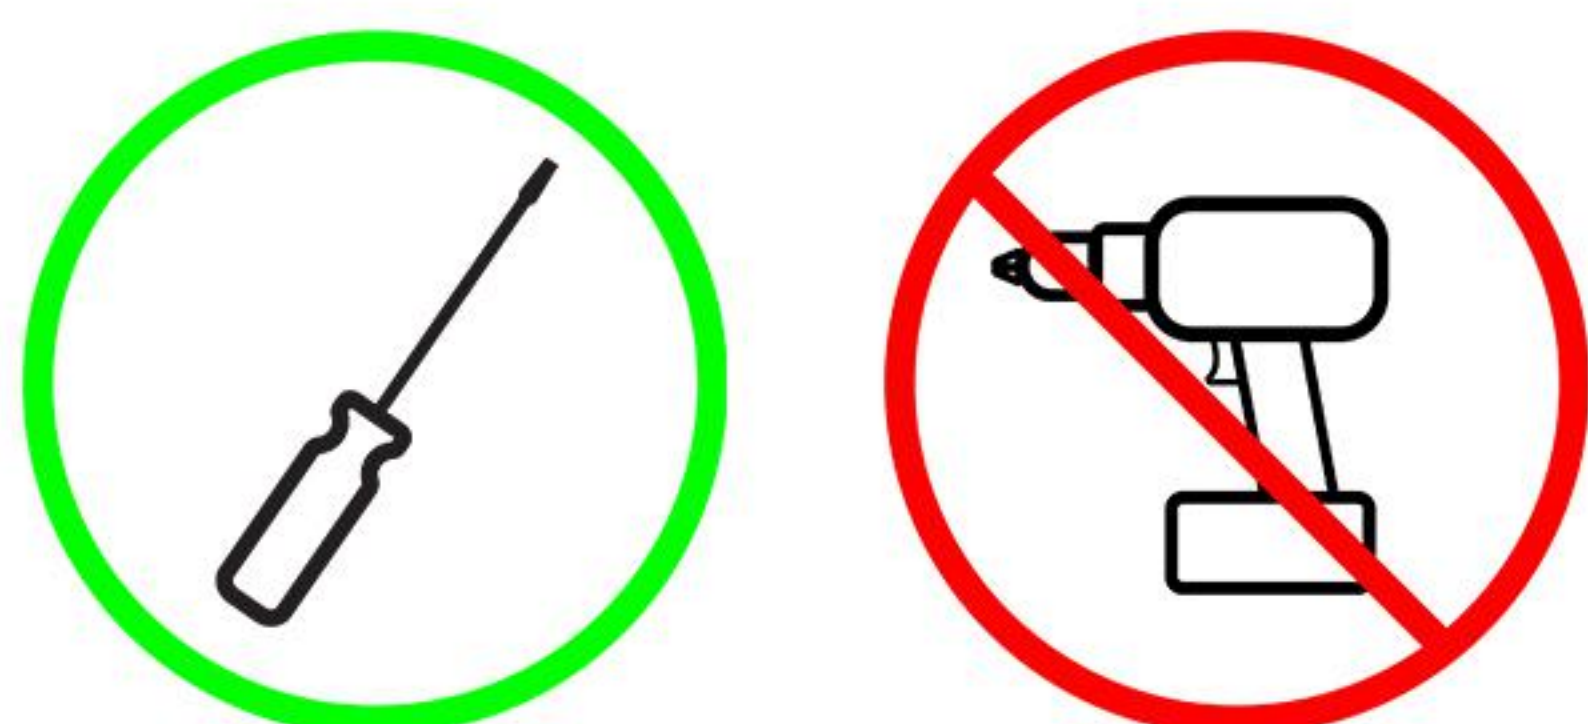

Inner Hexagonal Wrench \*1

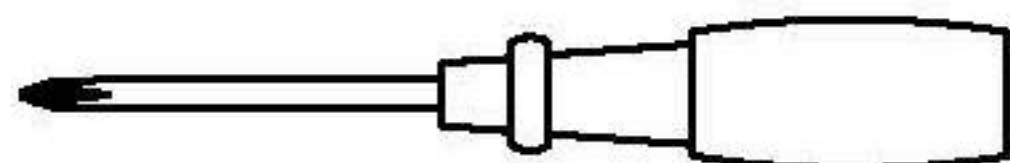

Screwdriver \*1

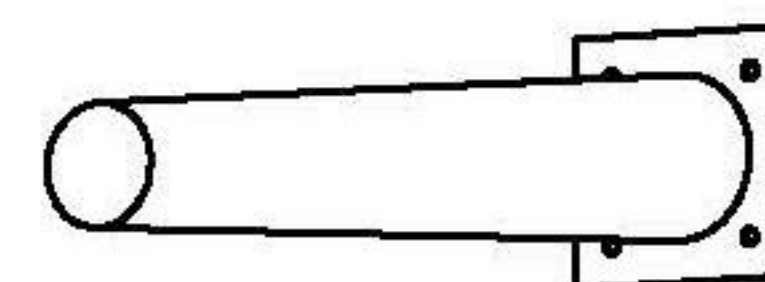

M44\*5




C6\*9



D0\*16



A1\*42

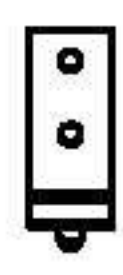

K2\*4




K11\*2




K0\*30




S32\*2




L19\*4

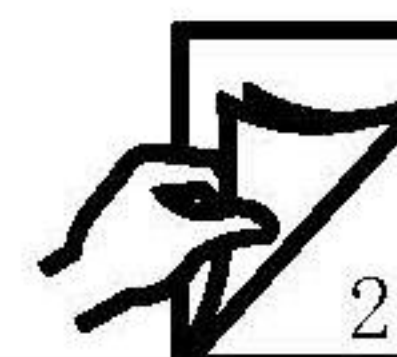


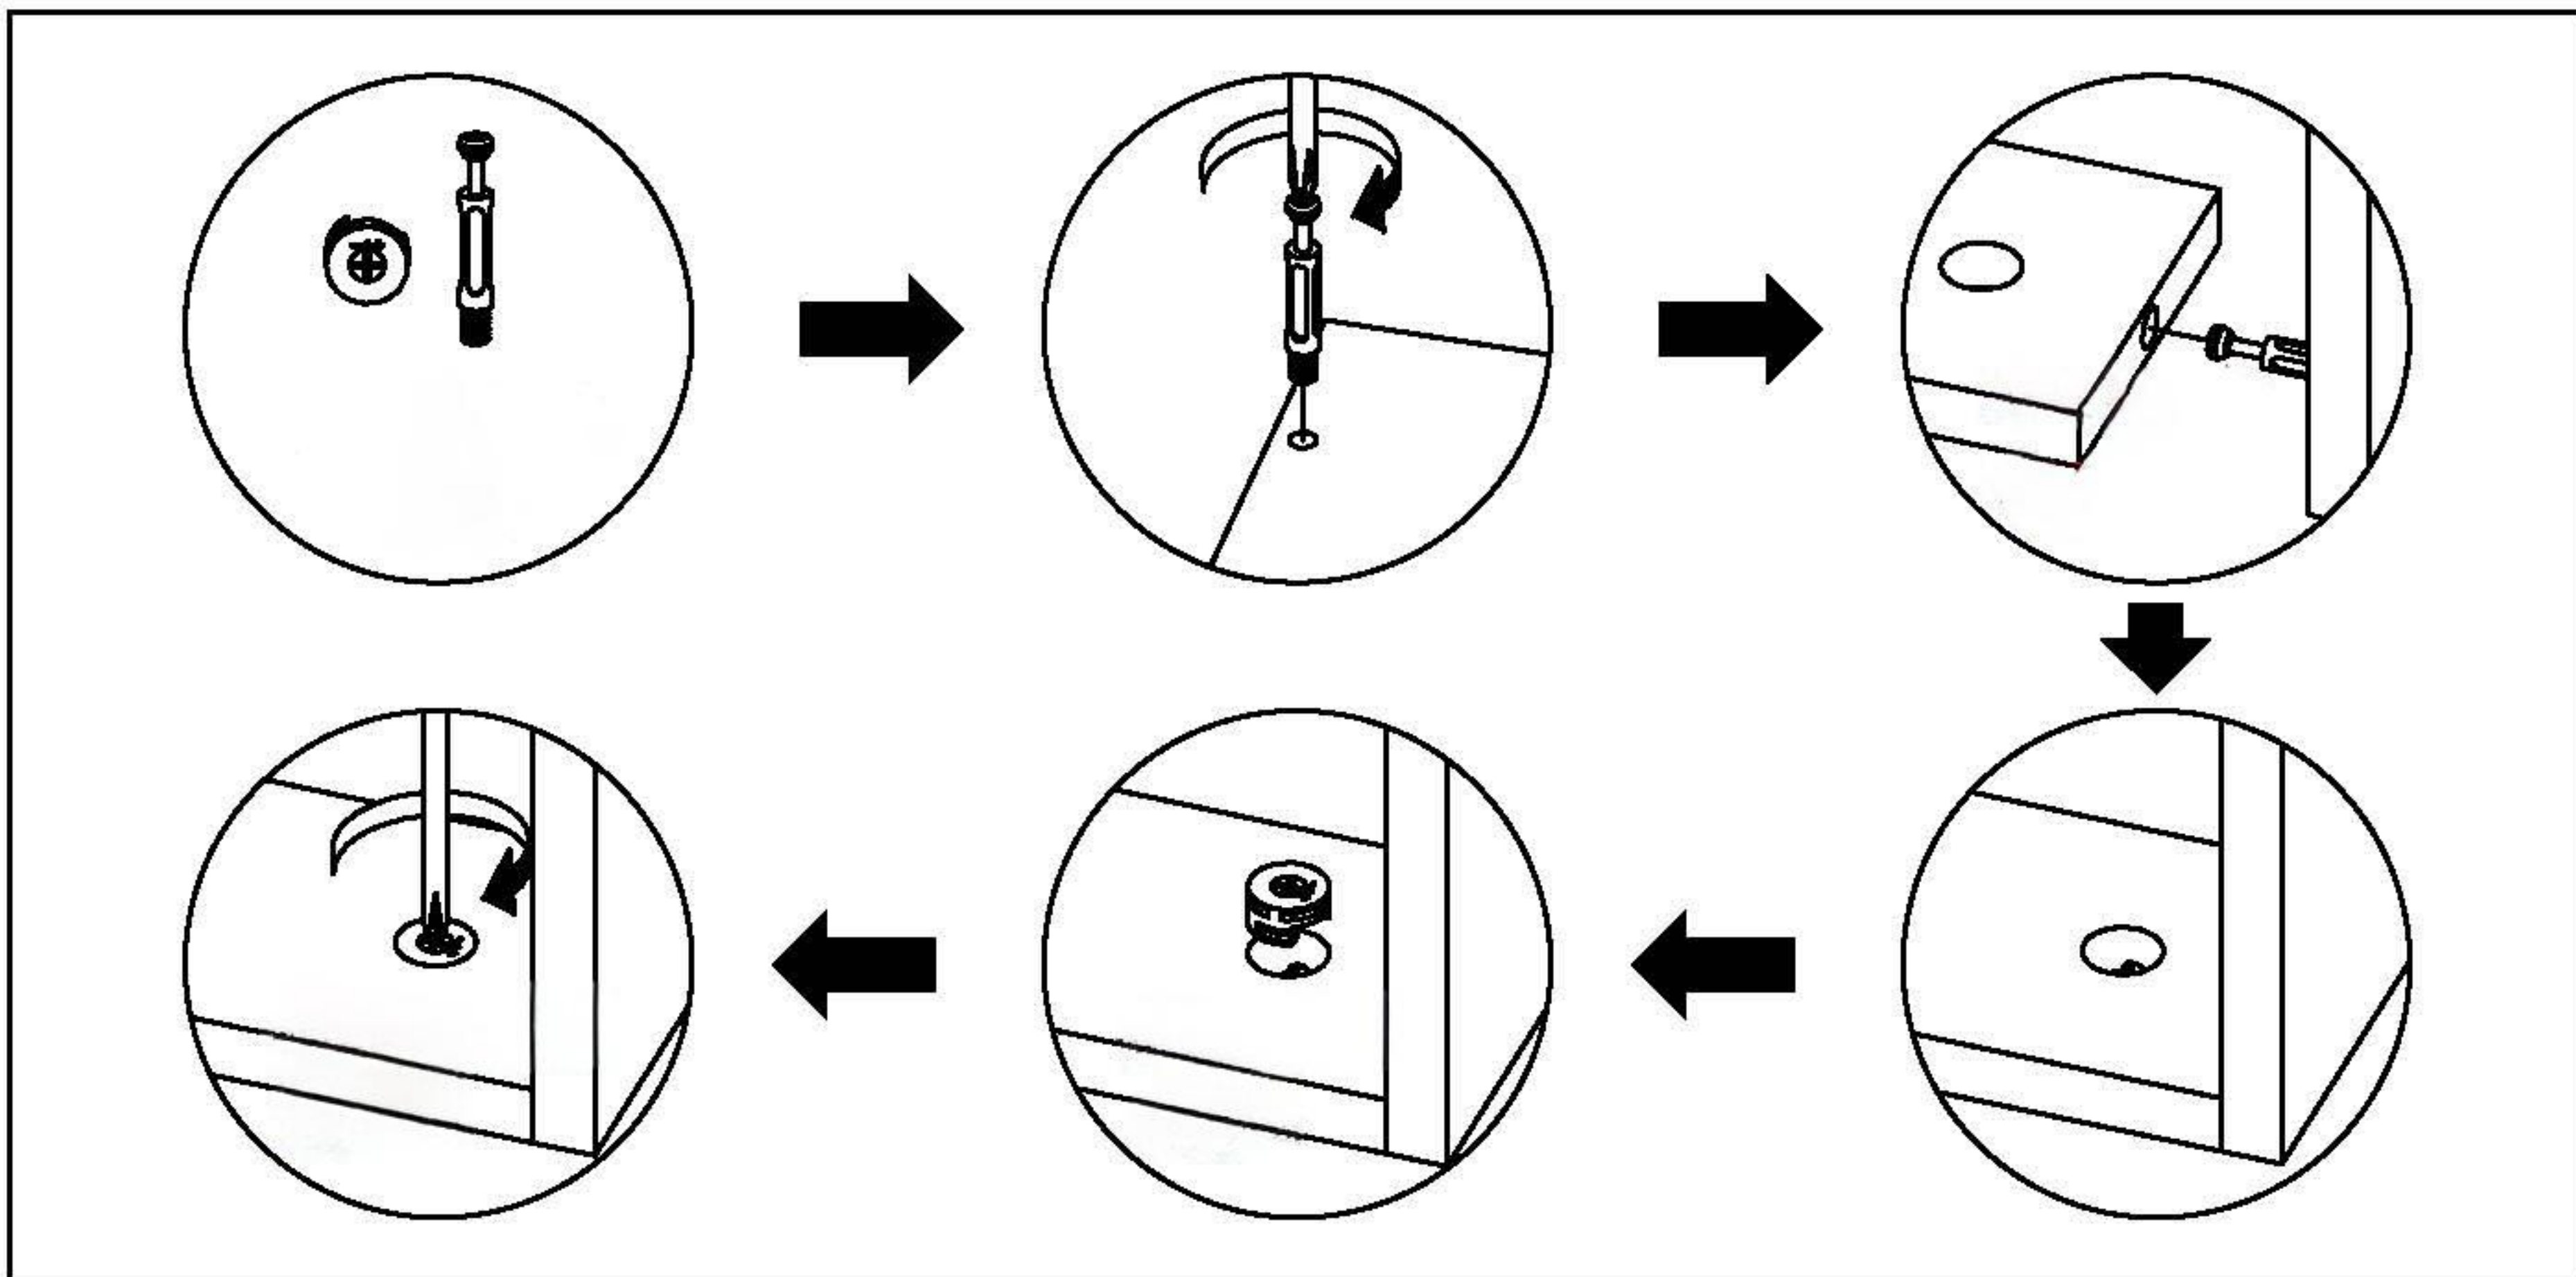


Step 1

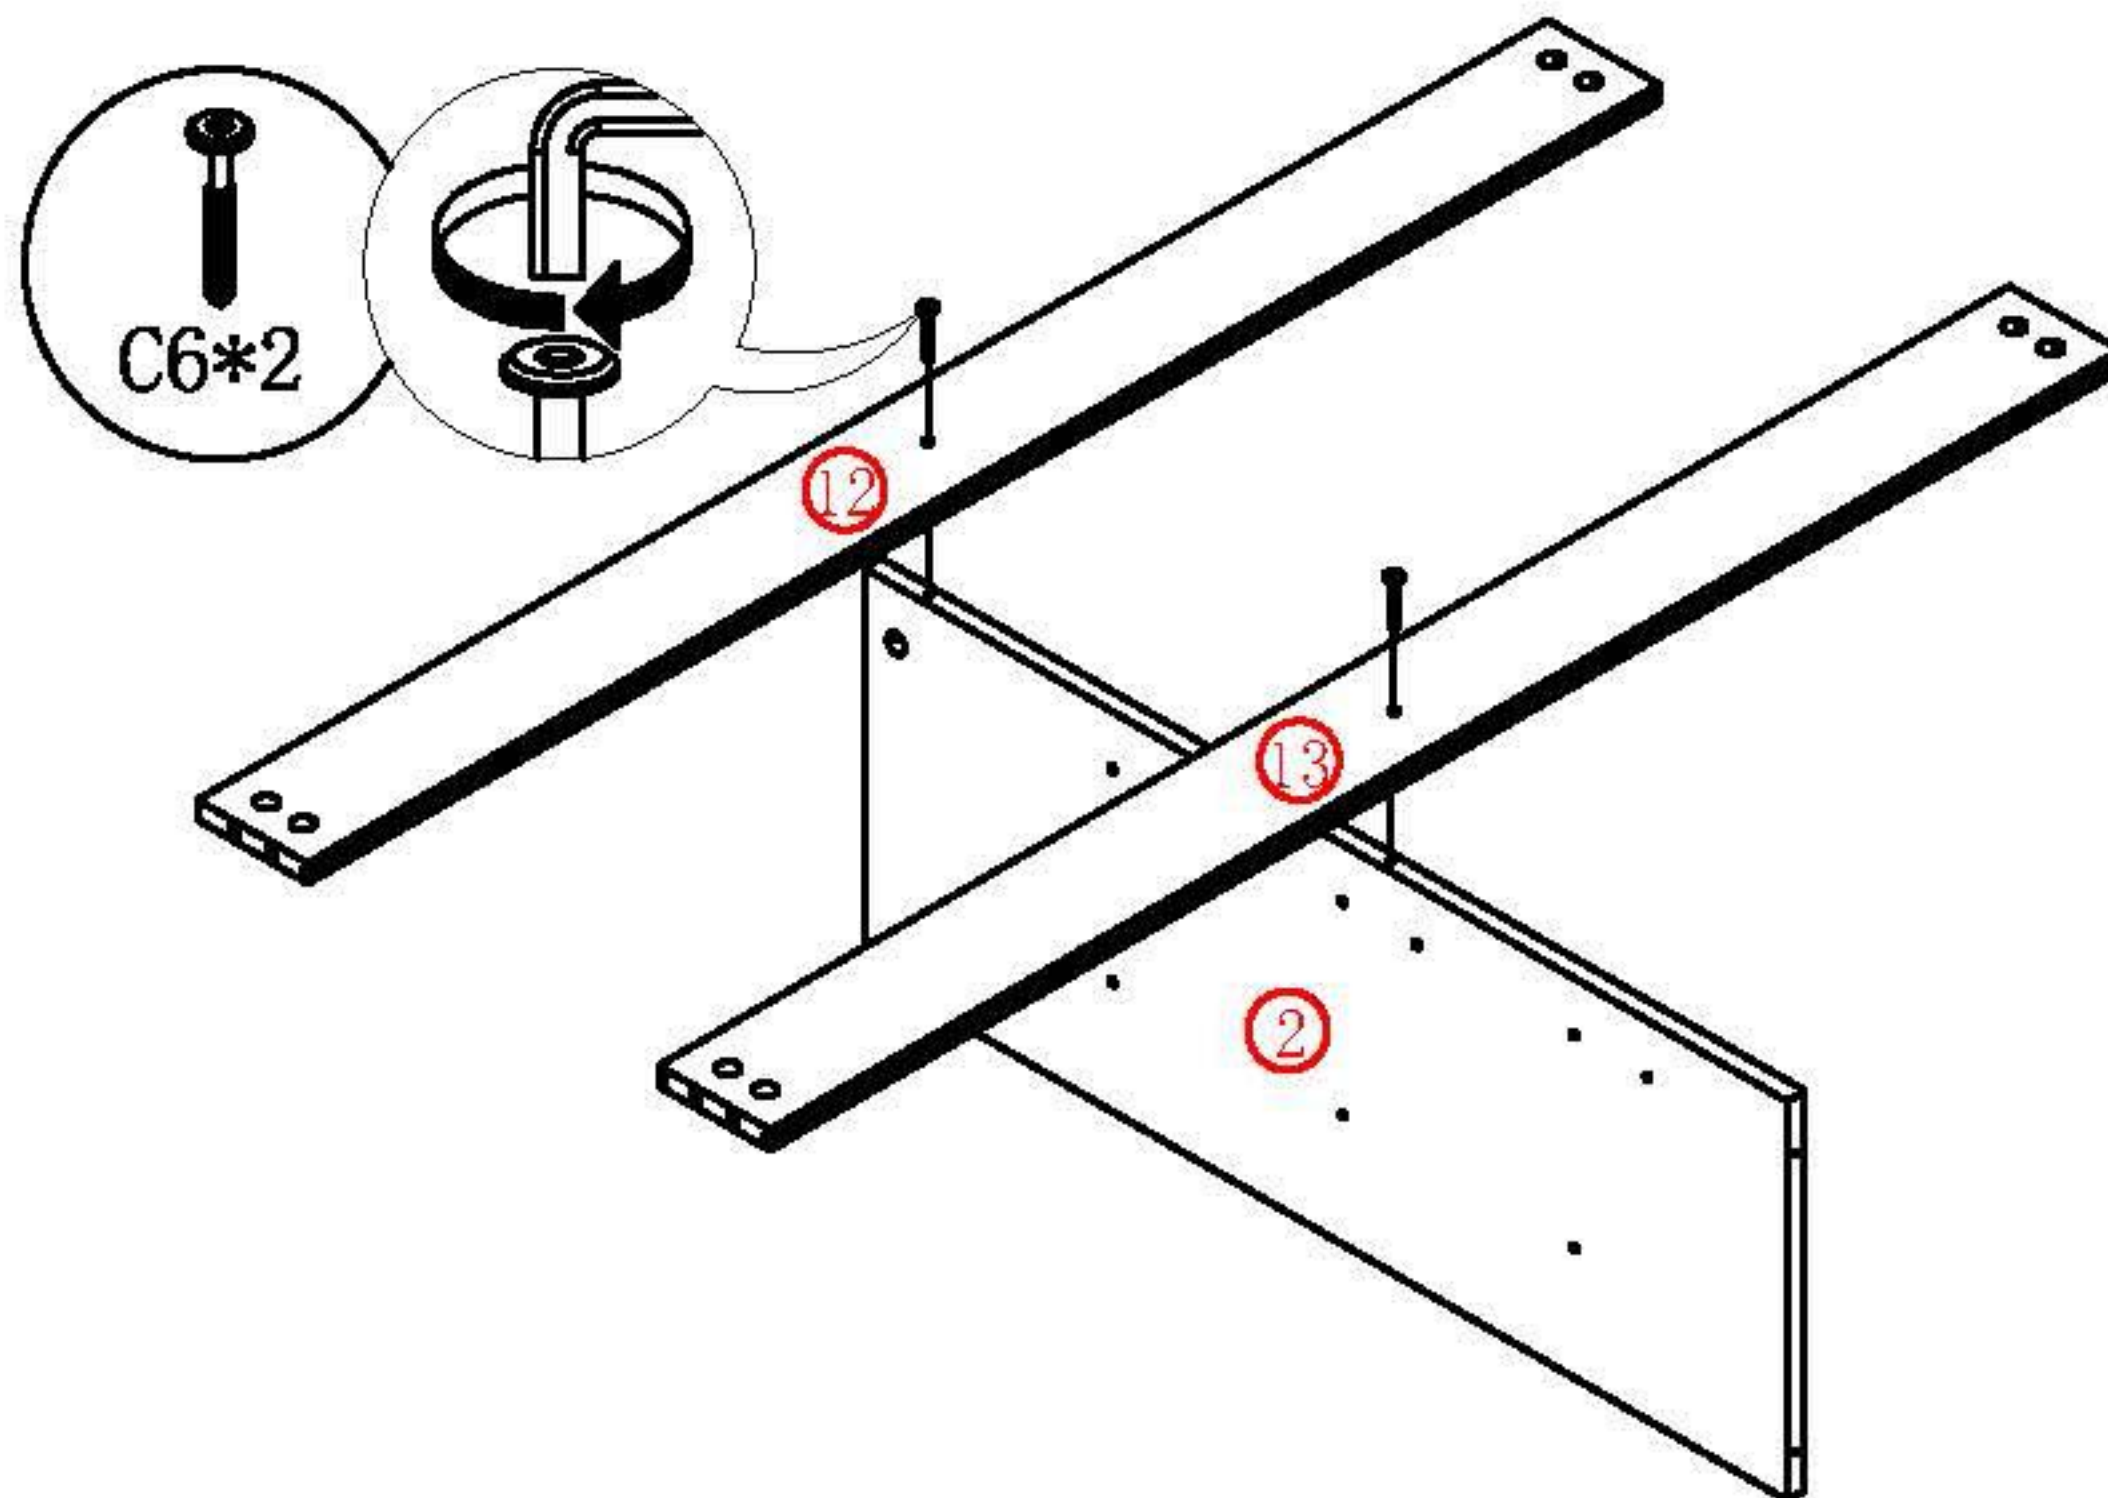


Step 2

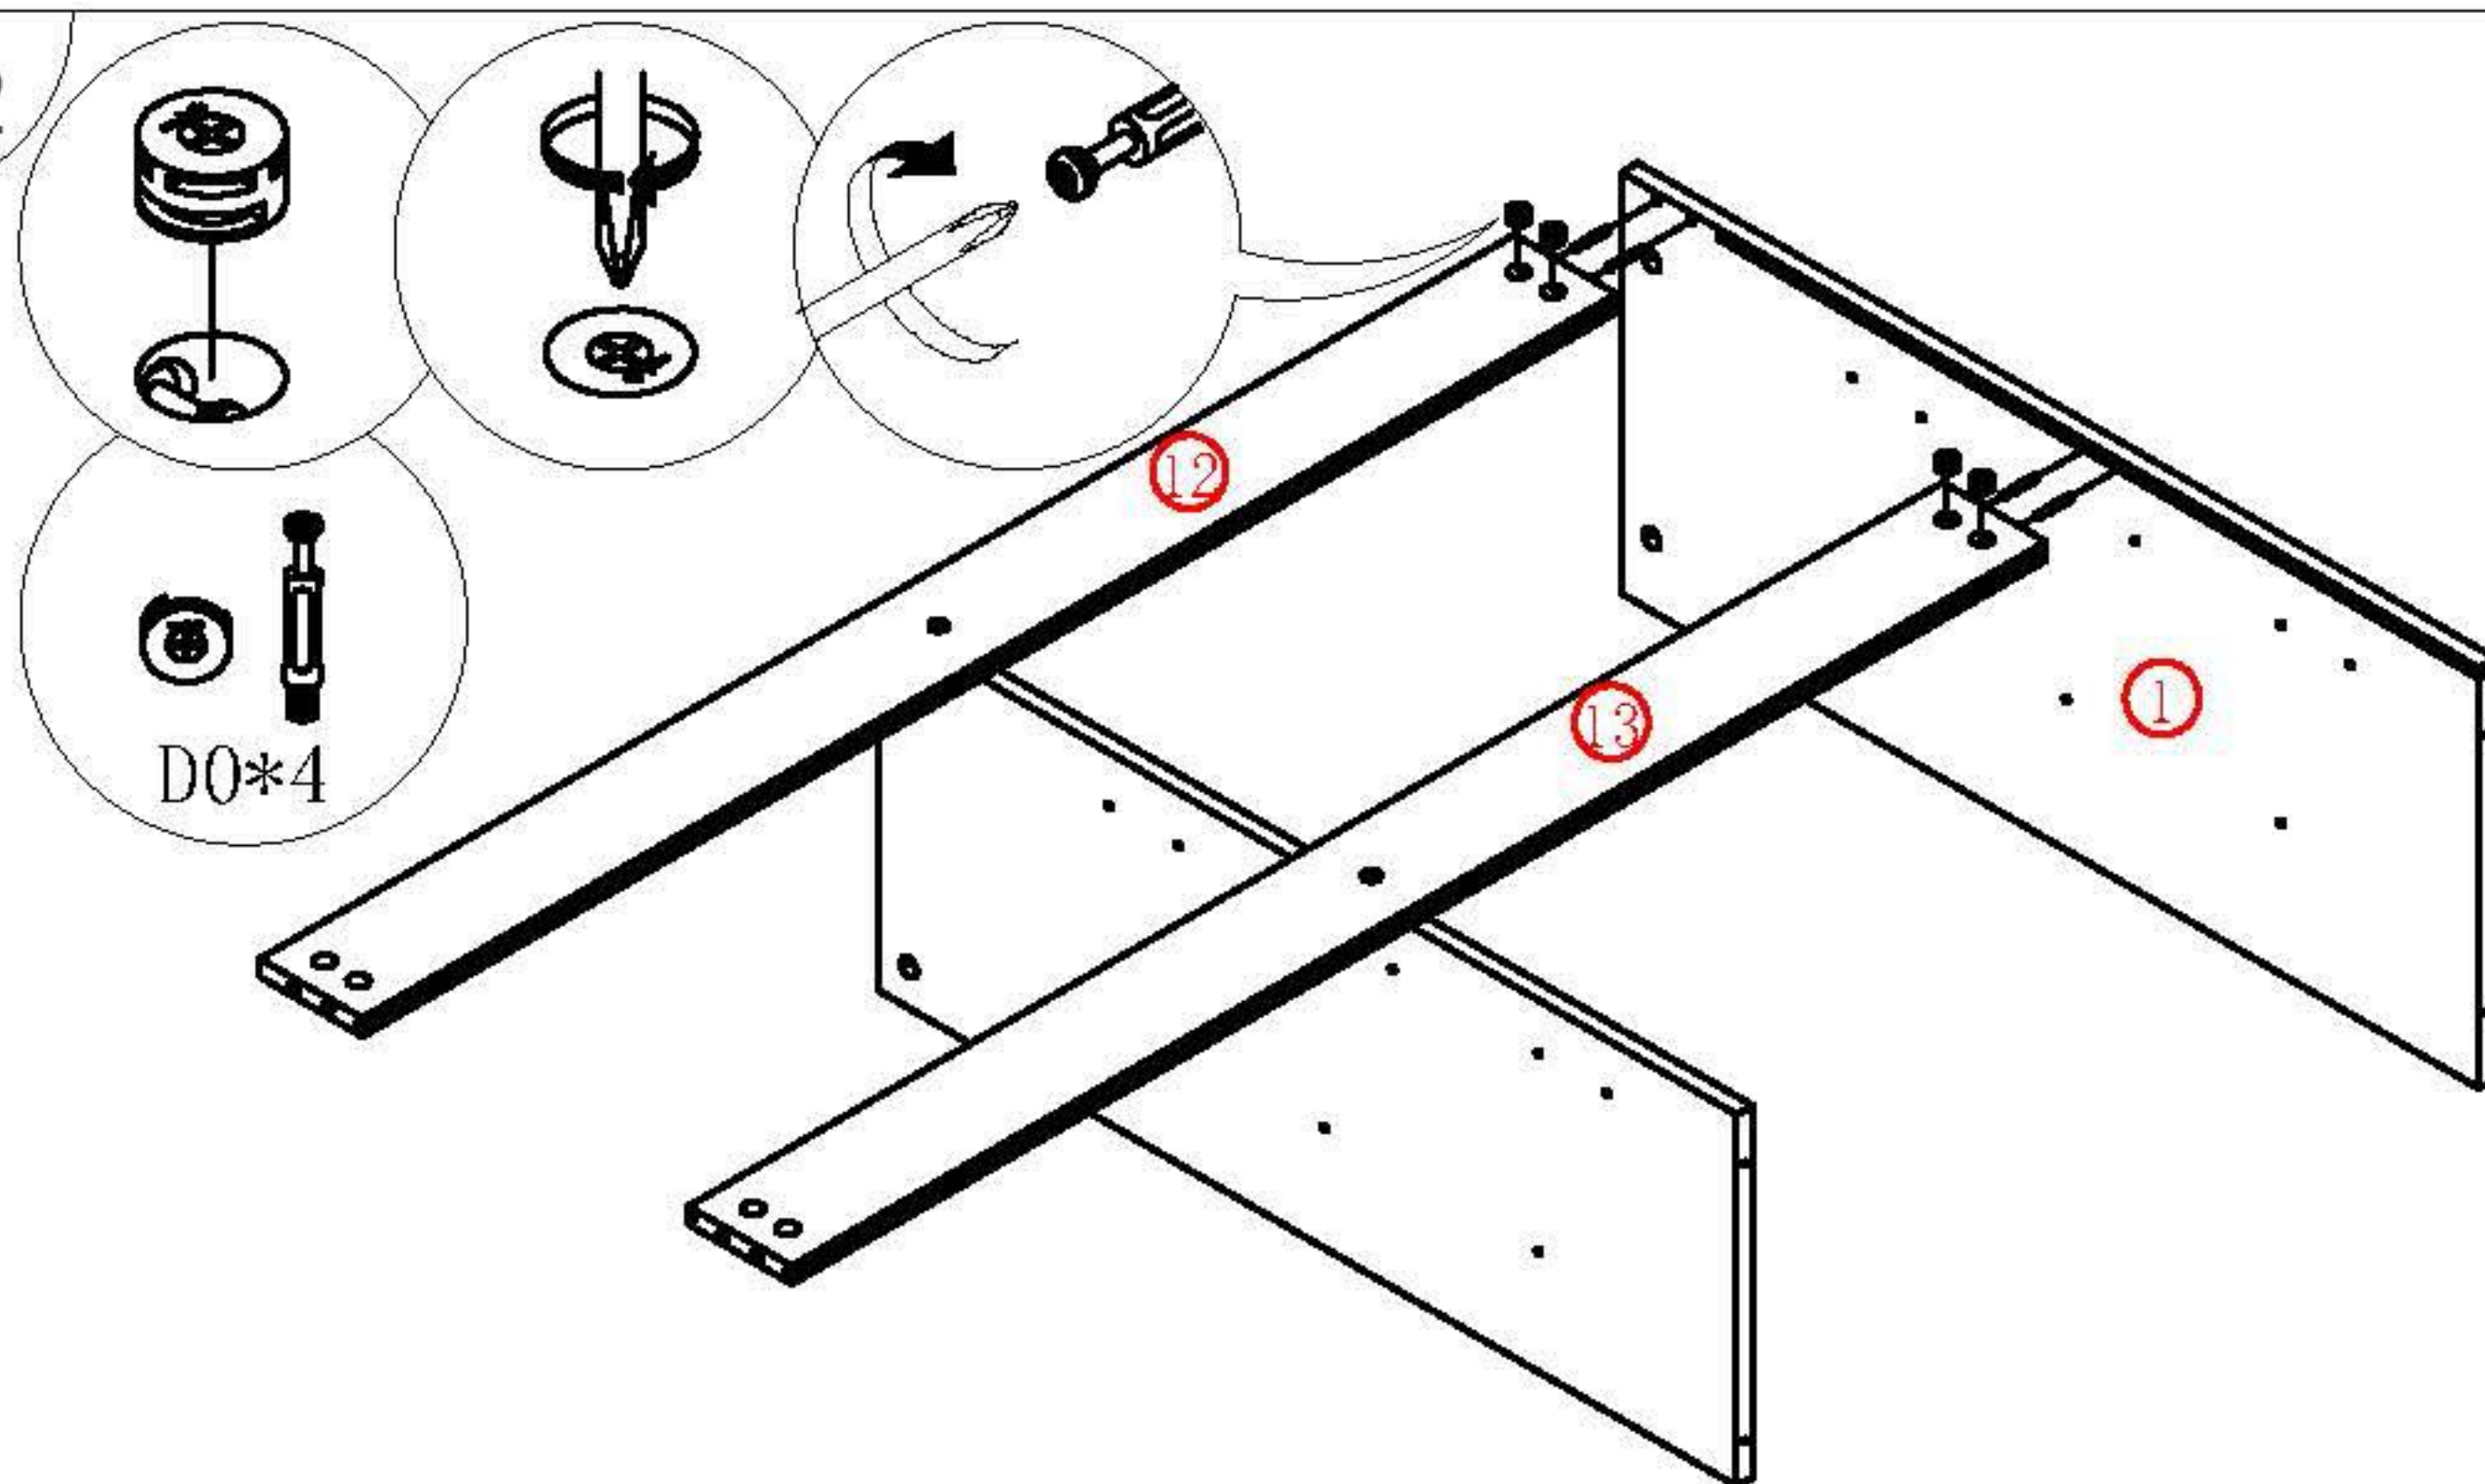



Step 3

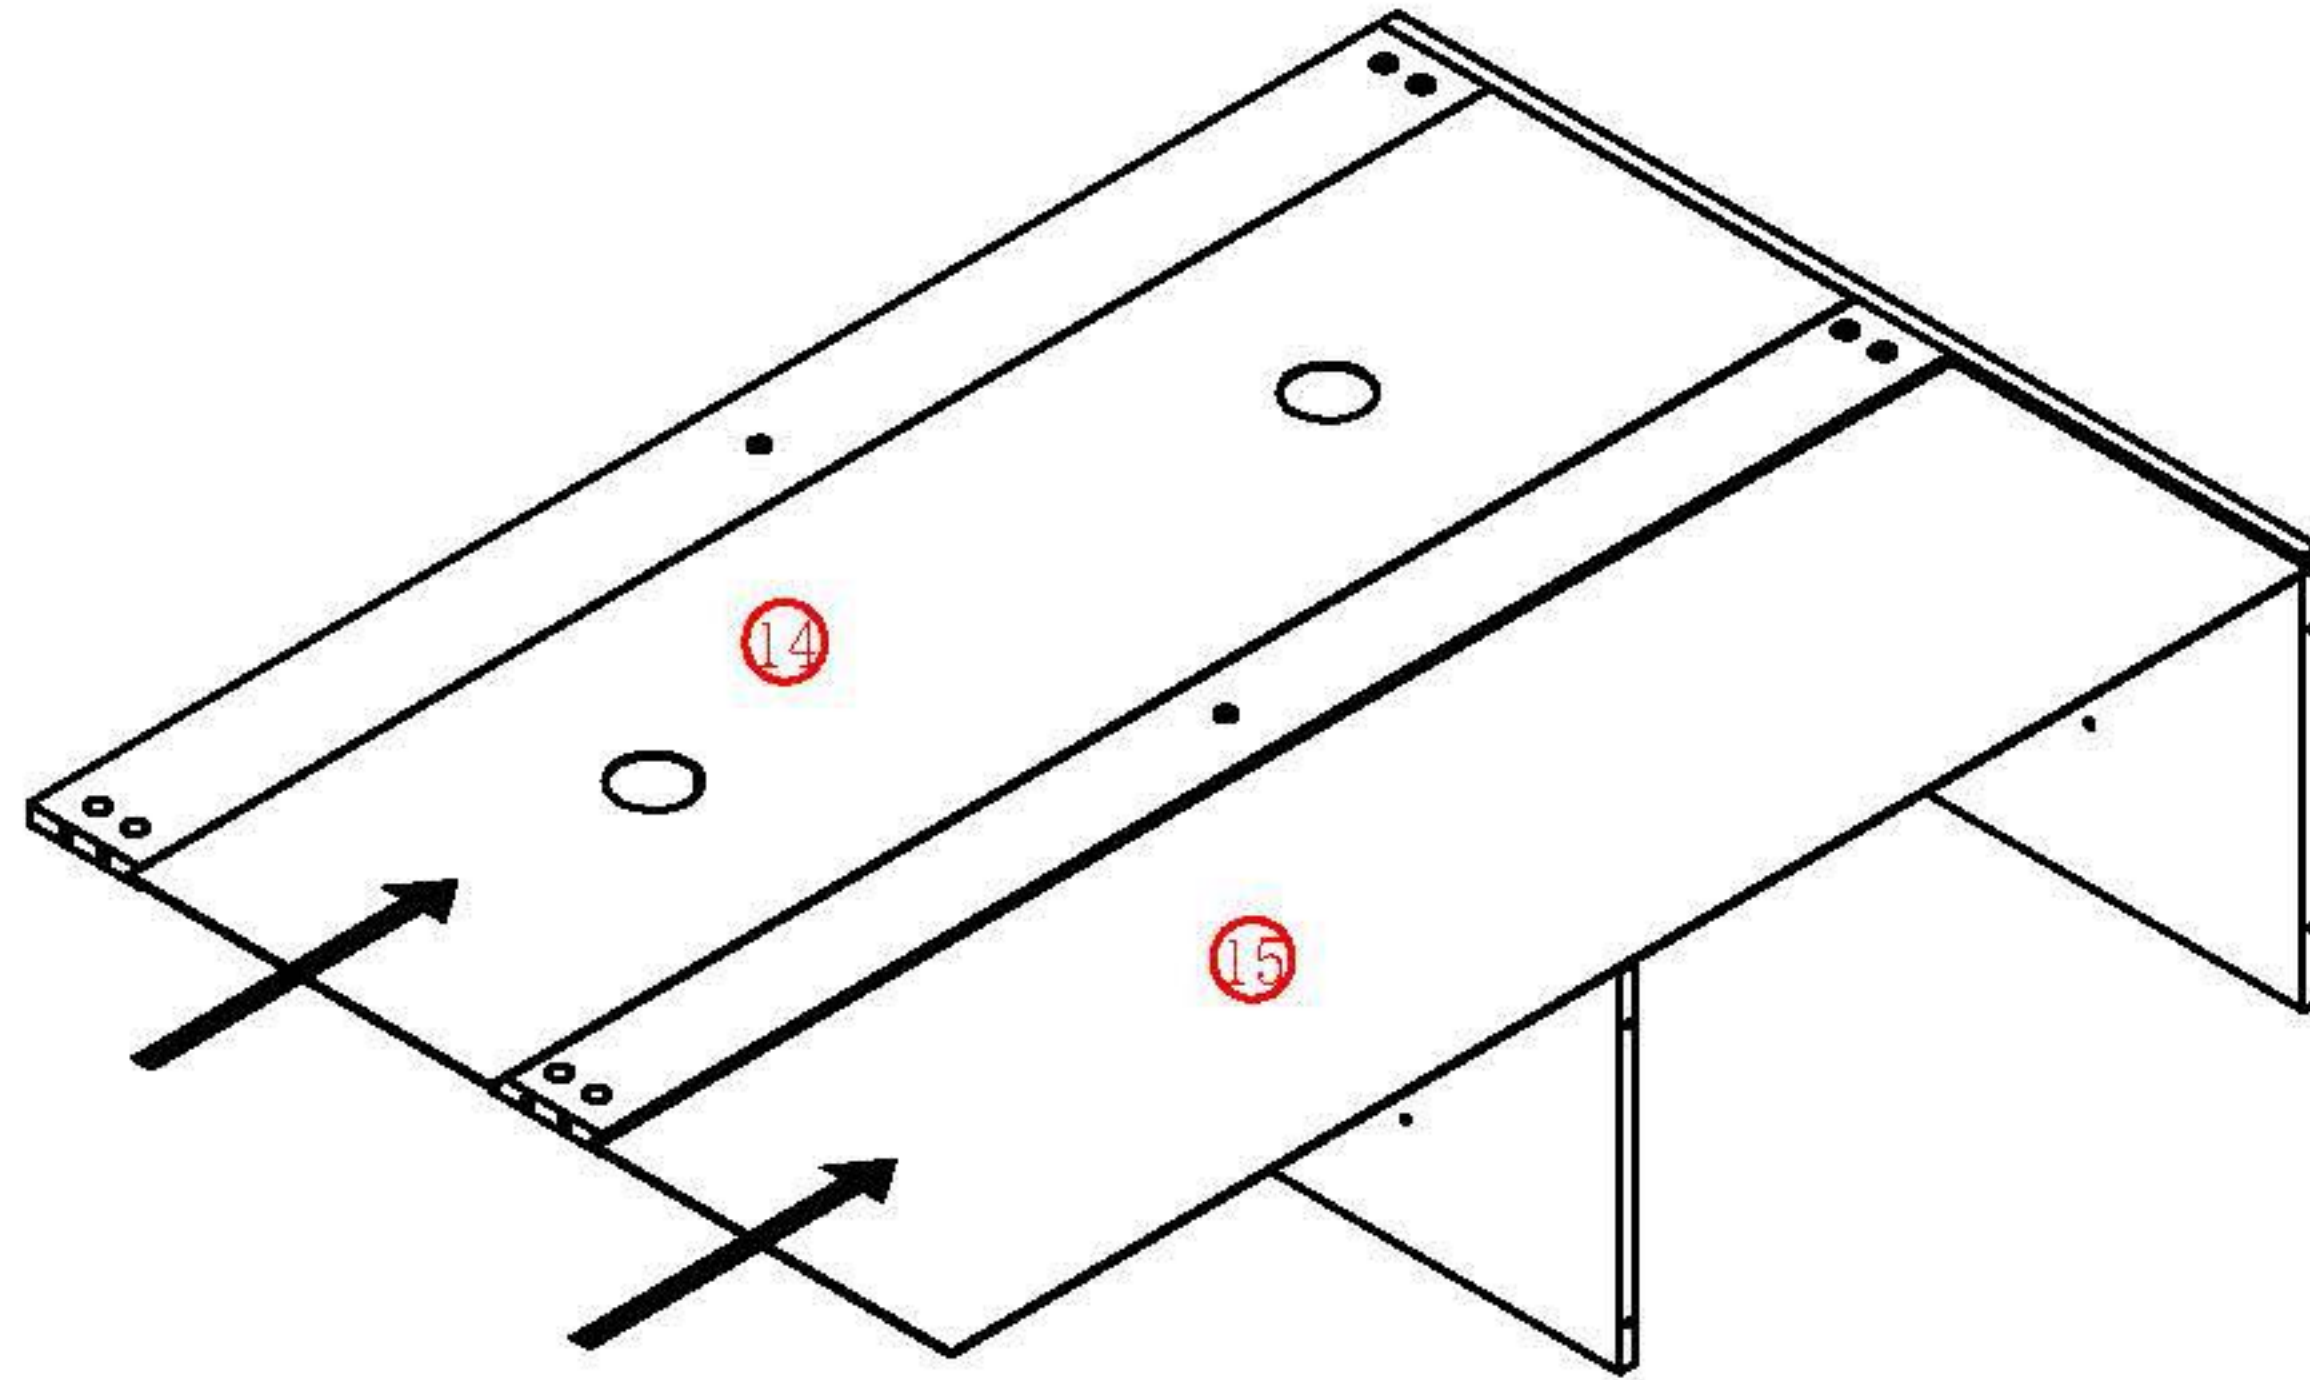


Step 4

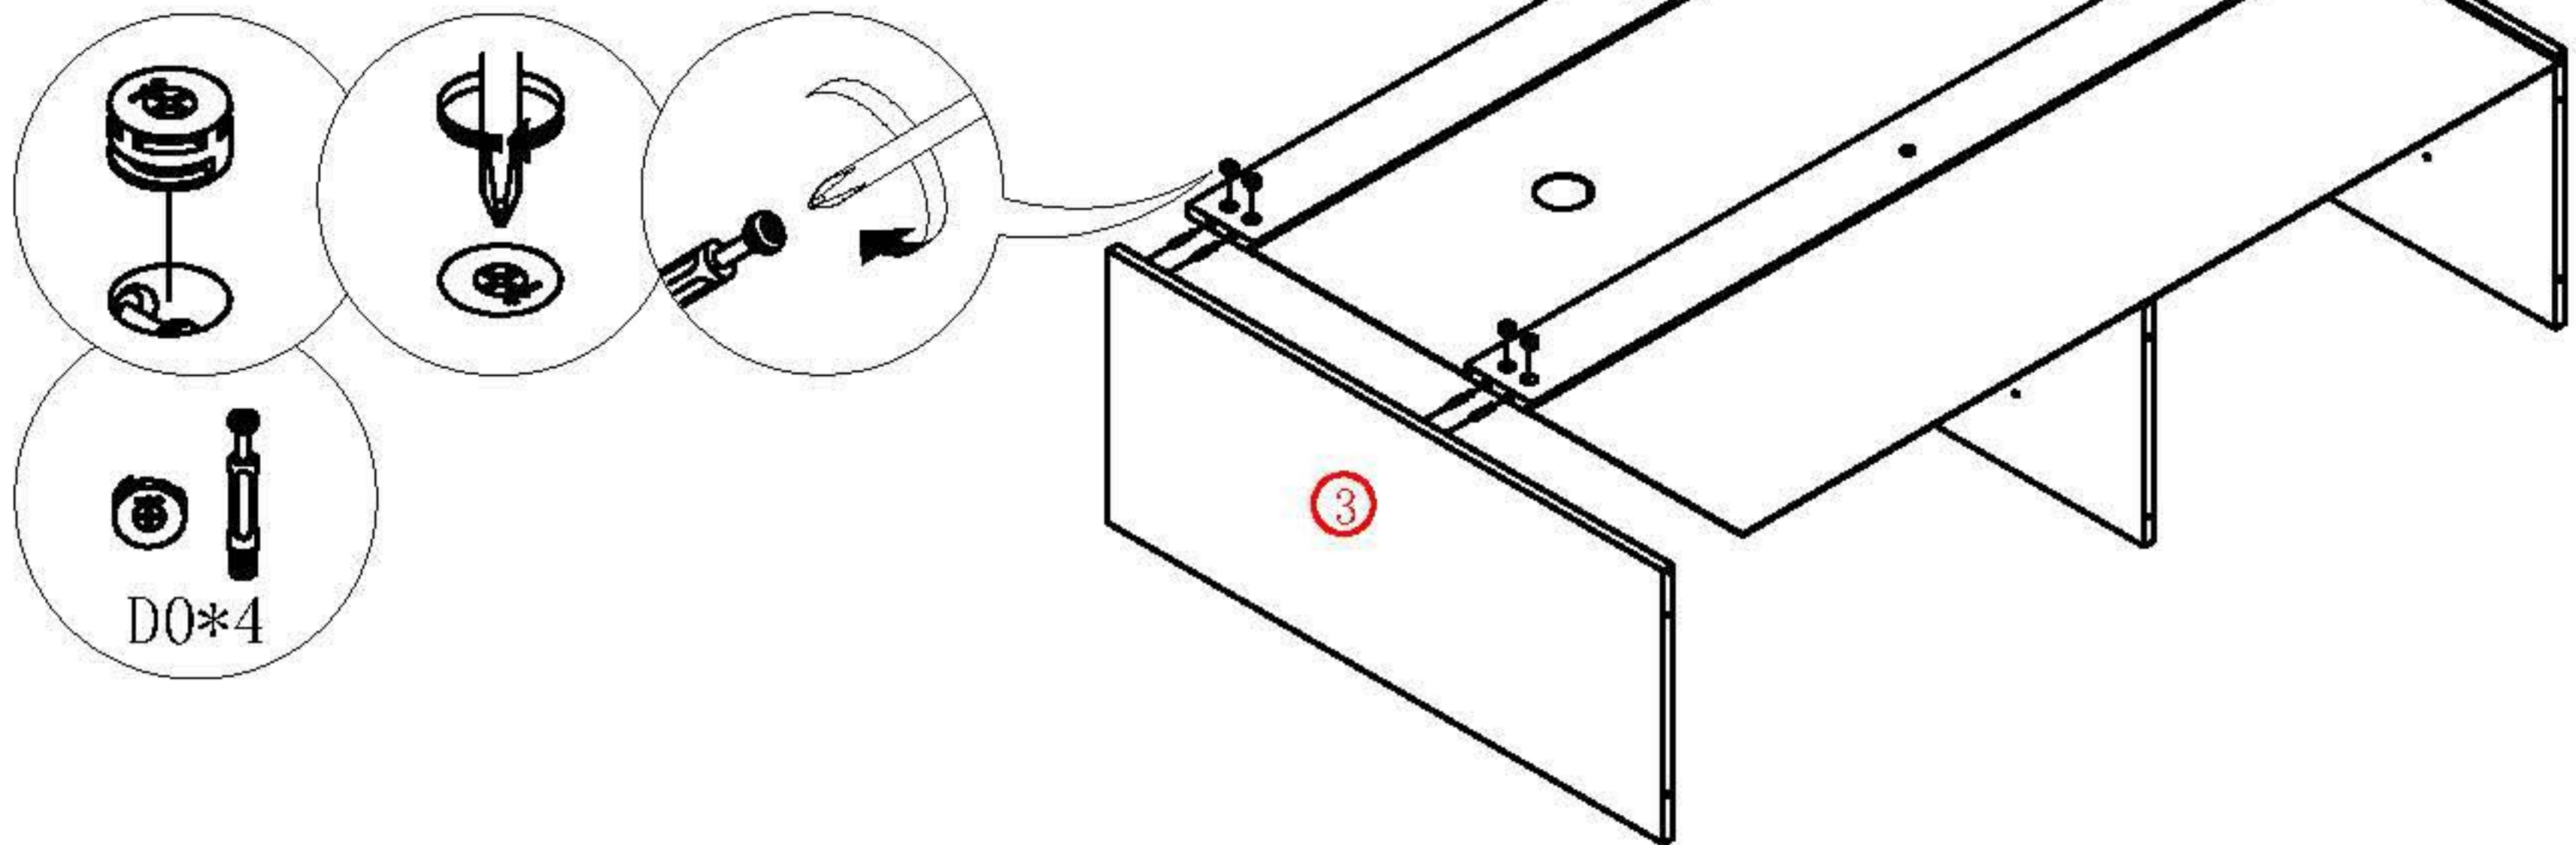


Step 5

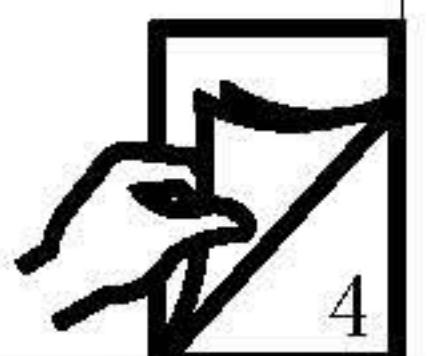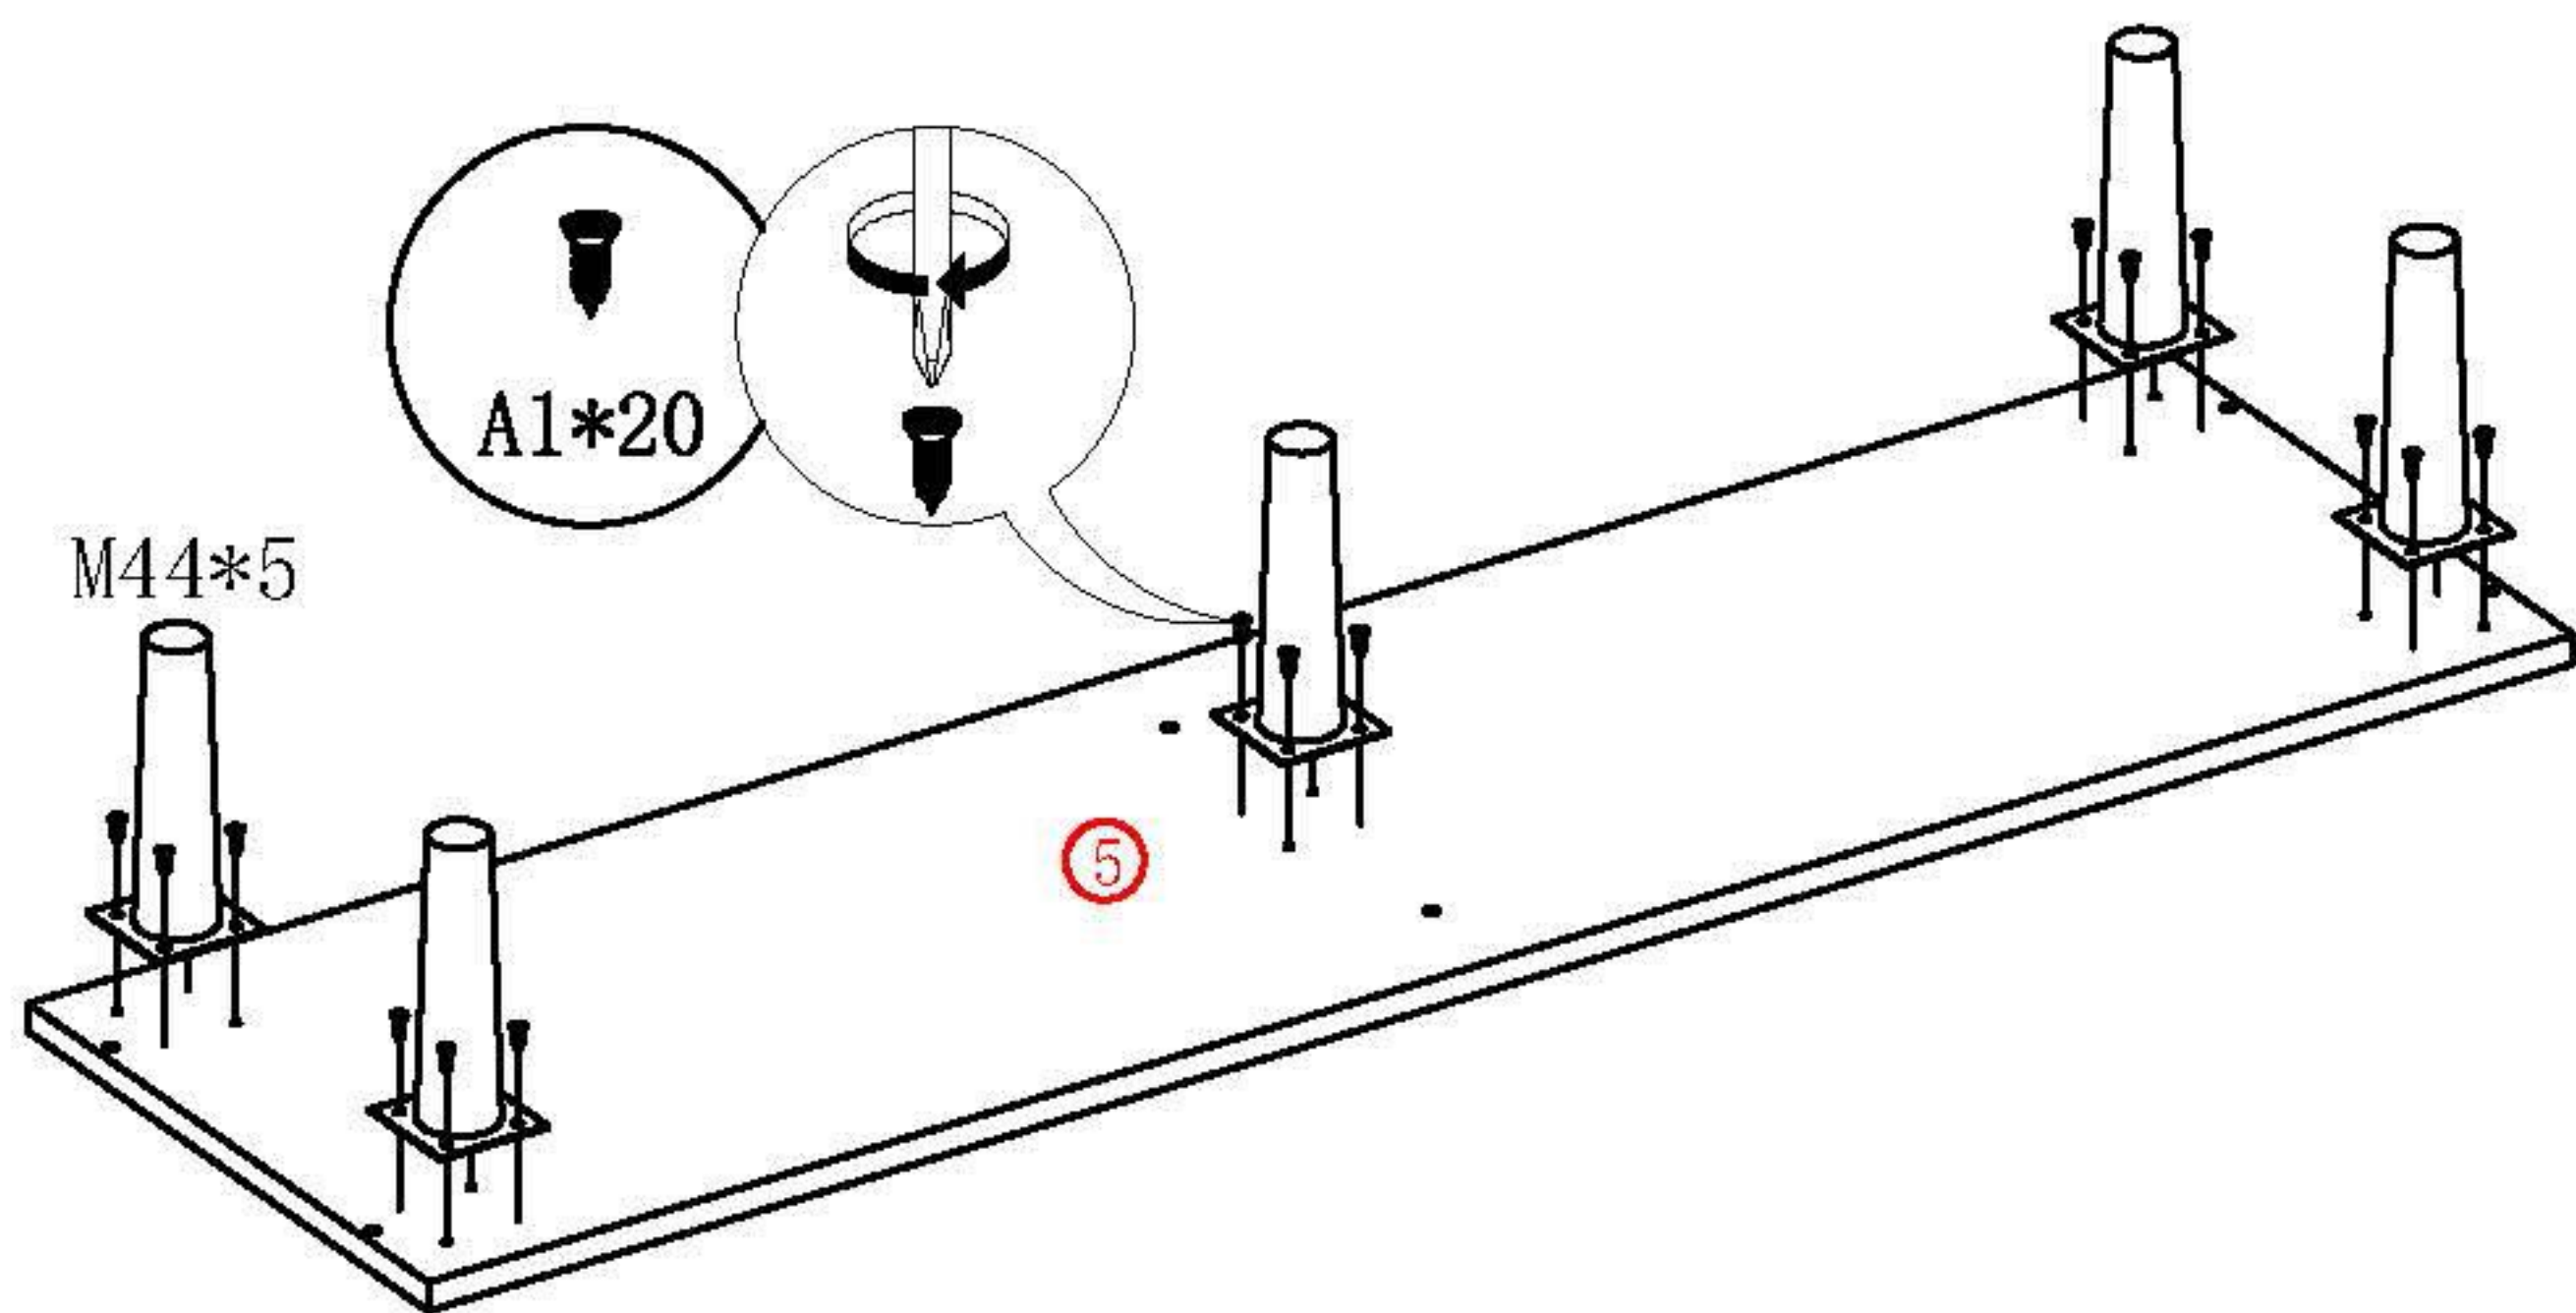



Step 6

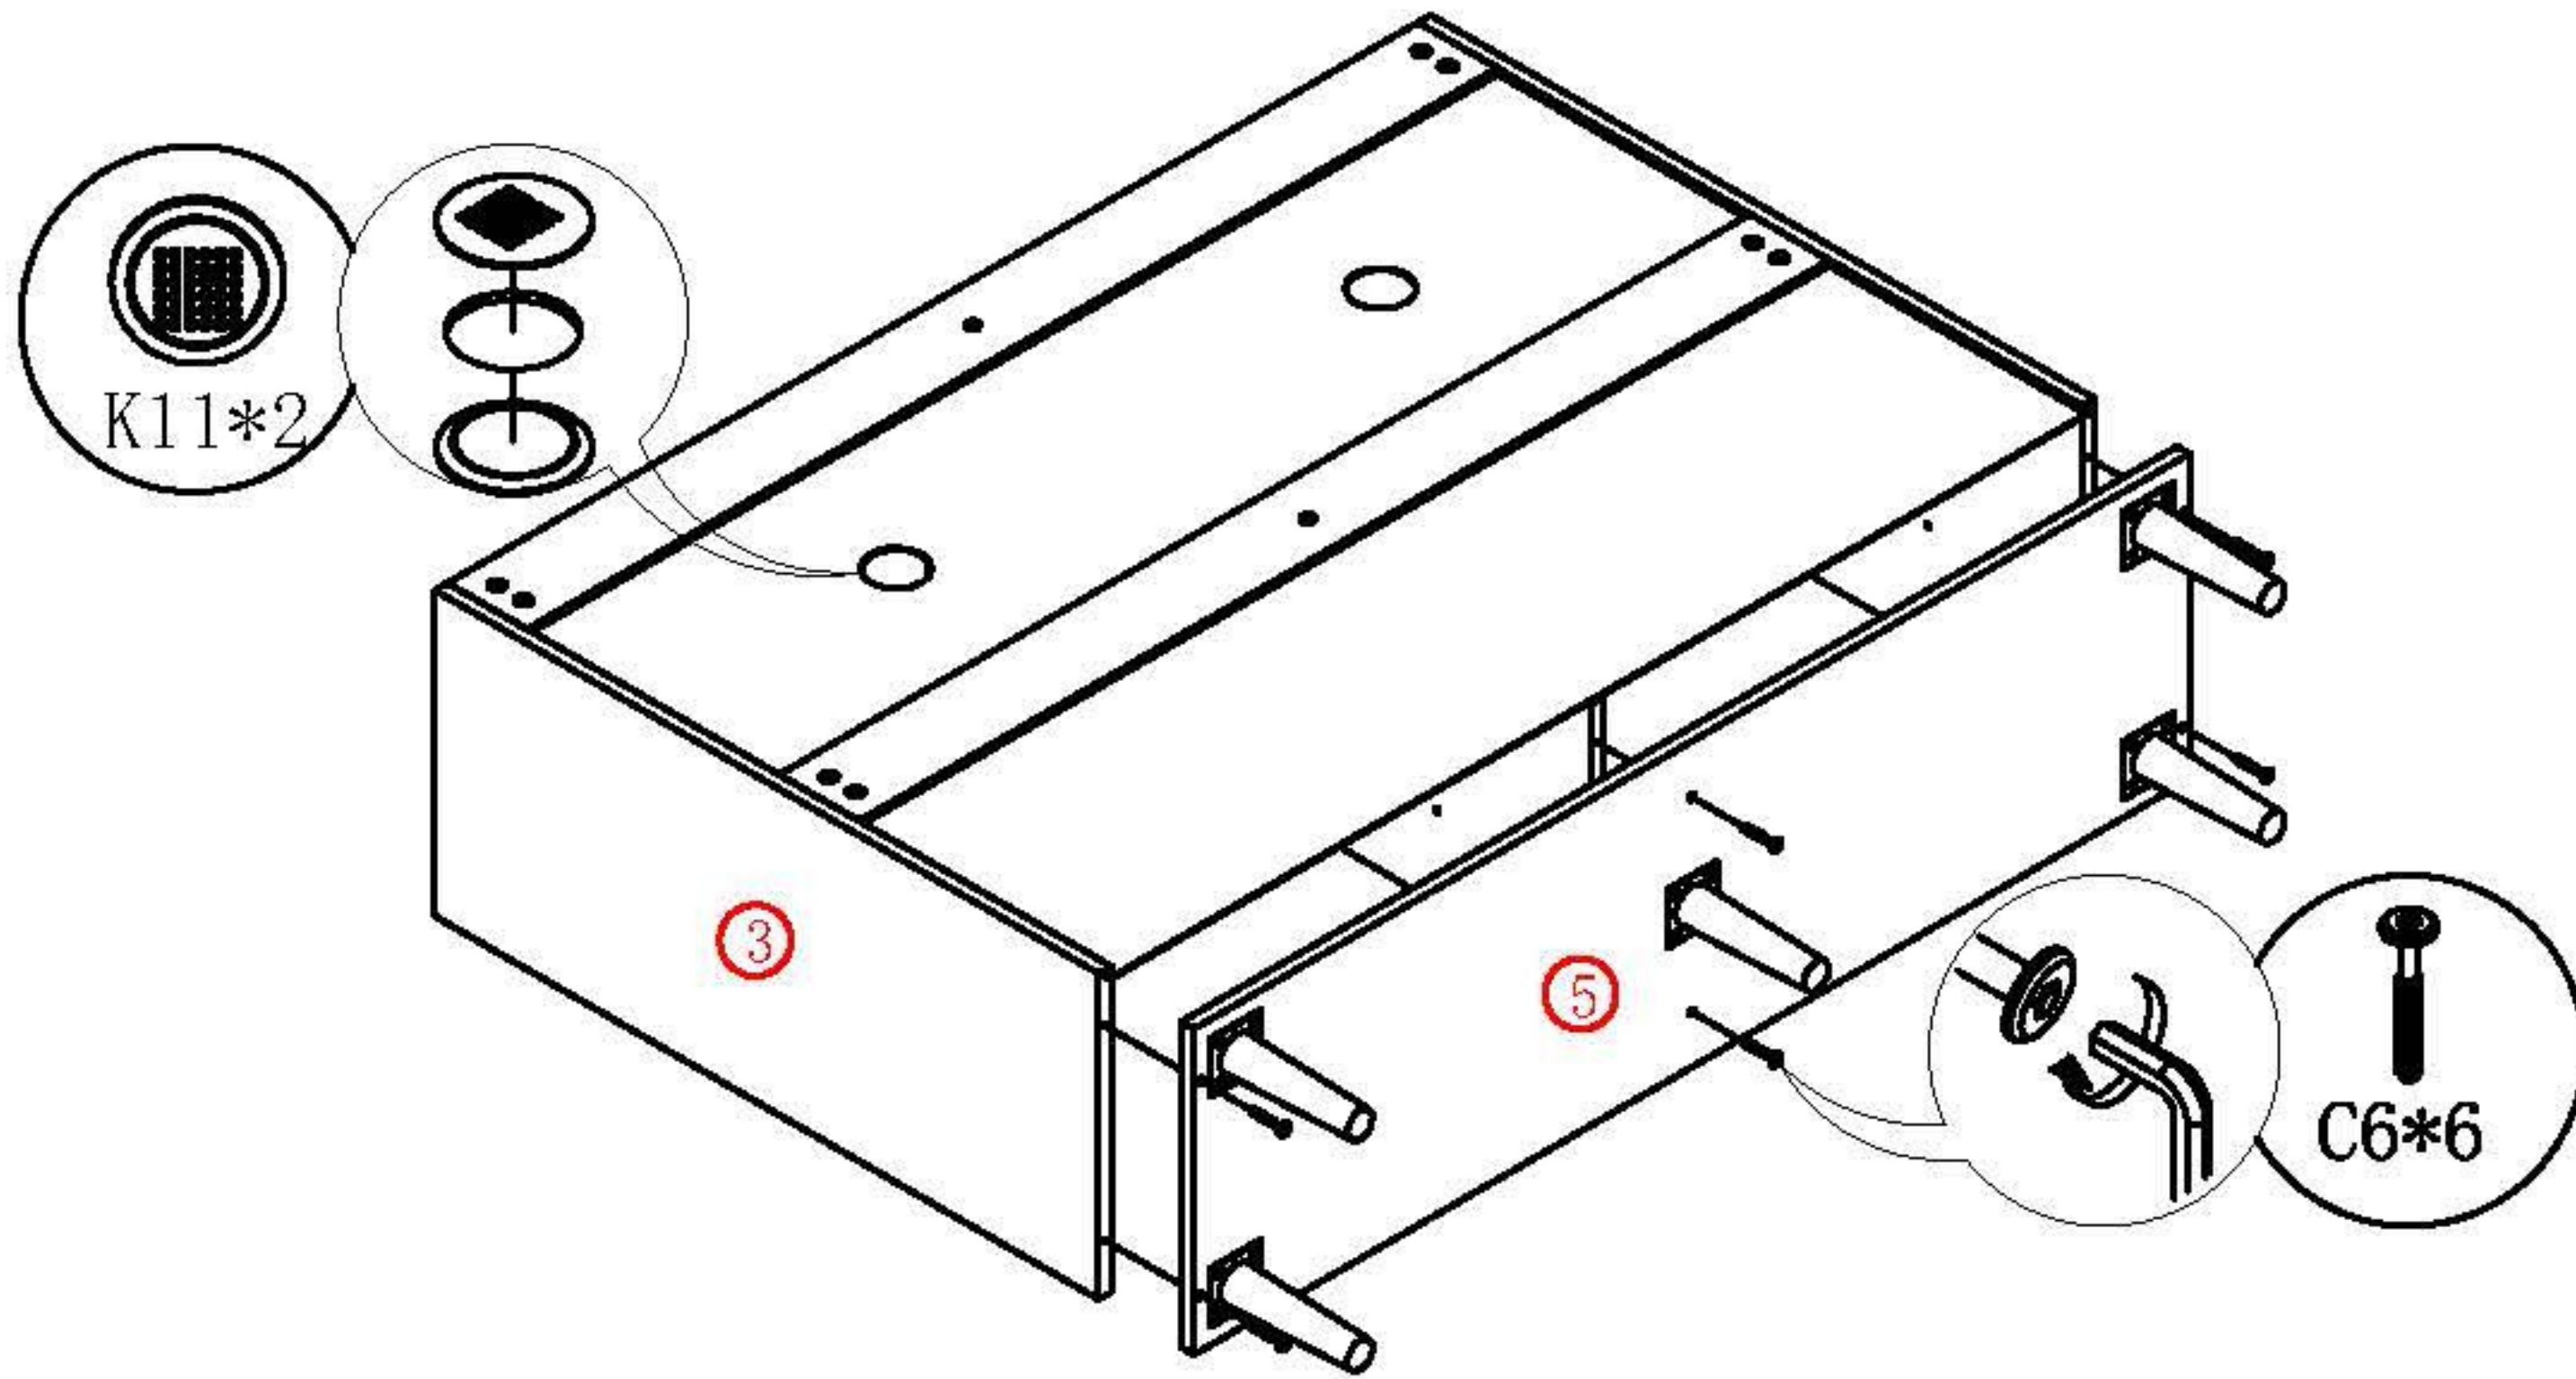


Step 7

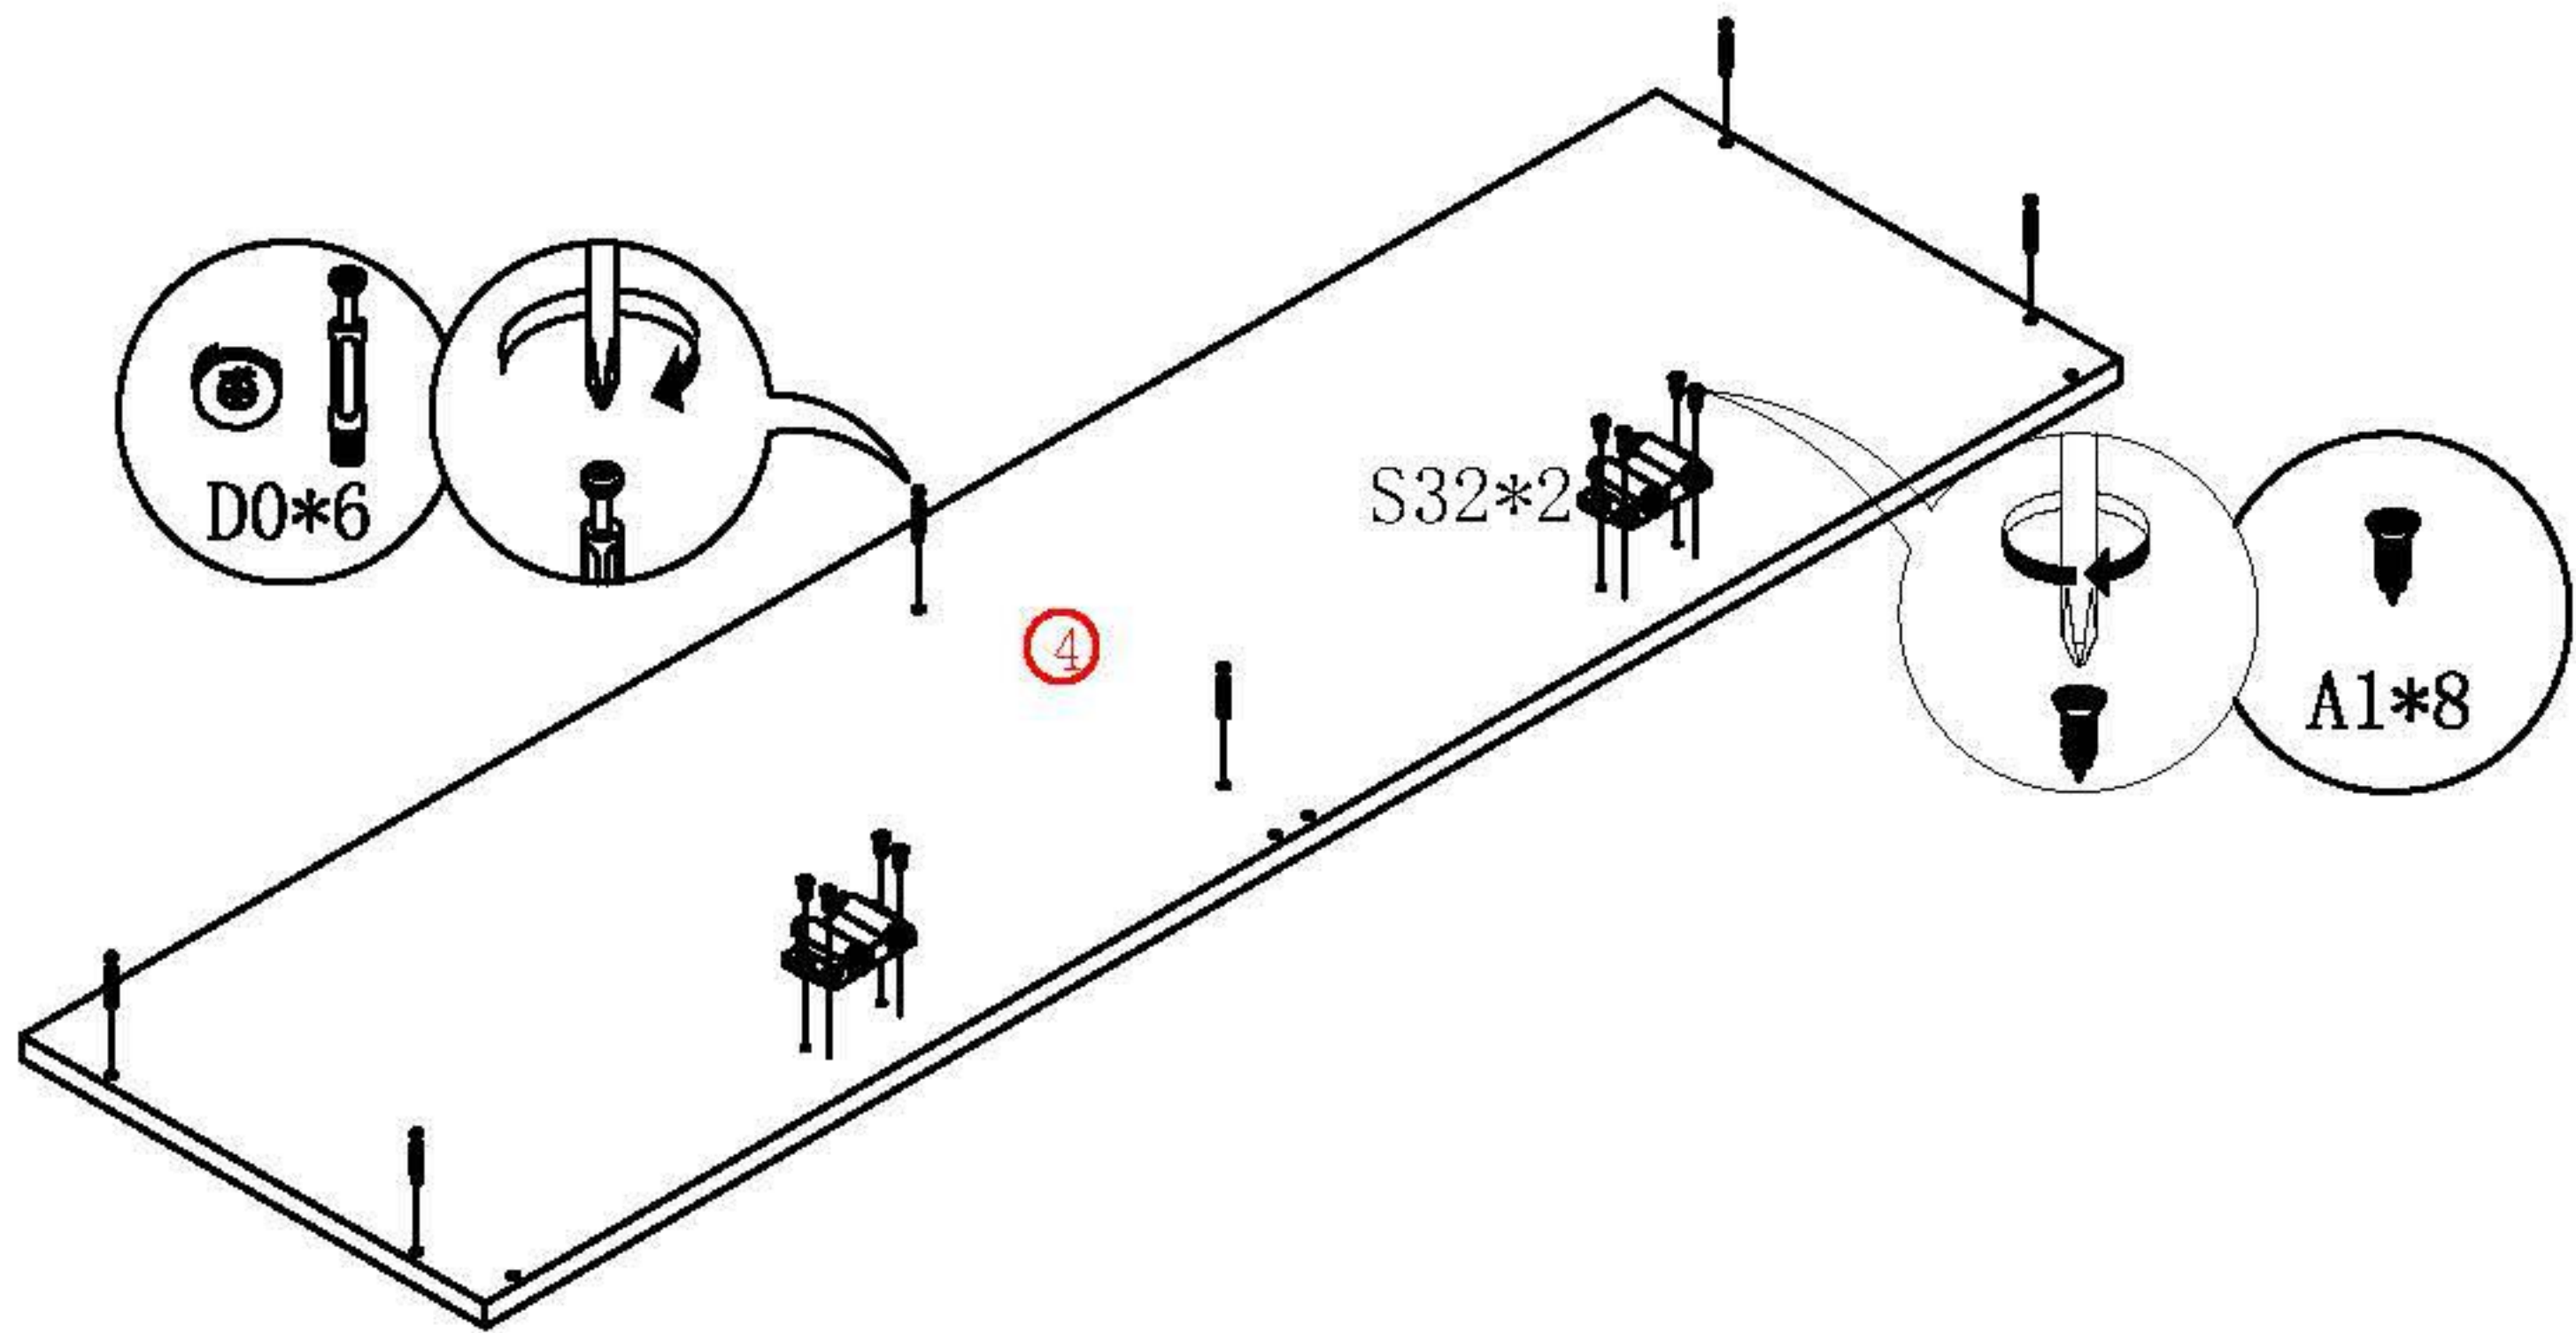


Step 8

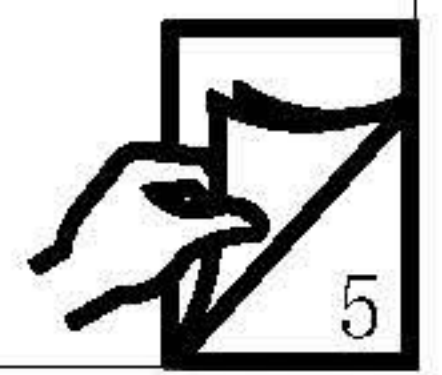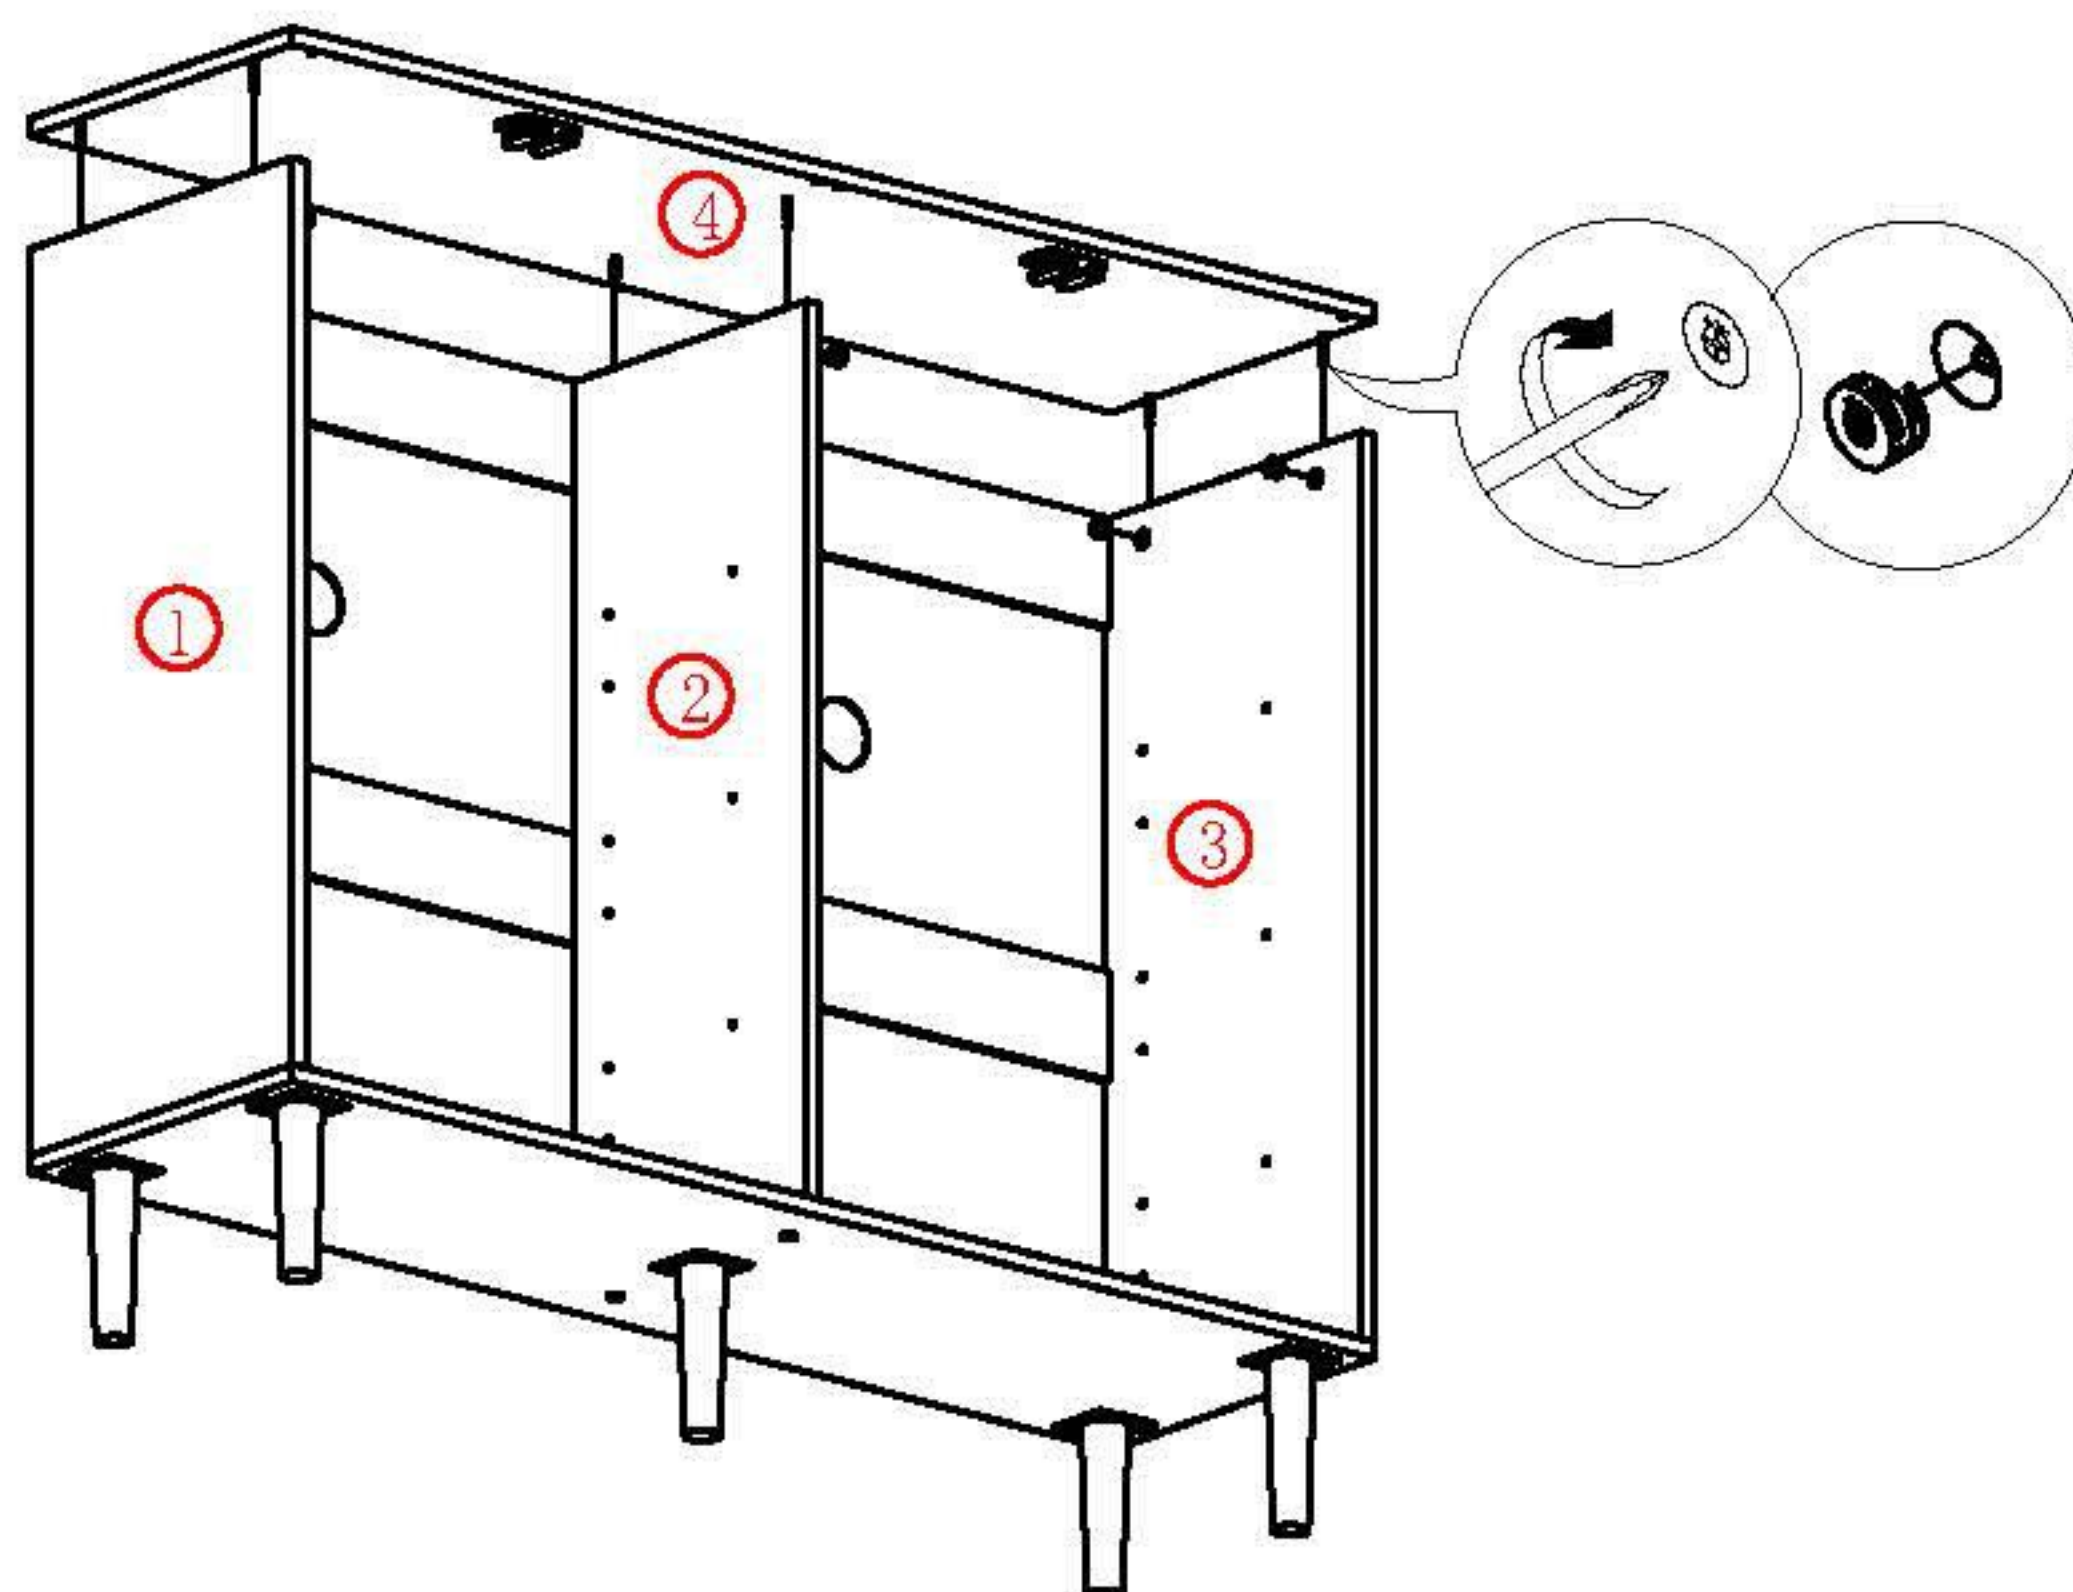

Step 9

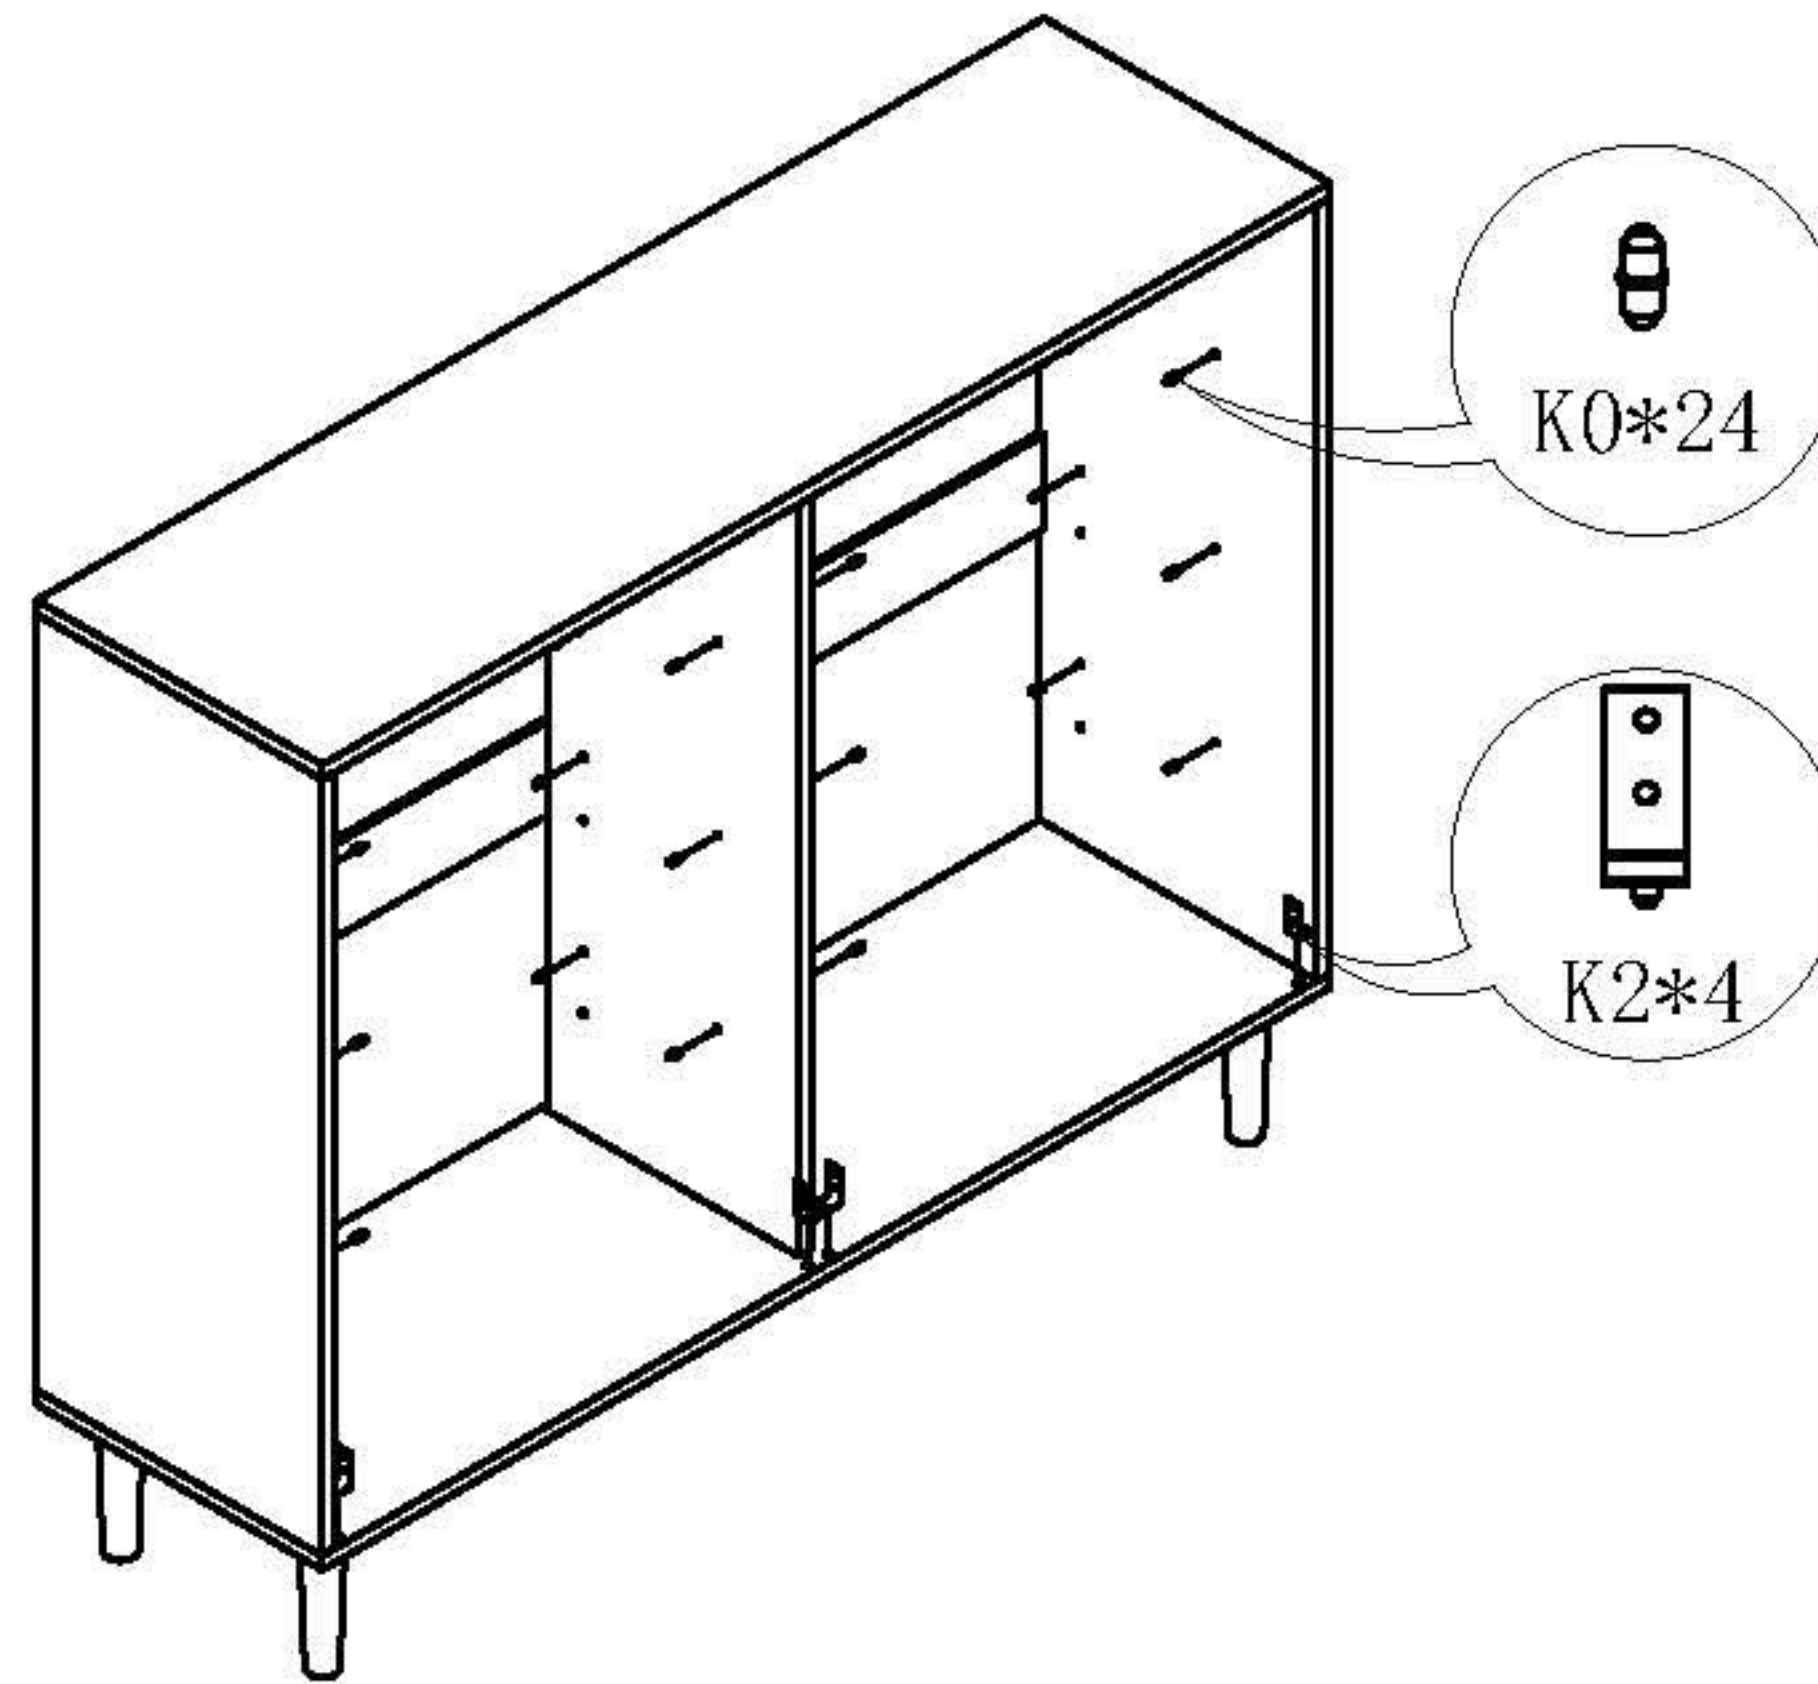

Step 10

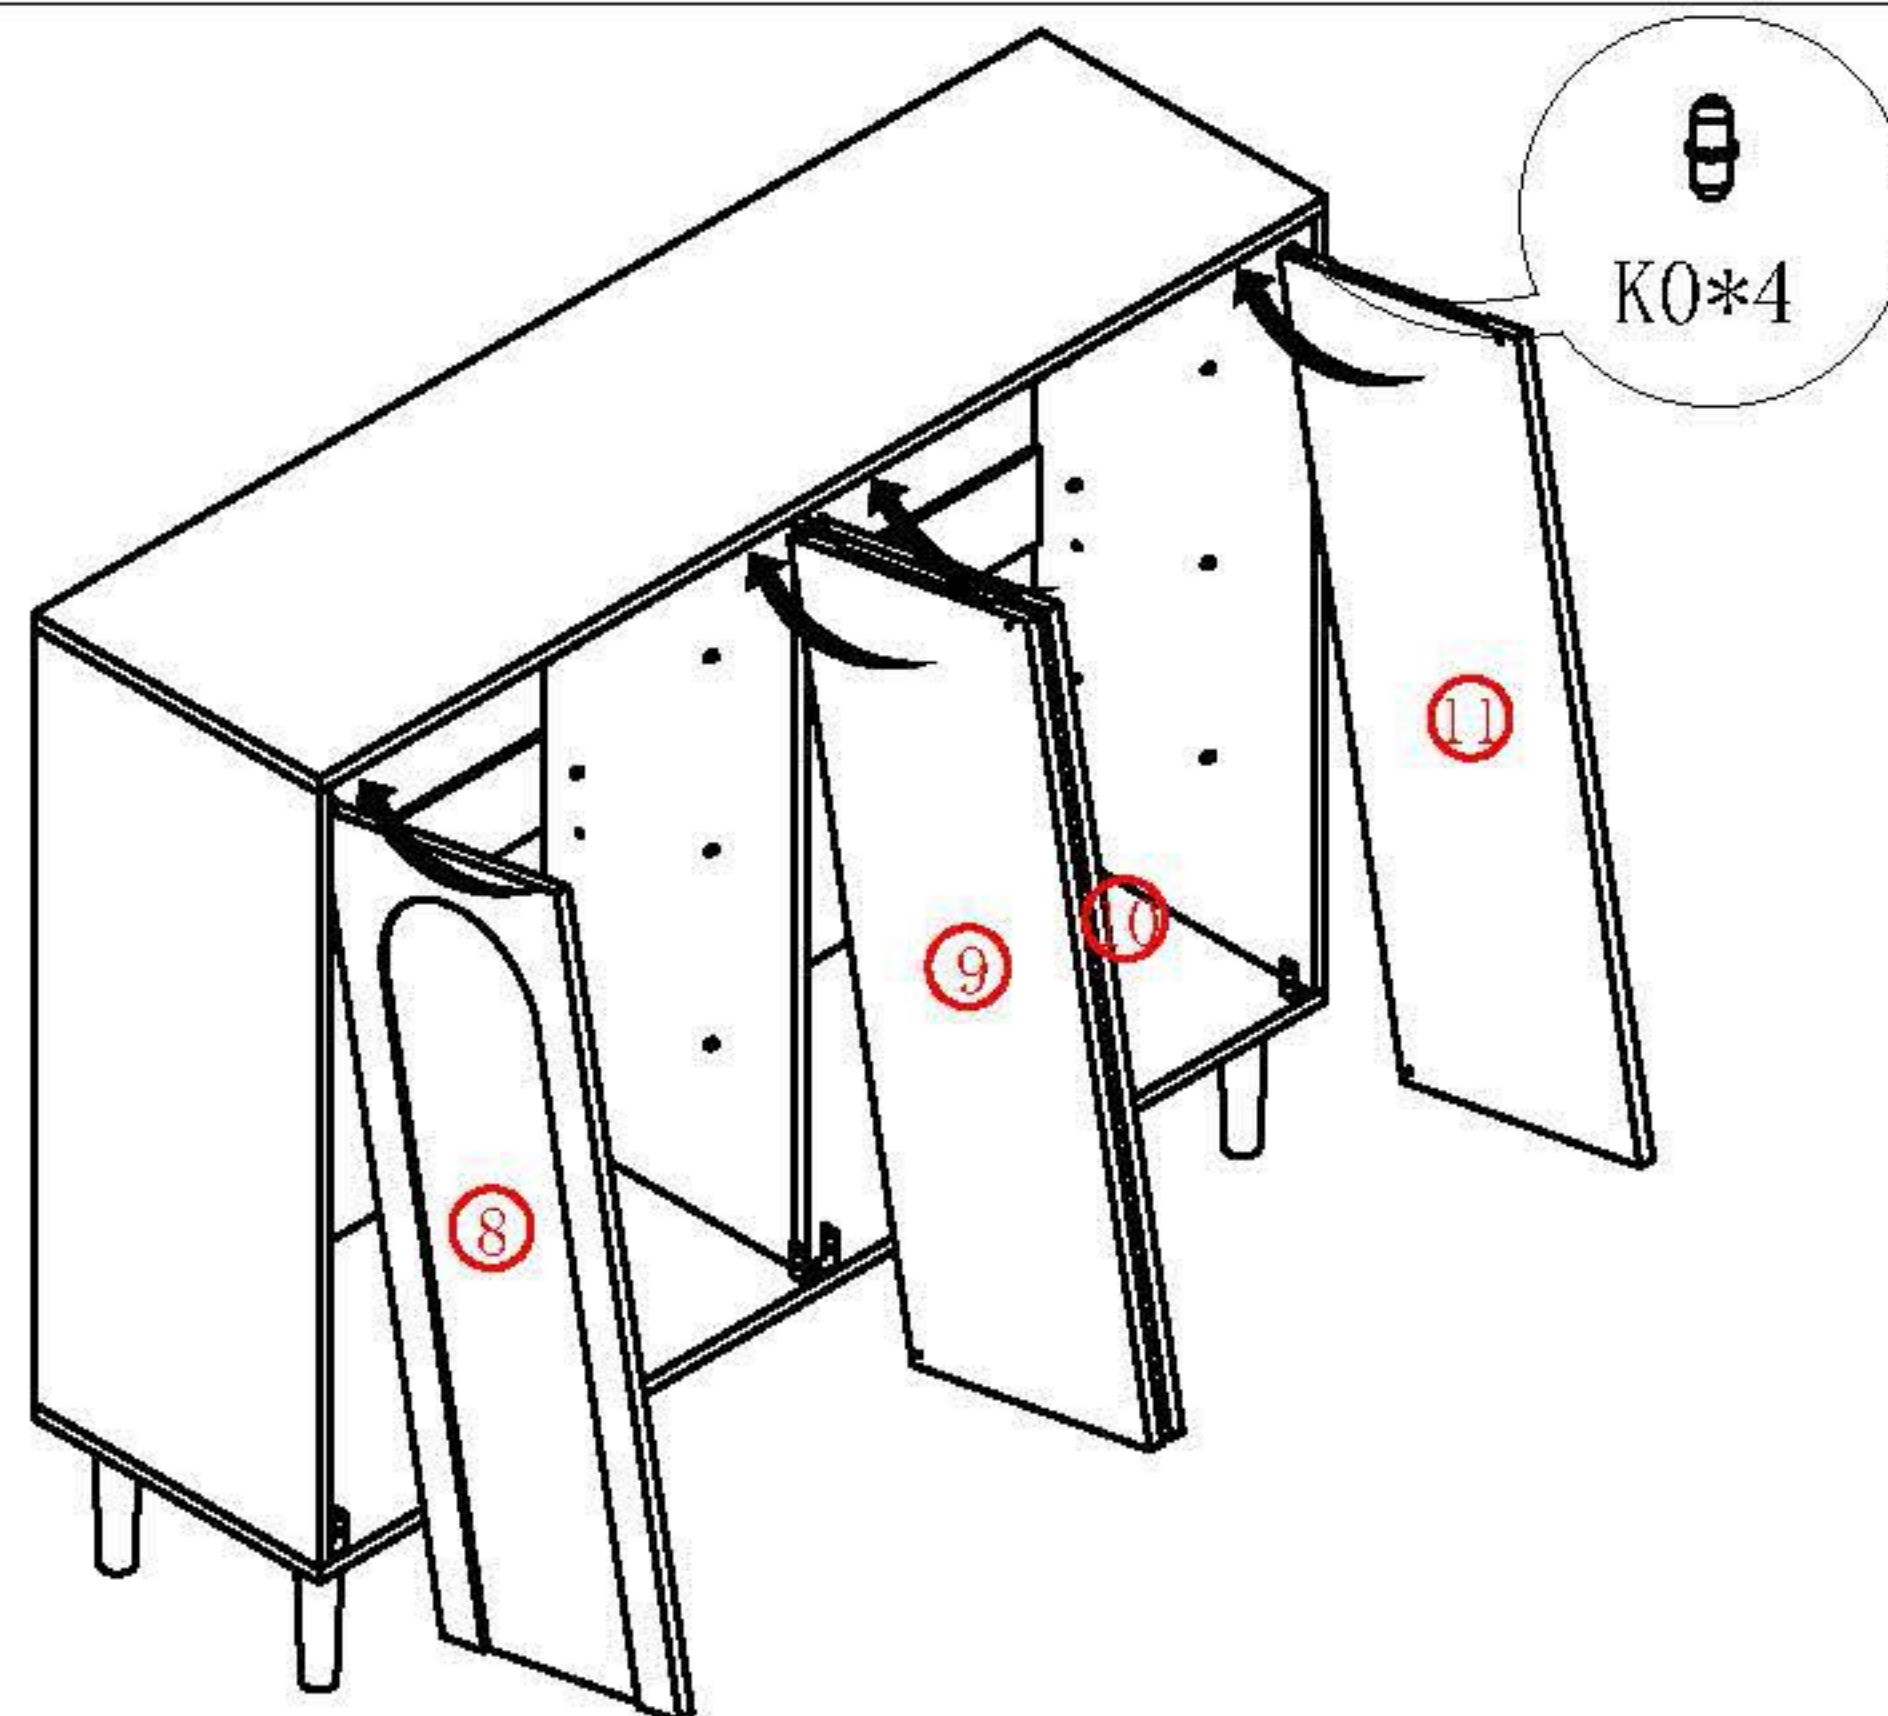

Step 11

