




Instructions for using eccentric bolts:





Example

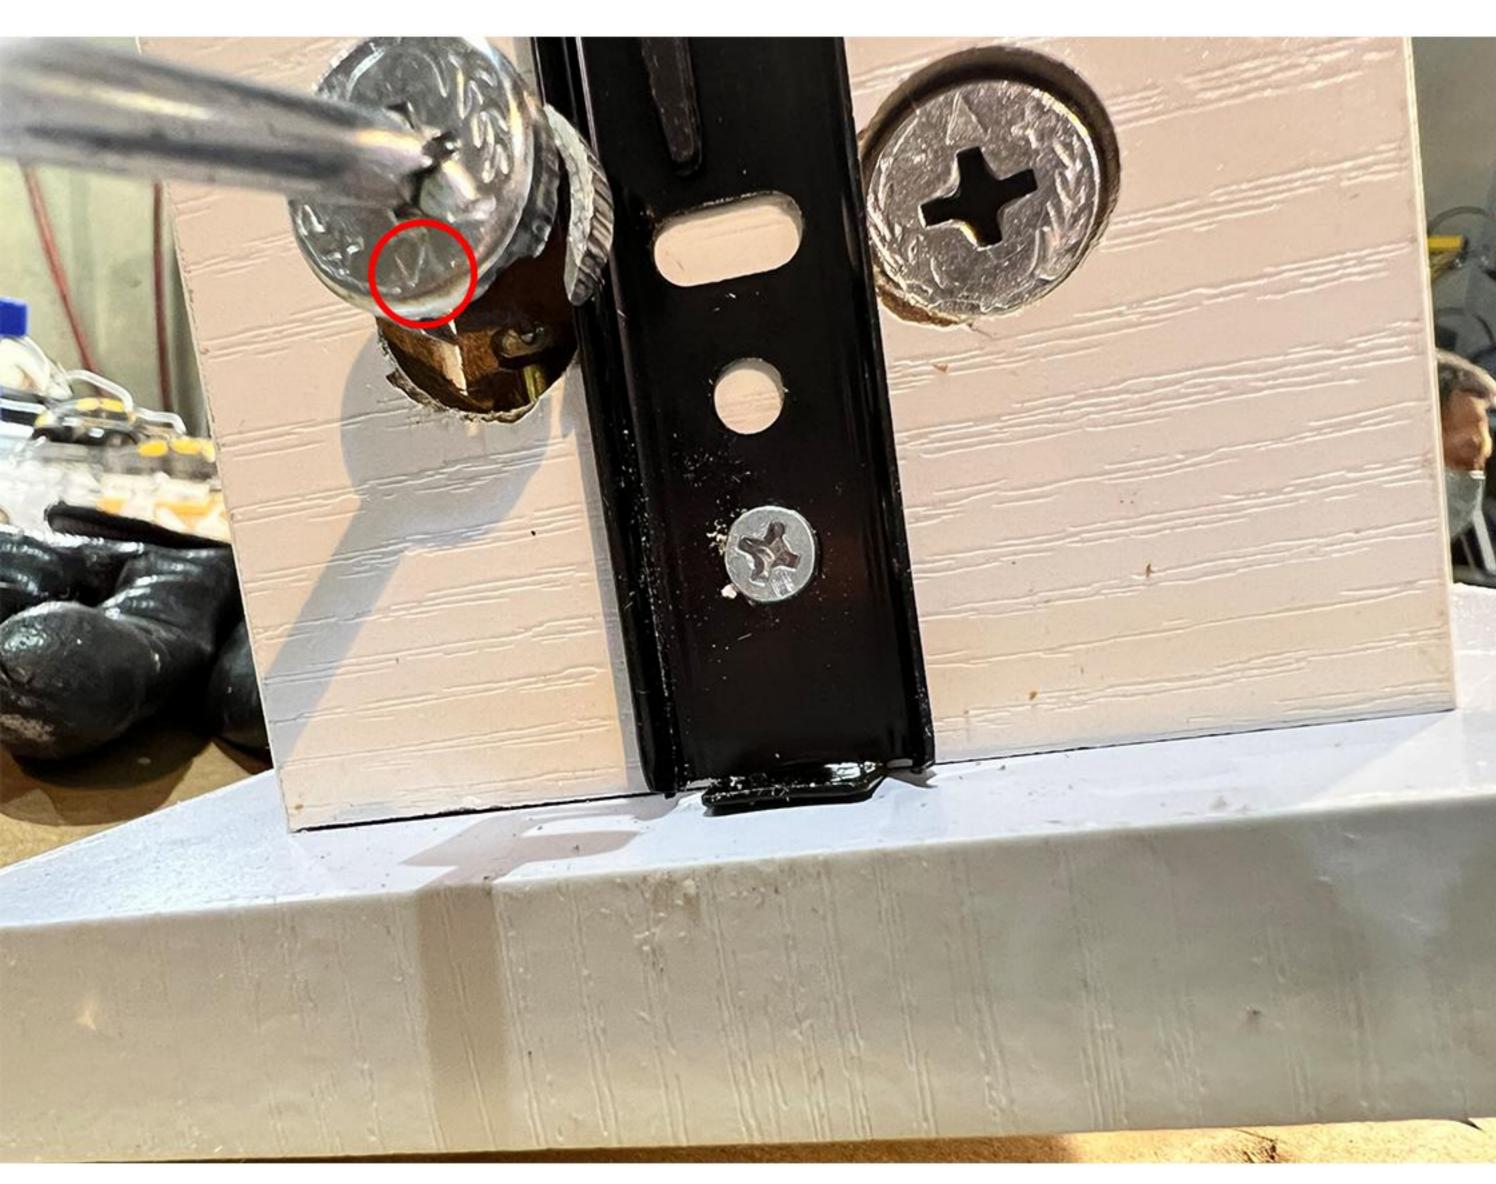


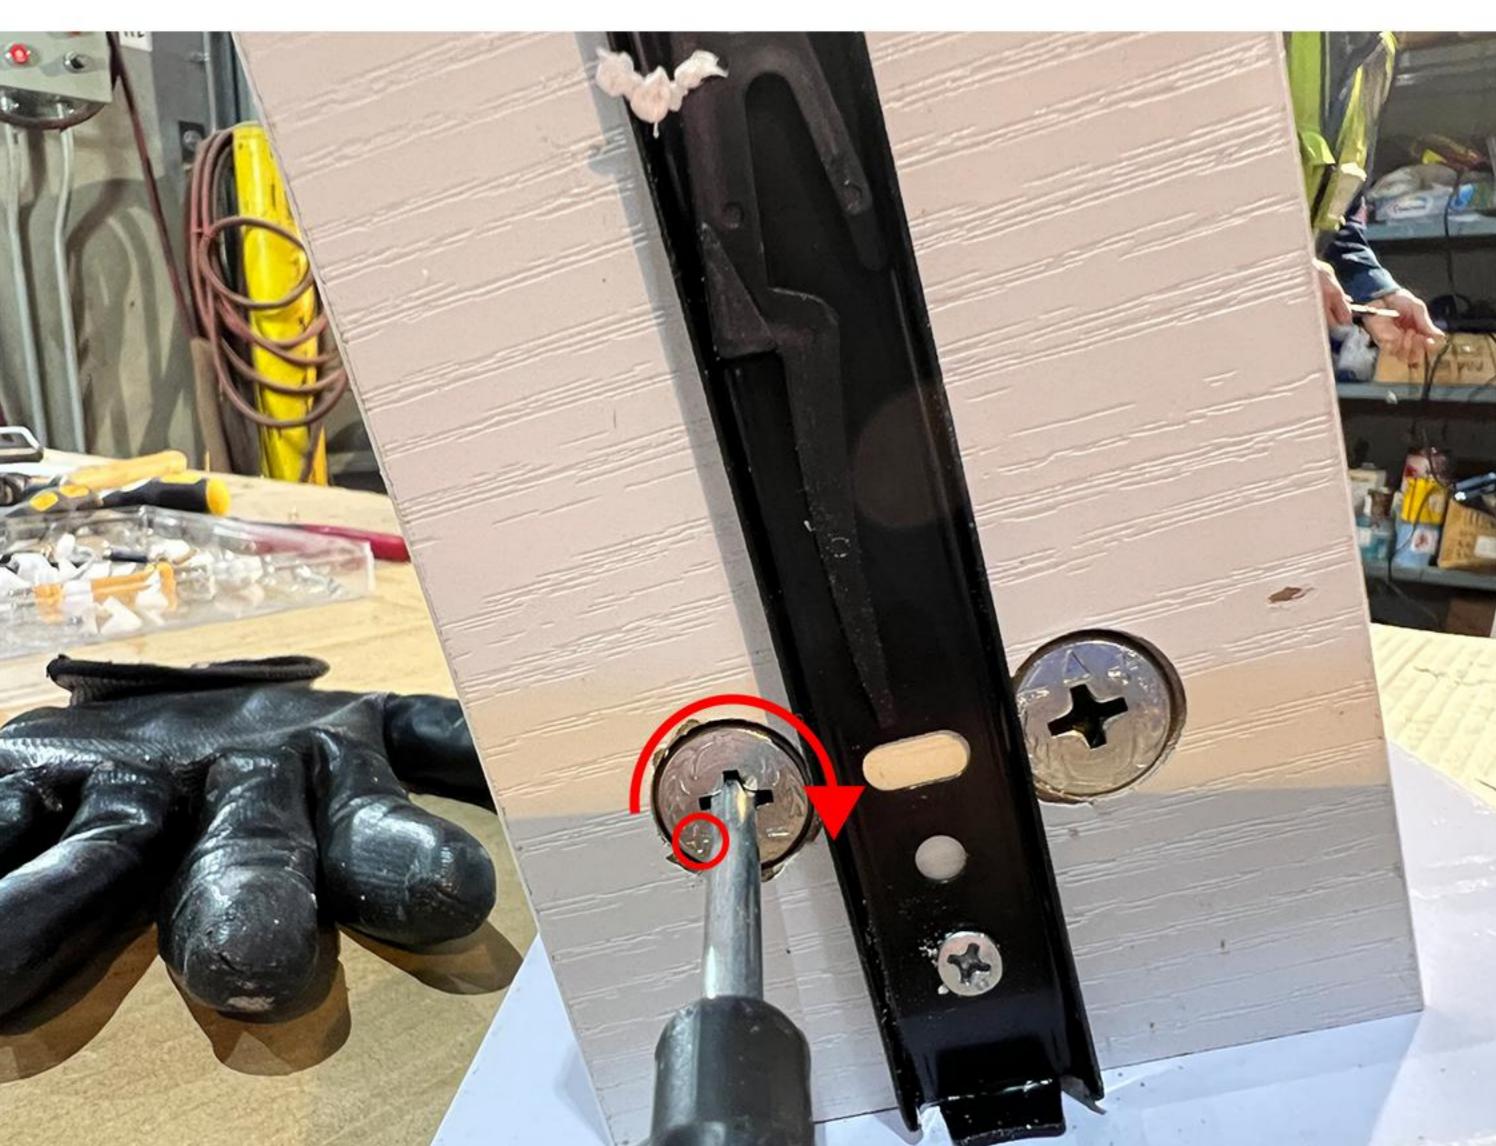


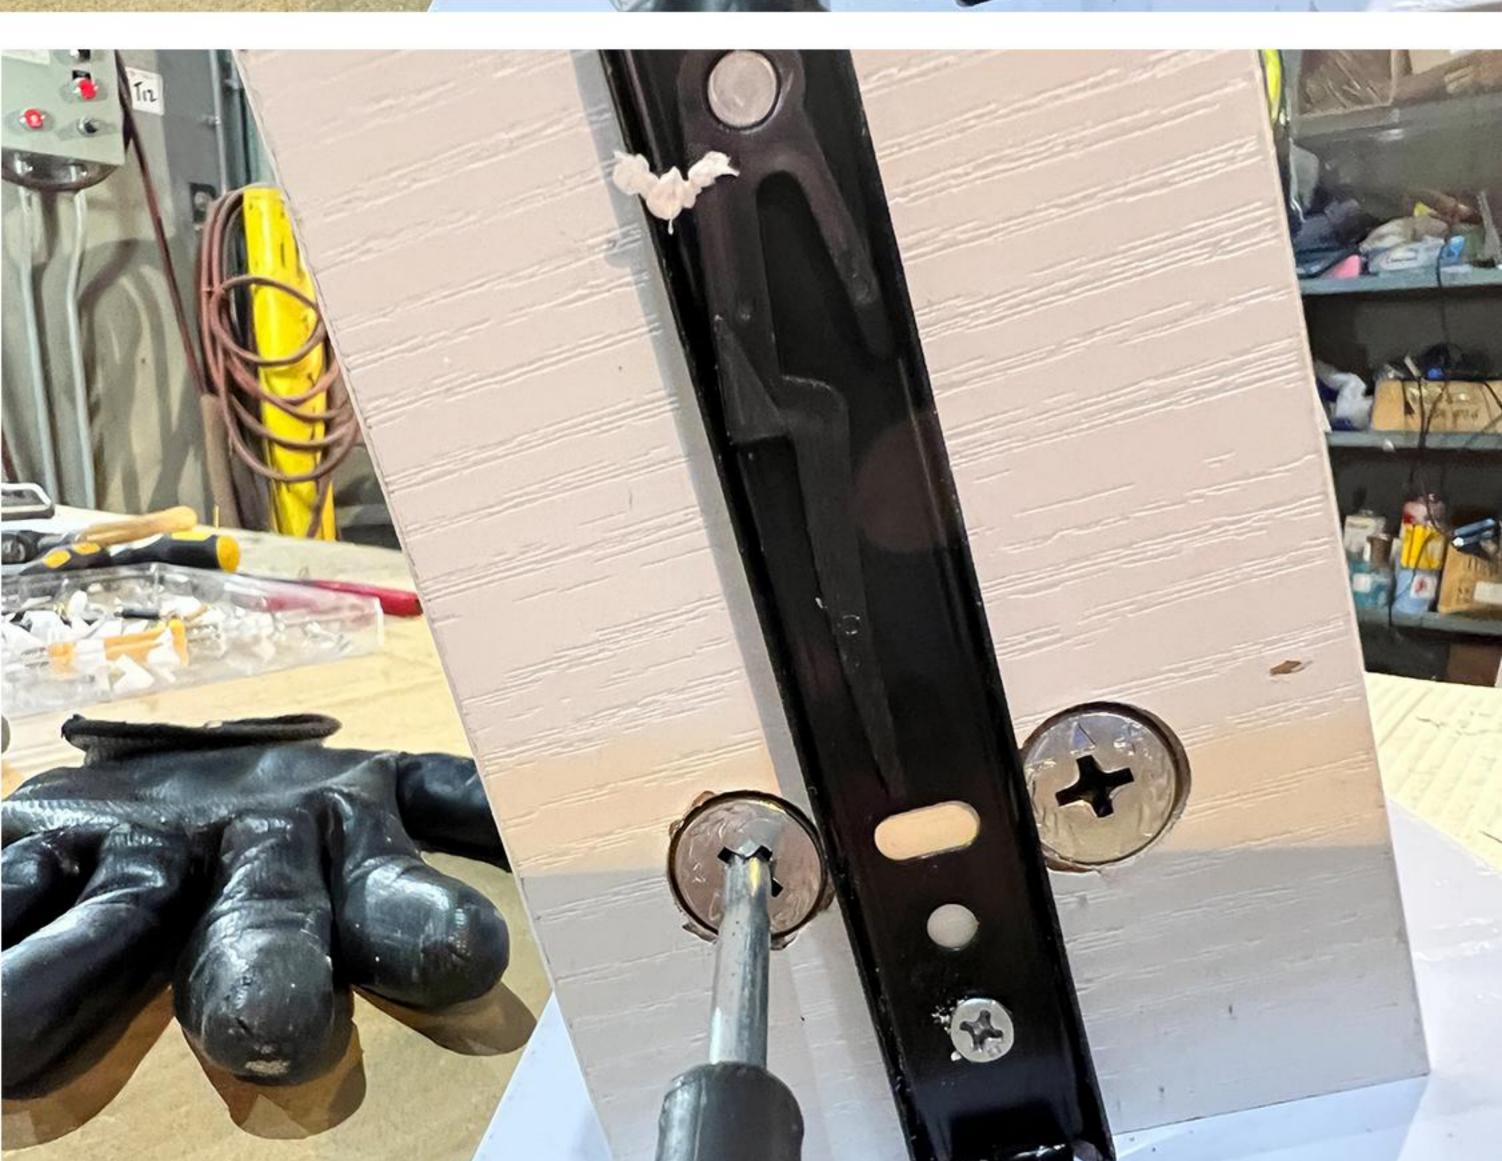


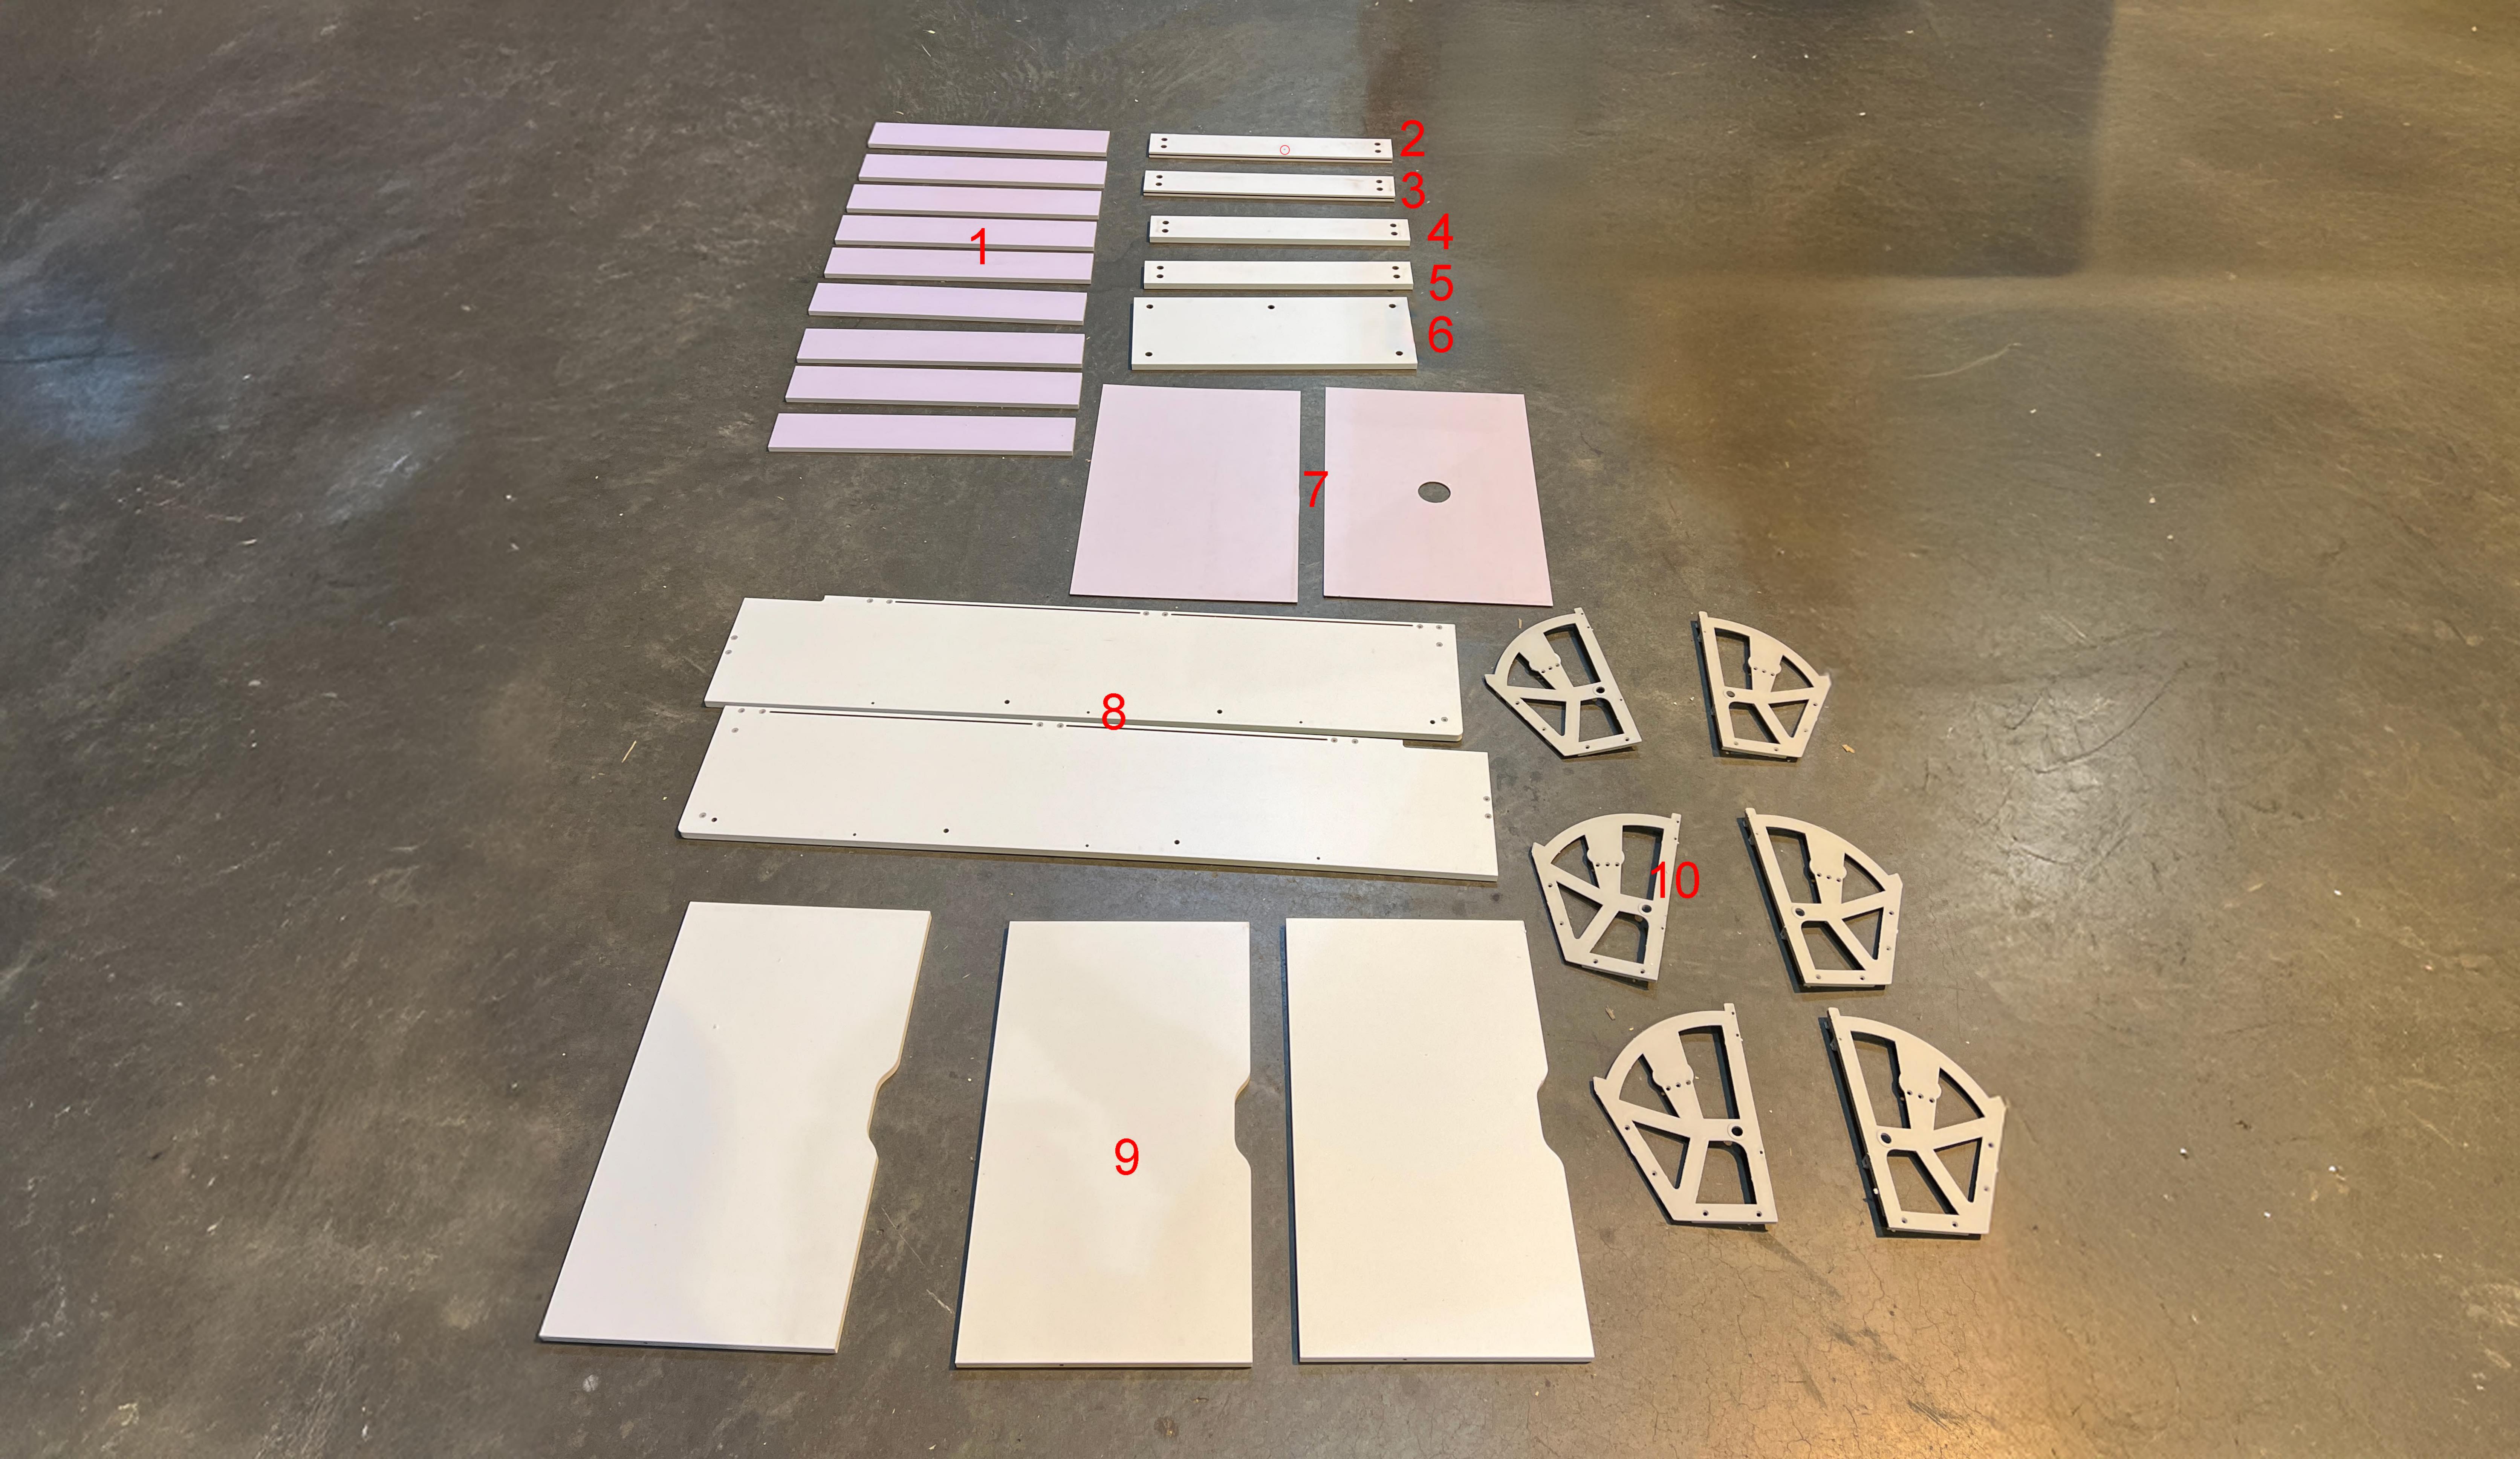


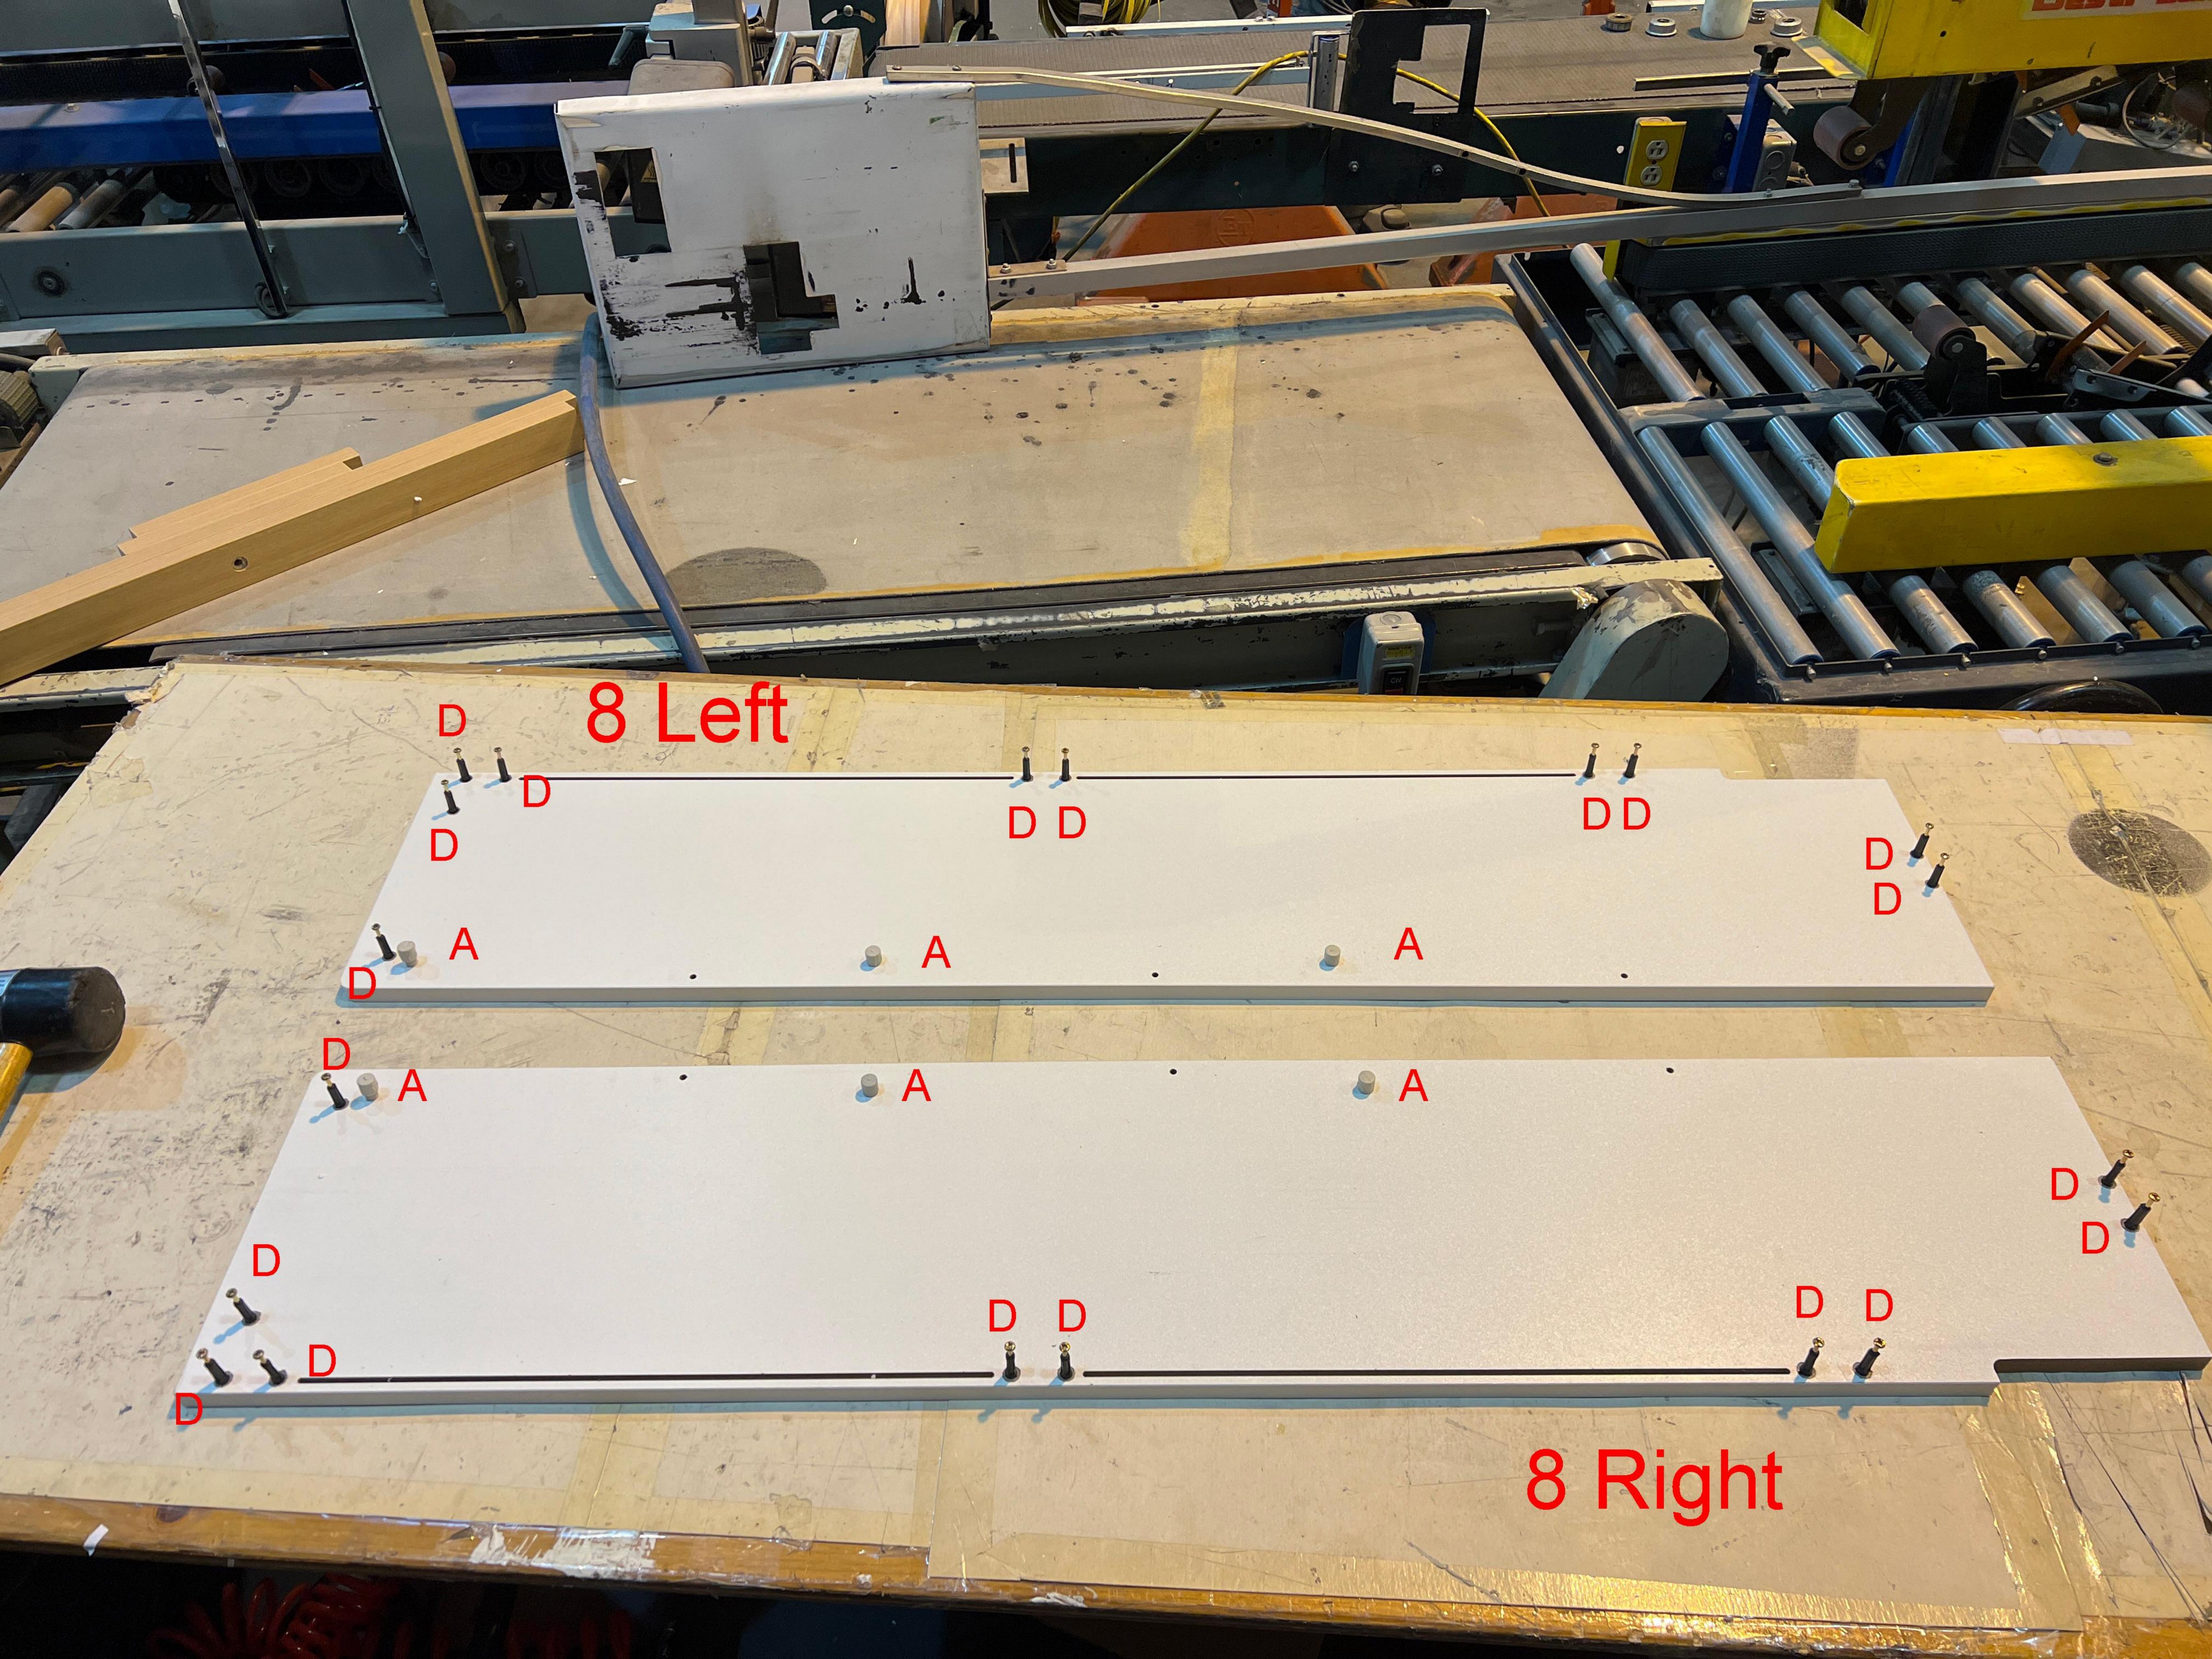


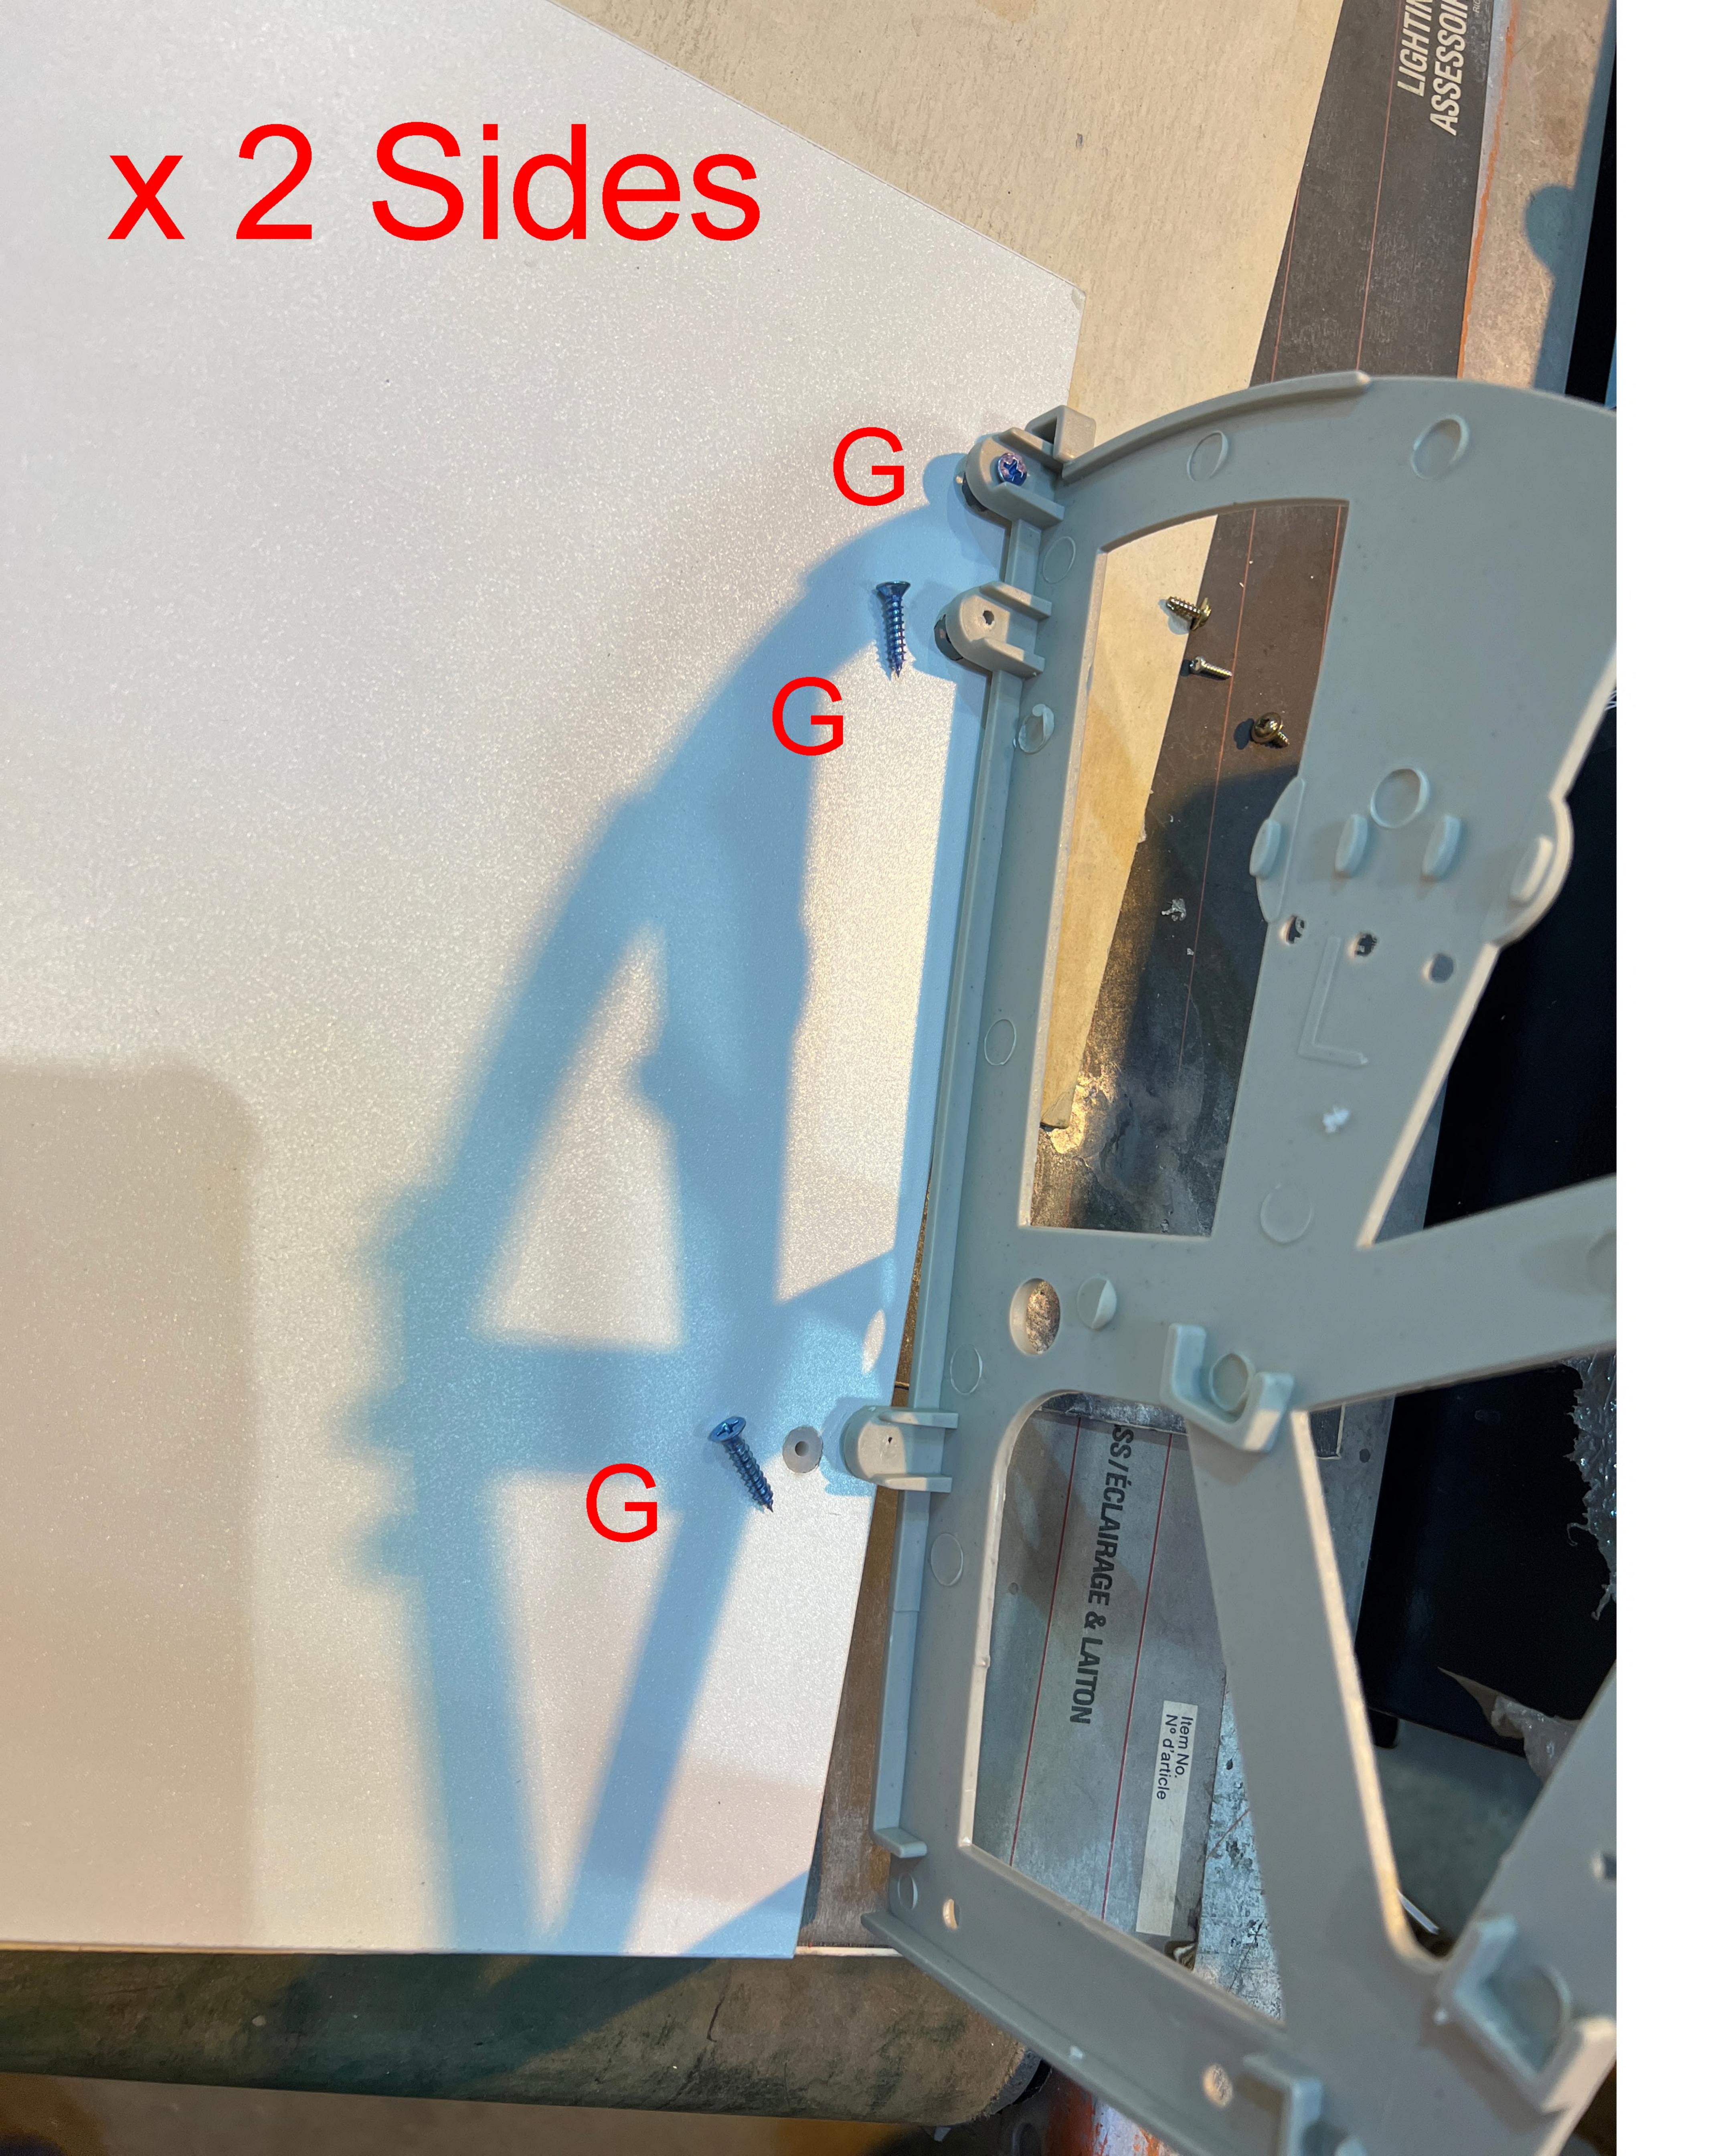


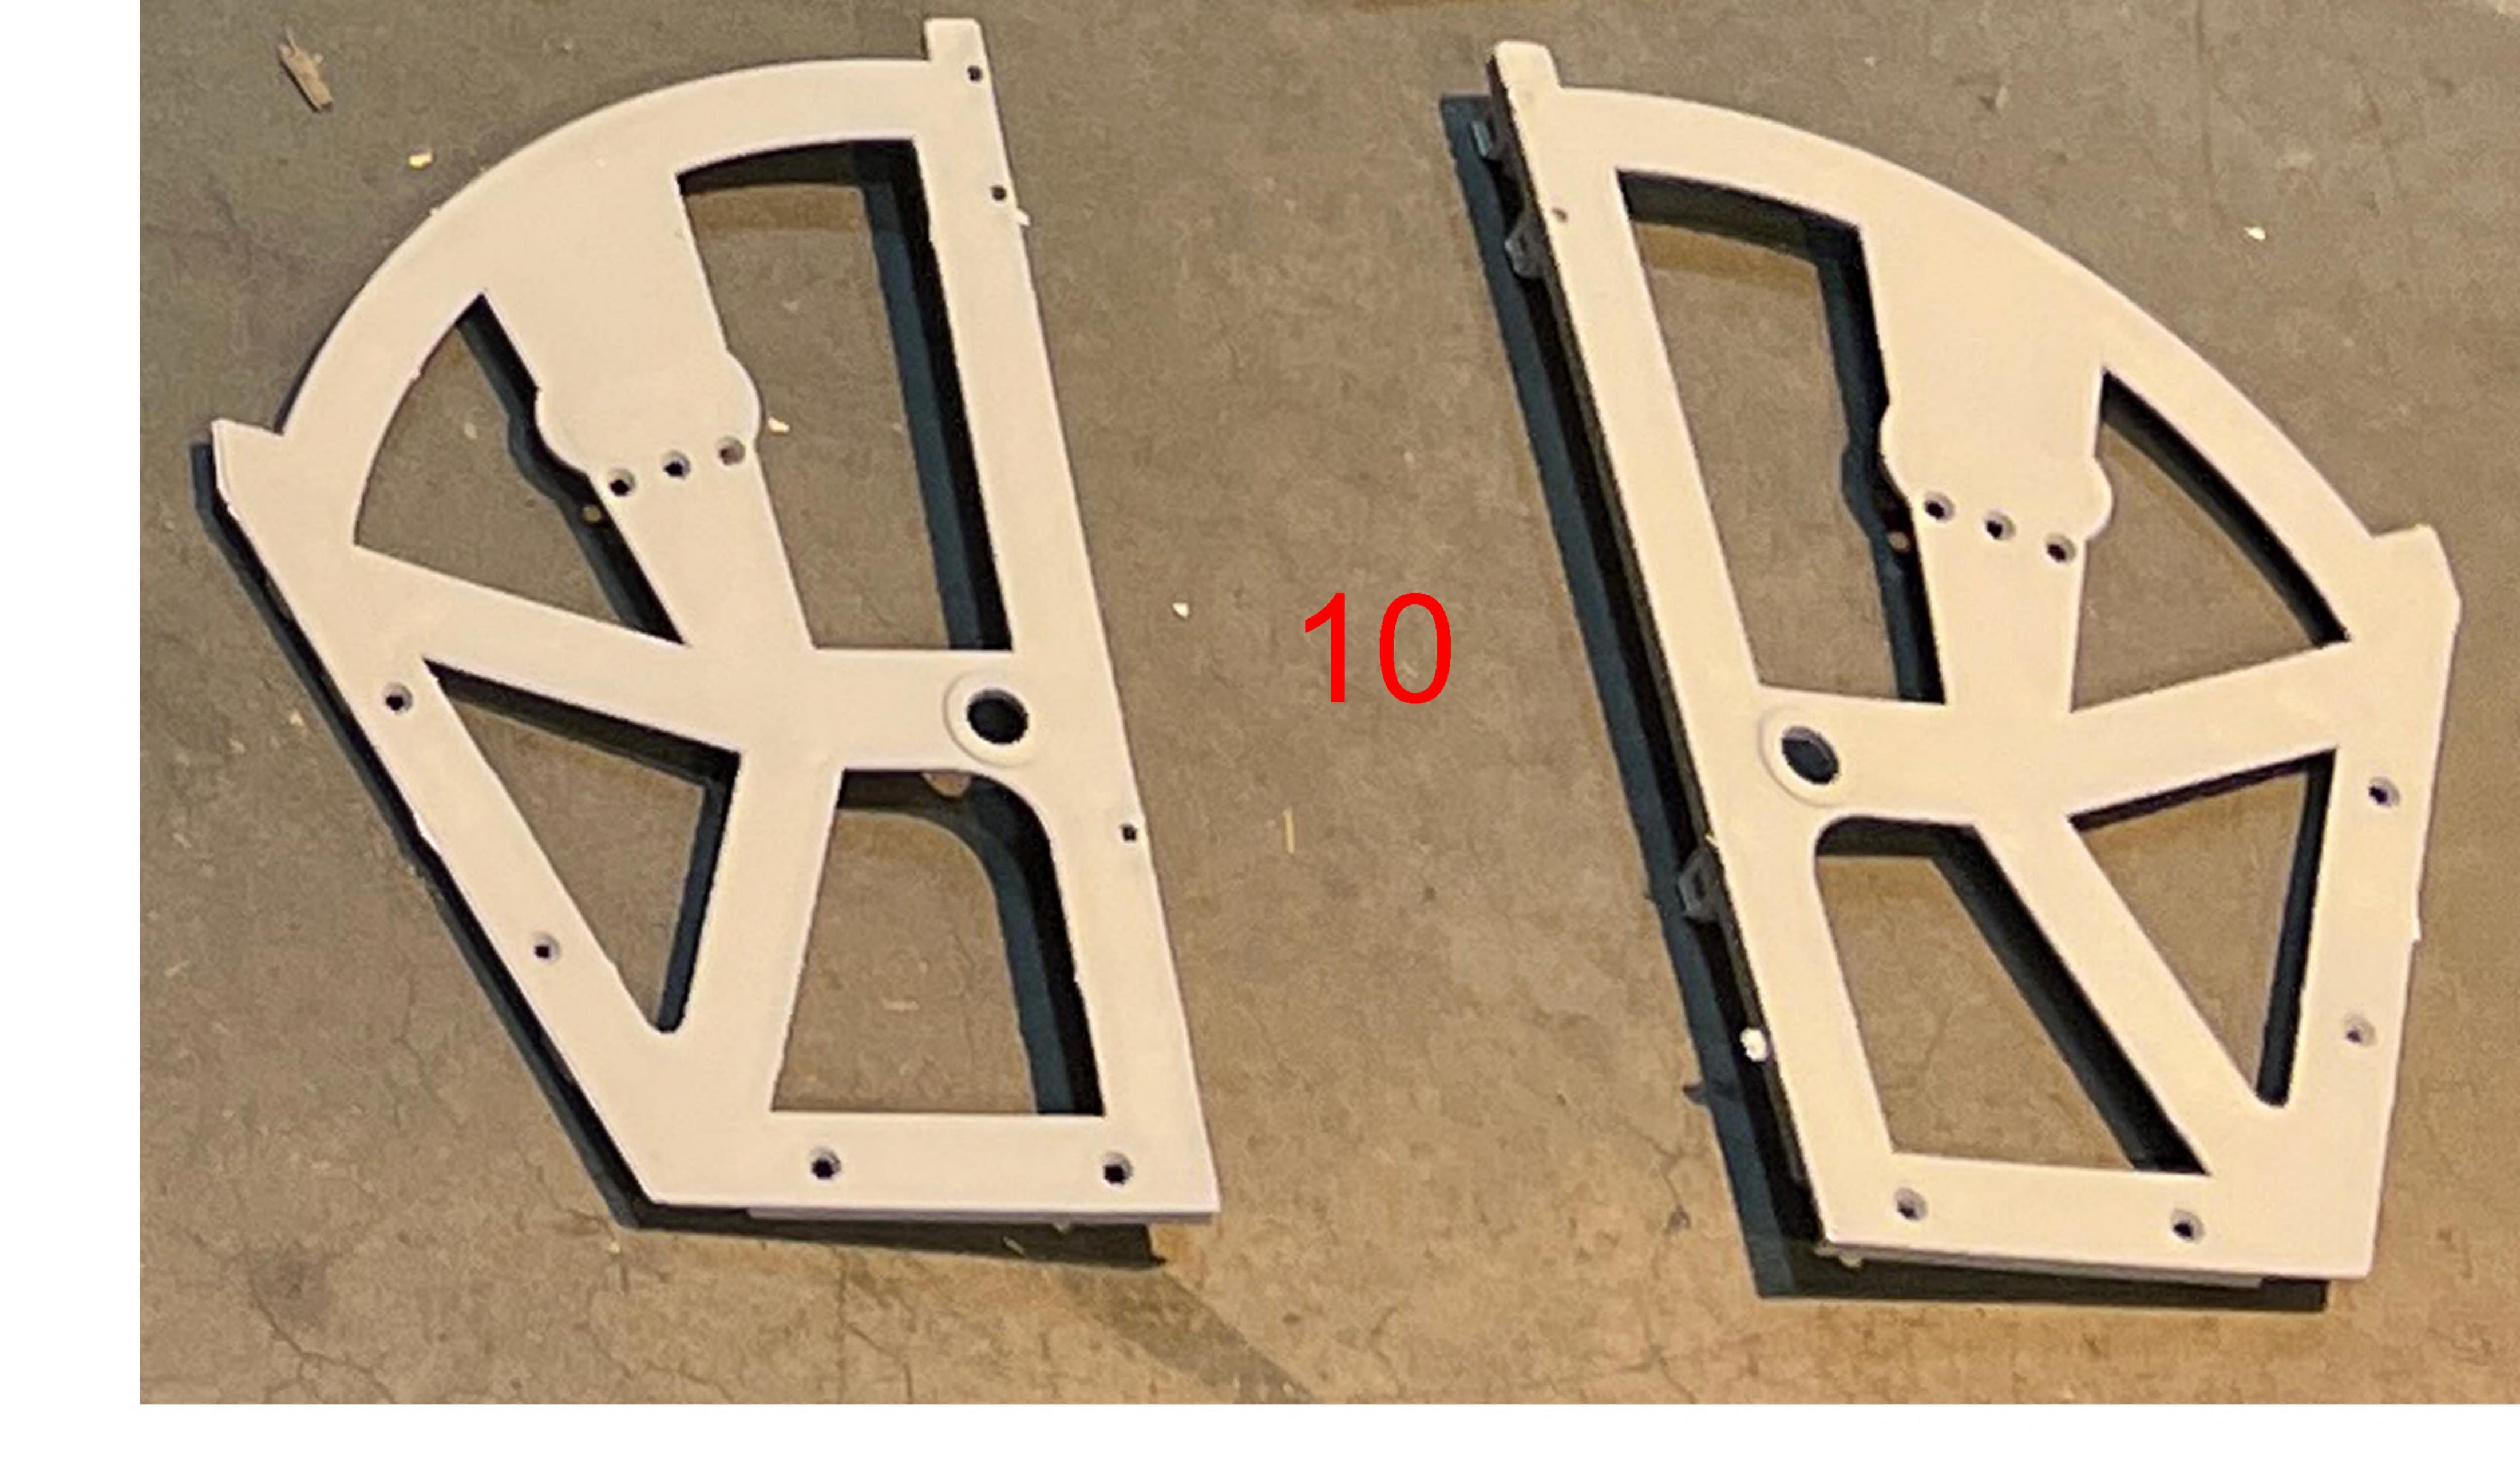

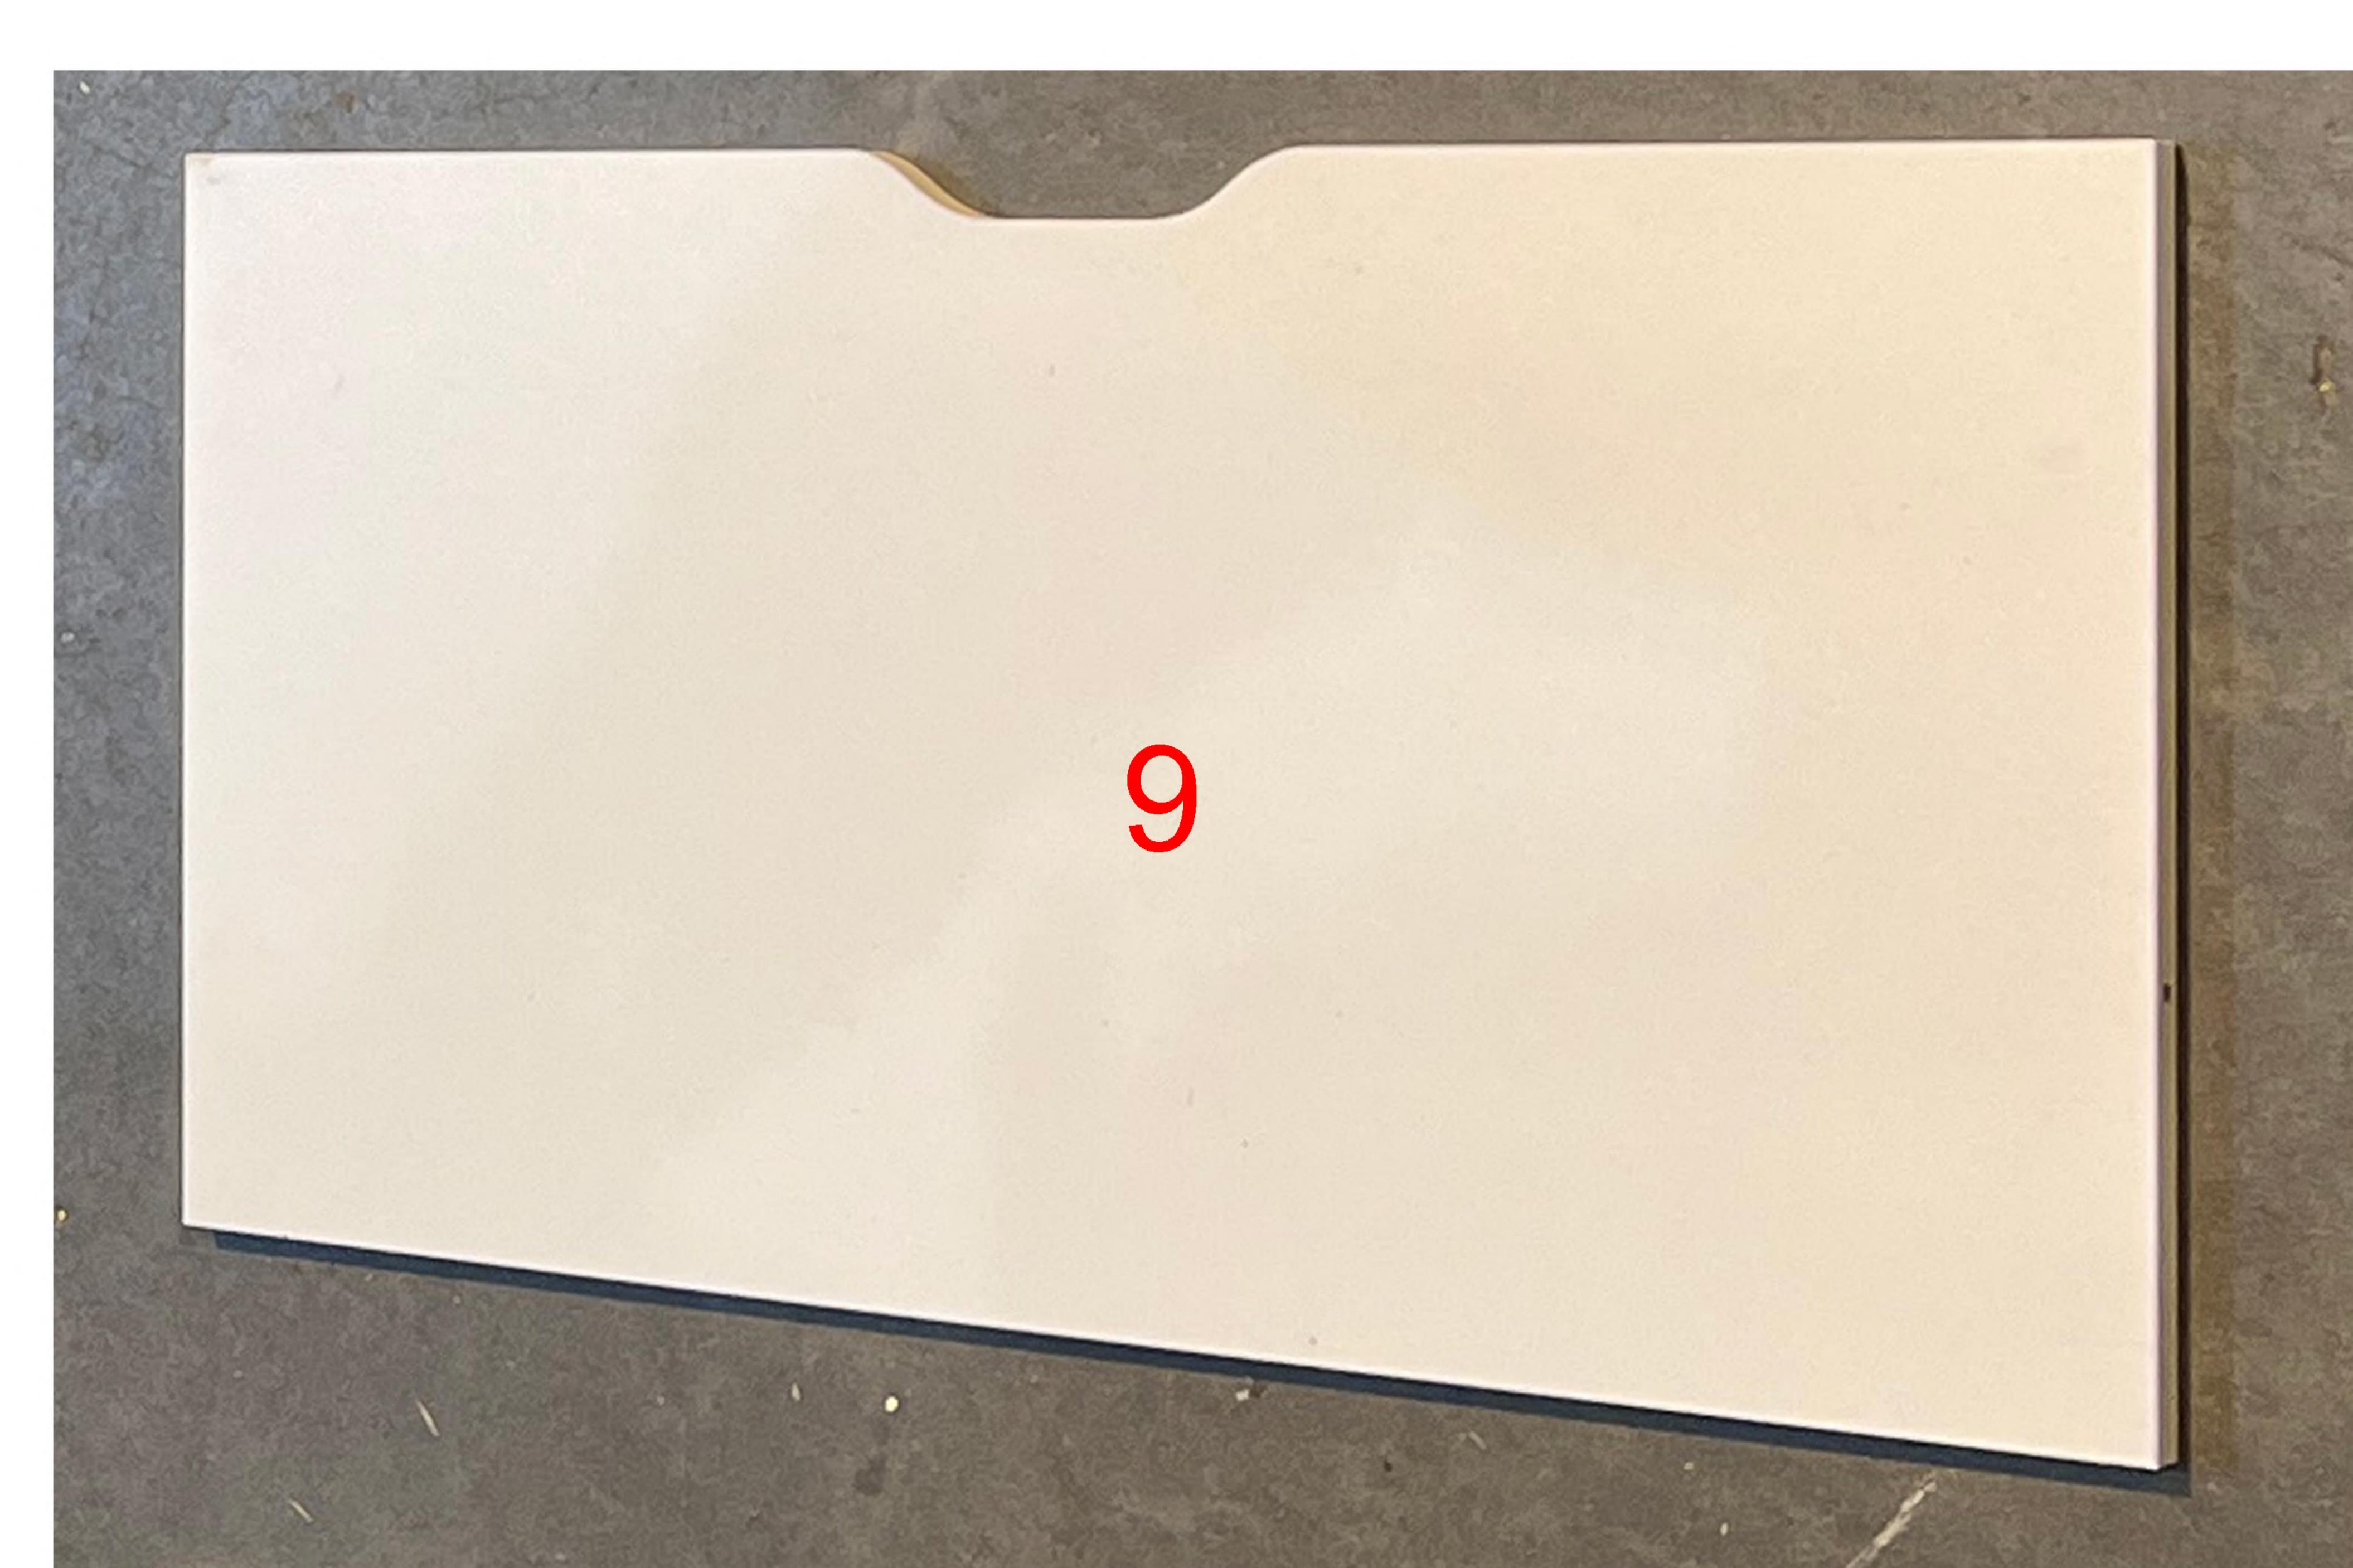

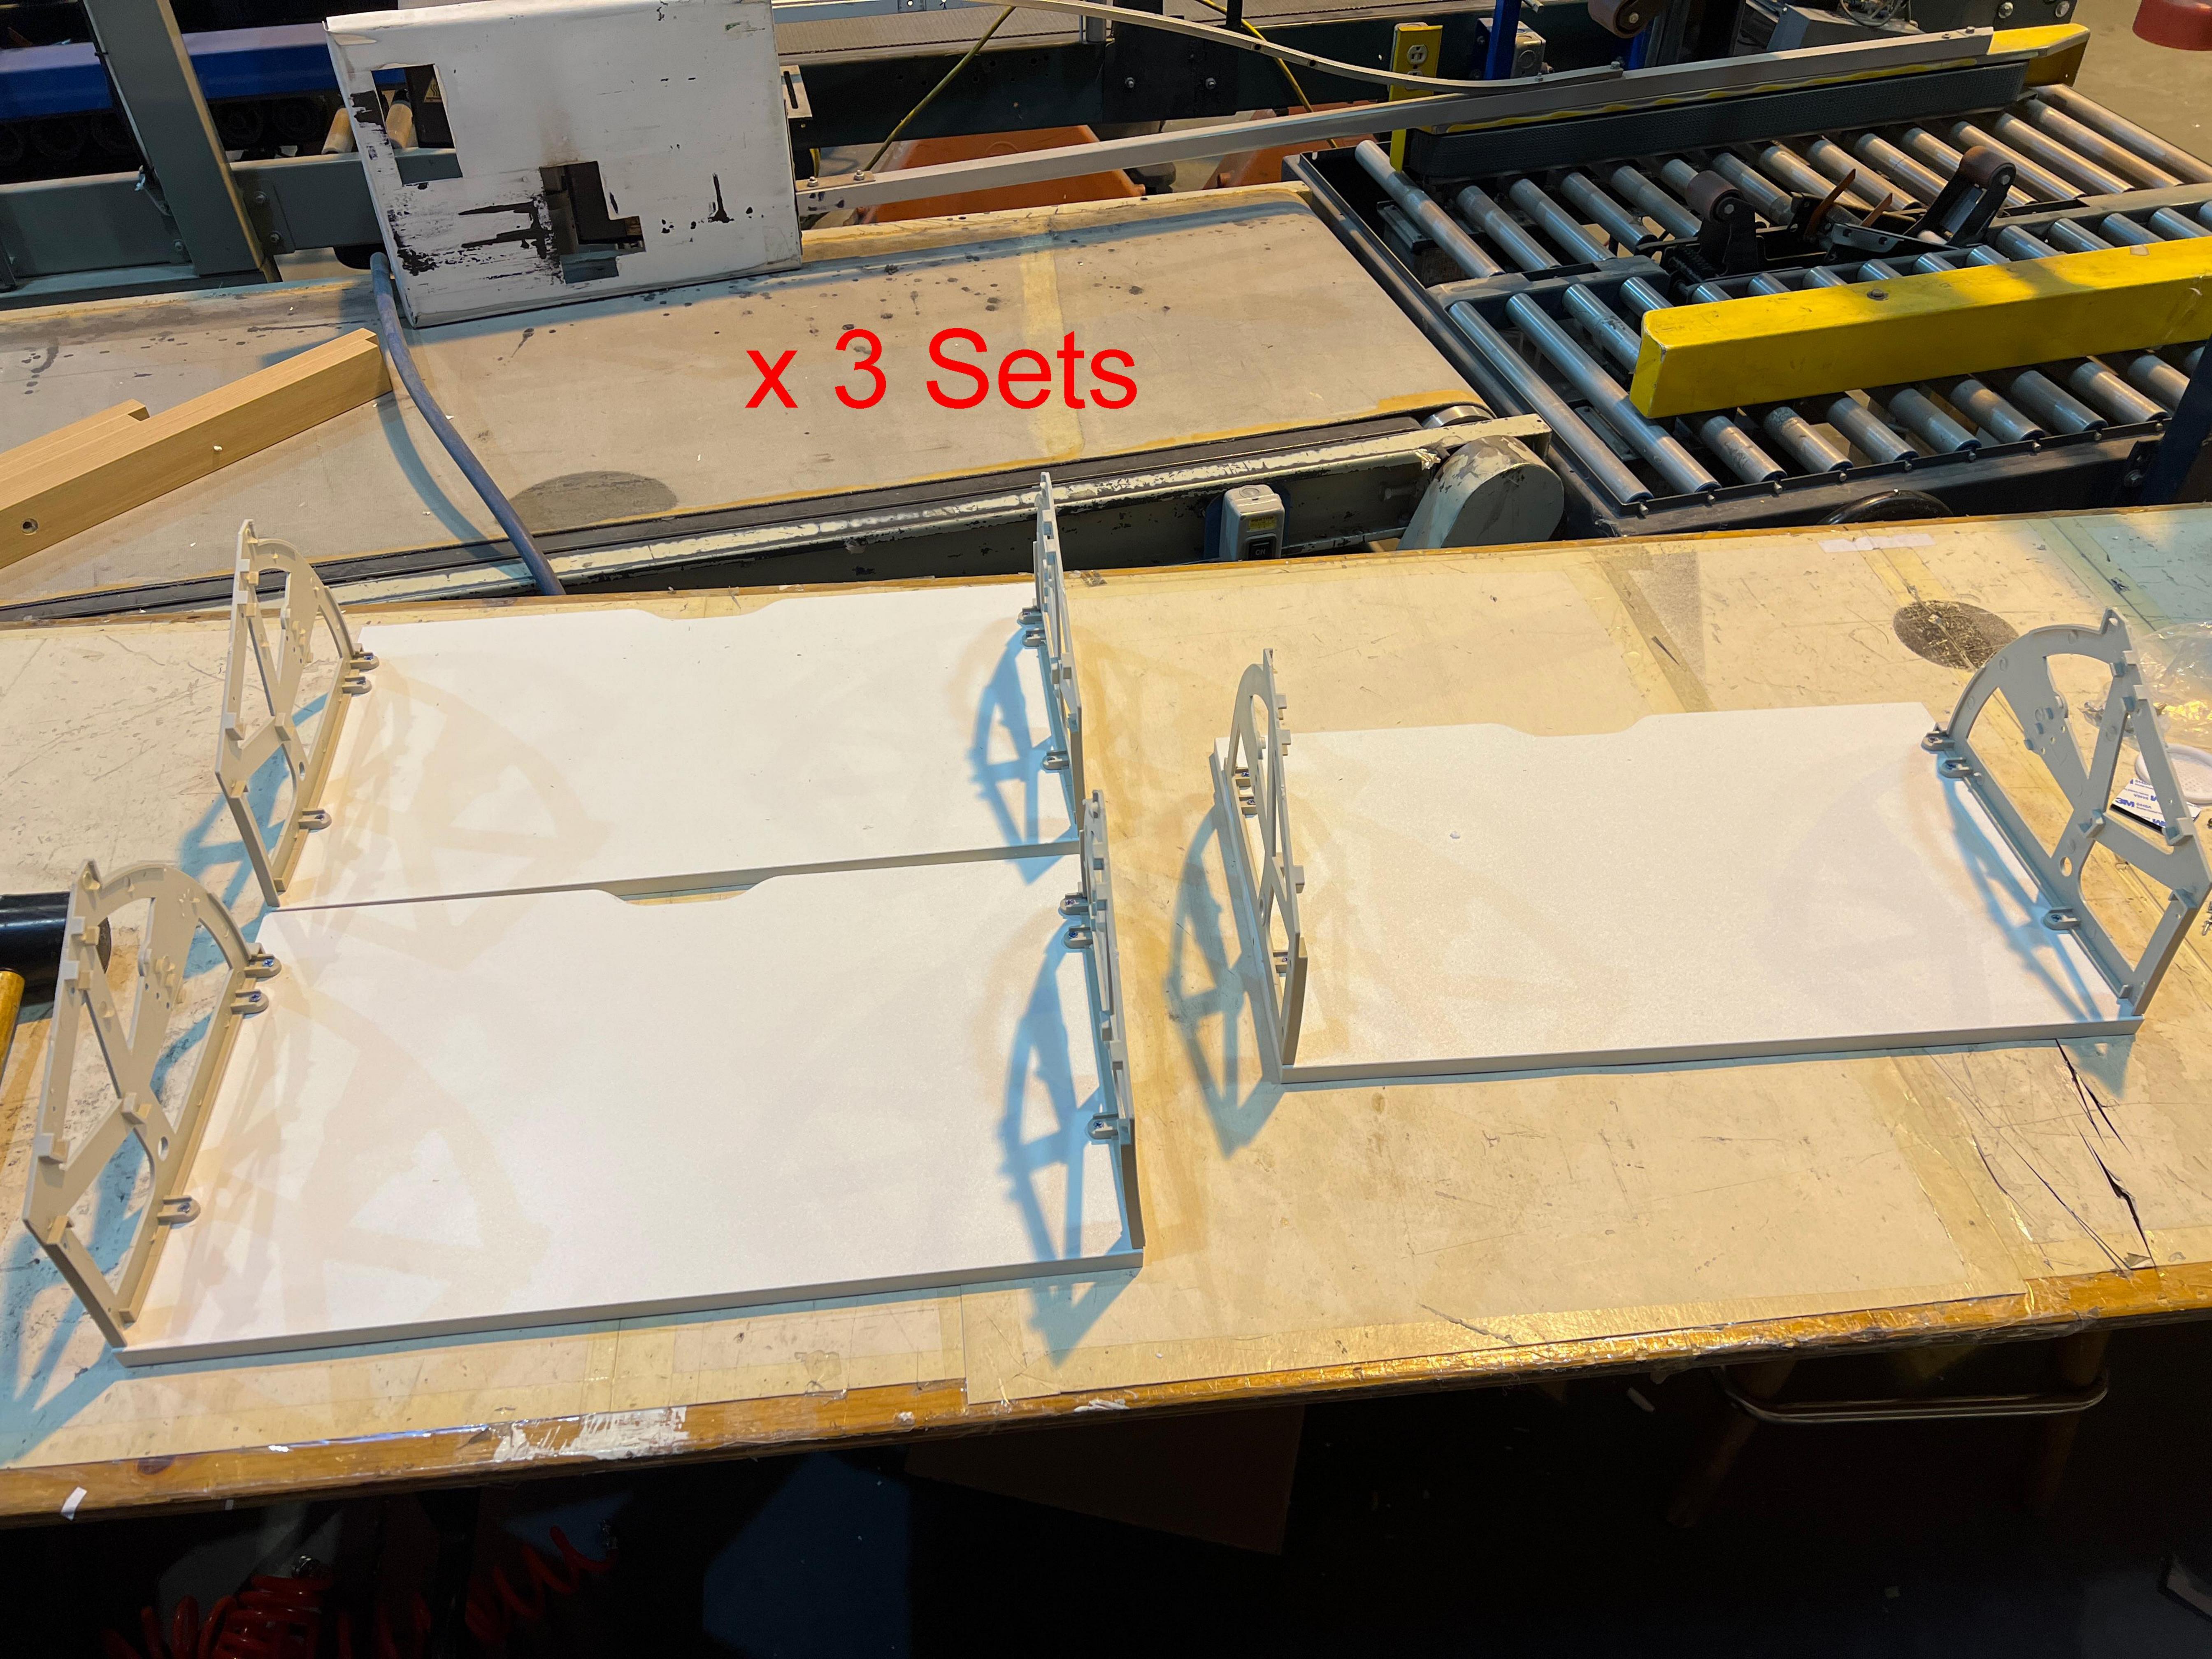

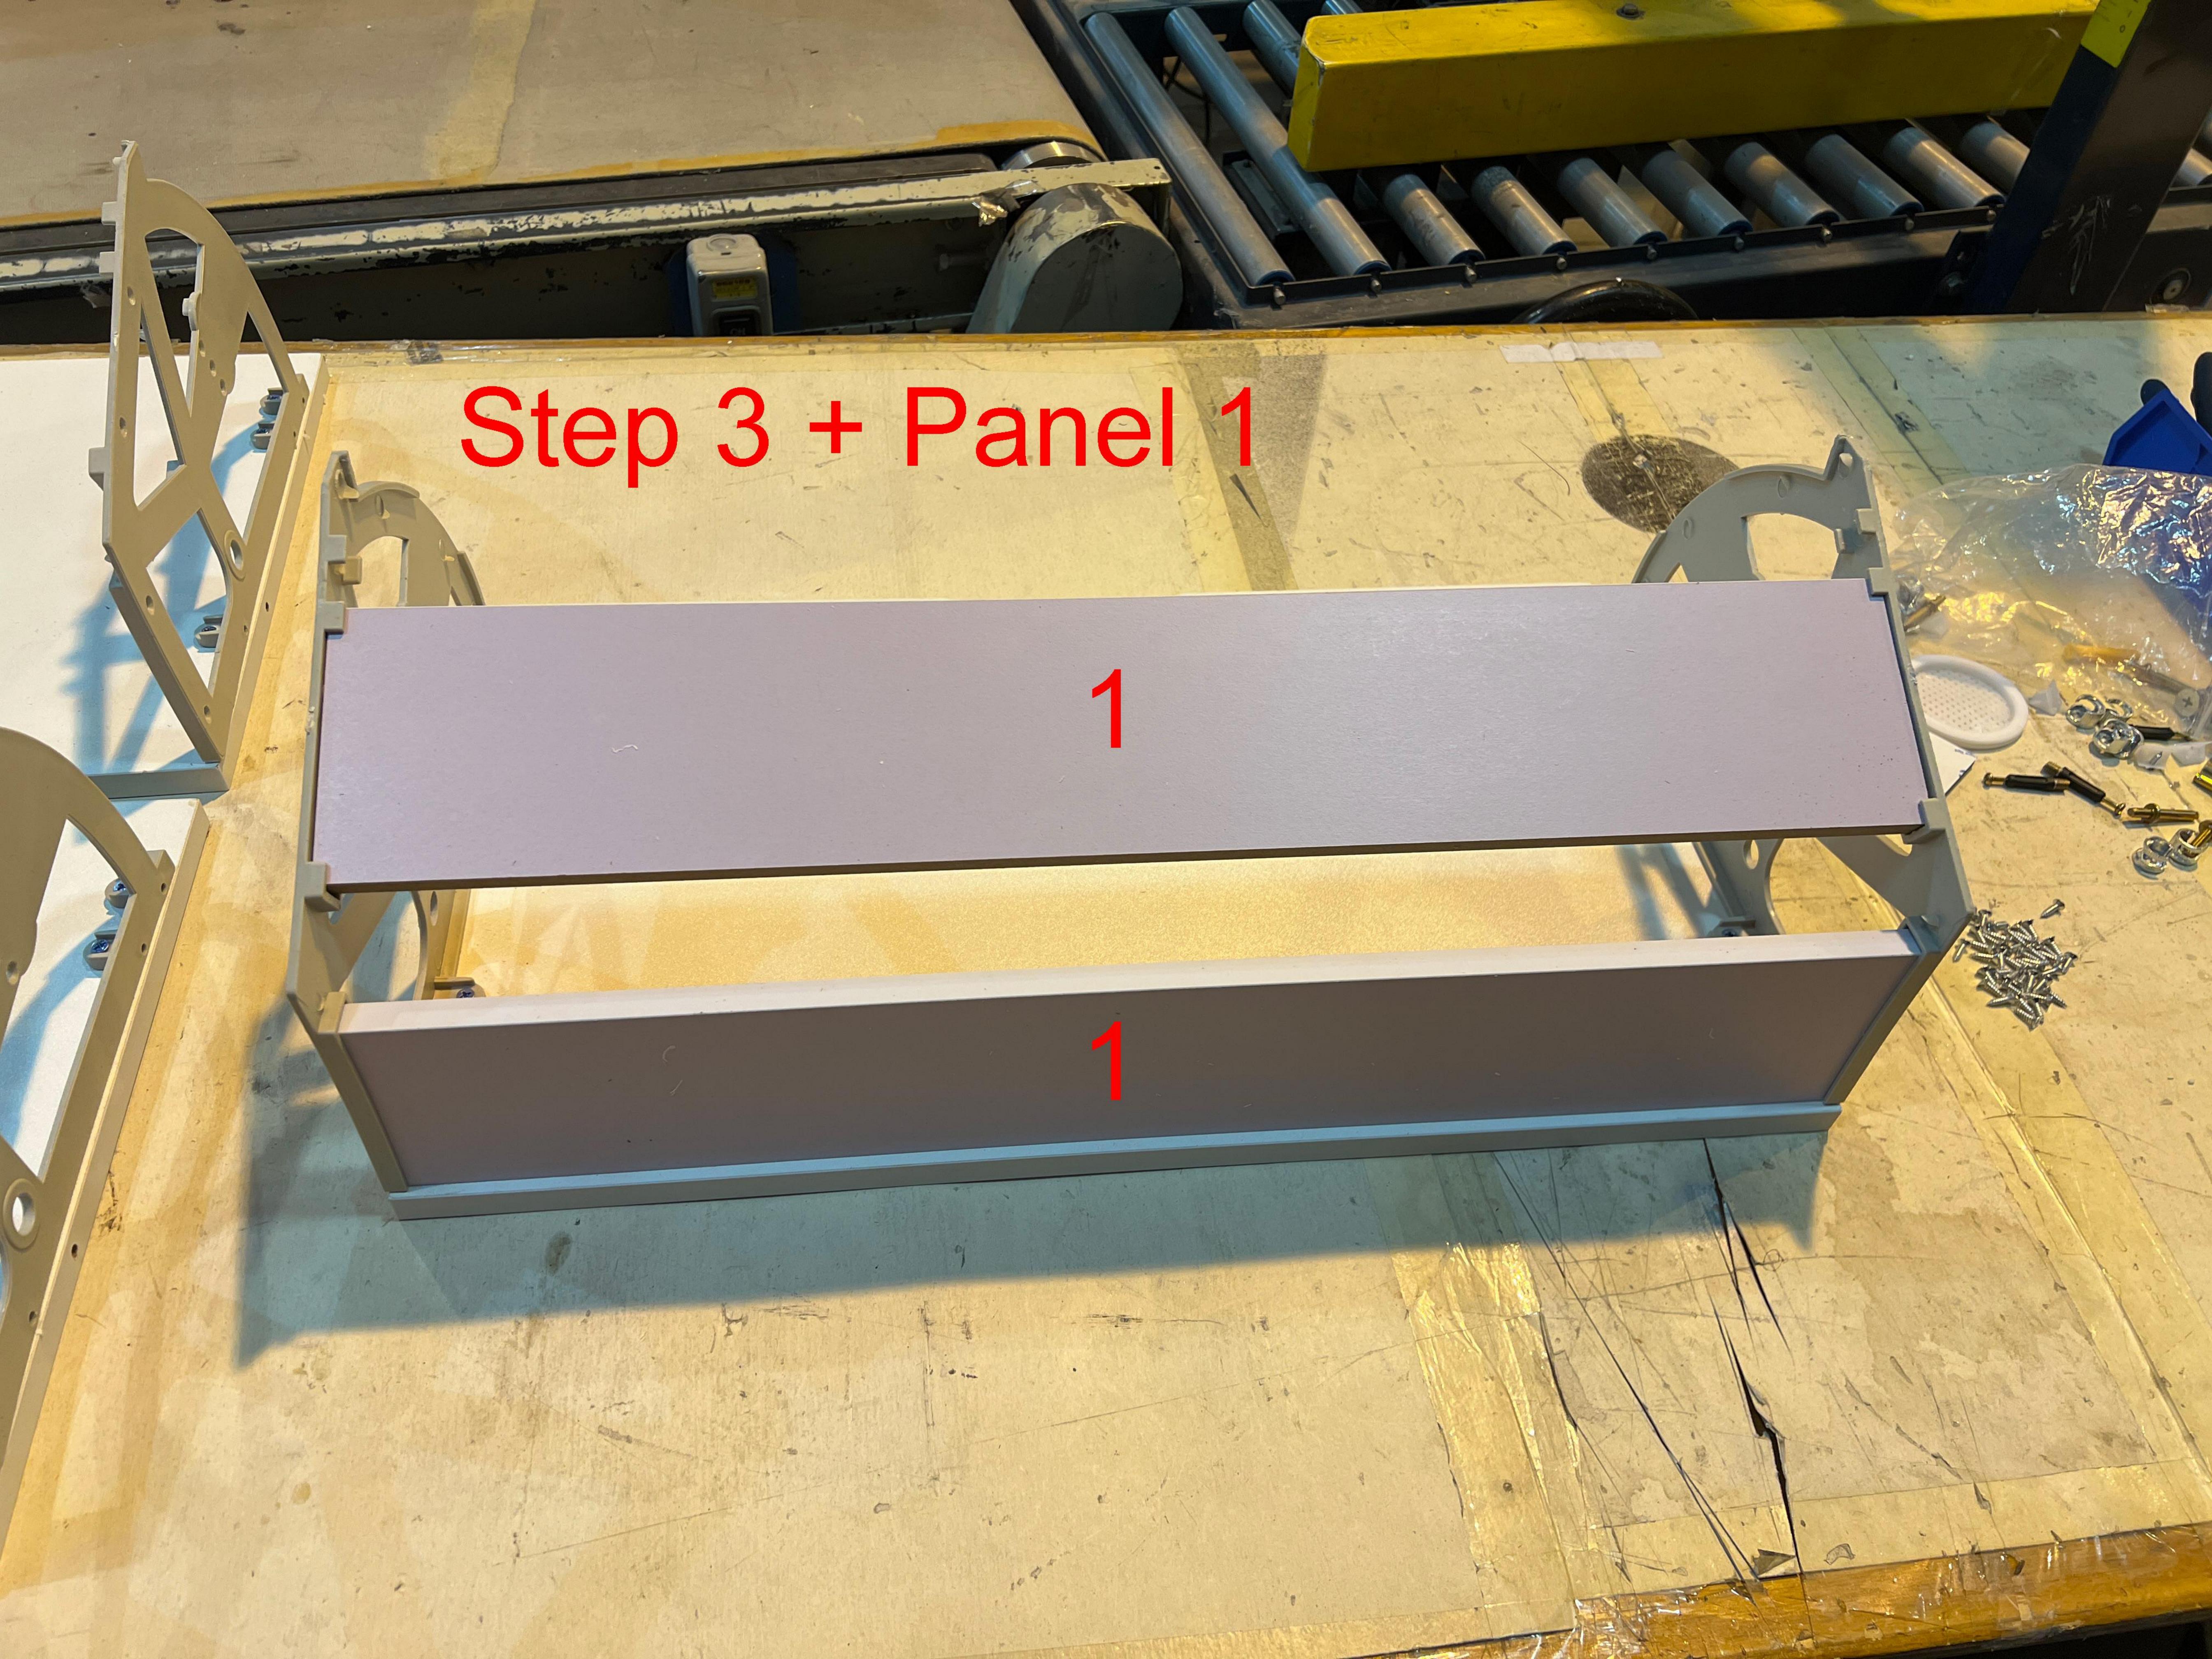


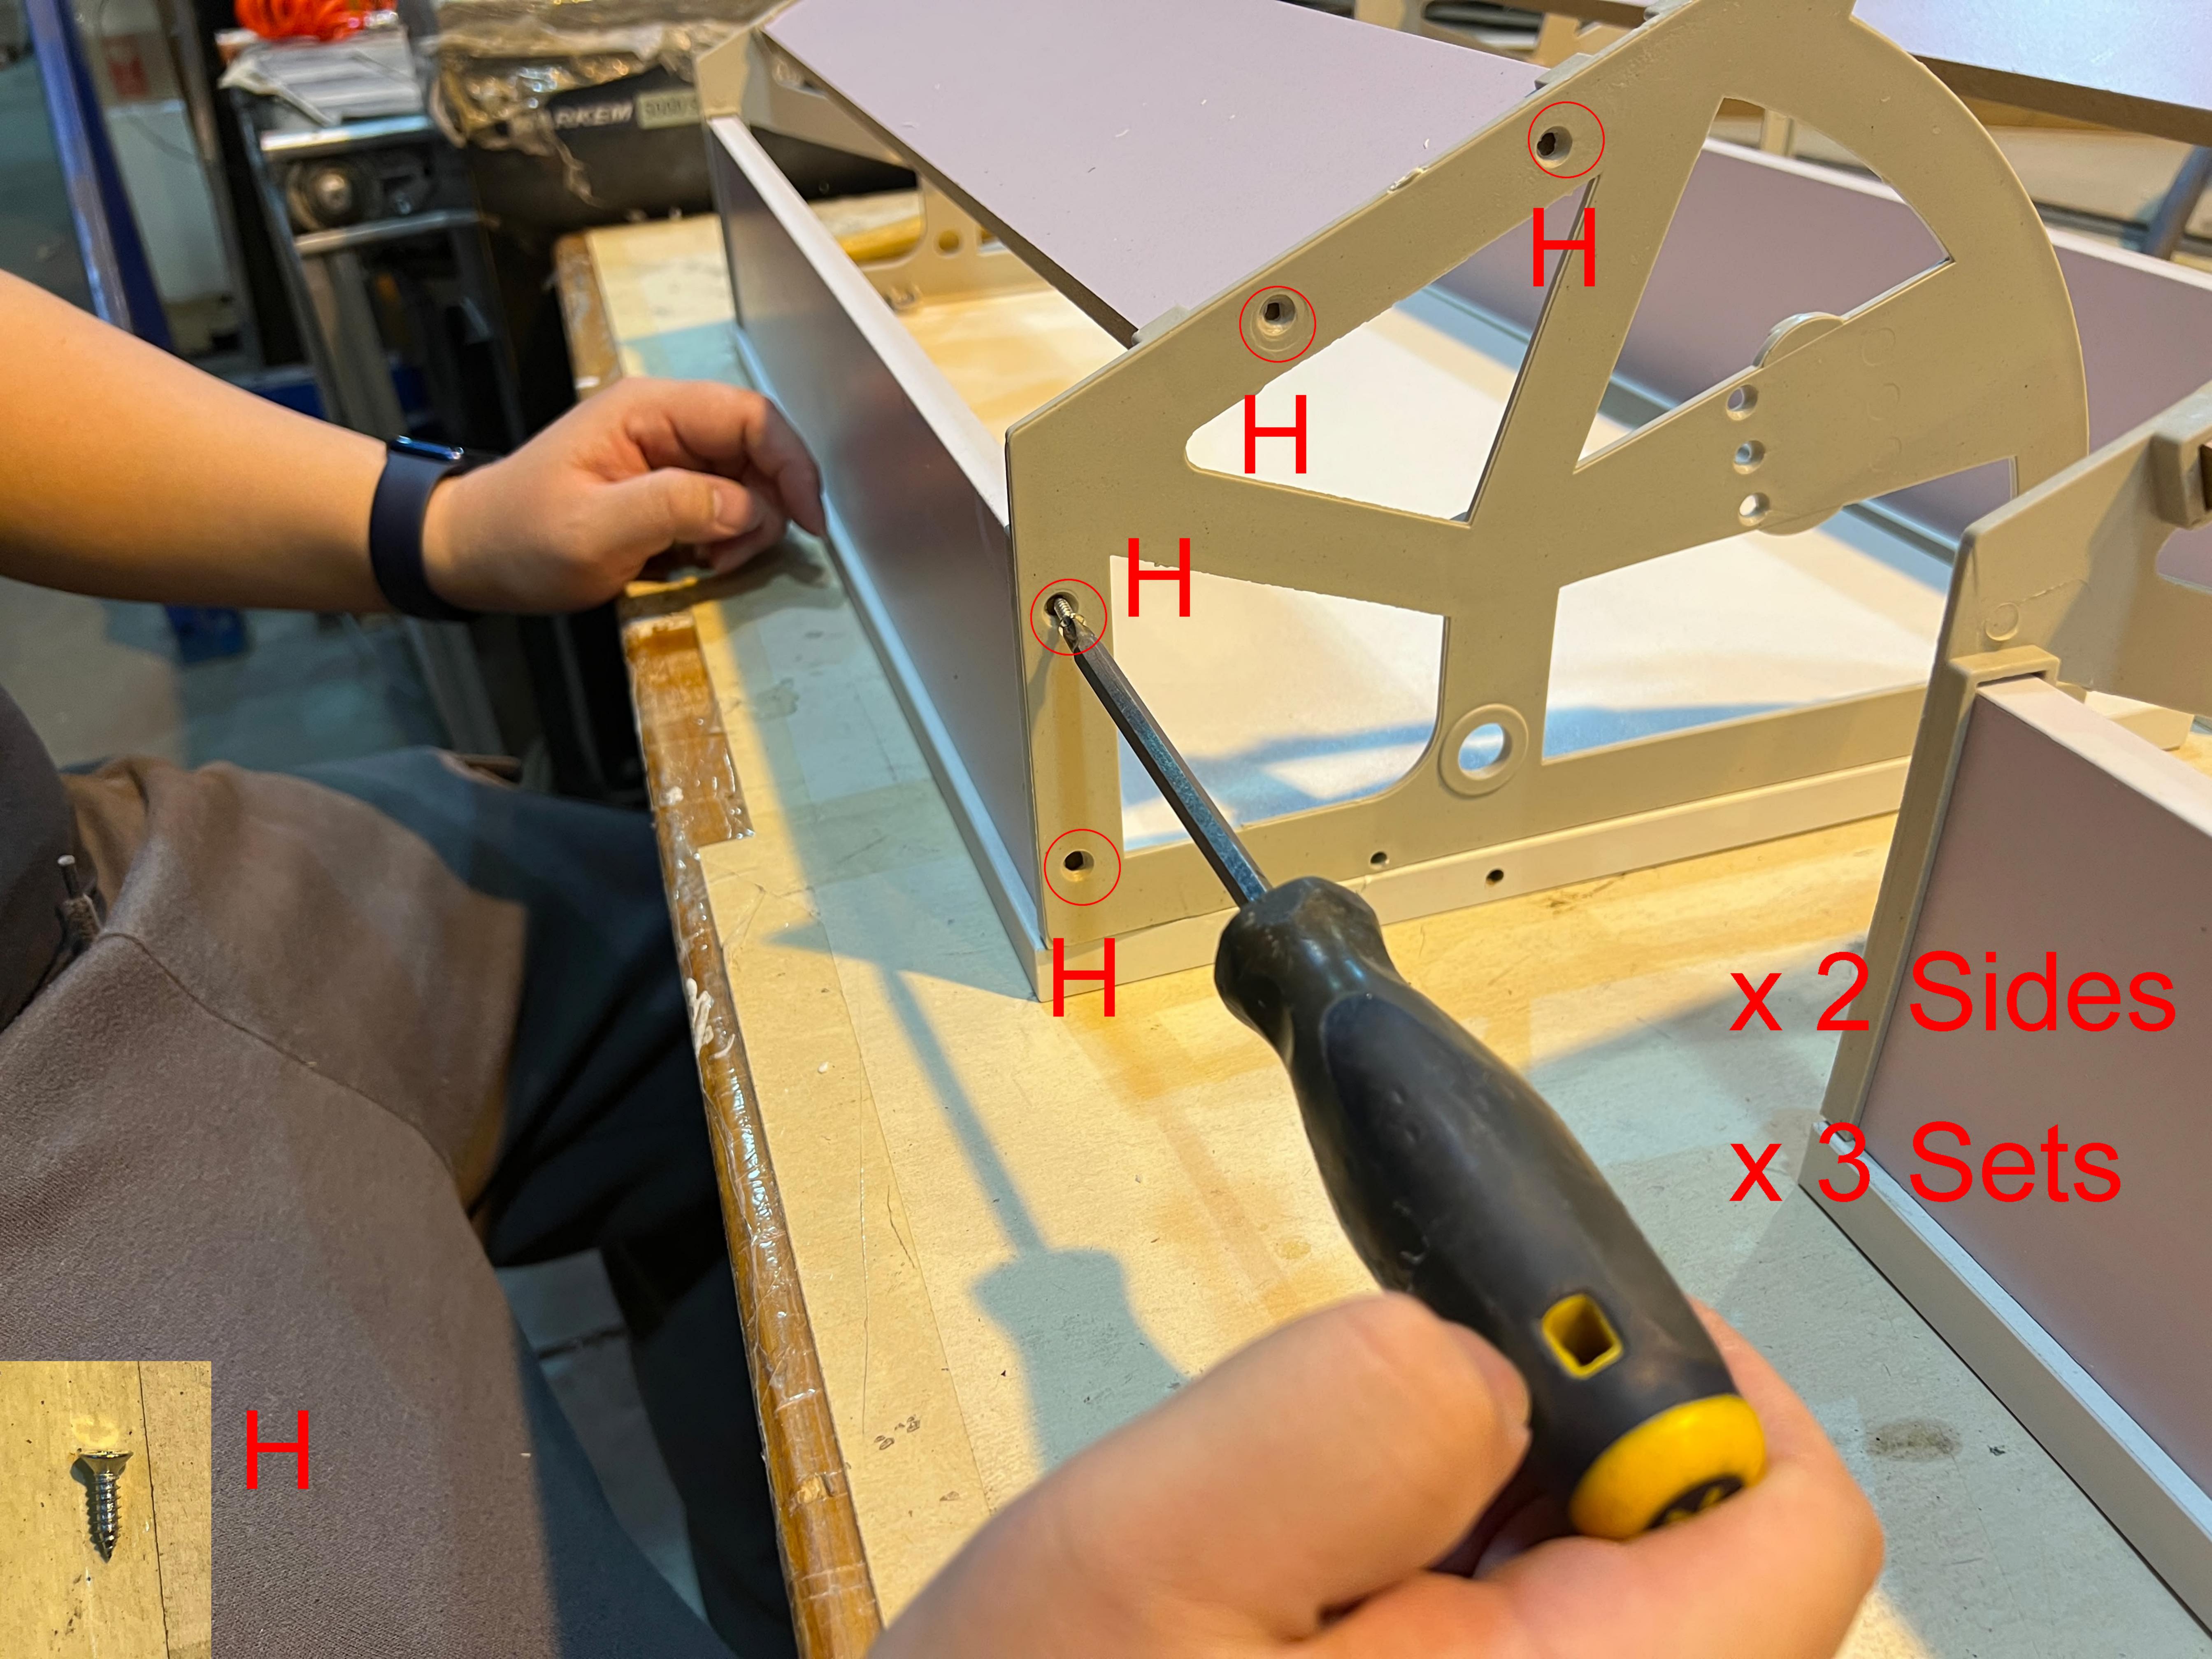

If a middle shelf is needed, you can add Panel 1 into the groove in the middle section. The groove has three adjustable levels, allowing you to choose the desired height. Secure the shelf in place on both sides using Component H.



Note: Insert the longest end of F into both sides of the tilt-out compartments. Repeat this process for all three tilt-out compartments.

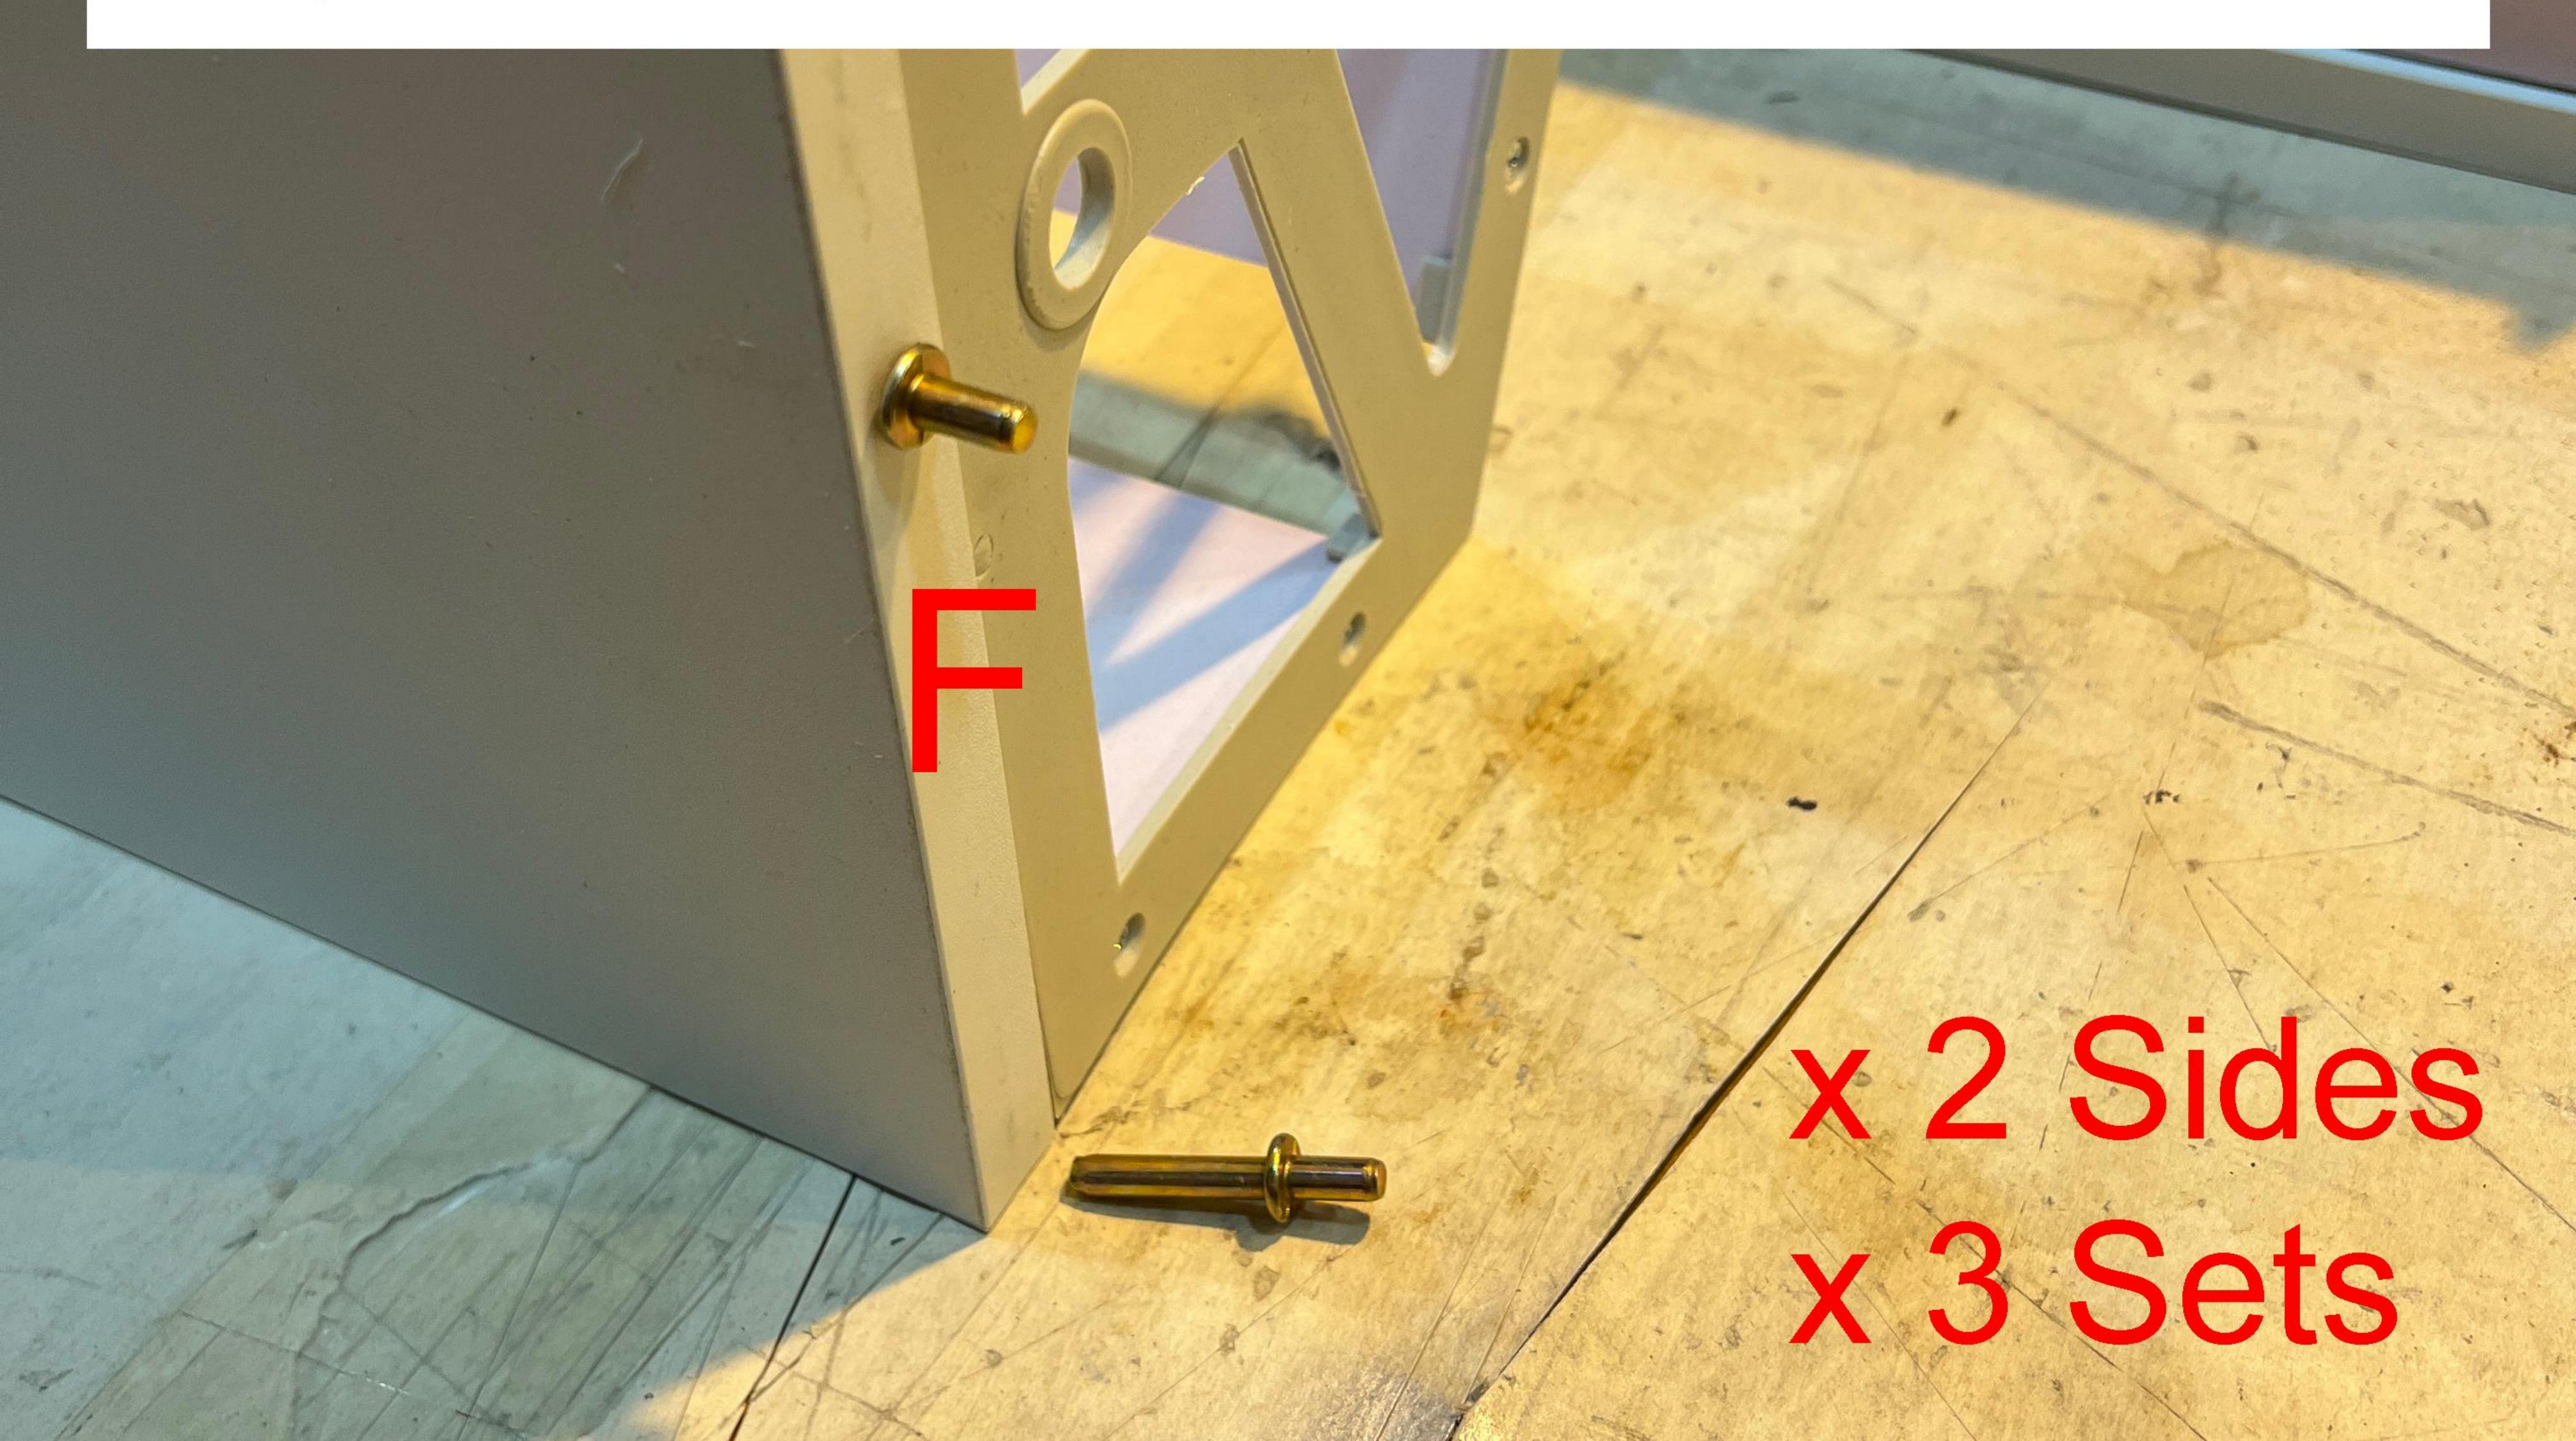



Note: Pay close attention to the orientation of panel 8 (right side)—front, back, left, and right. The side with component A marks the front of the shoe cabinet. Install all three tilt-out compartments from Step 6 onto the pre-drilled holes of panel 8 (right side) by using the short end of component F.

