

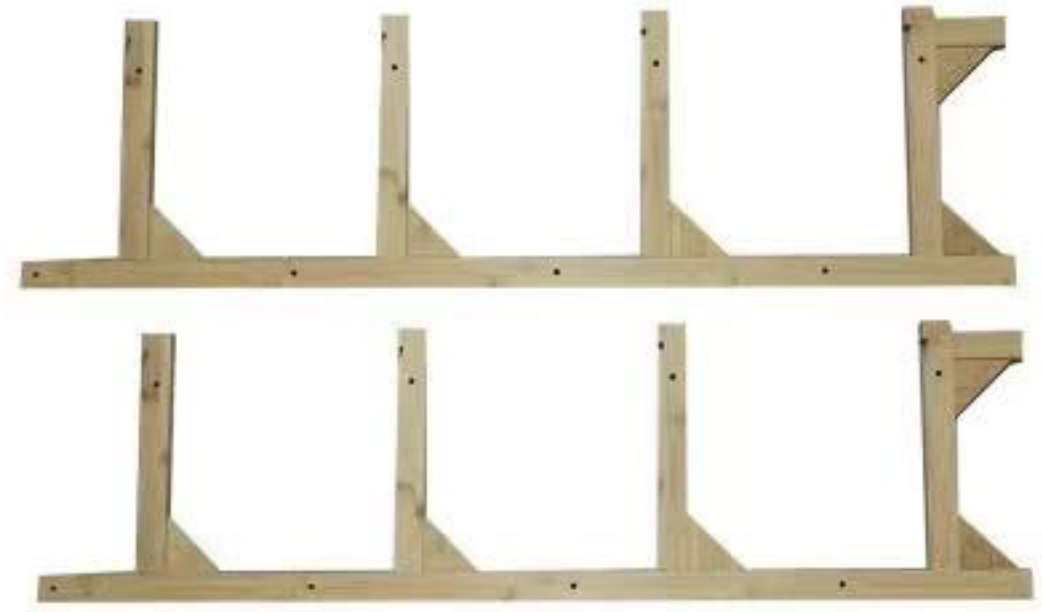


WCK002 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

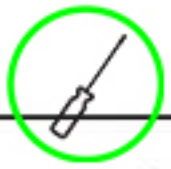

Bracket*2

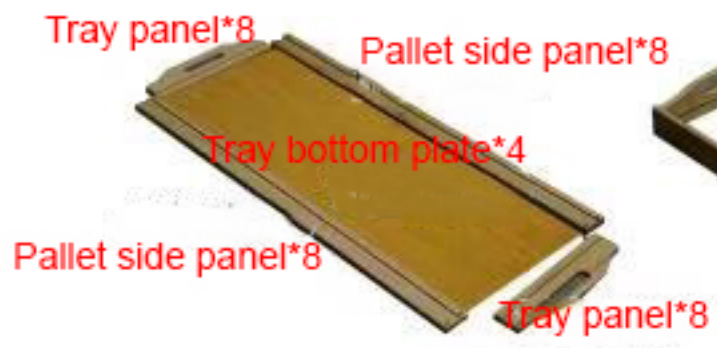

Balusters*8



Large hexagon socket screw



Small hexagon socket screws



Use small hexagon socket to fix the side panel and the panel. **When installing, pay attention to aligning the side panels with the panel grooves**

Insert pallet base

Fasten the drawer front. Use small hexagon socket screws to fix both sides of the panel



Align the two brackets

Use large hexagon socket screws to install the retaining strips in the holes at the bottom of the bracket. Continue to install the retaining strips in the holes at the rear of the bracket.



Use the large hexagon socket screw to continue to fix the bar upwards



Then fix the front and rear bars



Fasten the front and rear bars at the top



Place the installed tray



The recessed position of the bracket makes it easy to insert into the tray. Installation is complete