


WS001


Installation Instruction

Simple composition (take the three-layer storage 50 long as an example)

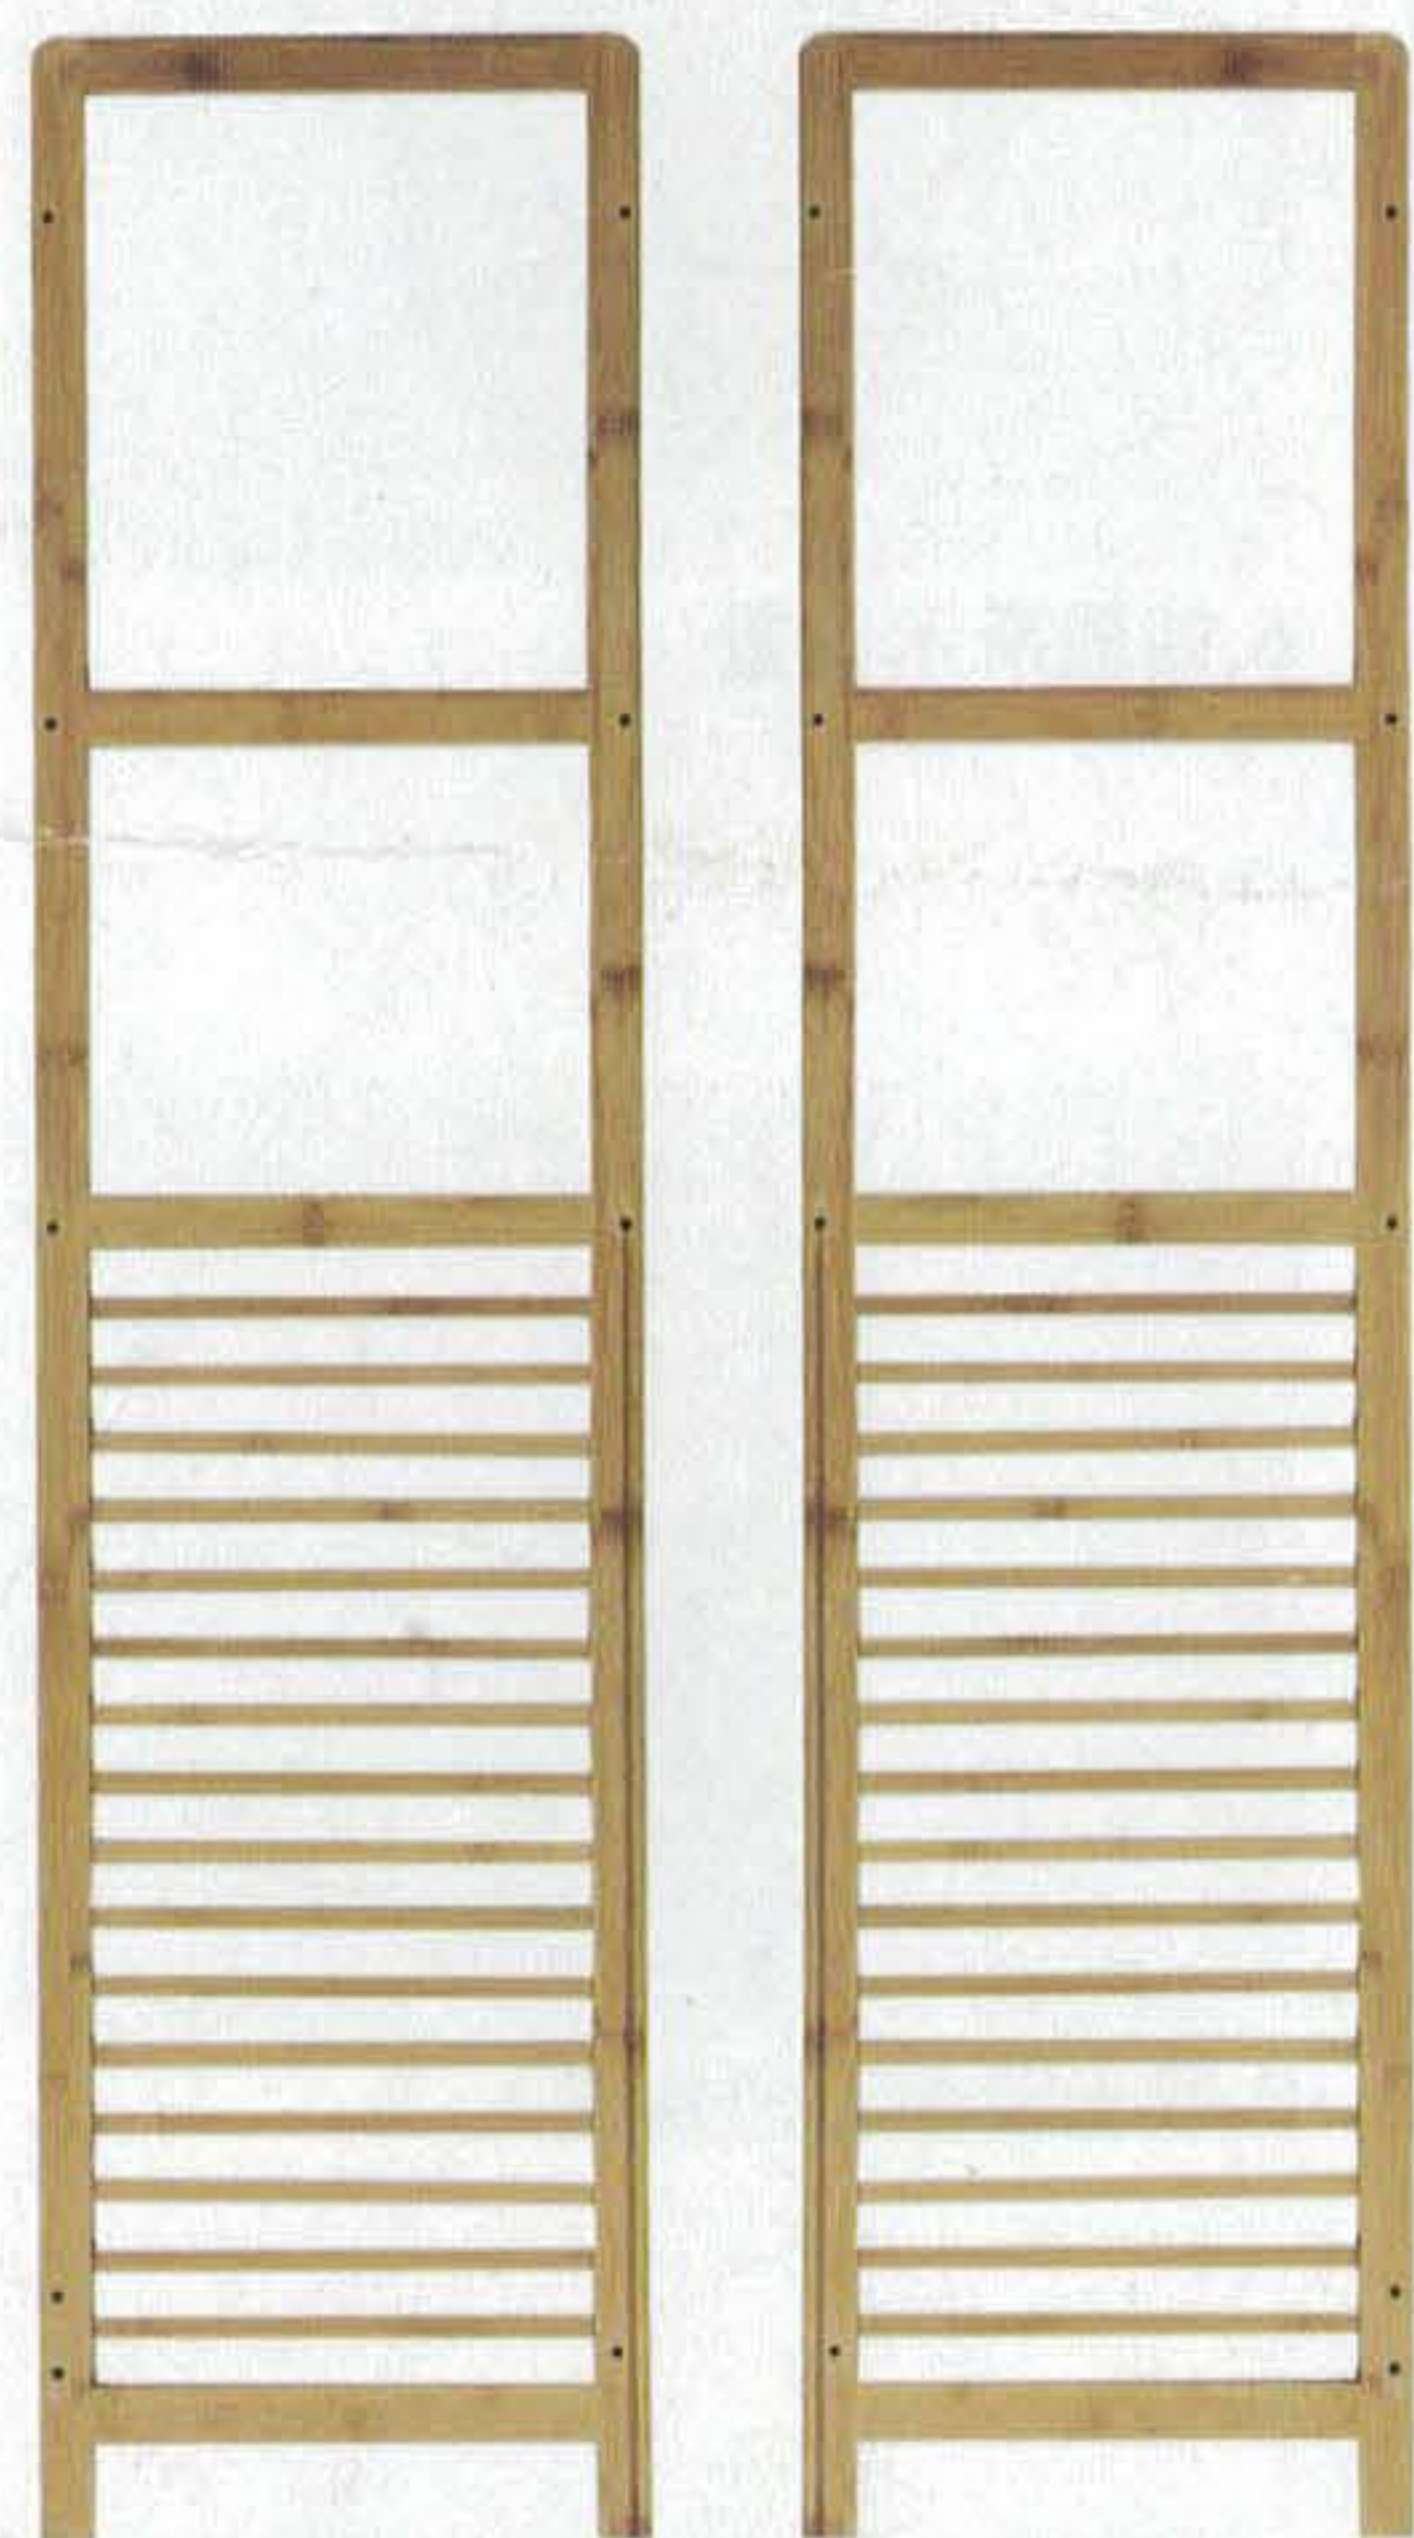

Side Bracket A x1

Side Bracket B x1

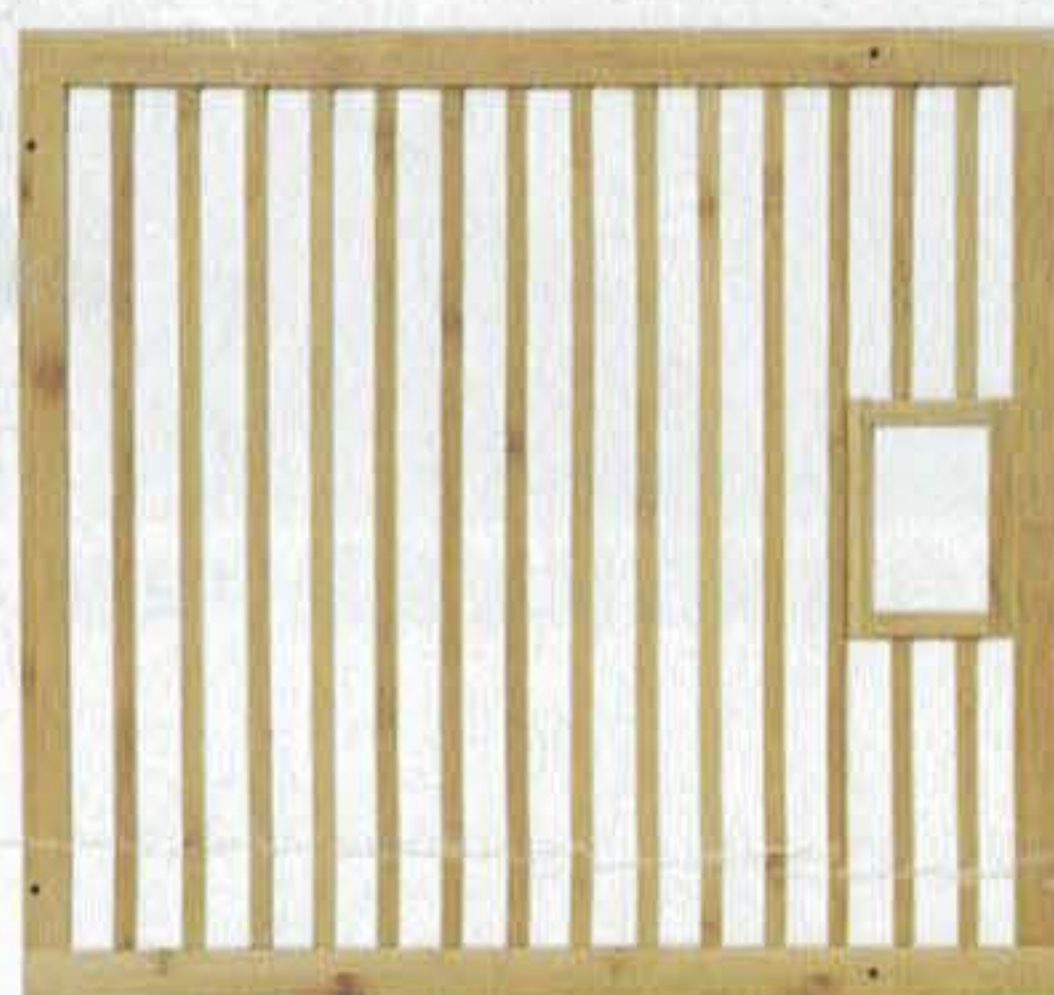

door panel x1



Ordinary laminate x3



Front rail x1




Rear bar x1 (with groove)




Side rail x2 (slope side)



Bottom shelf x1

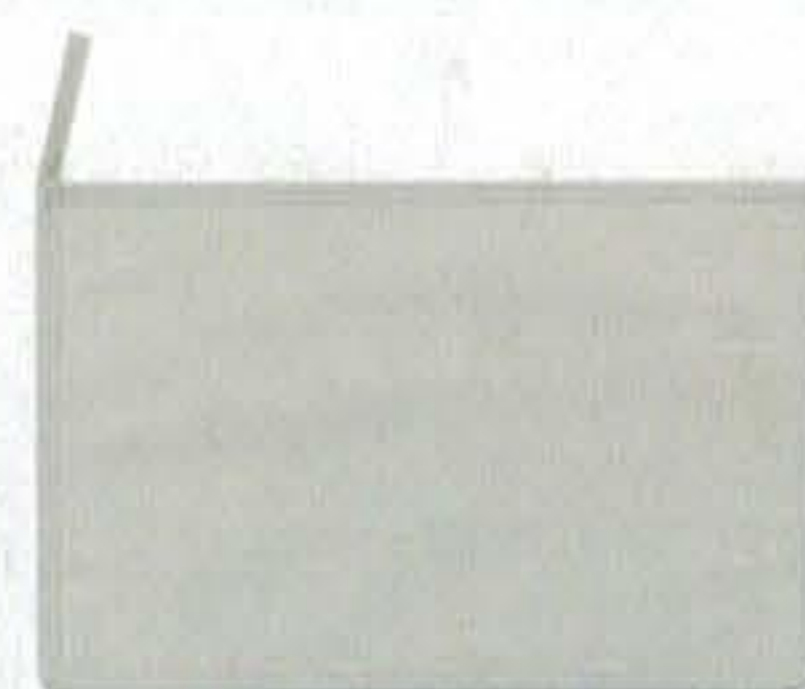

Storage bag bottom x1

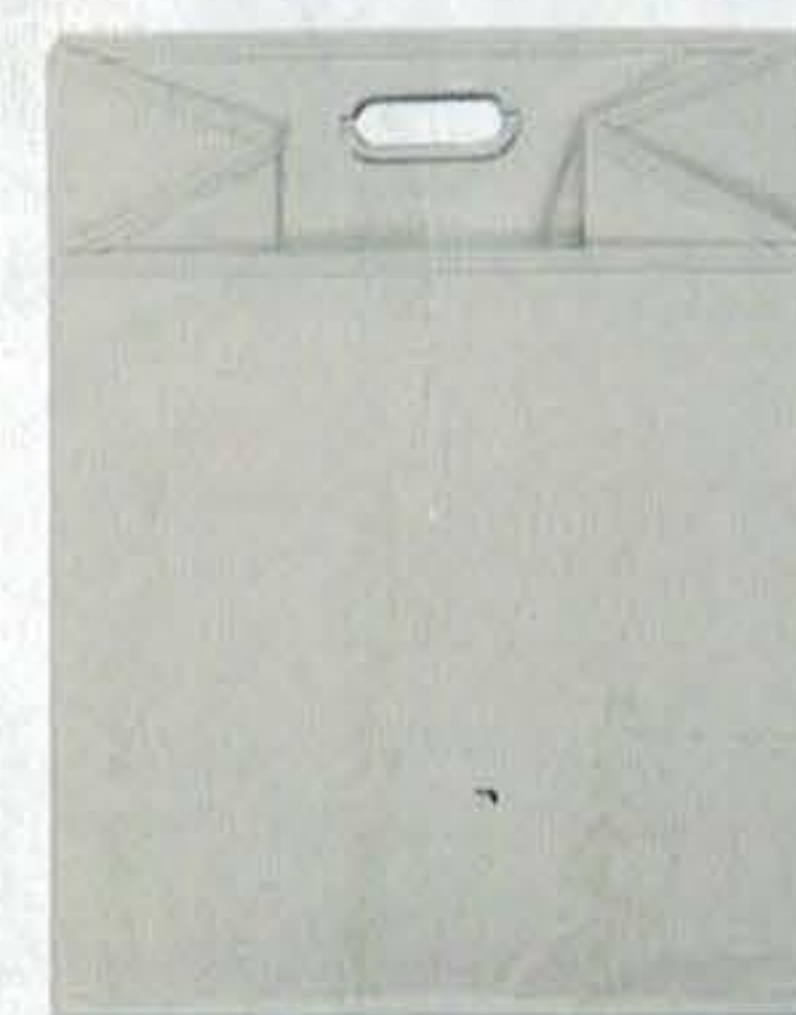

storage bag x1



Backplane x1




large screw



small screw




Metal strips

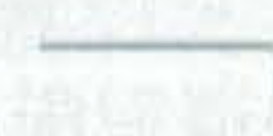

installation tool

start assembling

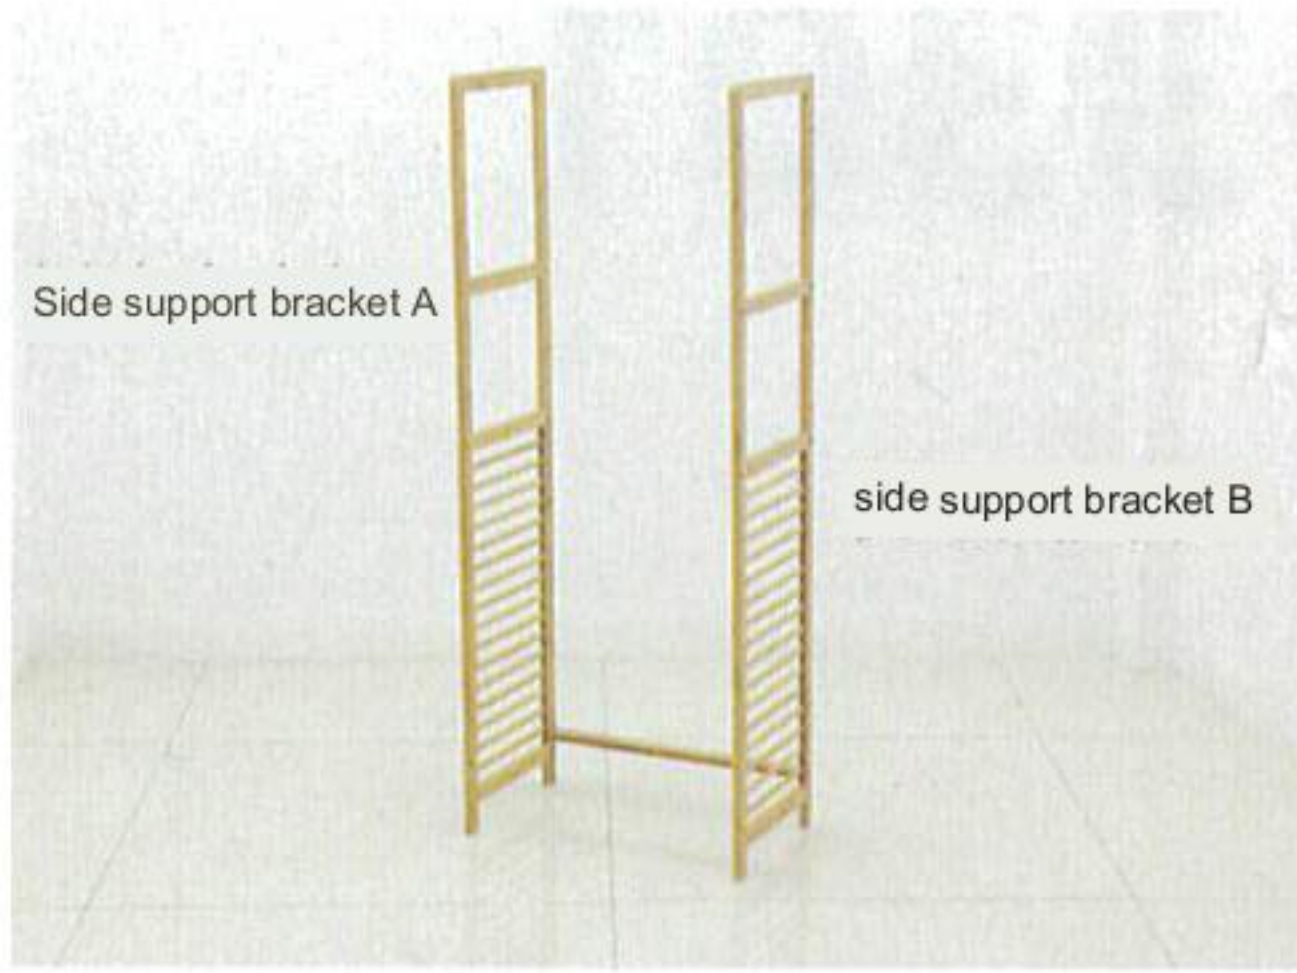

Side support bracket A

side support bracket B

1. Take out the side brackets A, B and the rear rail and install them with large screws (note that the grooves of the side bracket and the rail wire are aligned)



2. Take out the door panel and the bottom panel with small screws



3. Take out the side rail and install it with small screws

(Note that the beveled edge of the gear bar distinguishes the upper and lower sides)



4. Take out the metal strip and insert it at the bottom of both ends of the door panel



5. Take out the metal strip and insert it in the middle of the side rail



6. Position as shown in the picture



7. Then the metal strip snaps into the side branch as shown in the picture



8. Take out the front rail and install it with large screws



9. Take out the back panel and insert it along the groove

shelf



10. Take out the ordinary laminate and install it with large screws



11. Take out the storage bag and the bottom of the storage bag



12. Finally put the storage bag into the shelf