


SOCE005 90CM Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.



Sponge layer × 1

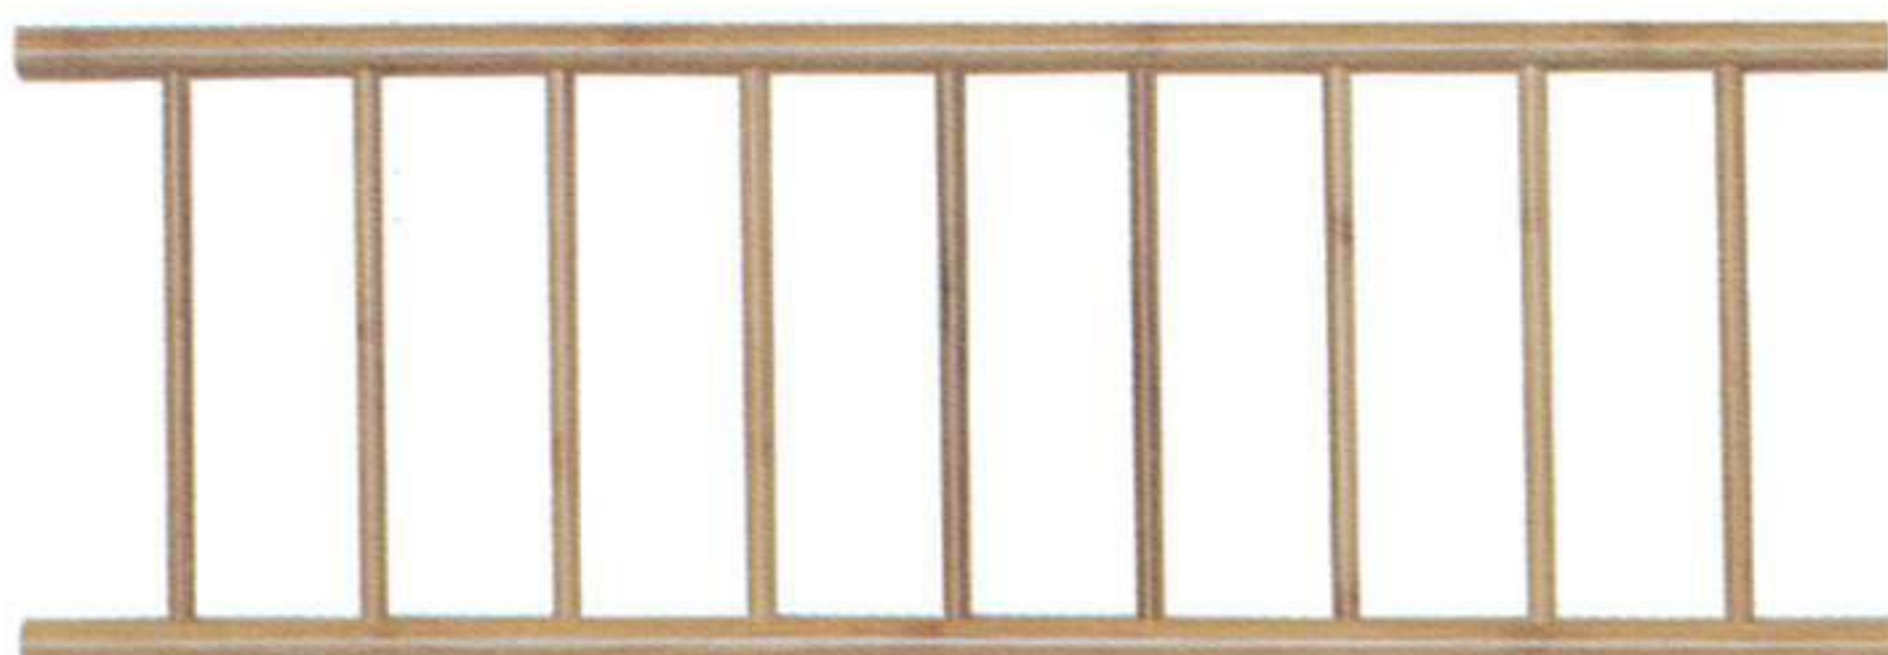

First layer of board × 1

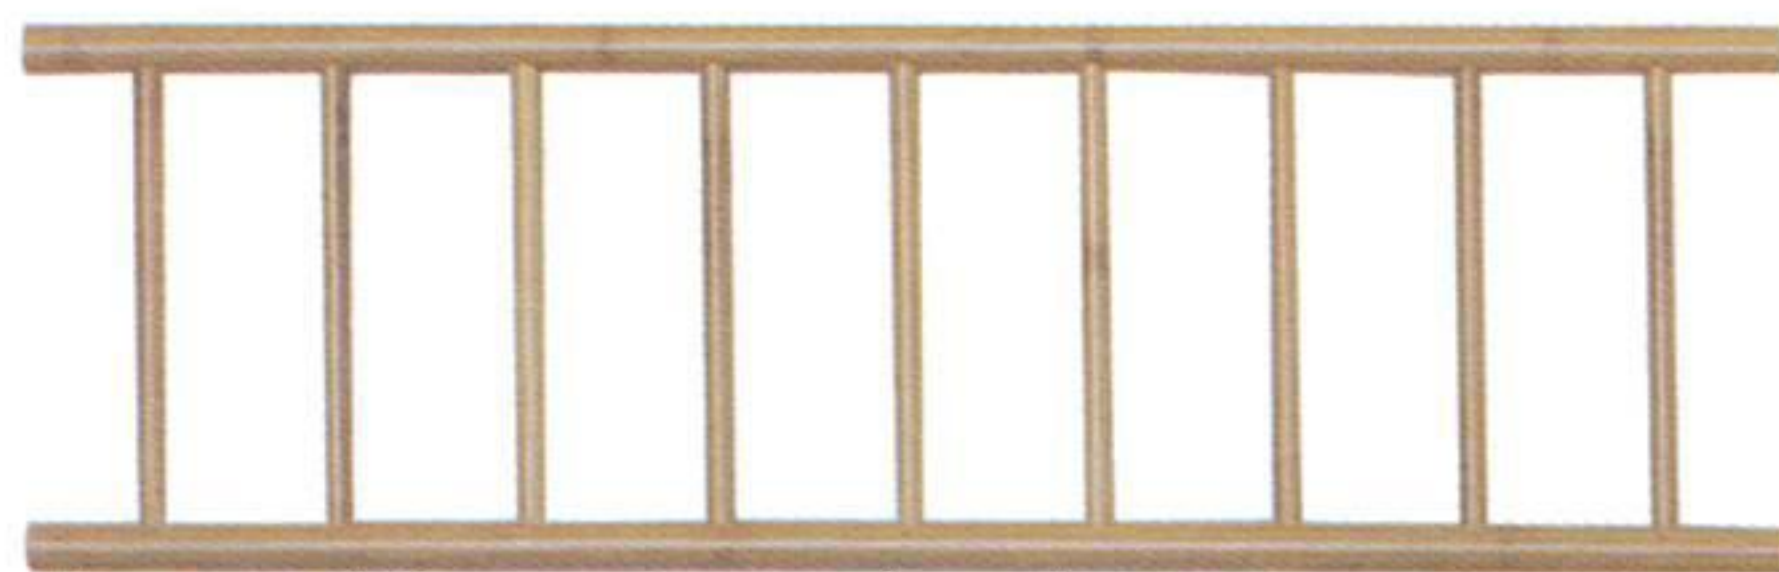

Second layer board × 1



Baffle × 1



Shelf stop A × 1 (with groove)



Shelf stop bar B × 1



Stool legs × 2



Horizontal bar × 1
(only available in large size)



Hinge



Gasket



Installation
tools



Large
screw




Small
screw

Start assembling



1. Take out the shelf bar B and install the horizontal bar with large screws.


2. Take out the shelf bar A and install it with large screws (note that the grooves of the shelf bar are aligned)

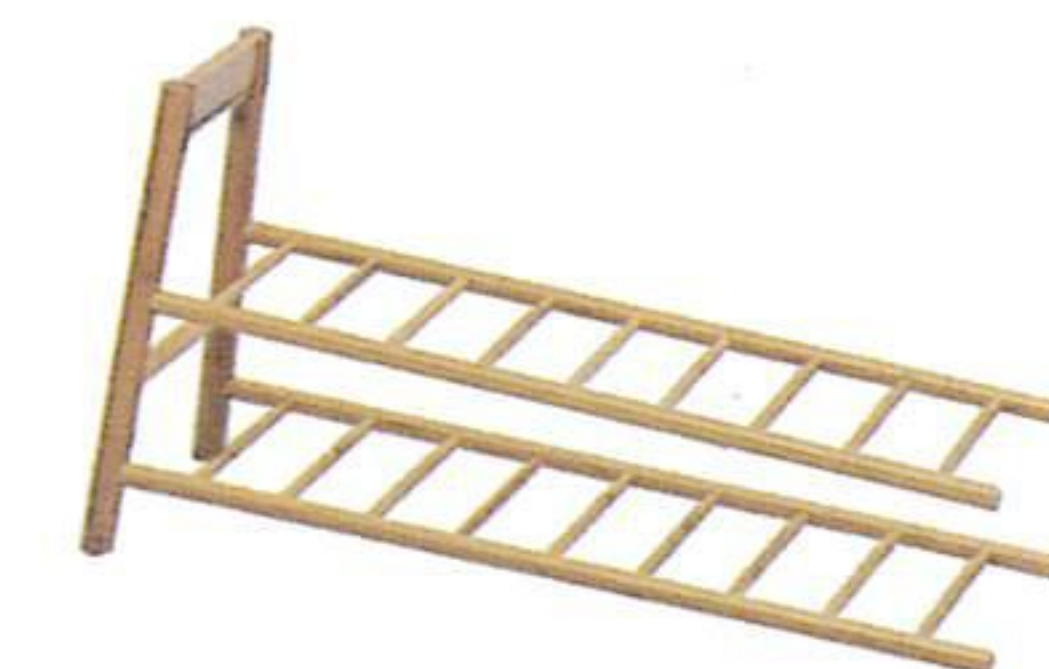

3. Find stool legs and install the first and second layers with large screws




4. Find shelf stop bar A&B and install it with large screws

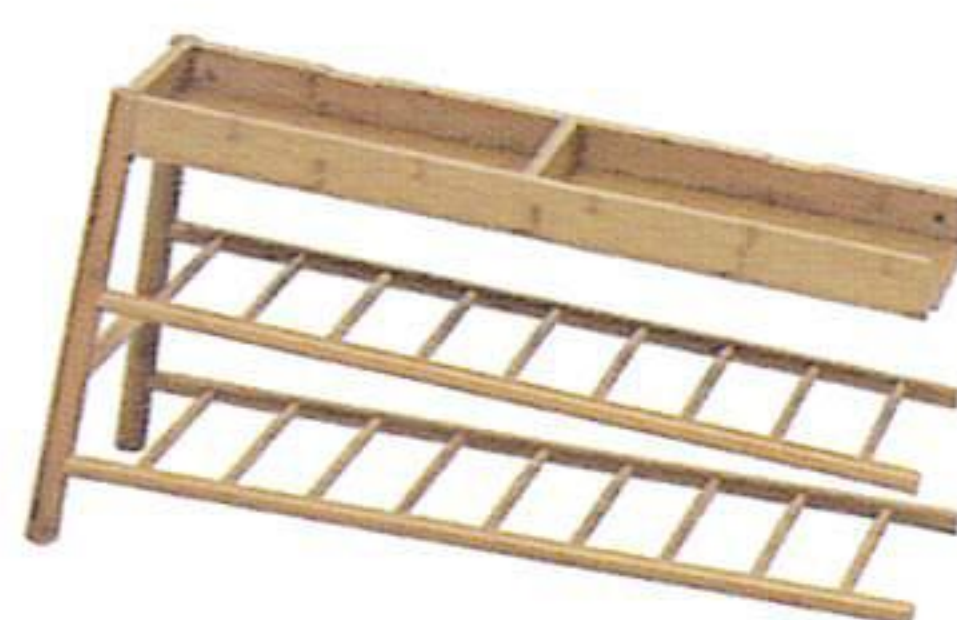

5. Insert baffle along the groove of the shelf stop bars



6. Install another stool leg with large screws

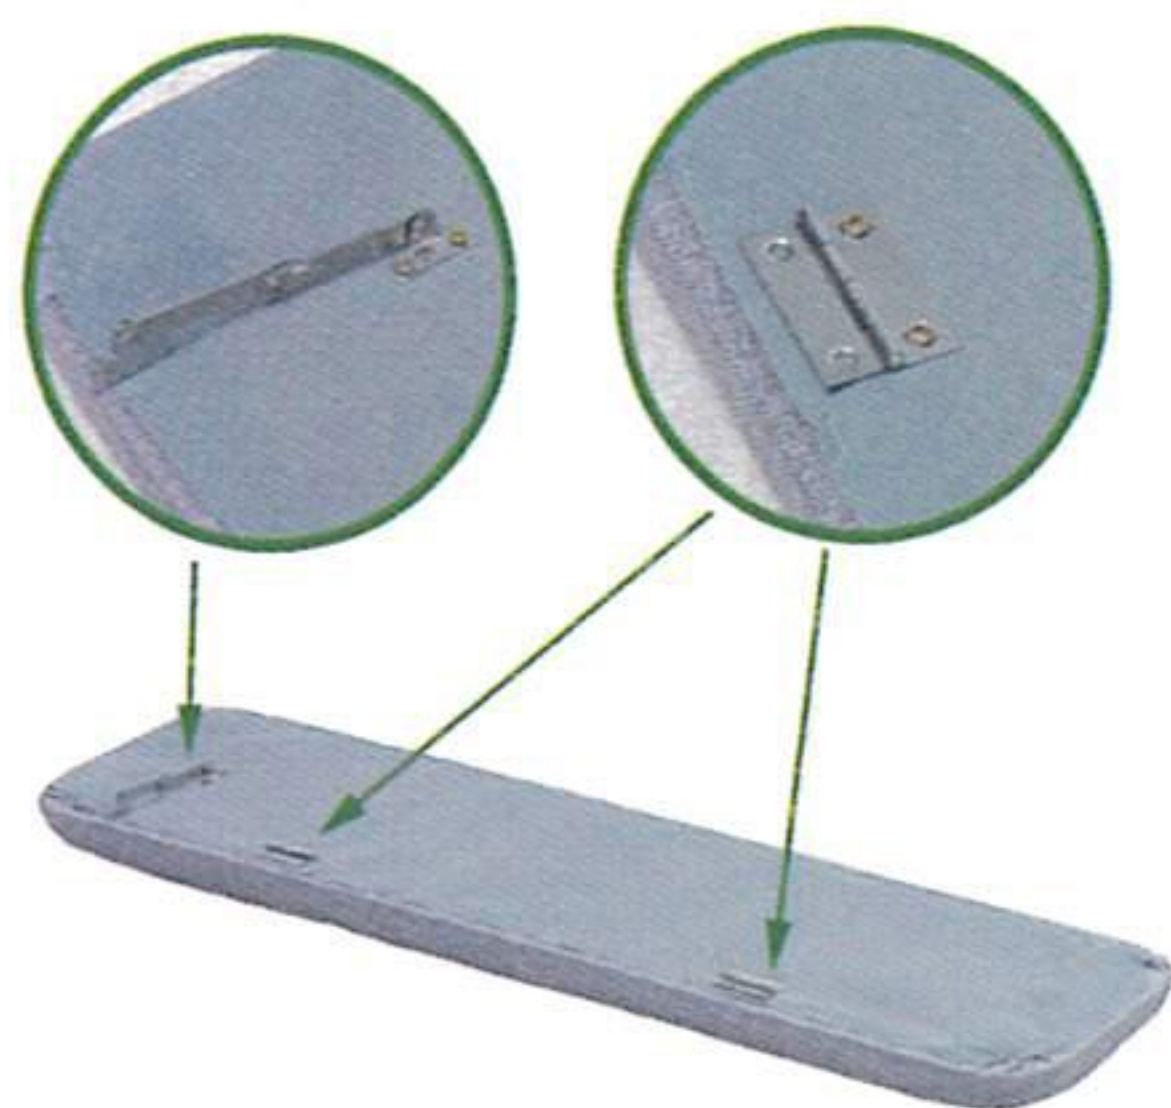

7. Take out the sponge layer and hinges, and install the gasket on the back of the sponge layer with small screws



8. Fix the hinge to the stool foot with small screws, and fix the gasket to the shelf bar A with small screws.



9. Finally close the sponge layer! Installation is complete!