



WCK008 Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

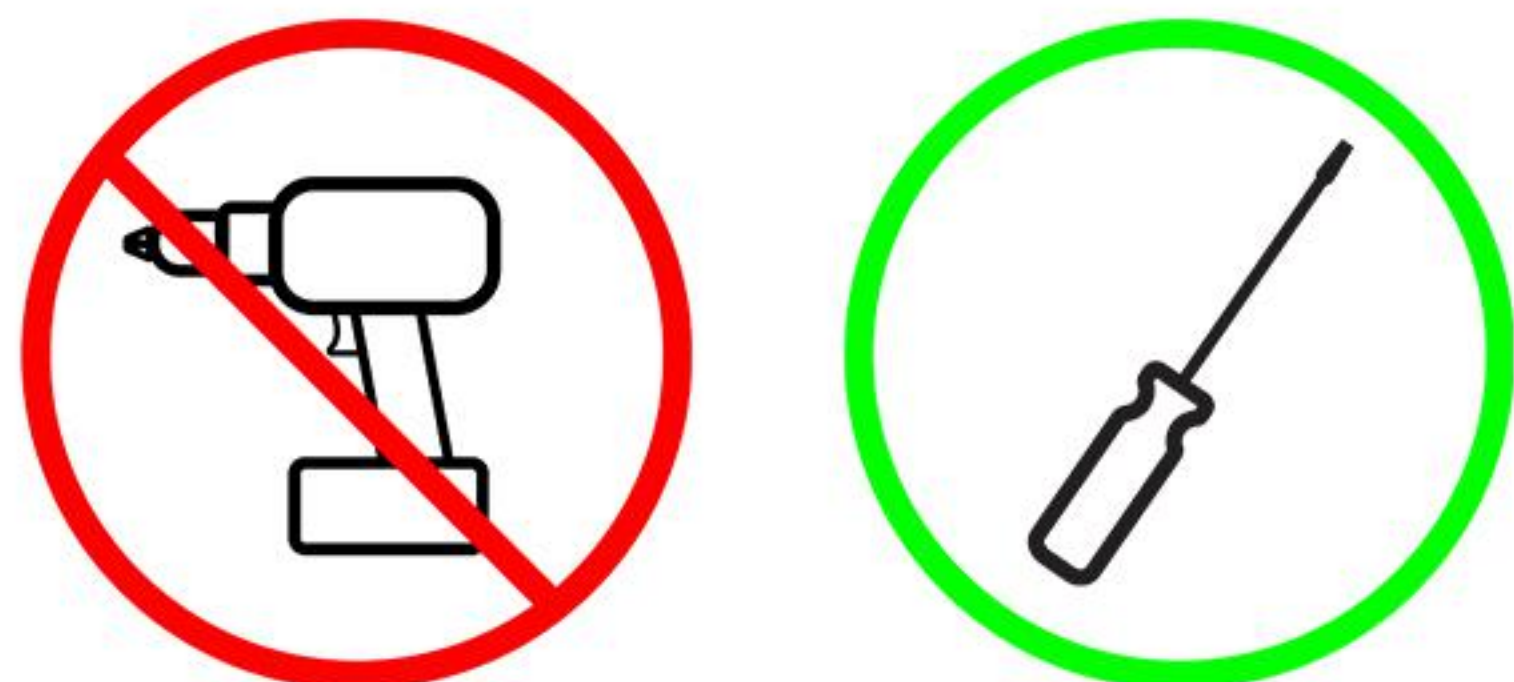


The accessories list takes the original color transparent door 4 layers as an example

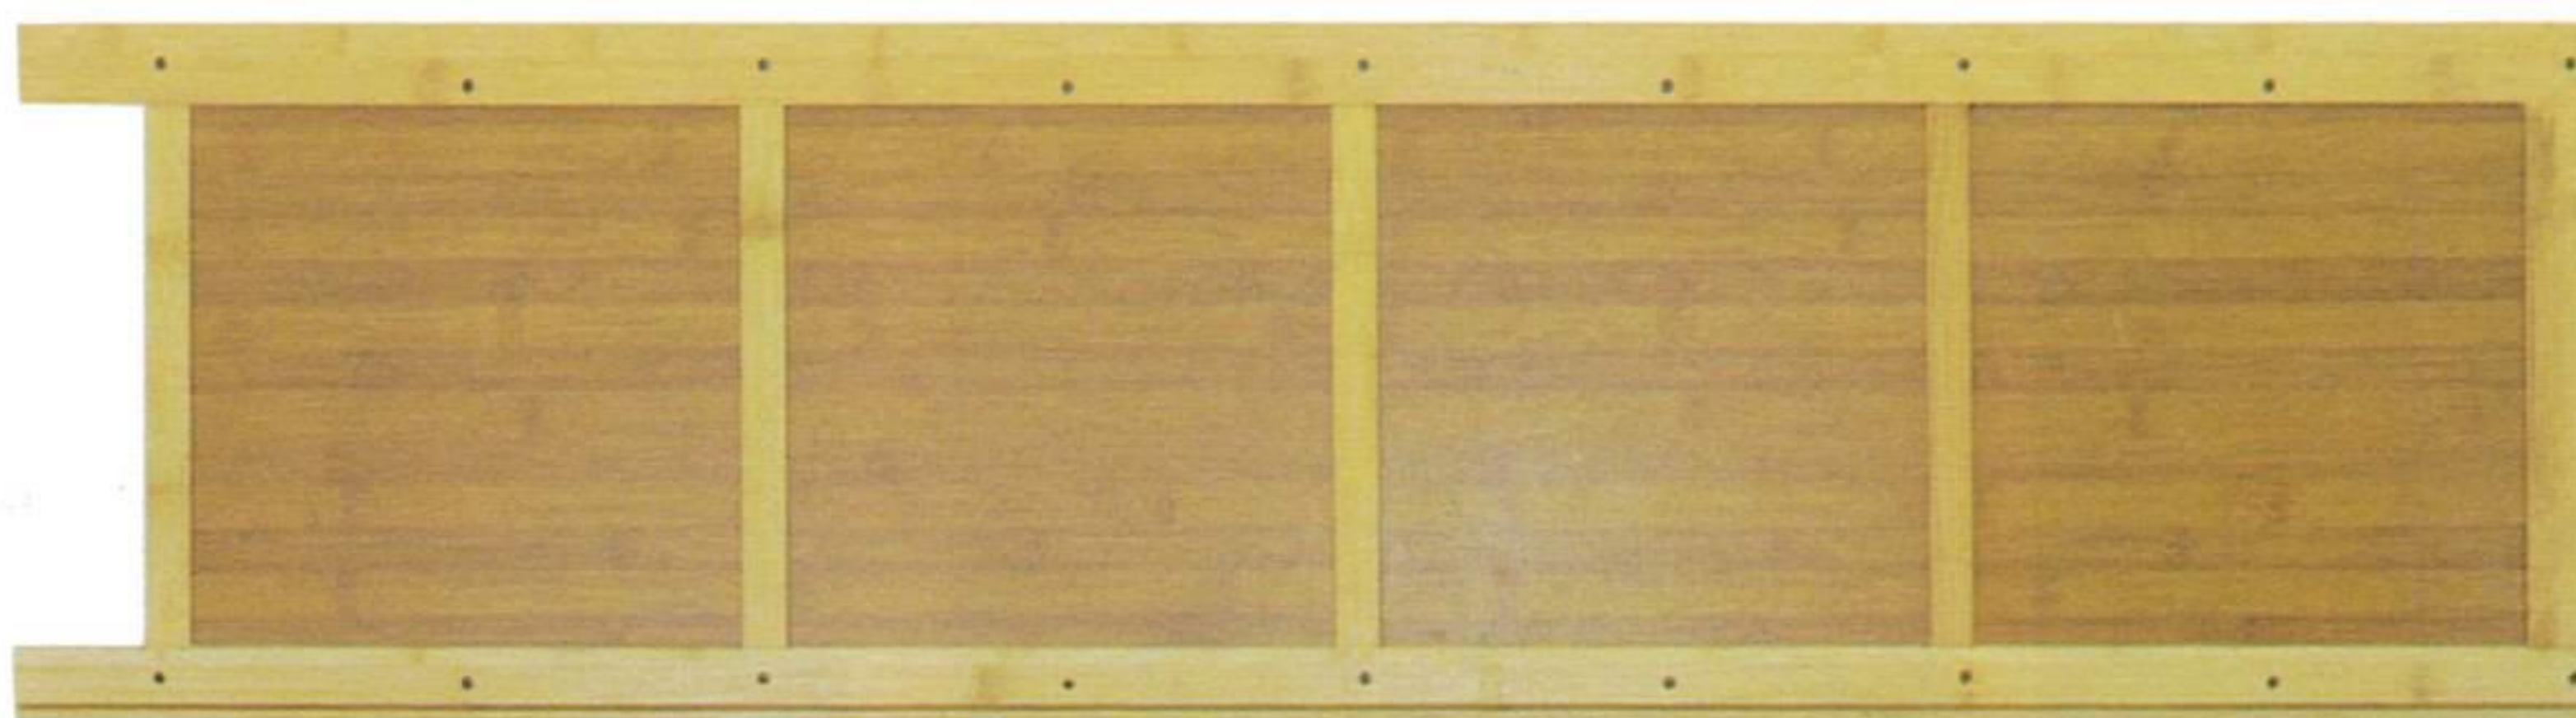


Side bracket left x1

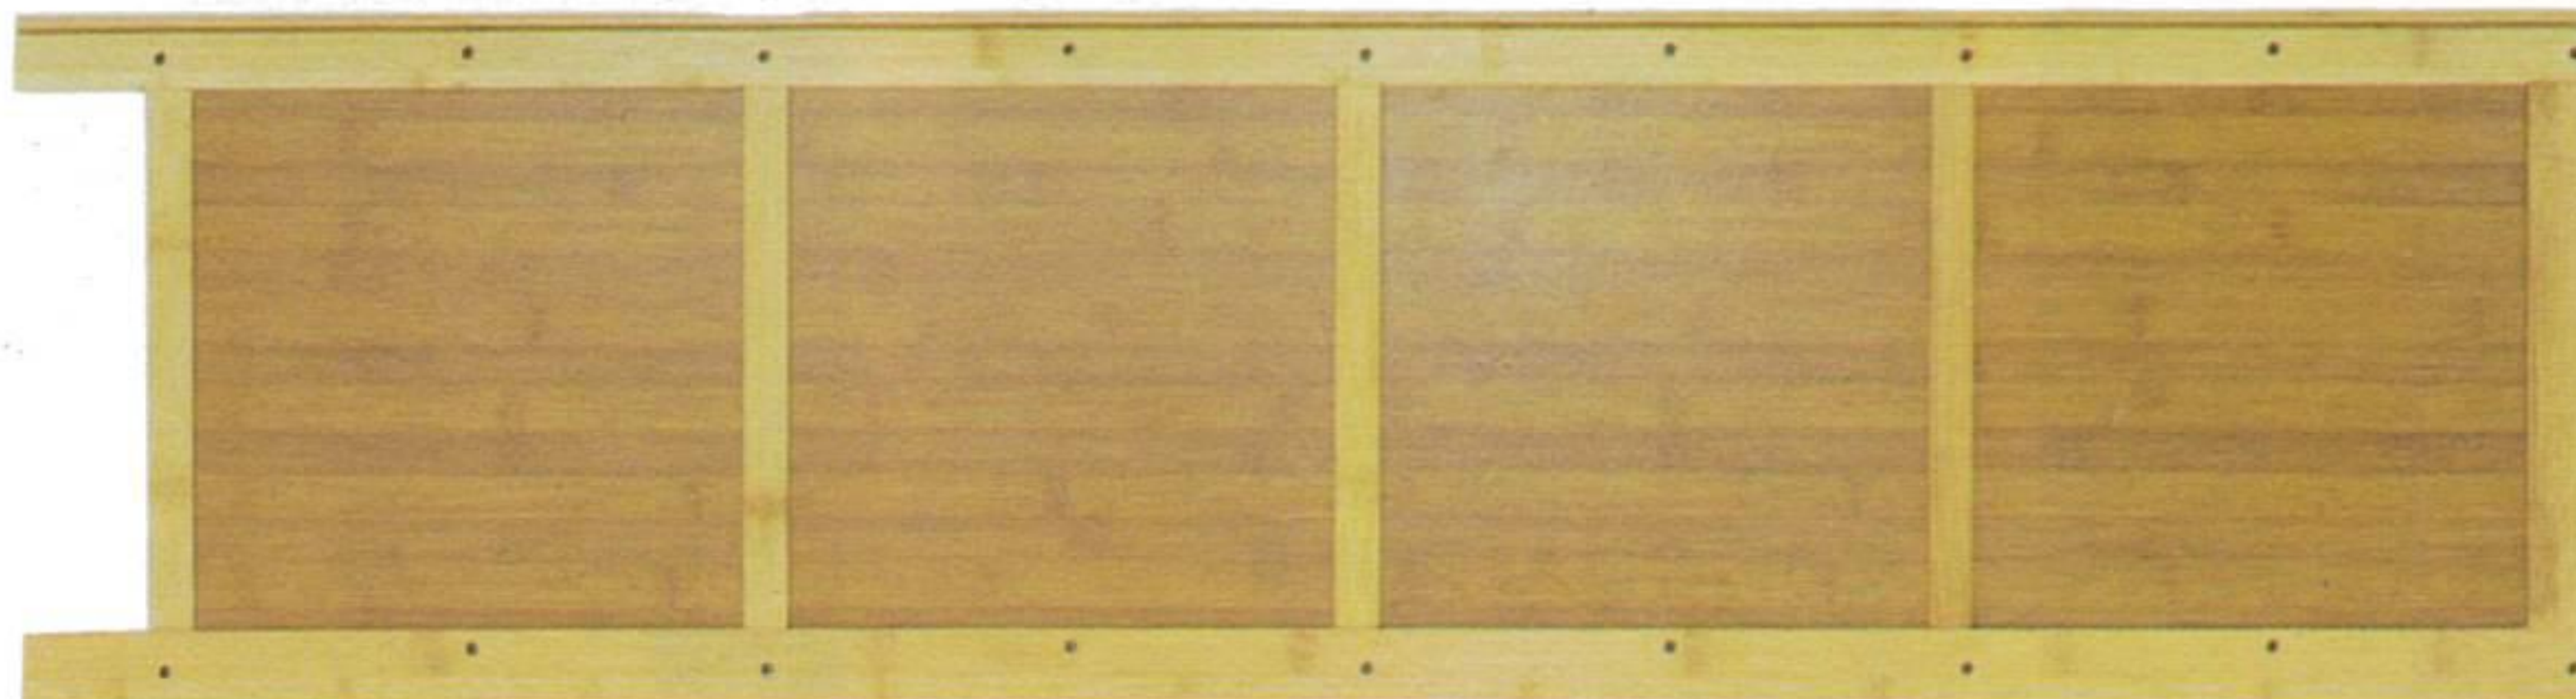

Side stand right x1

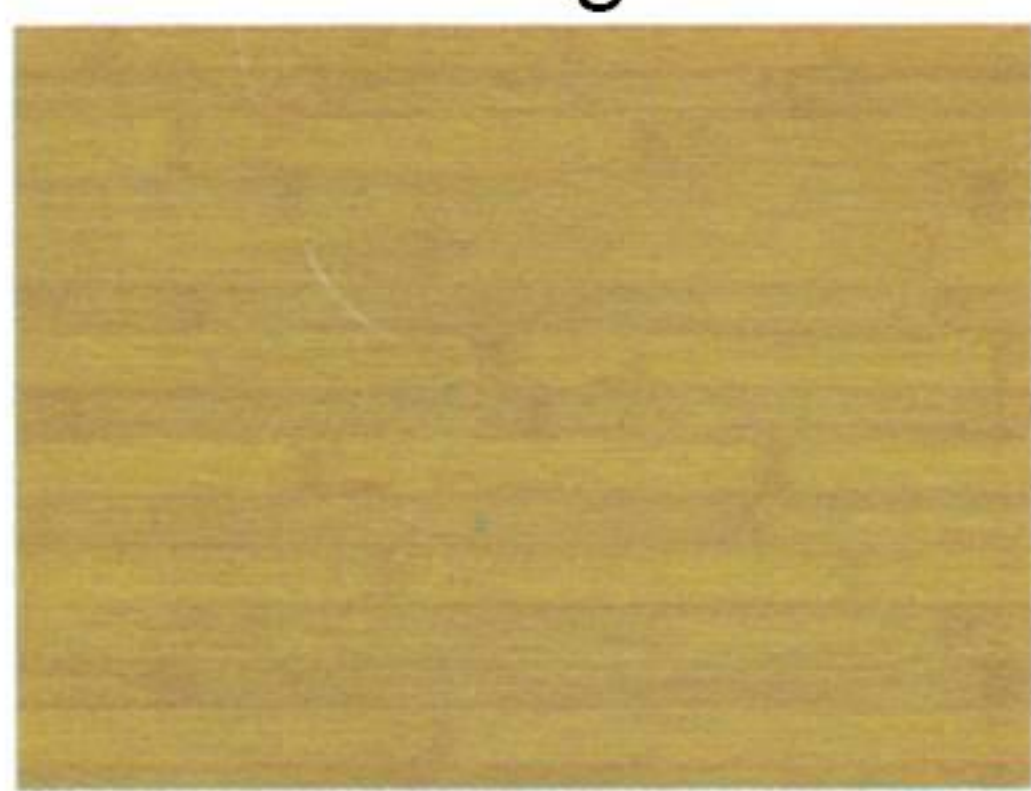

Backplane x4

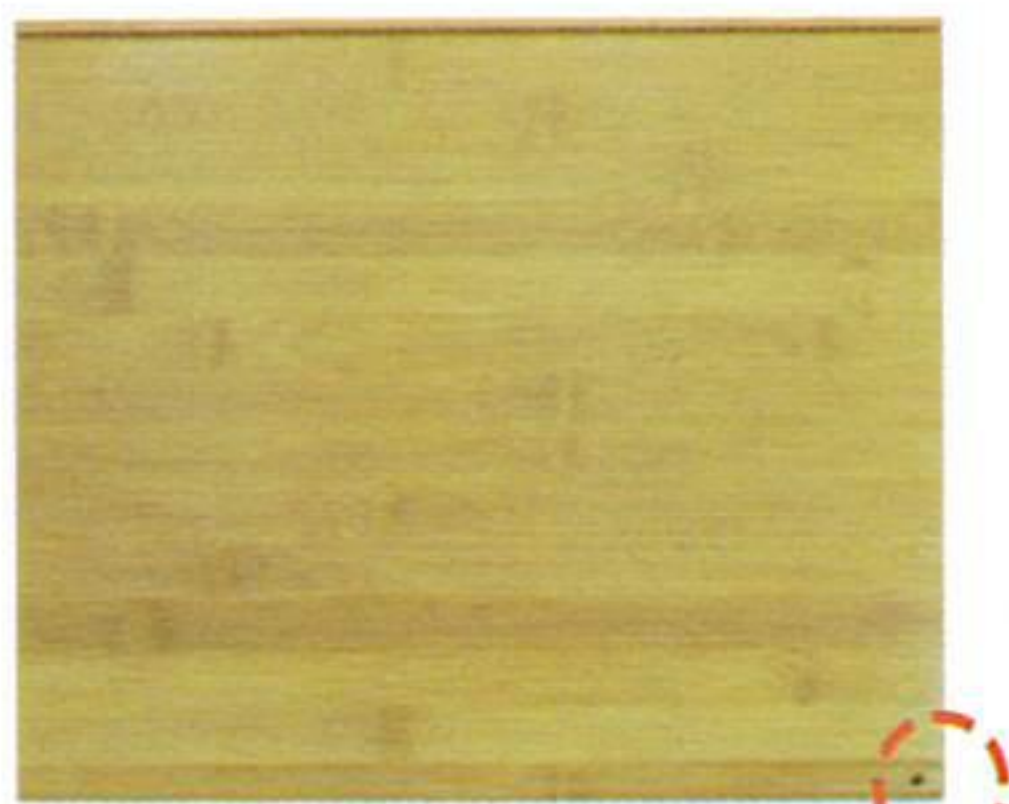

Shelves x5



Door panel x4



Door gasket



Small screws



Big screw

Installation tools



Door Stopper

Bolt



Start assembling




1. Take out the right side bracket and the door catch and install it with small screws




2. Take out the shelf and install it with large screws (the shelf with holes faces outward)



3. Install the remaining shelves

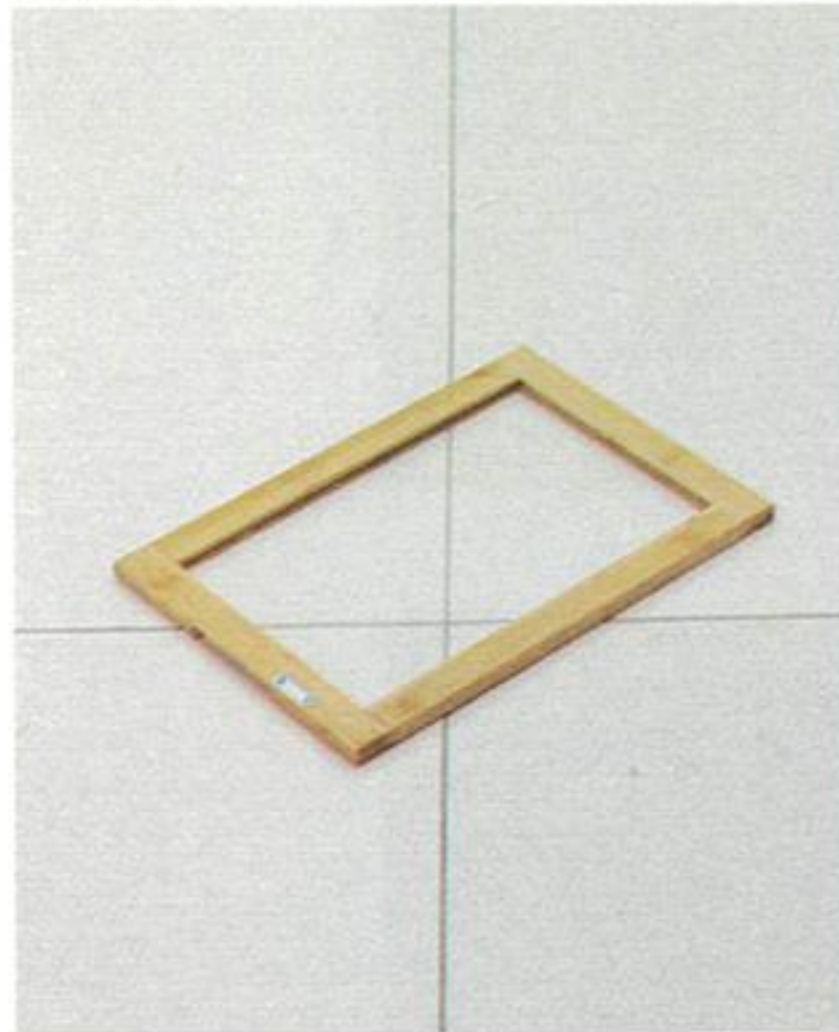


4. Take out the door panel and door gasket and install them with small screws

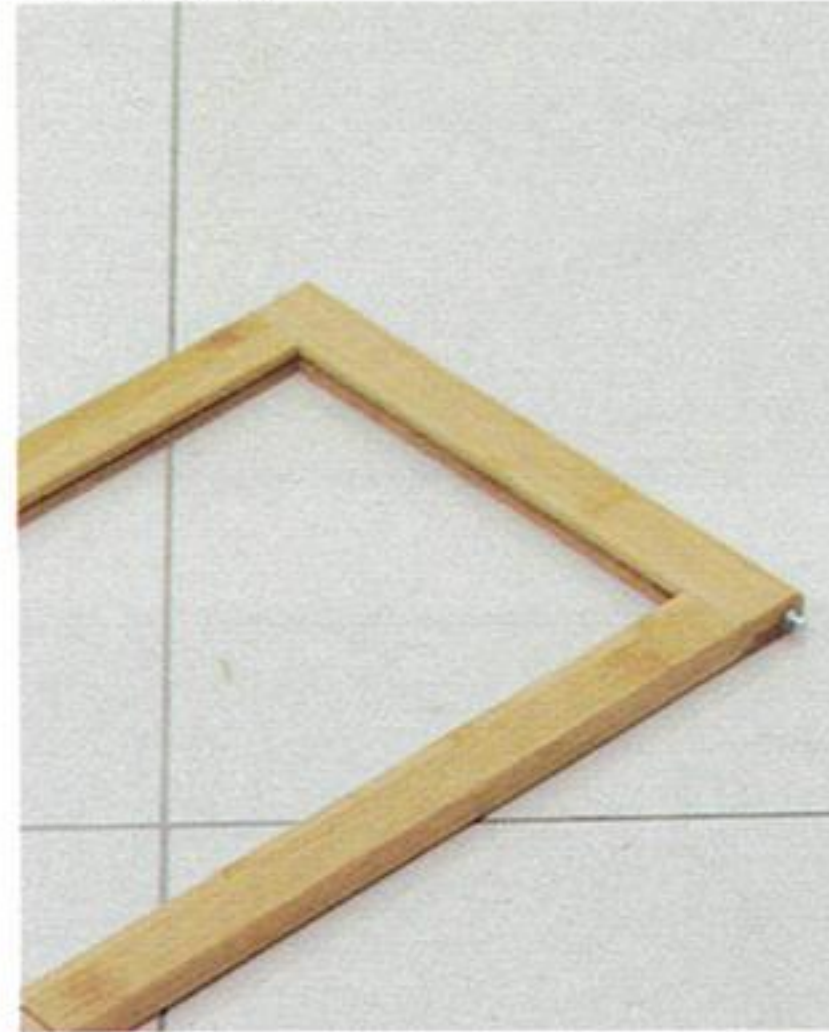

5. Take out the door bolt and insert it into both ends of the door panel



6. Take out the installed door panel and click the door bolt into the groove of the large shelf

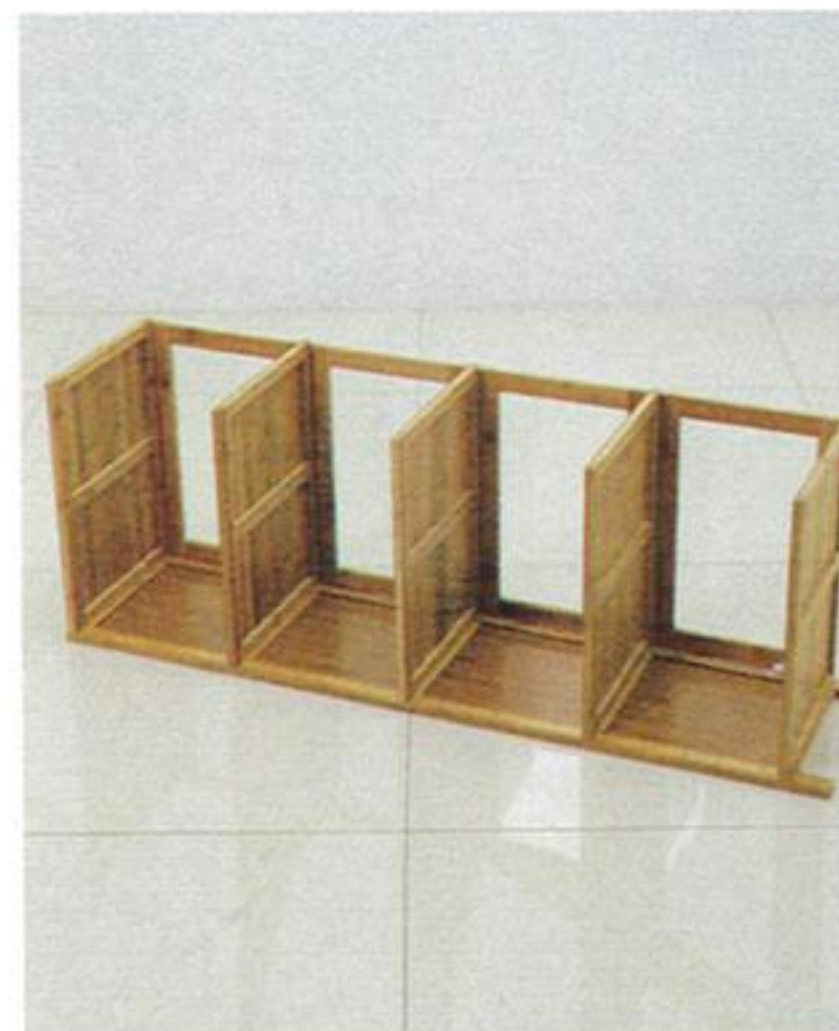

7. Flip the shelf



8. Take out the back plate and insert it along the groove



9. Take out the side bracket and install it with large screws on the left side