

SOCE017 140CM Installation Instruction


								
Eccentric screw	Eccentric Bolt	3.5CM self-tapping screw	metal pin	spring pin	Smallest self-tapping screw	air hole	Small nails	3CM flat head screws
A*10	B*10	C*37	D*22	E*4	F*16	G*1	H*30	I*5

Kind tips:

Tighten it when you're all done!

Eccentric installation principle:

		
double bouncer	rebounder	Iron sheets
J*1	K*2	L*4

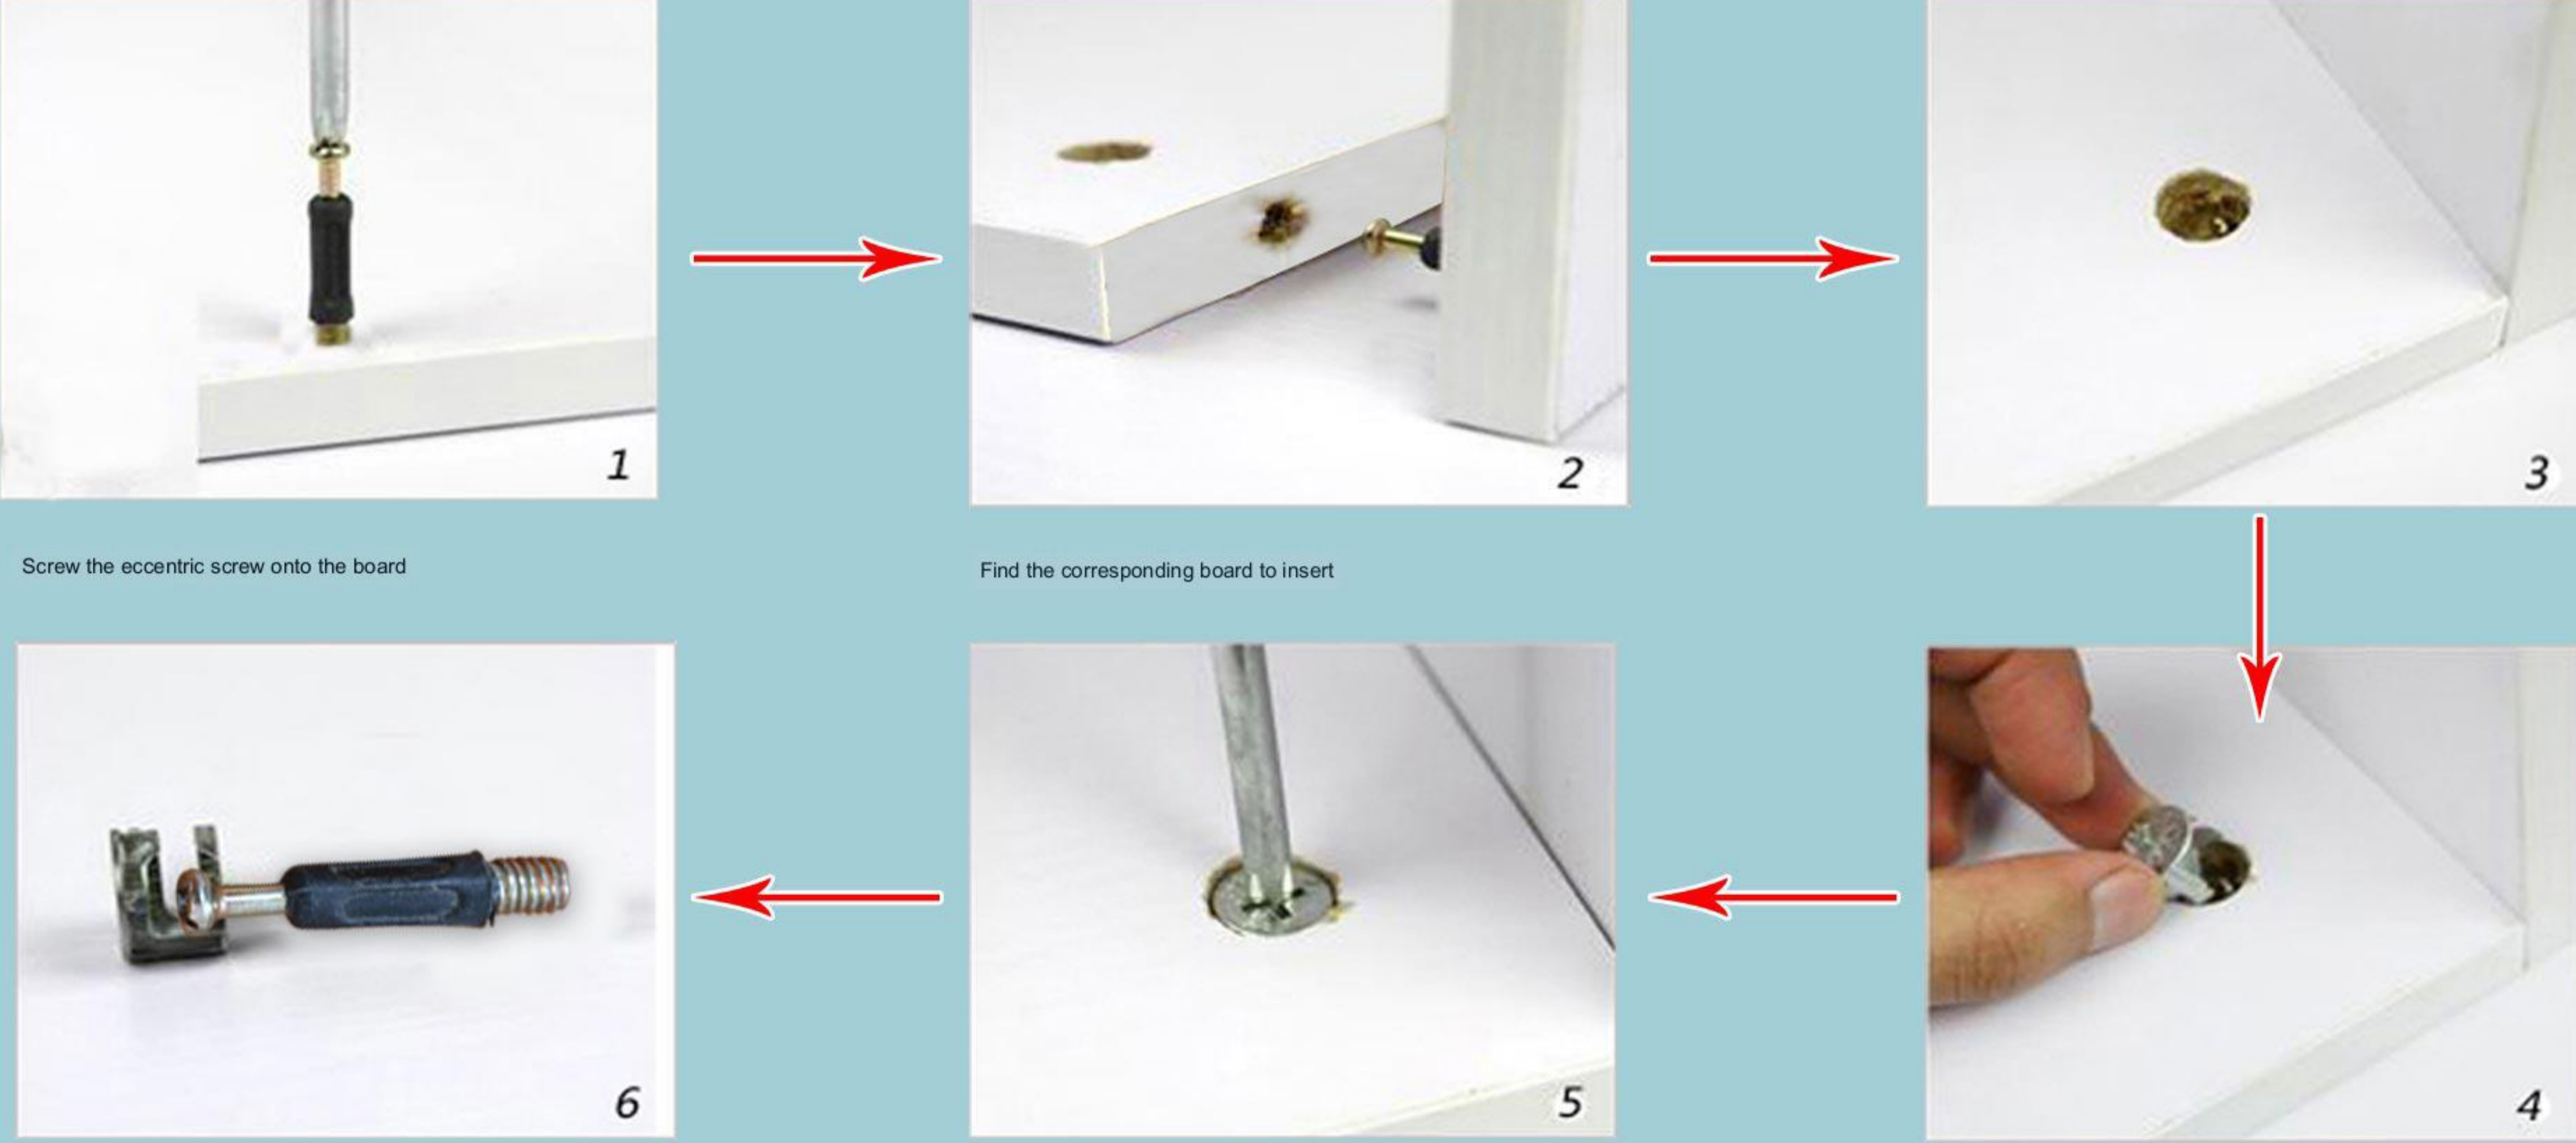

1 Screw the eccentric screw onto the board

2 Find the corresponding board to insert

3


4 Insert the eccentric bolt into the round hole

5 Rotate 180° clockwise to lock the board

6

installation steps:

【Step 1: Drawer part installation

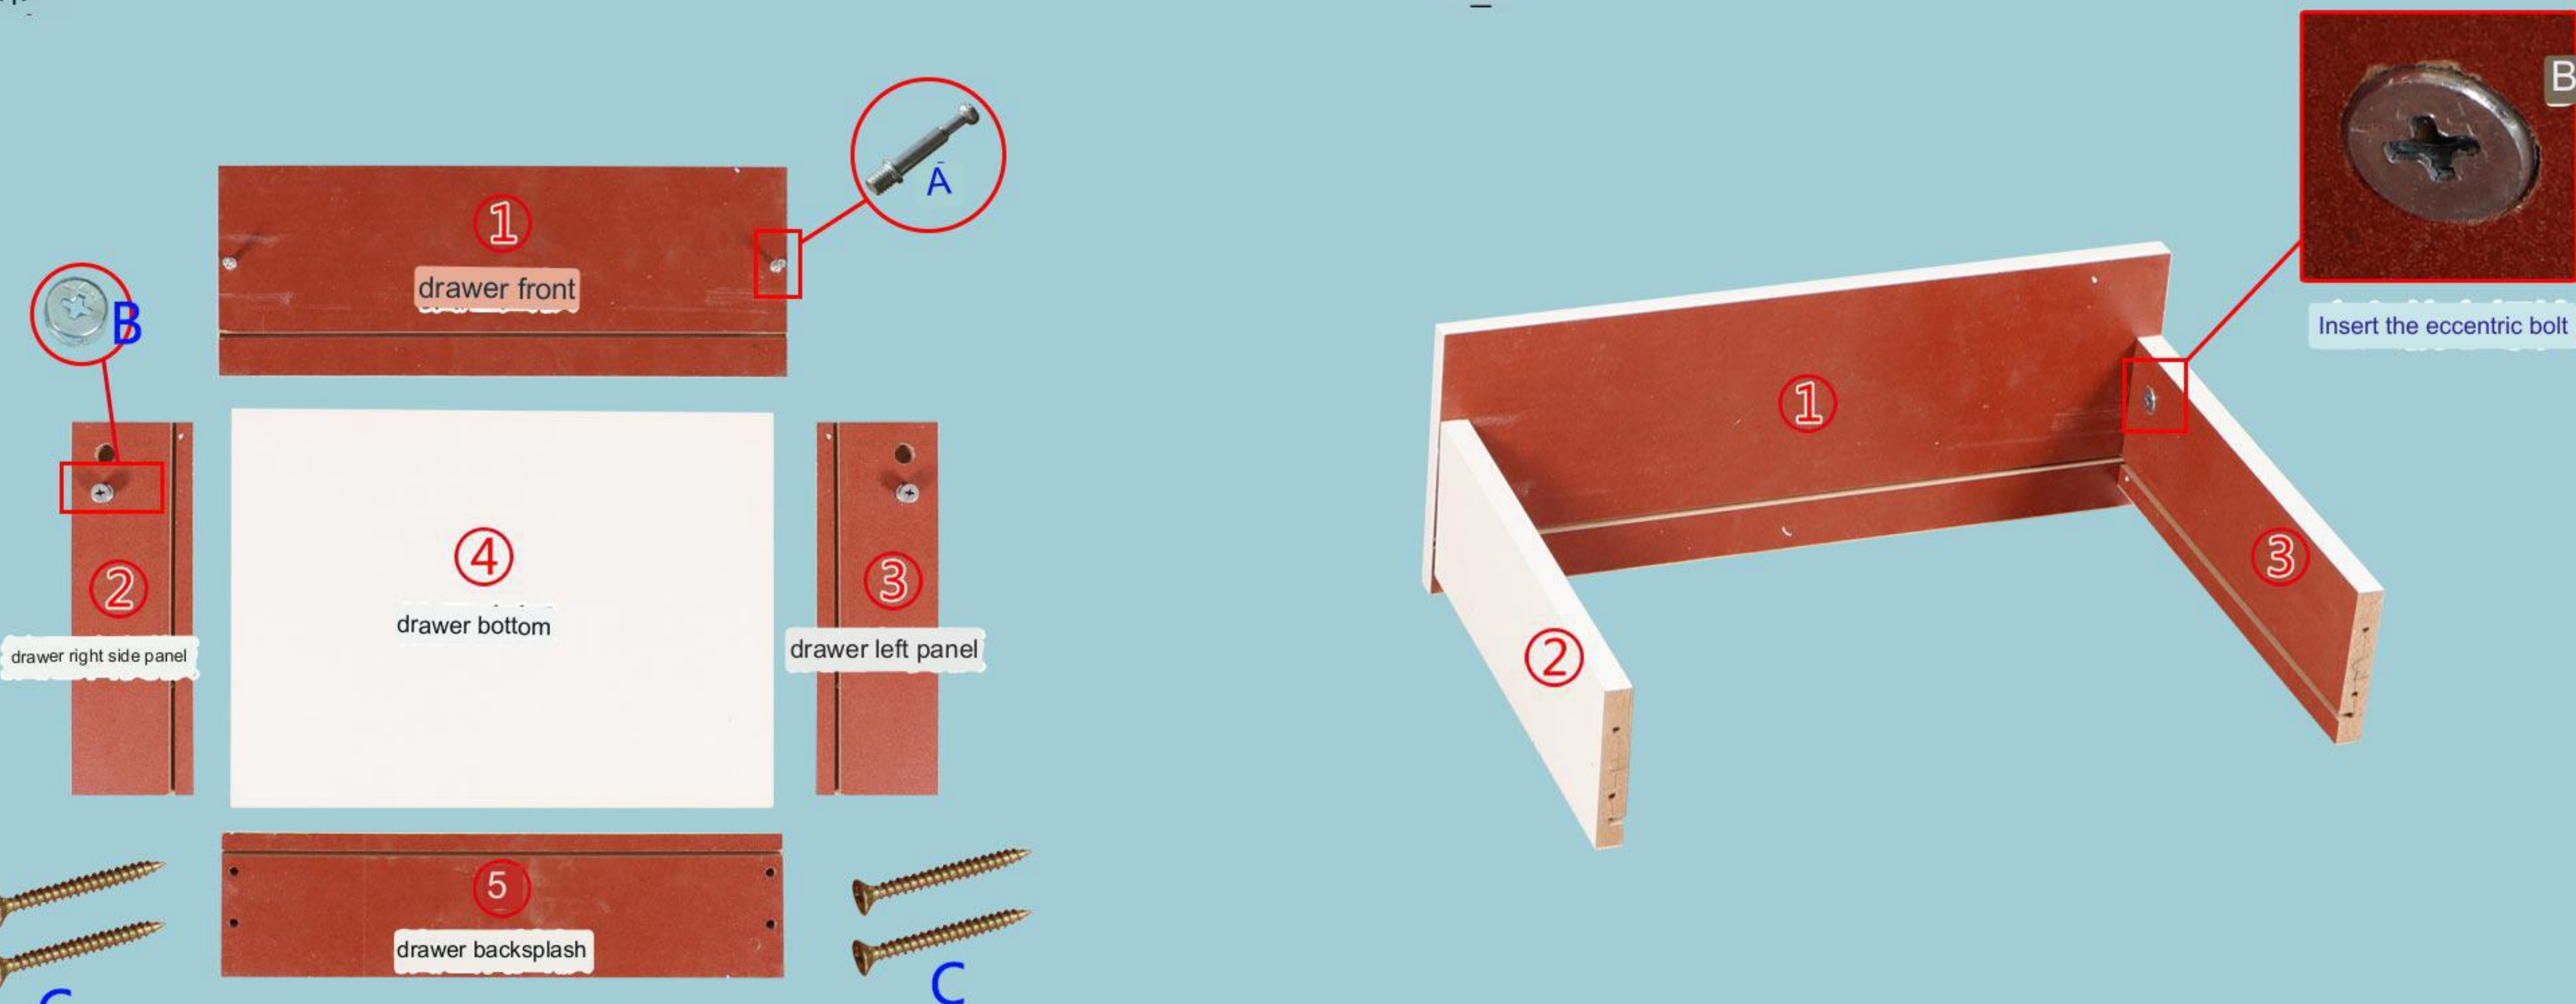

<1> <2>

1 drawer front

2 drawer right side panel

3 drawer left panel

4 drawer bottom

5 drawer backslash

A



B

C

Insert the eccentric bolt




Board name and serial number:

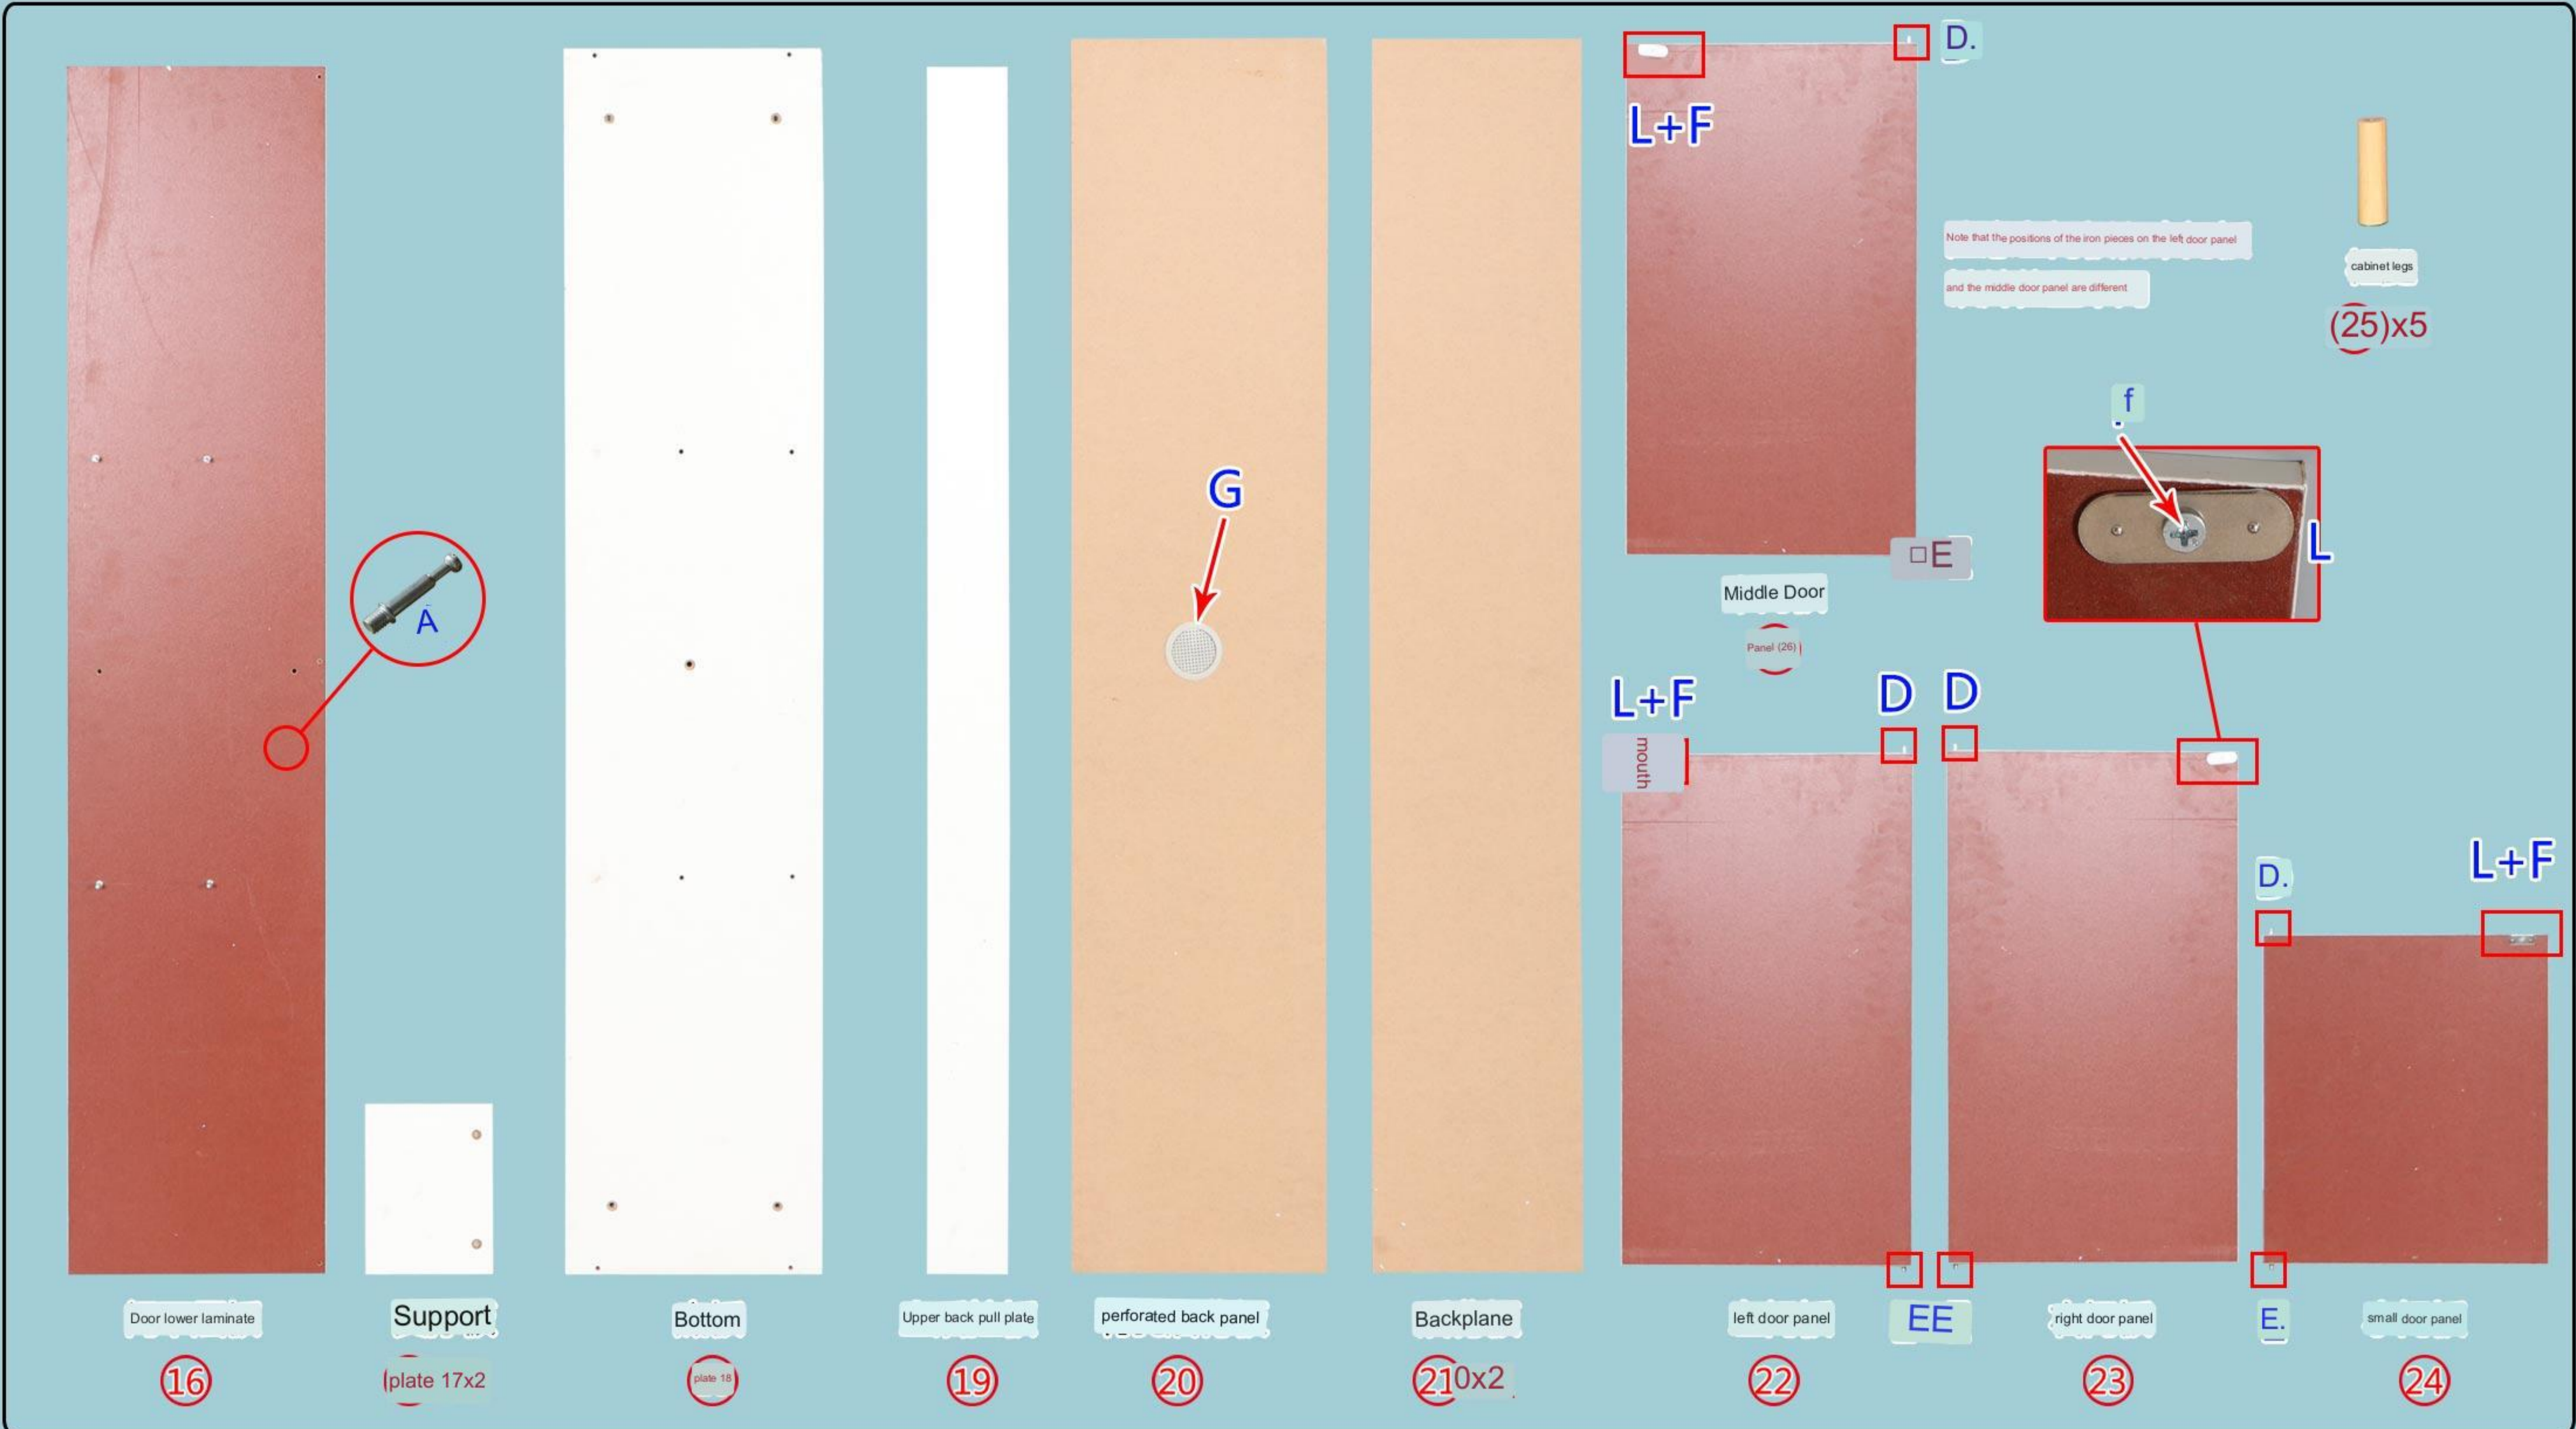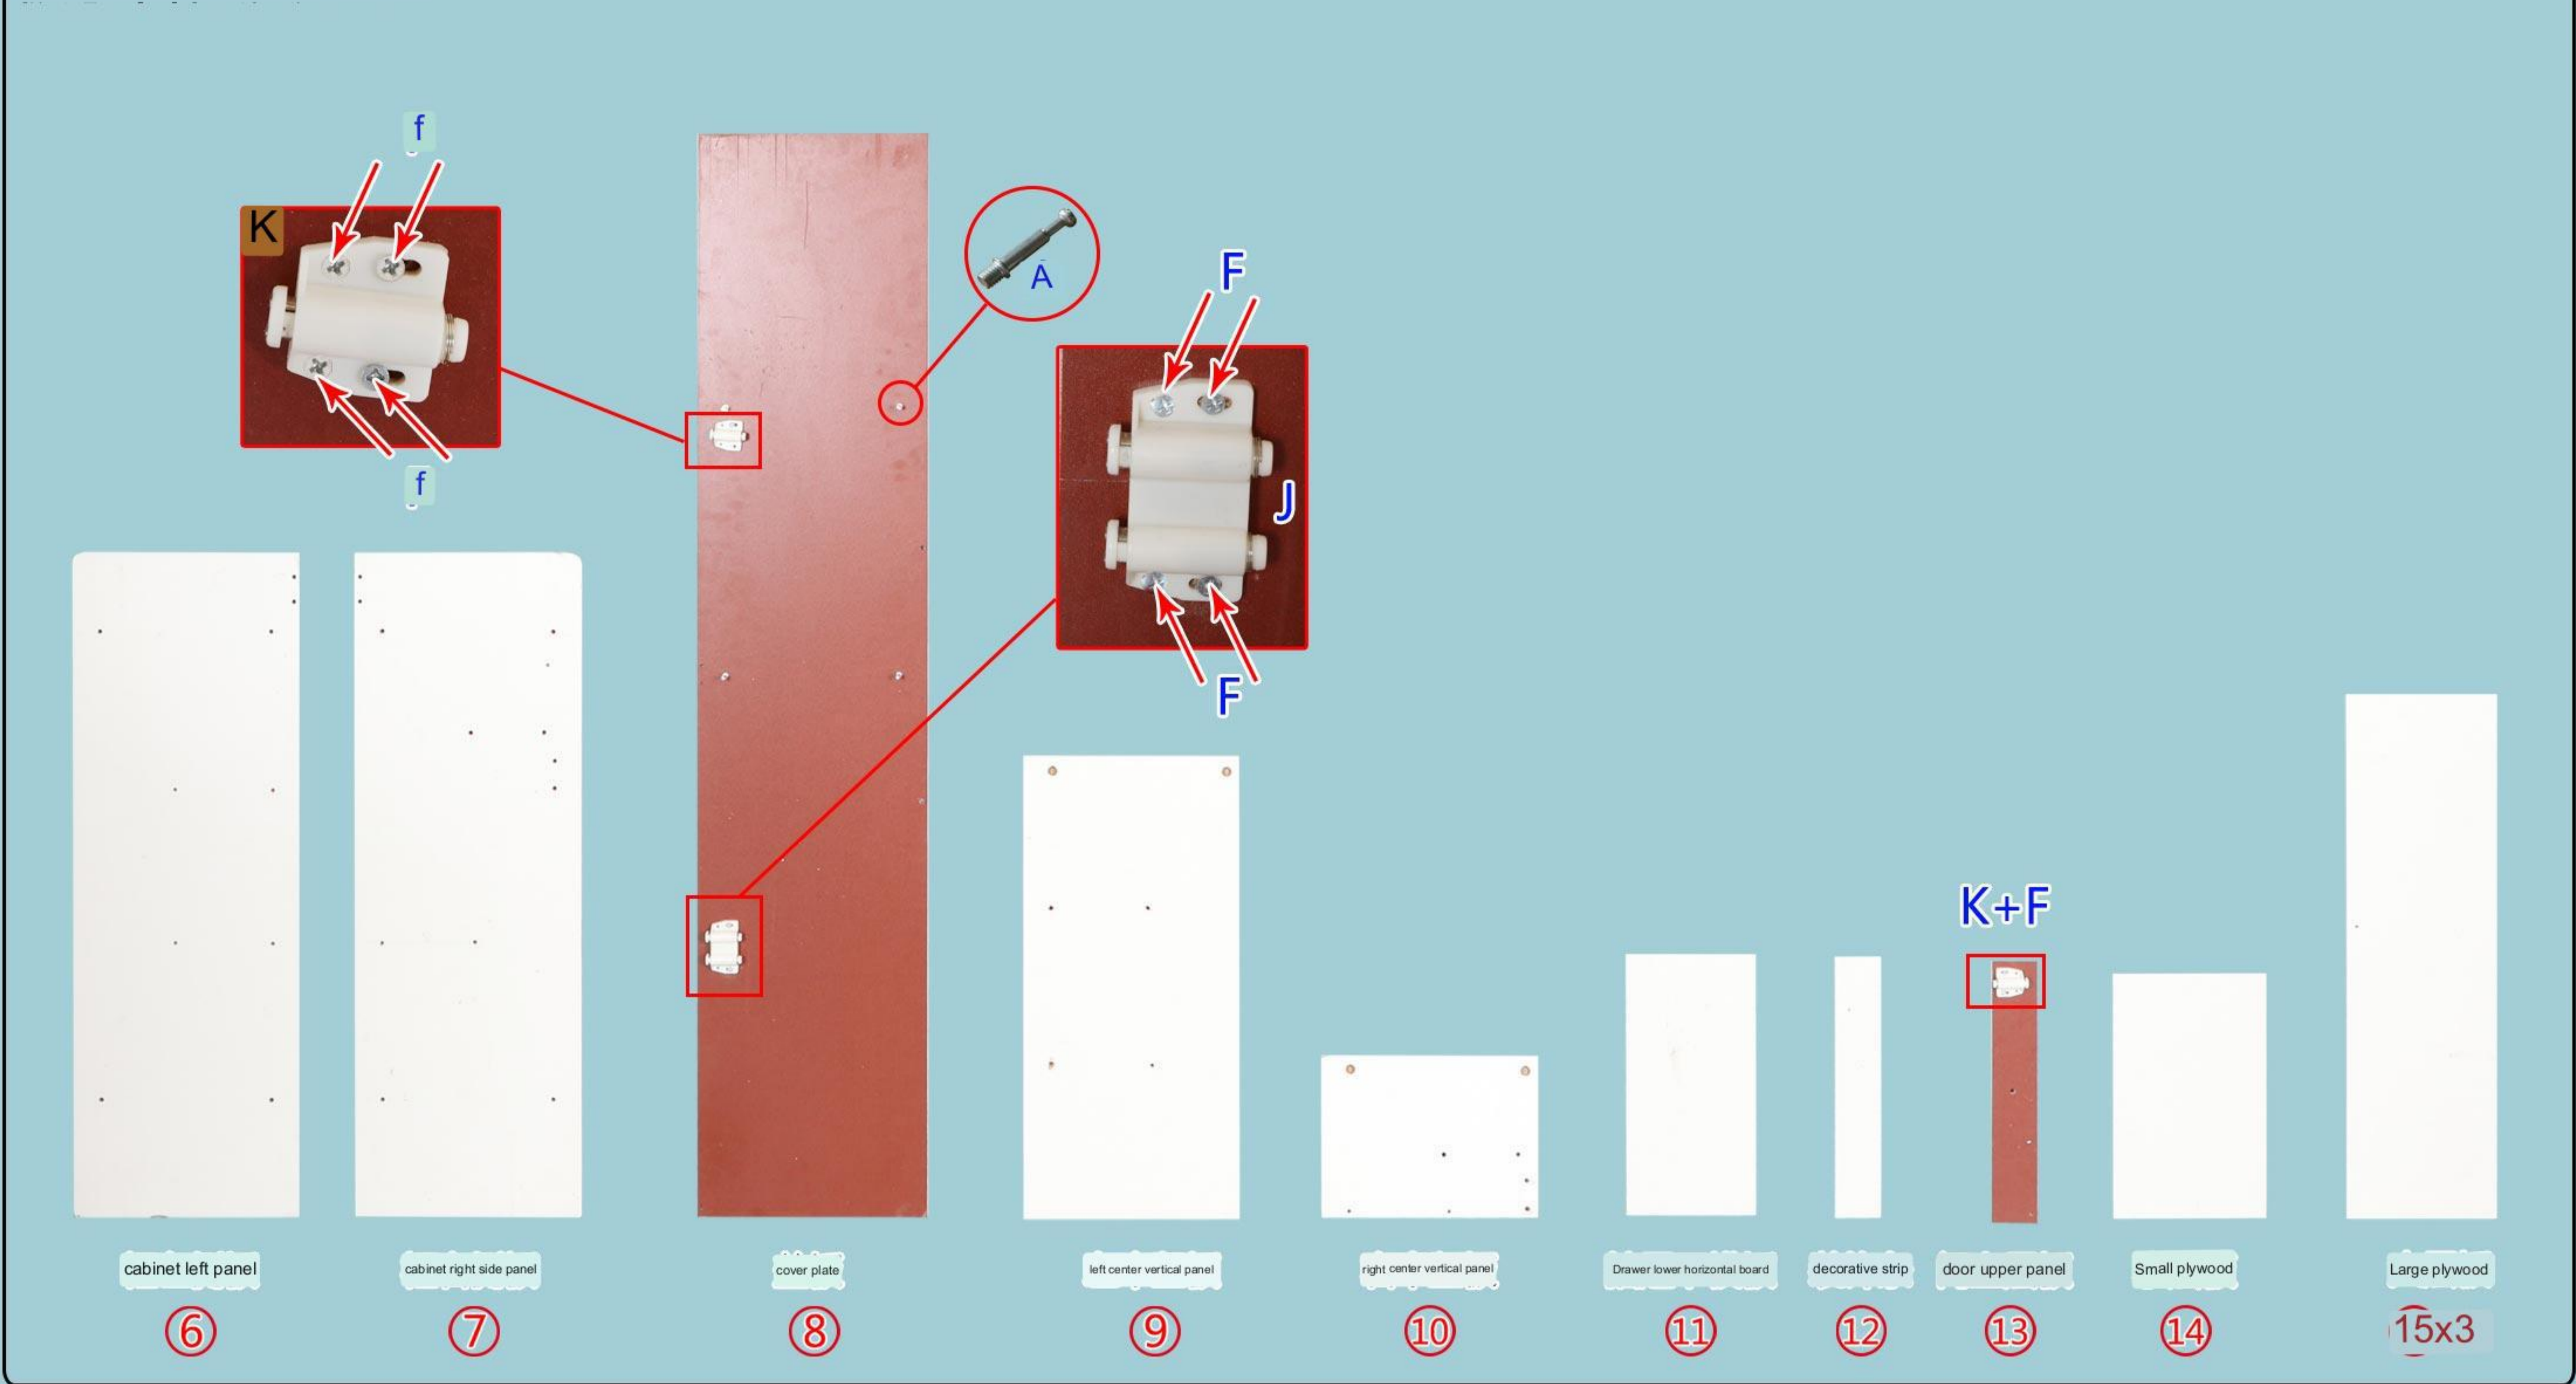


Step 2: Whole Parts Installation


<1>

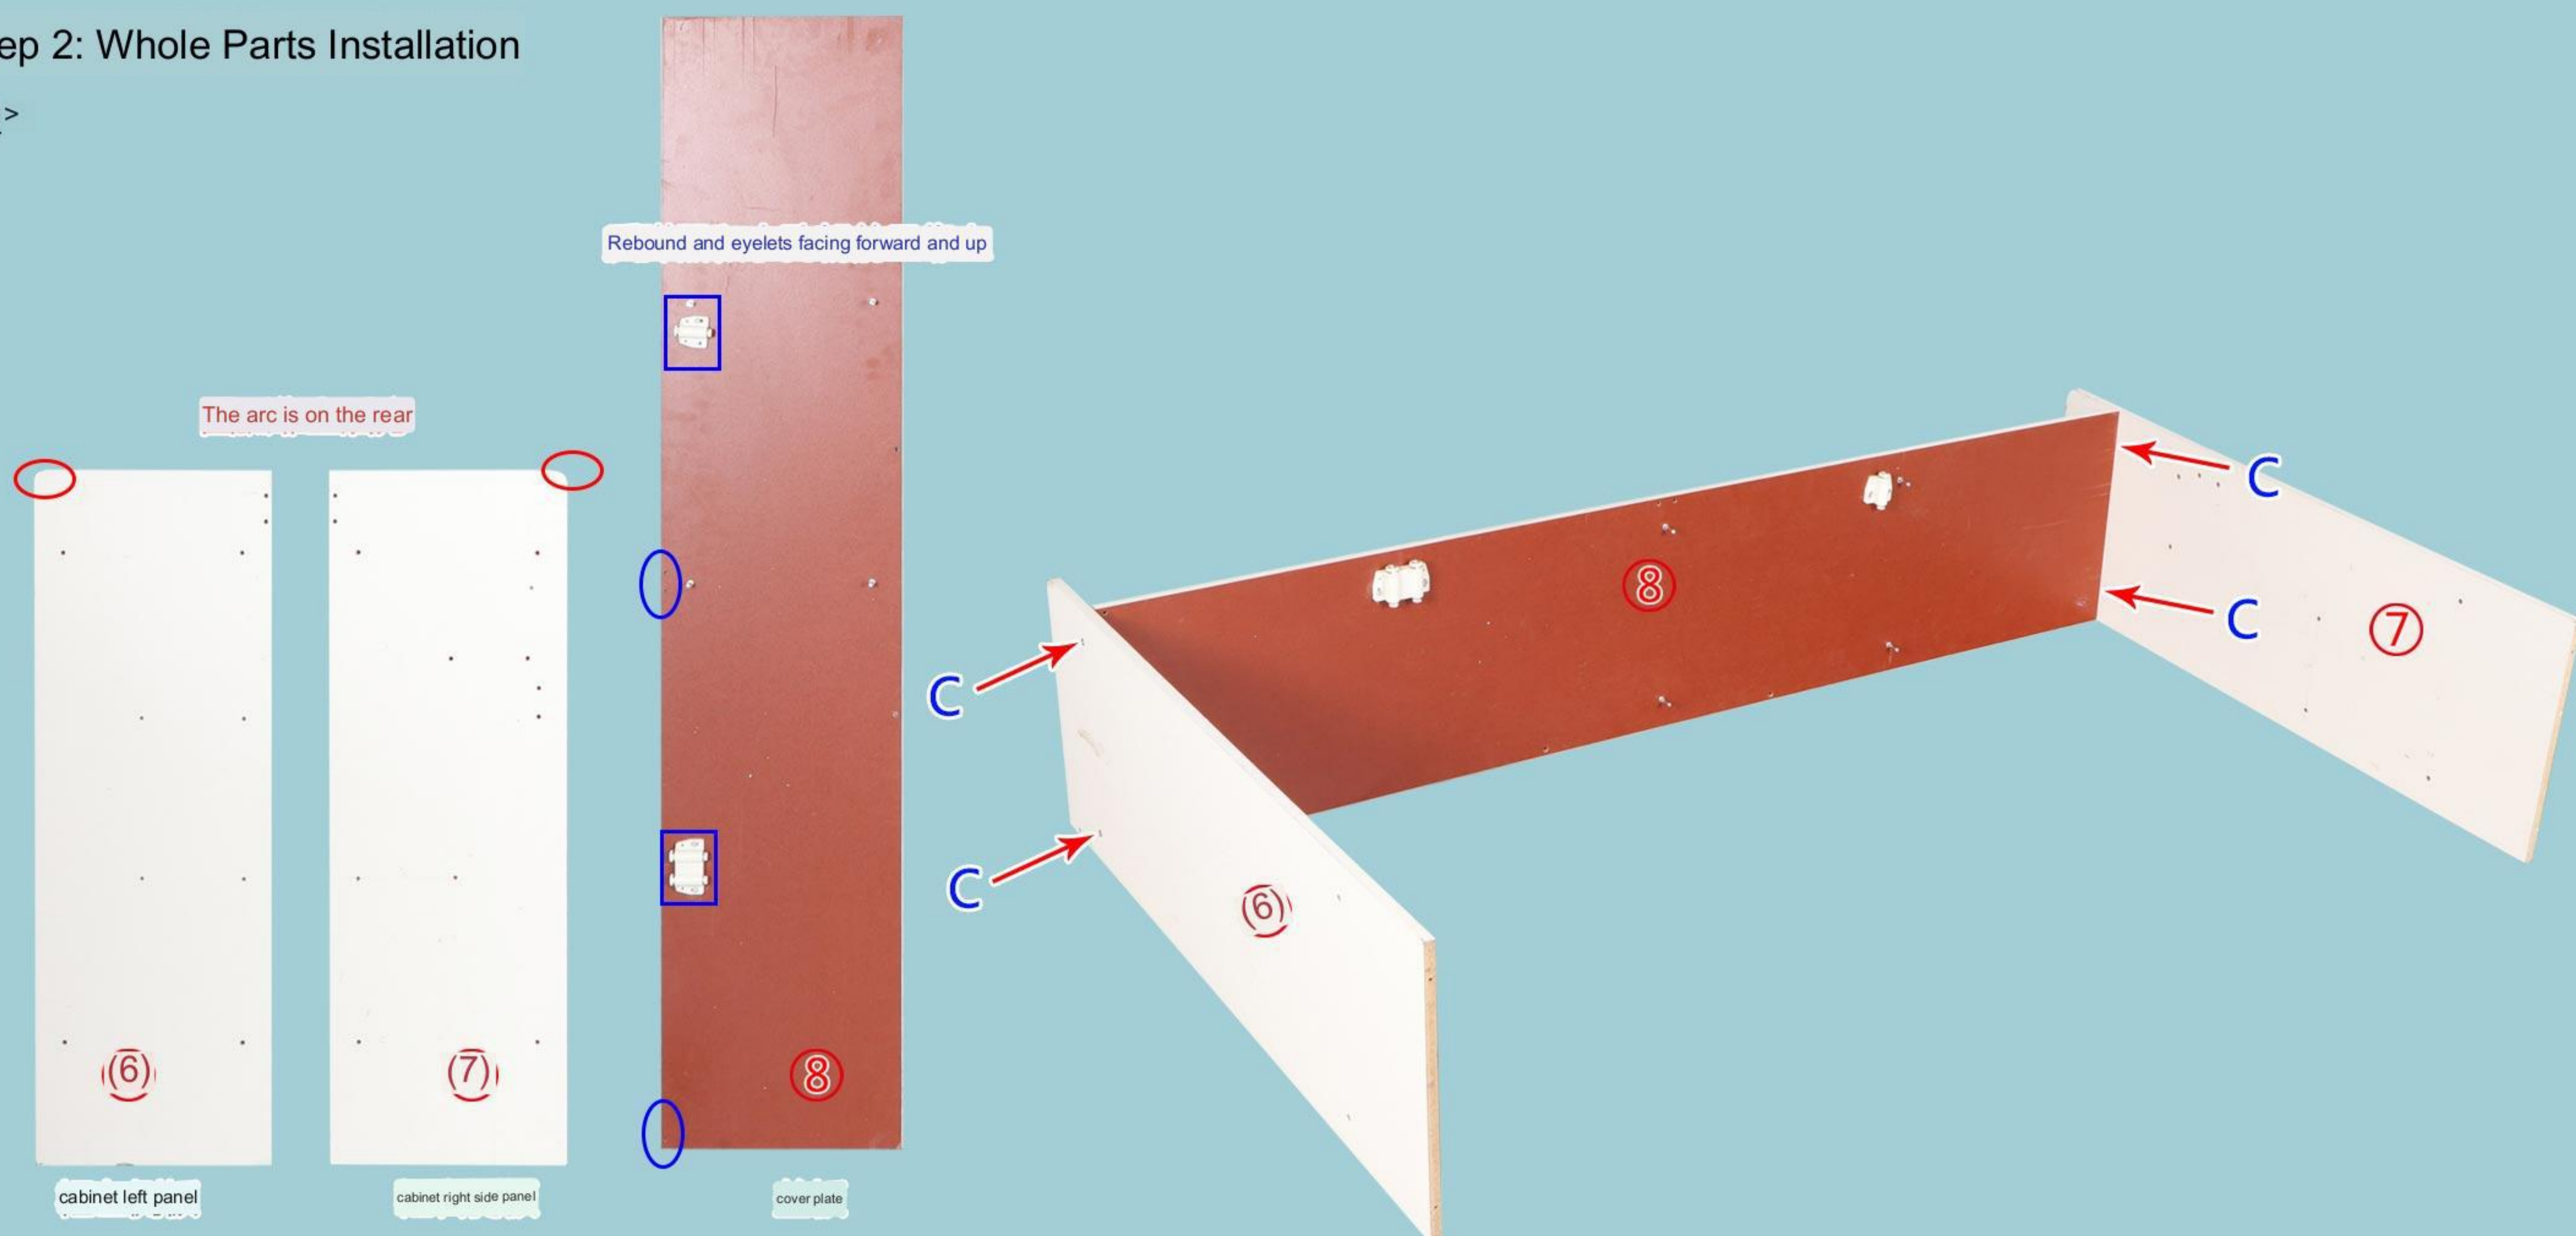


<2>

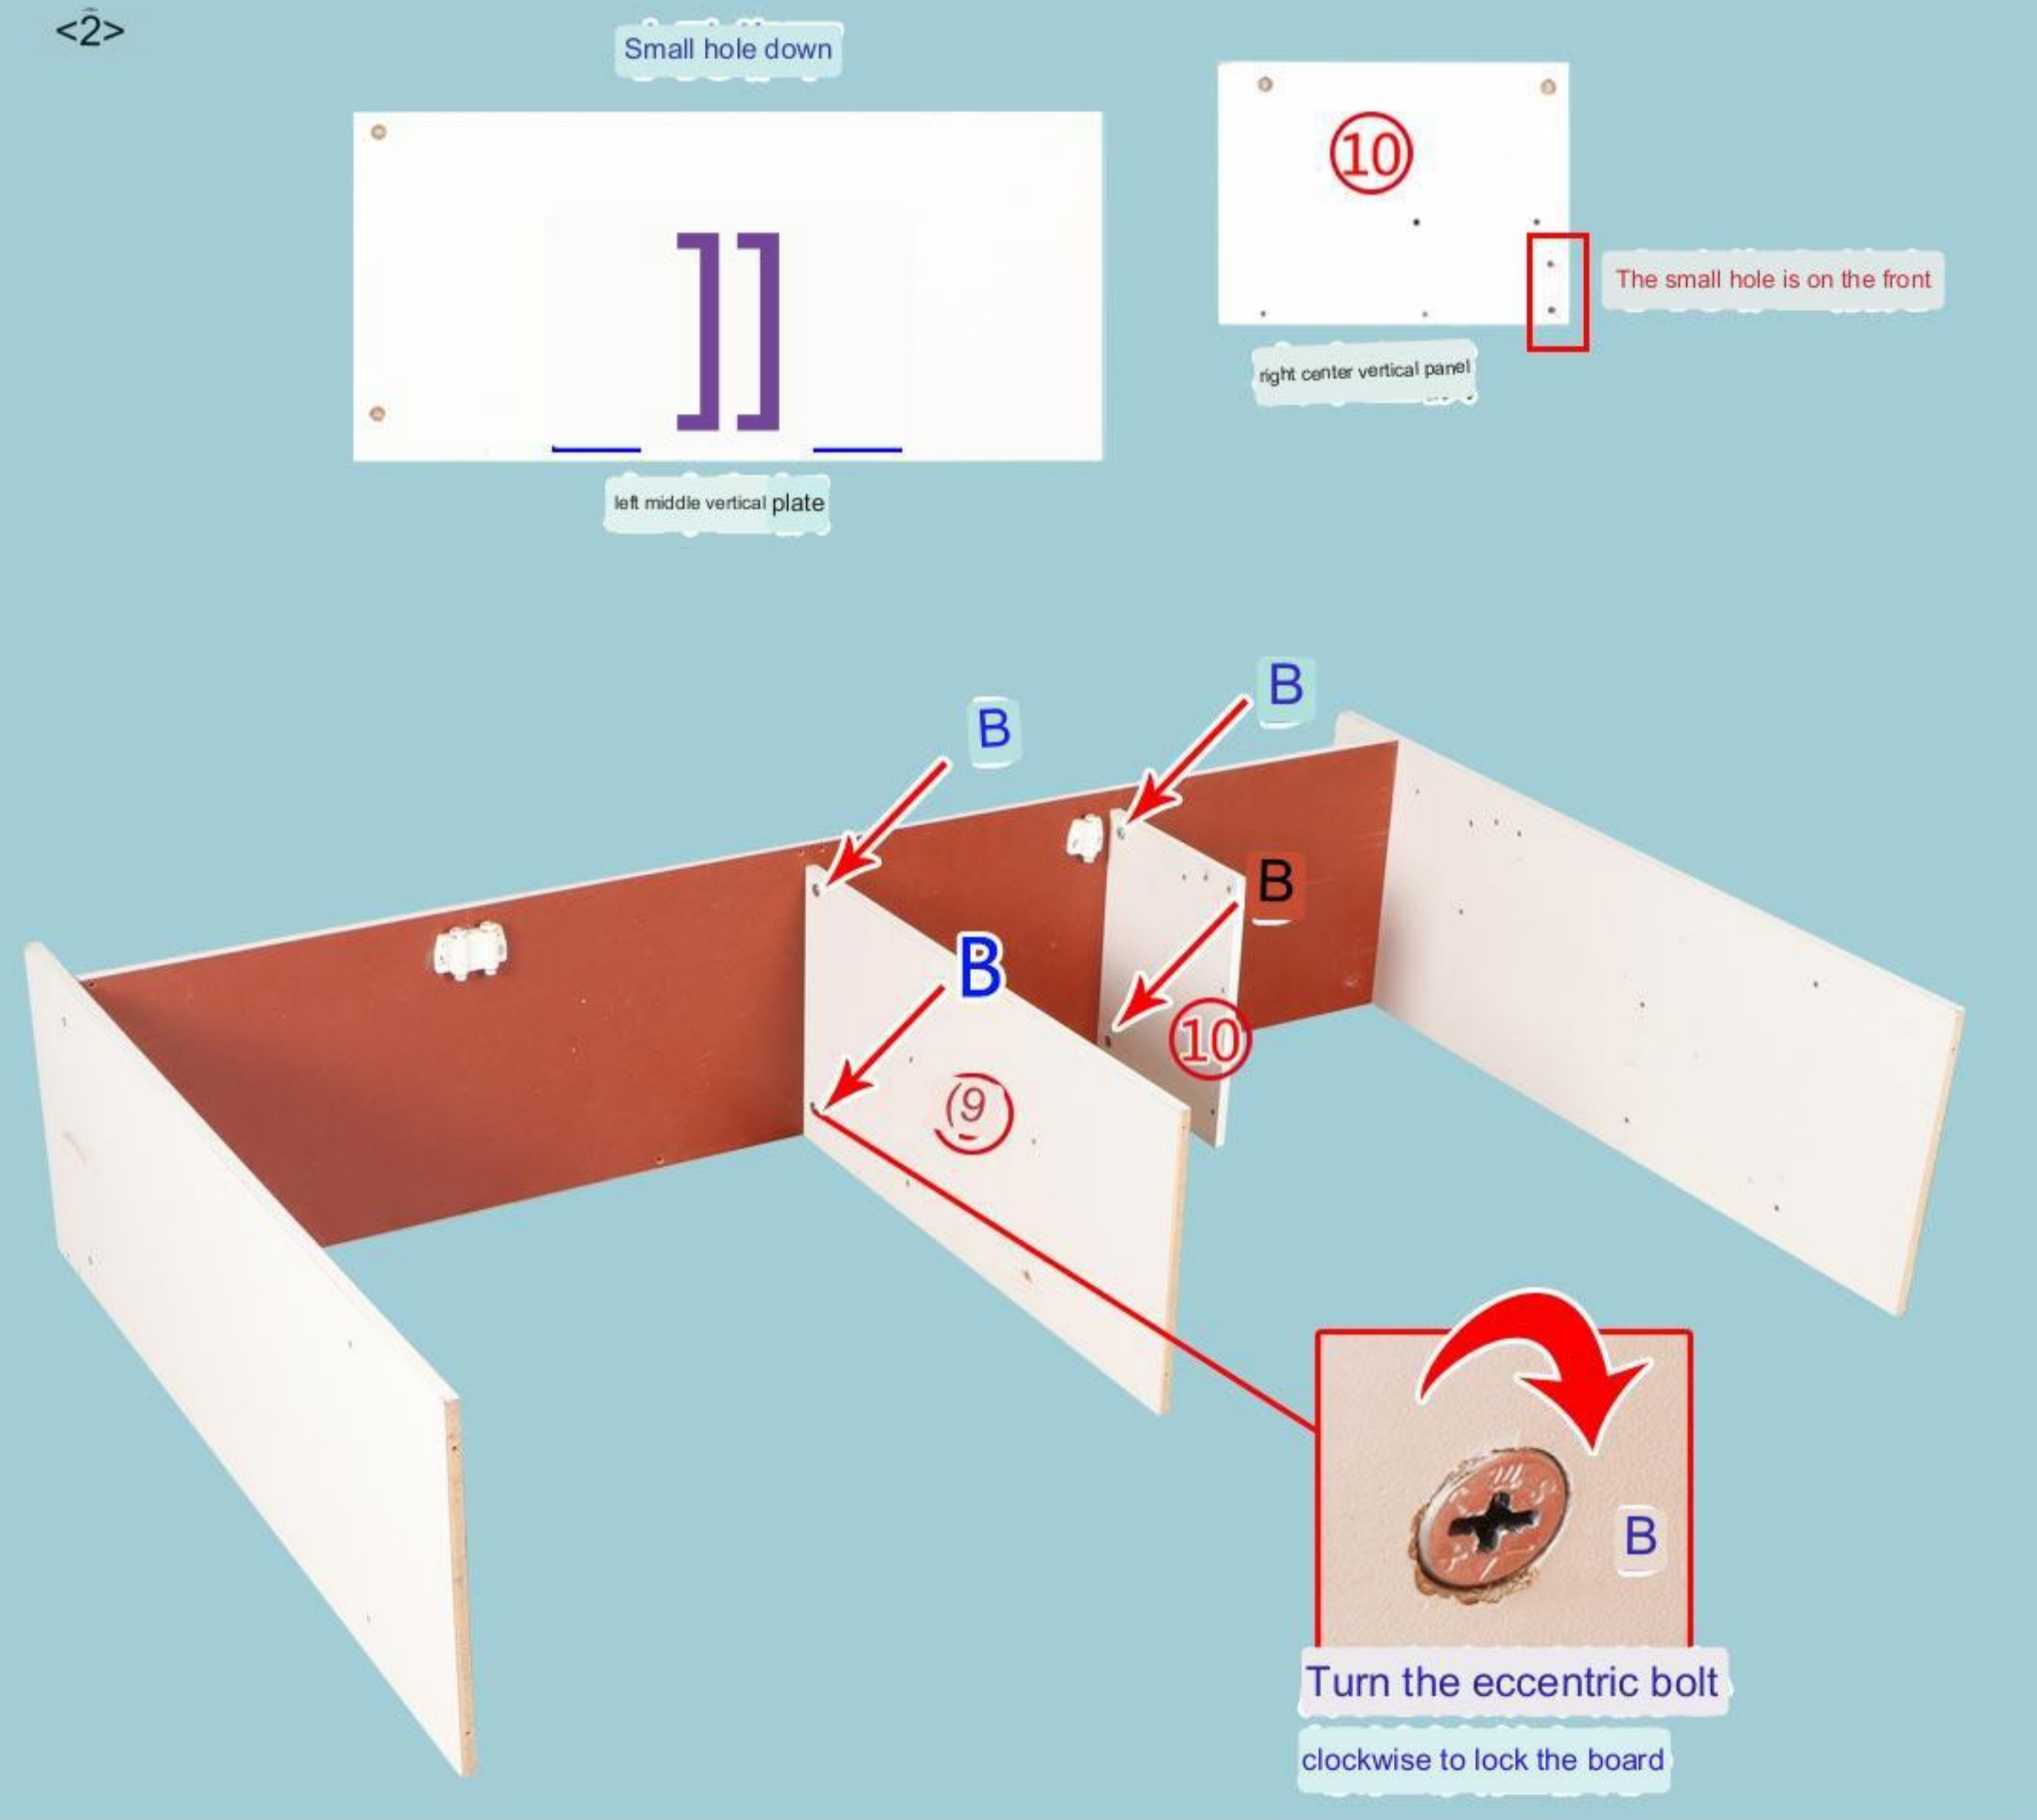


<3>






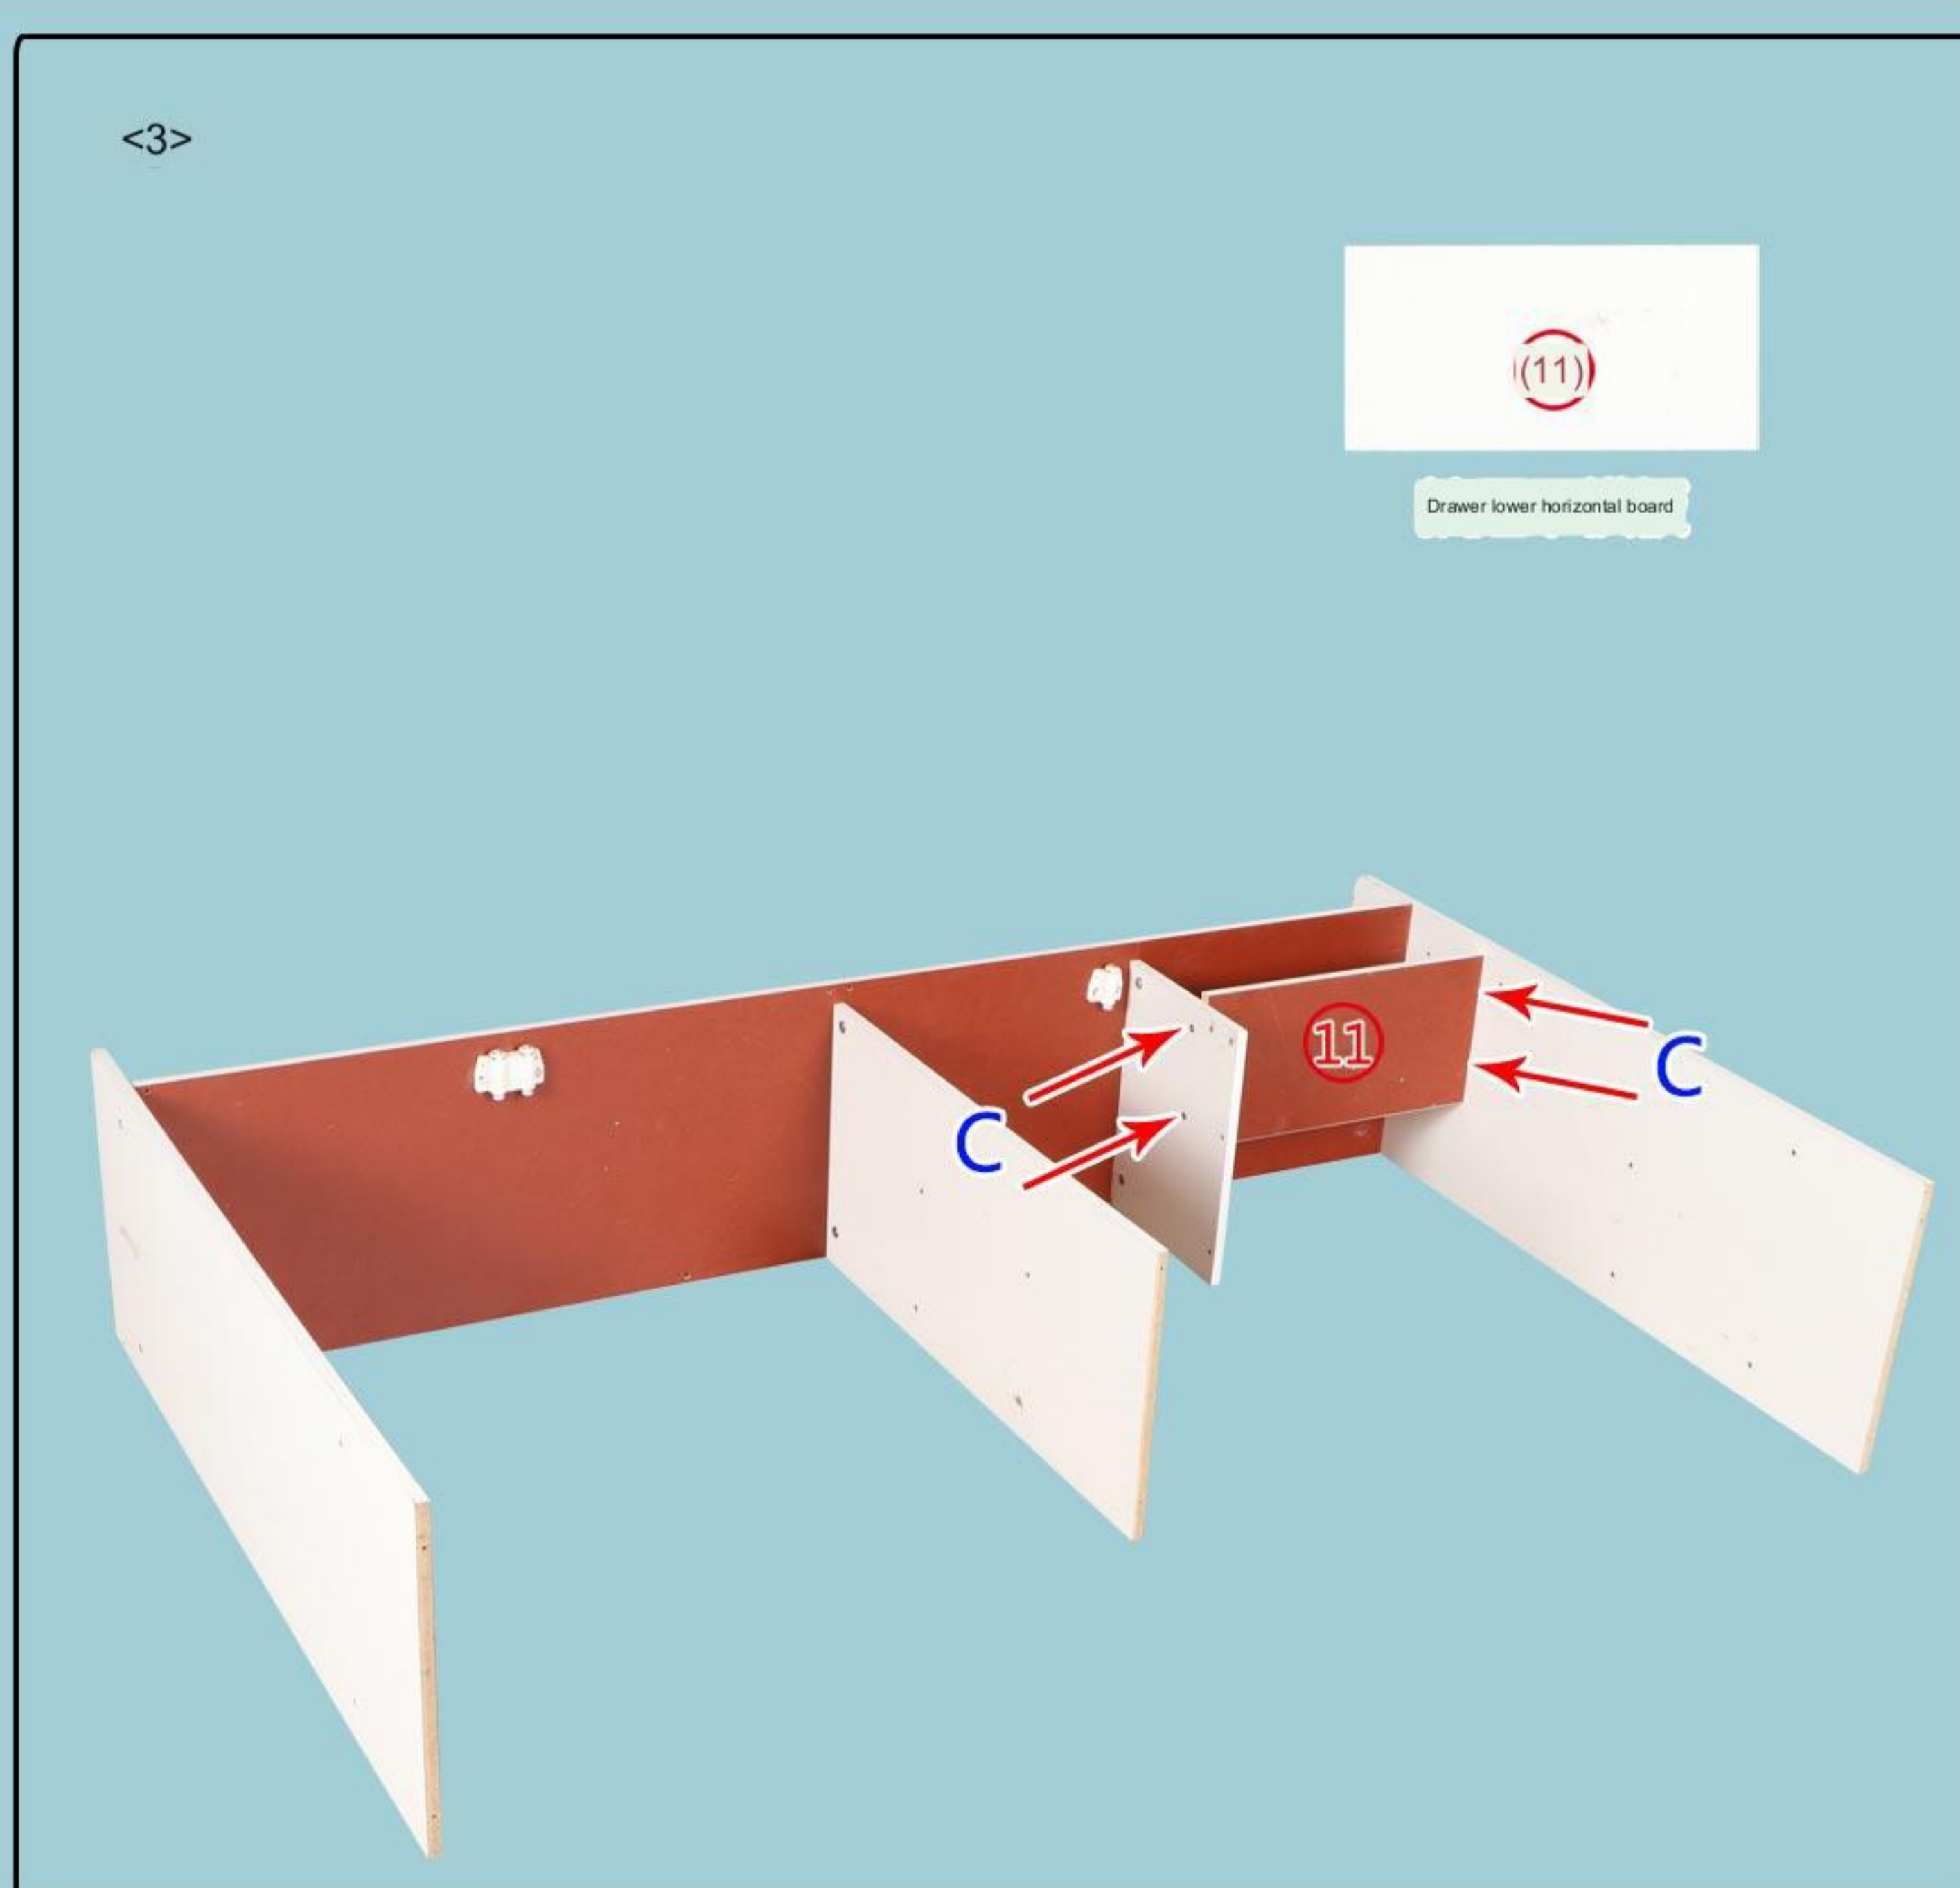


<4>

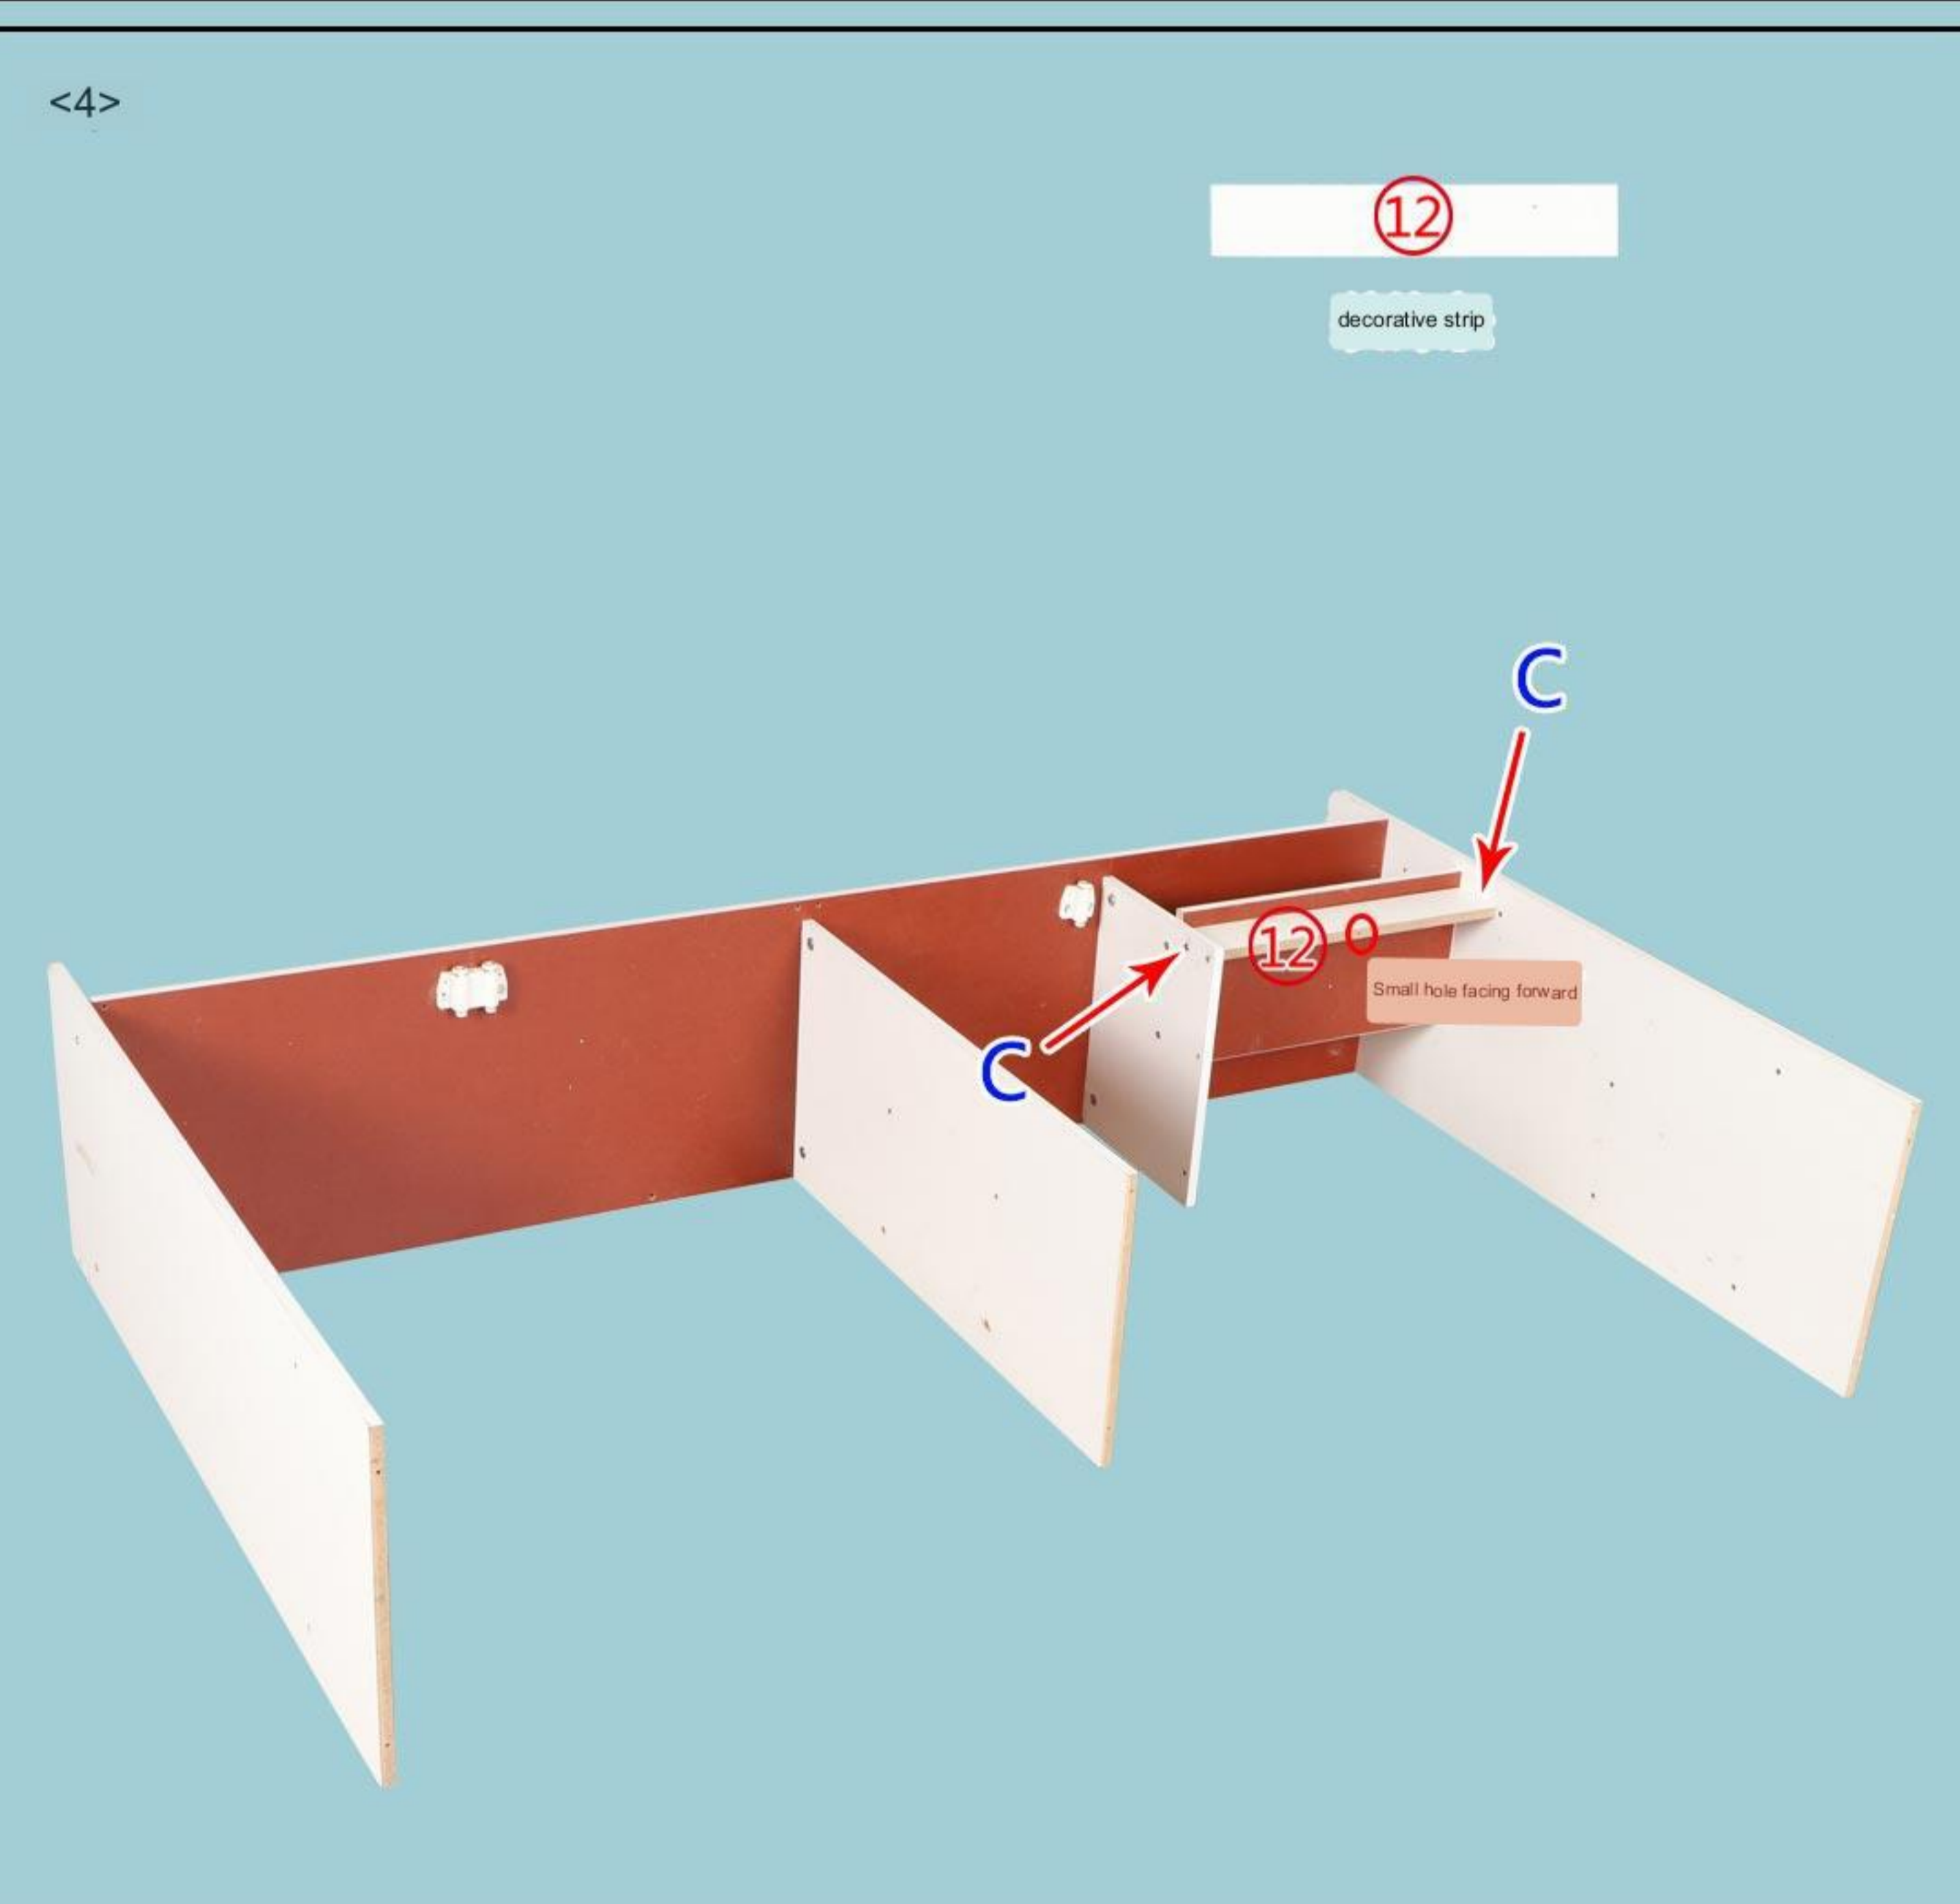

<5>

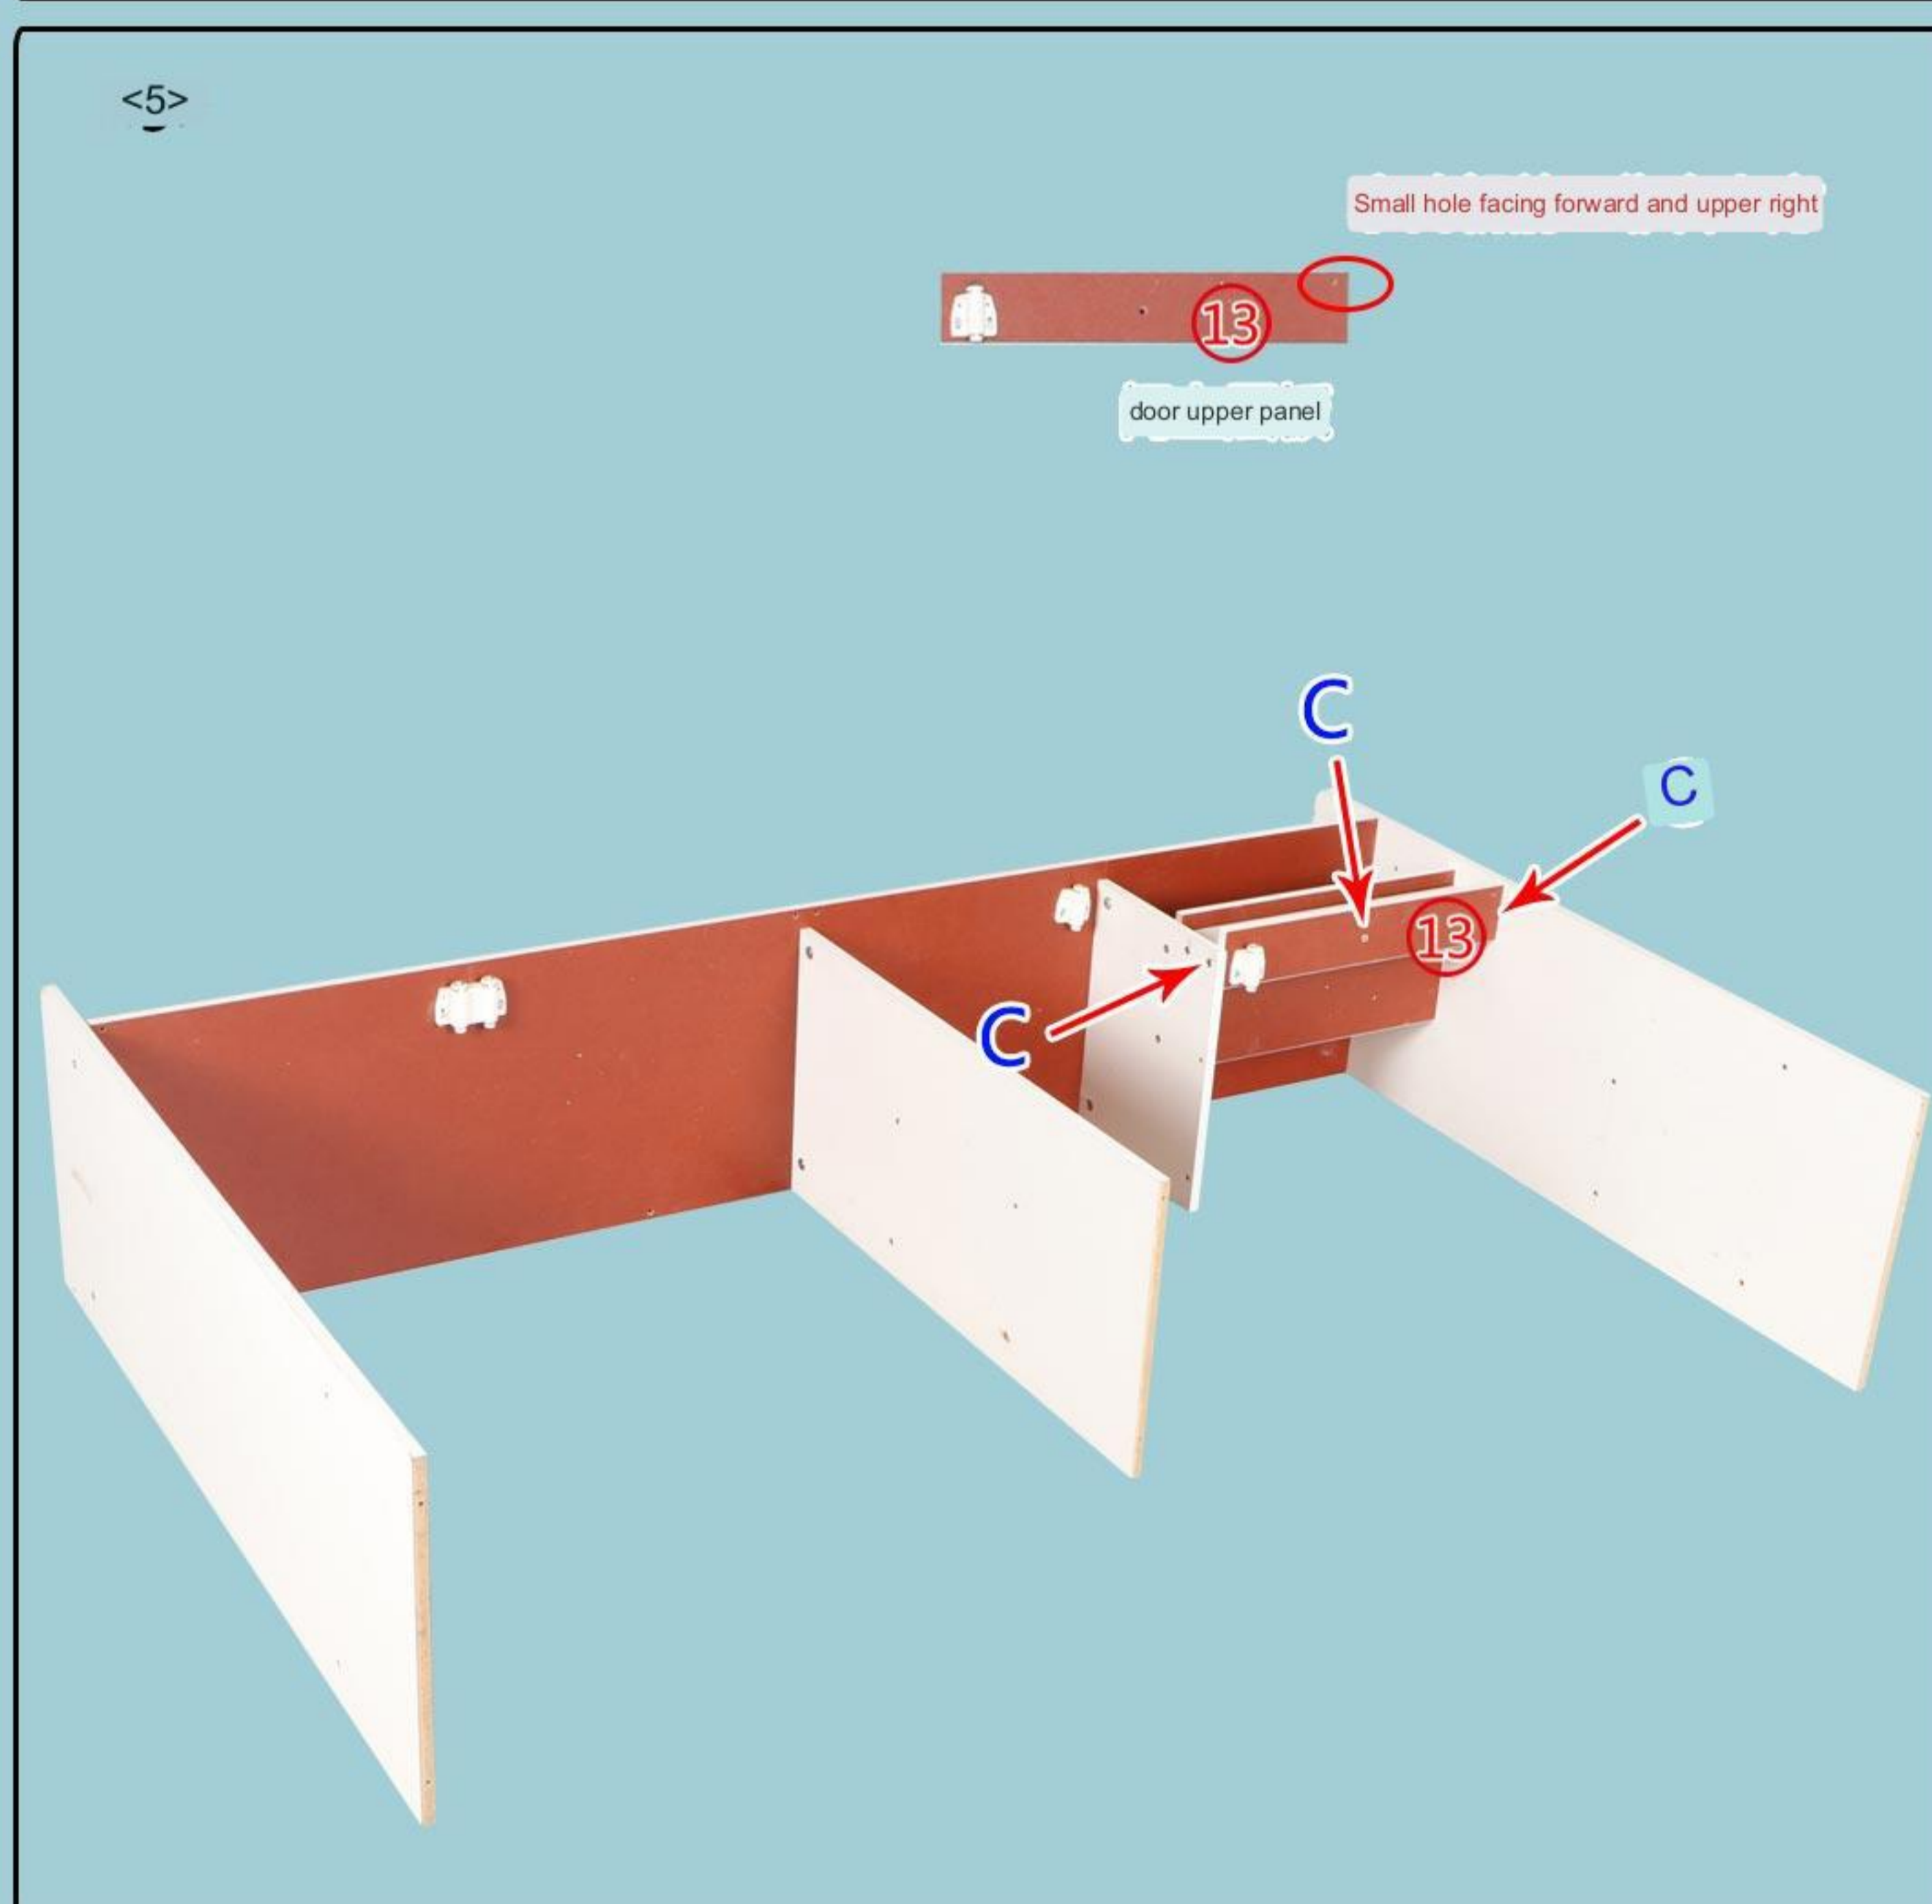

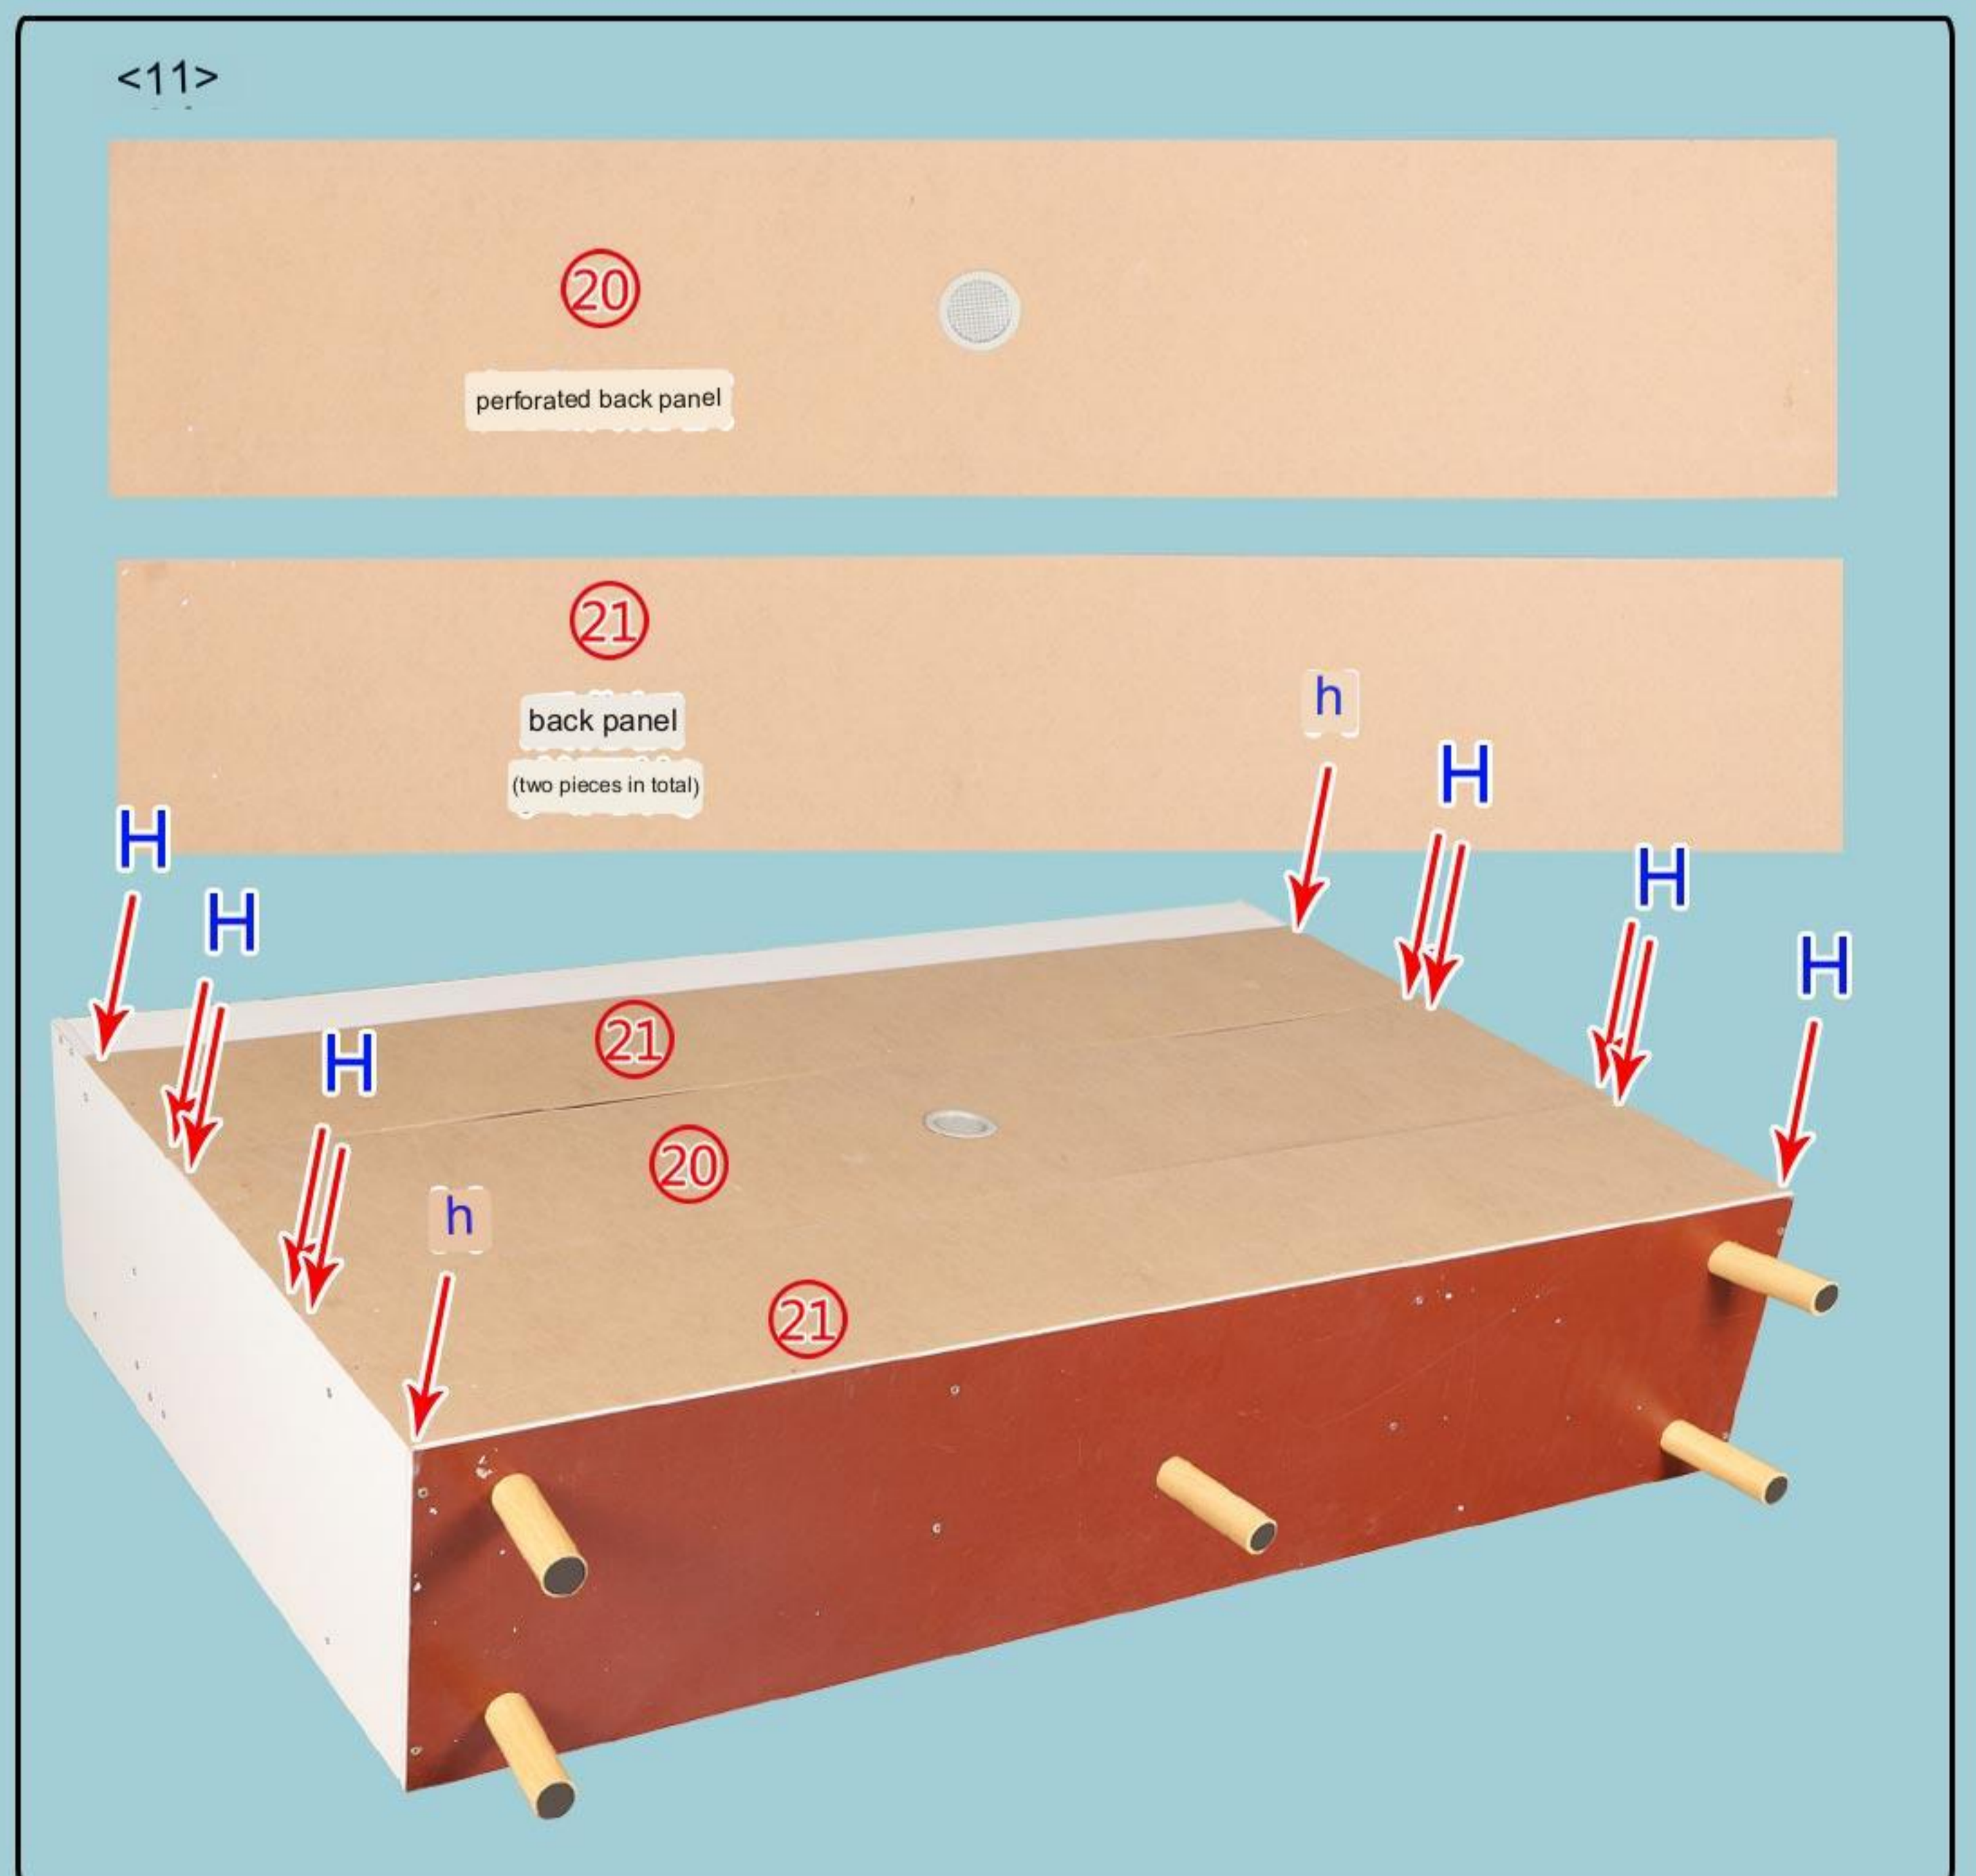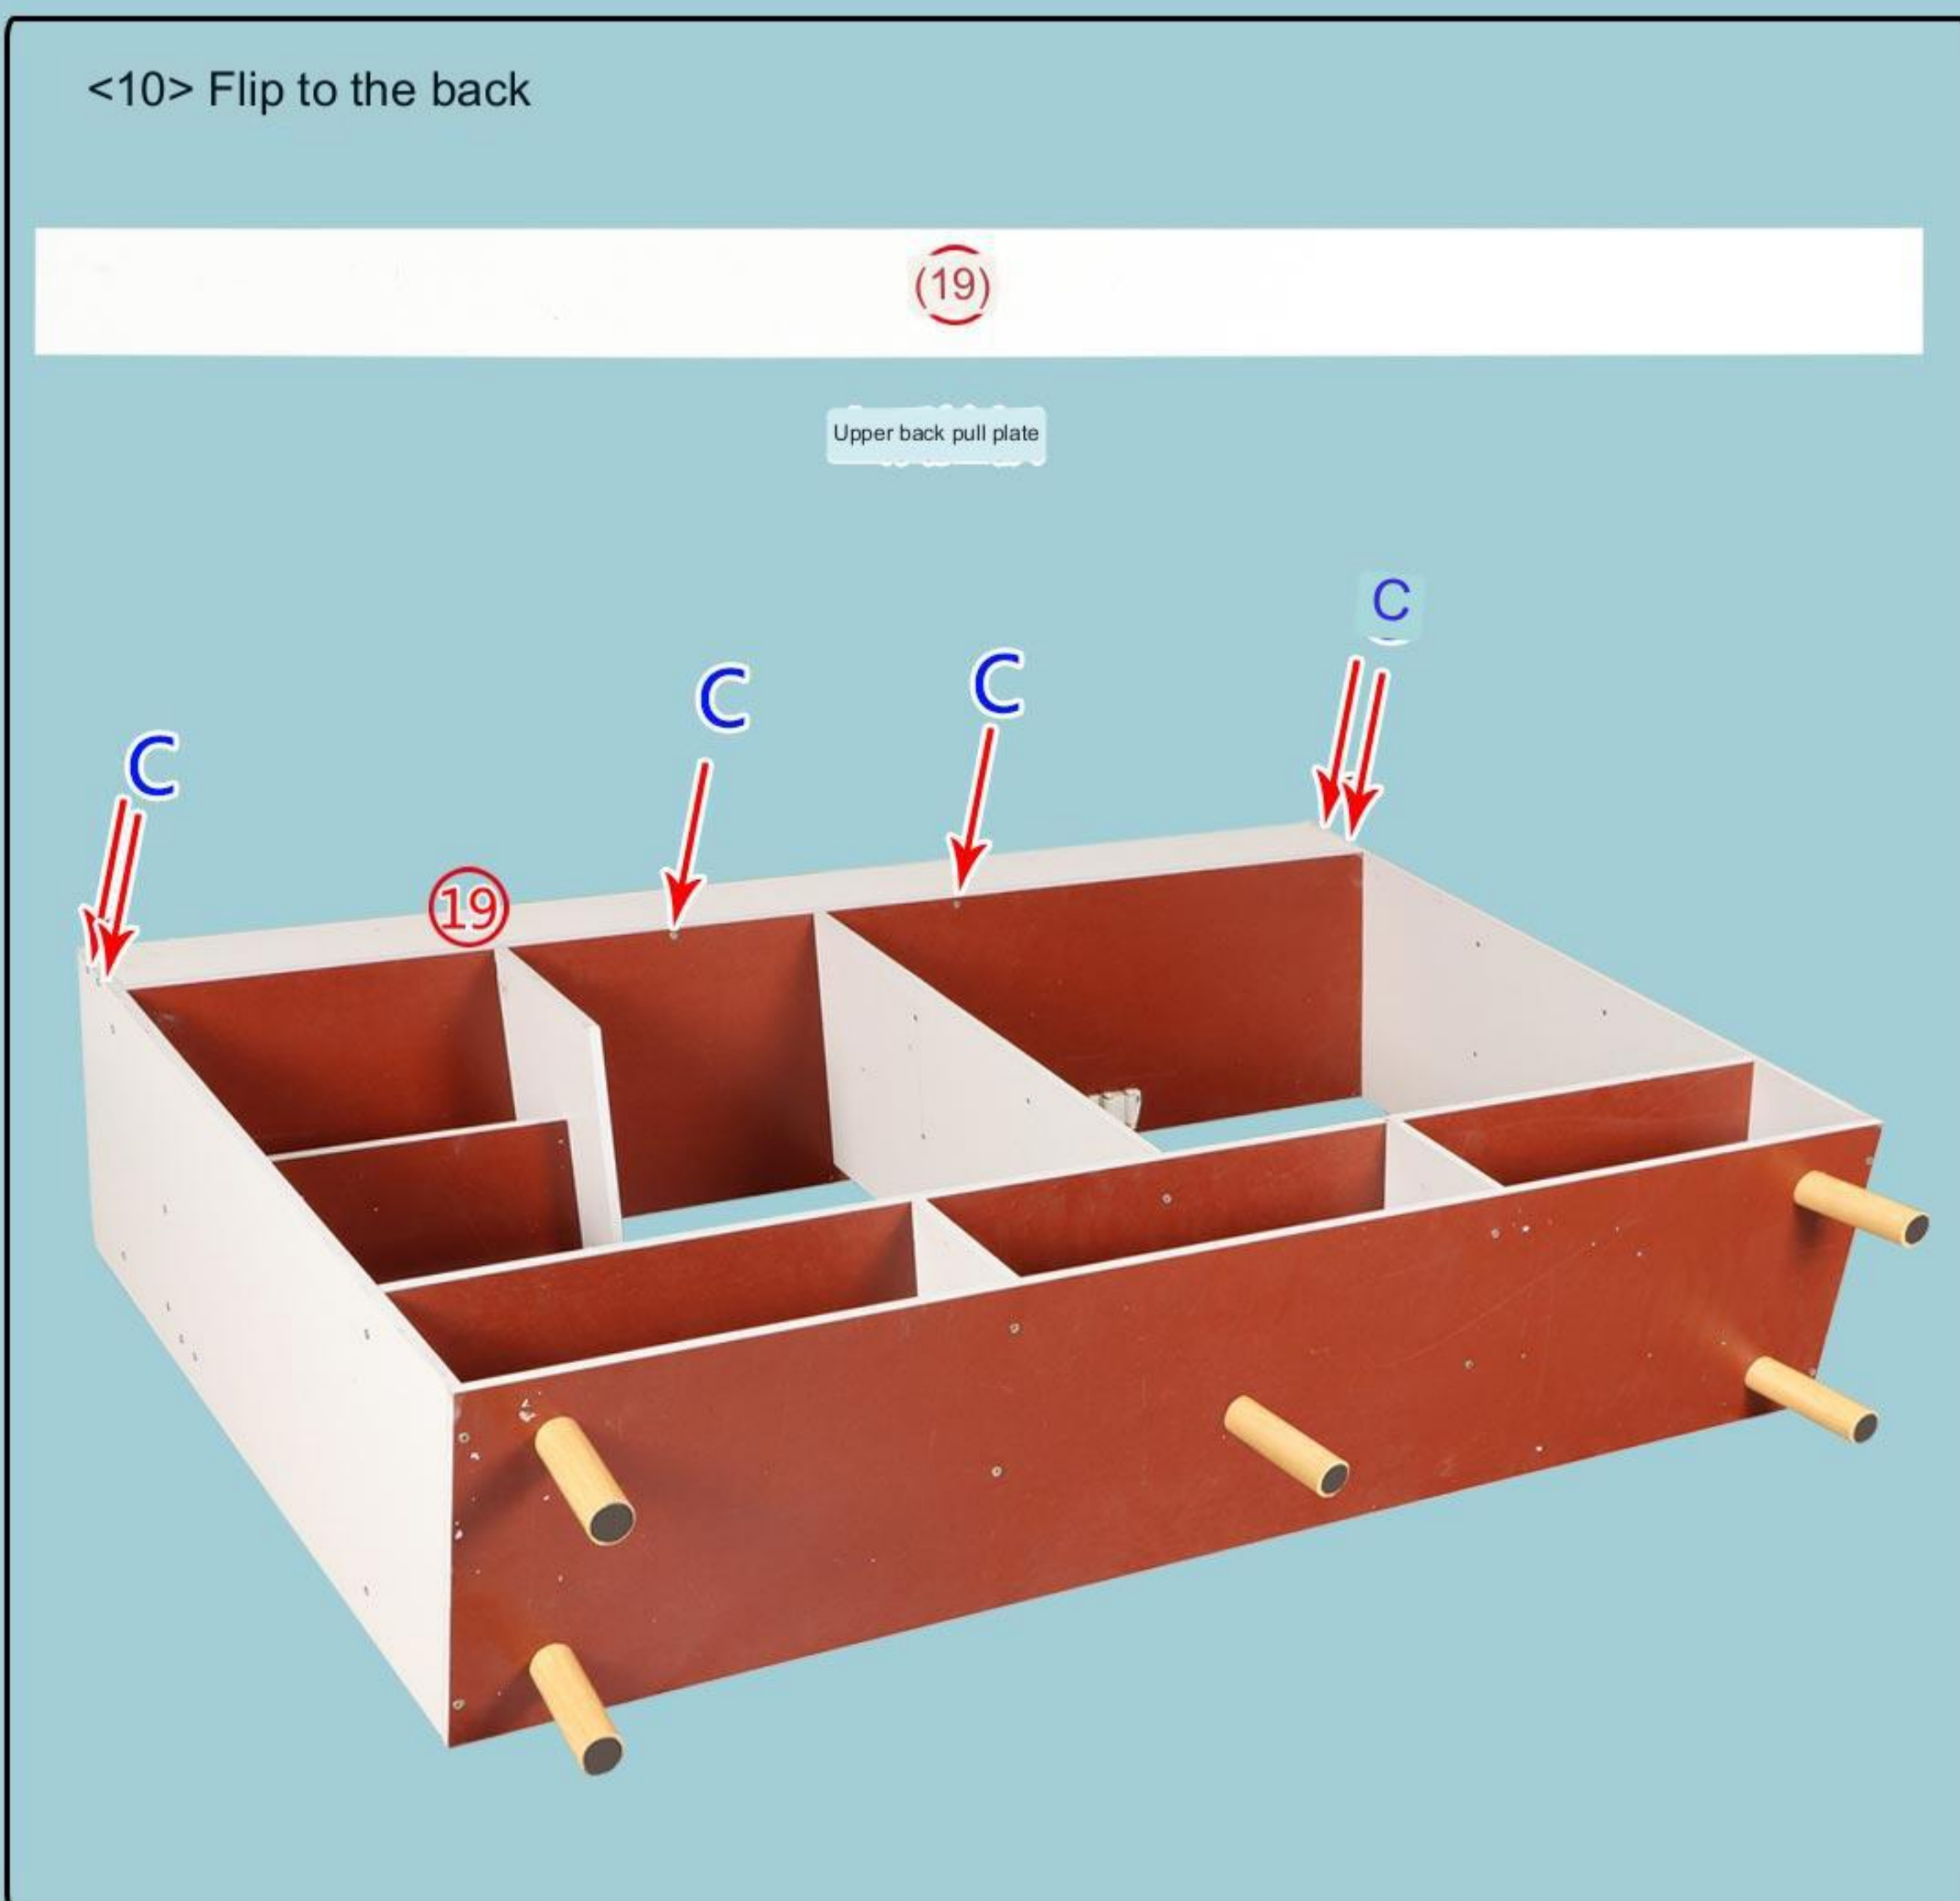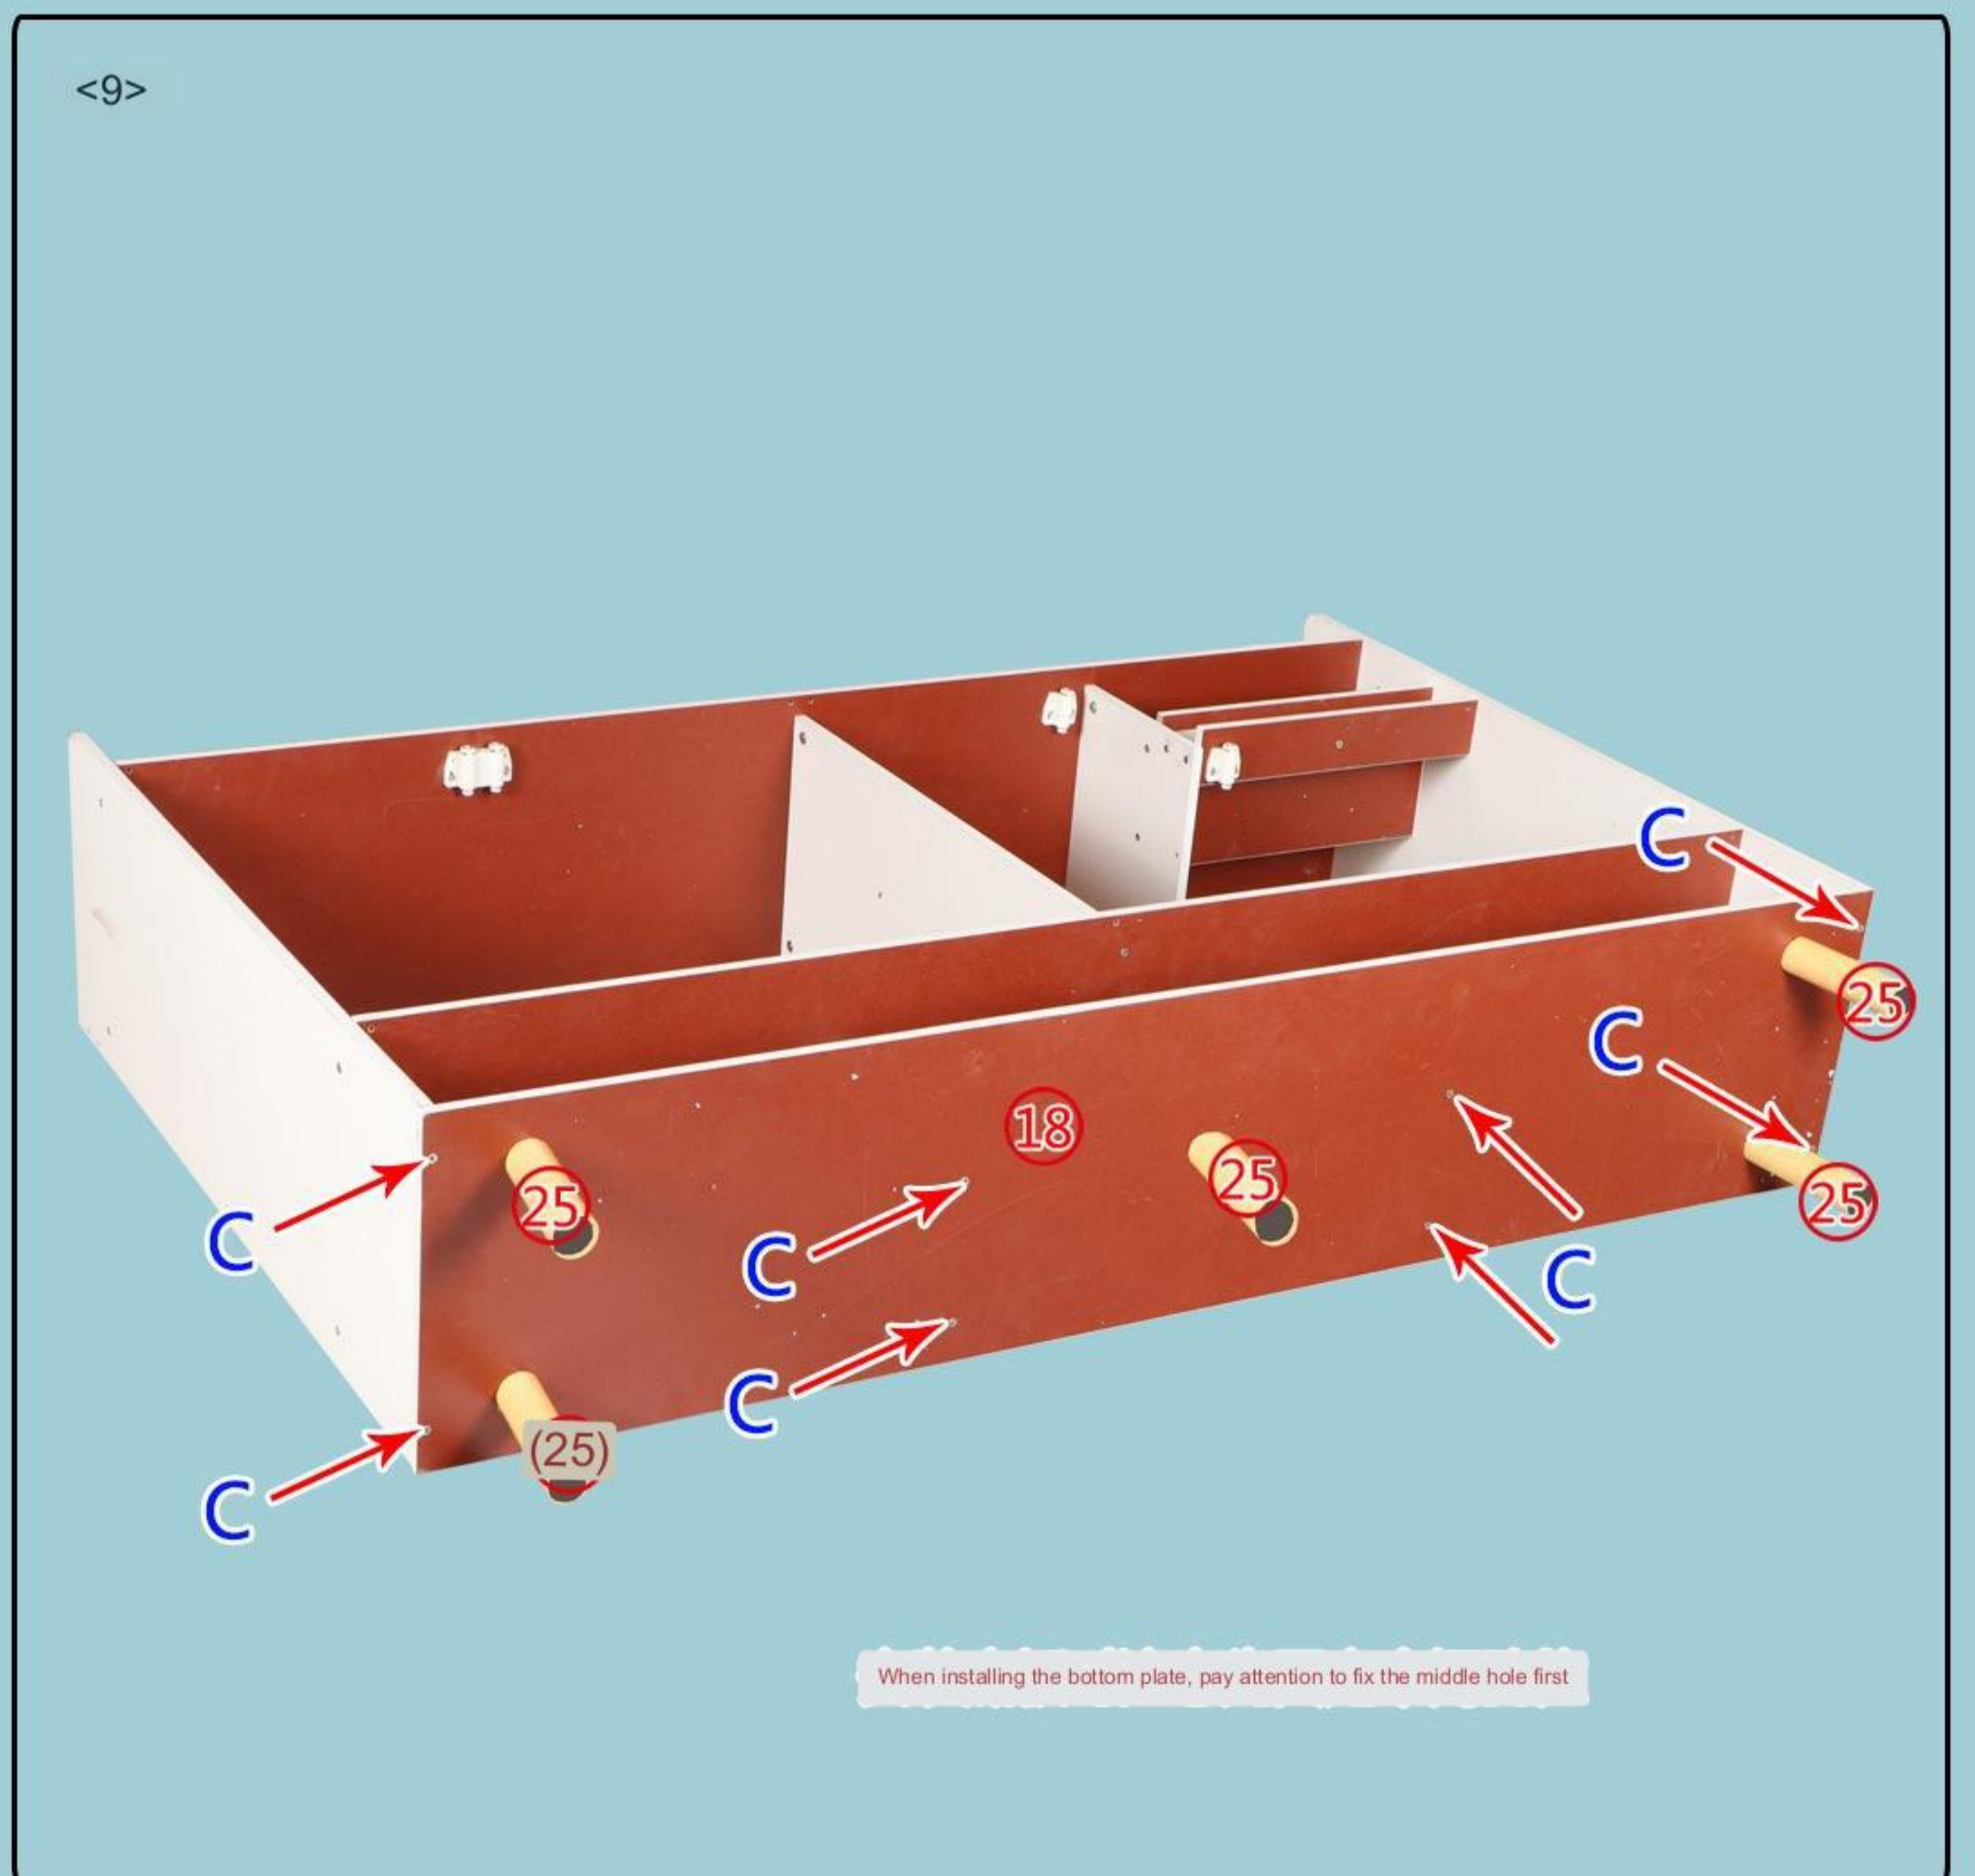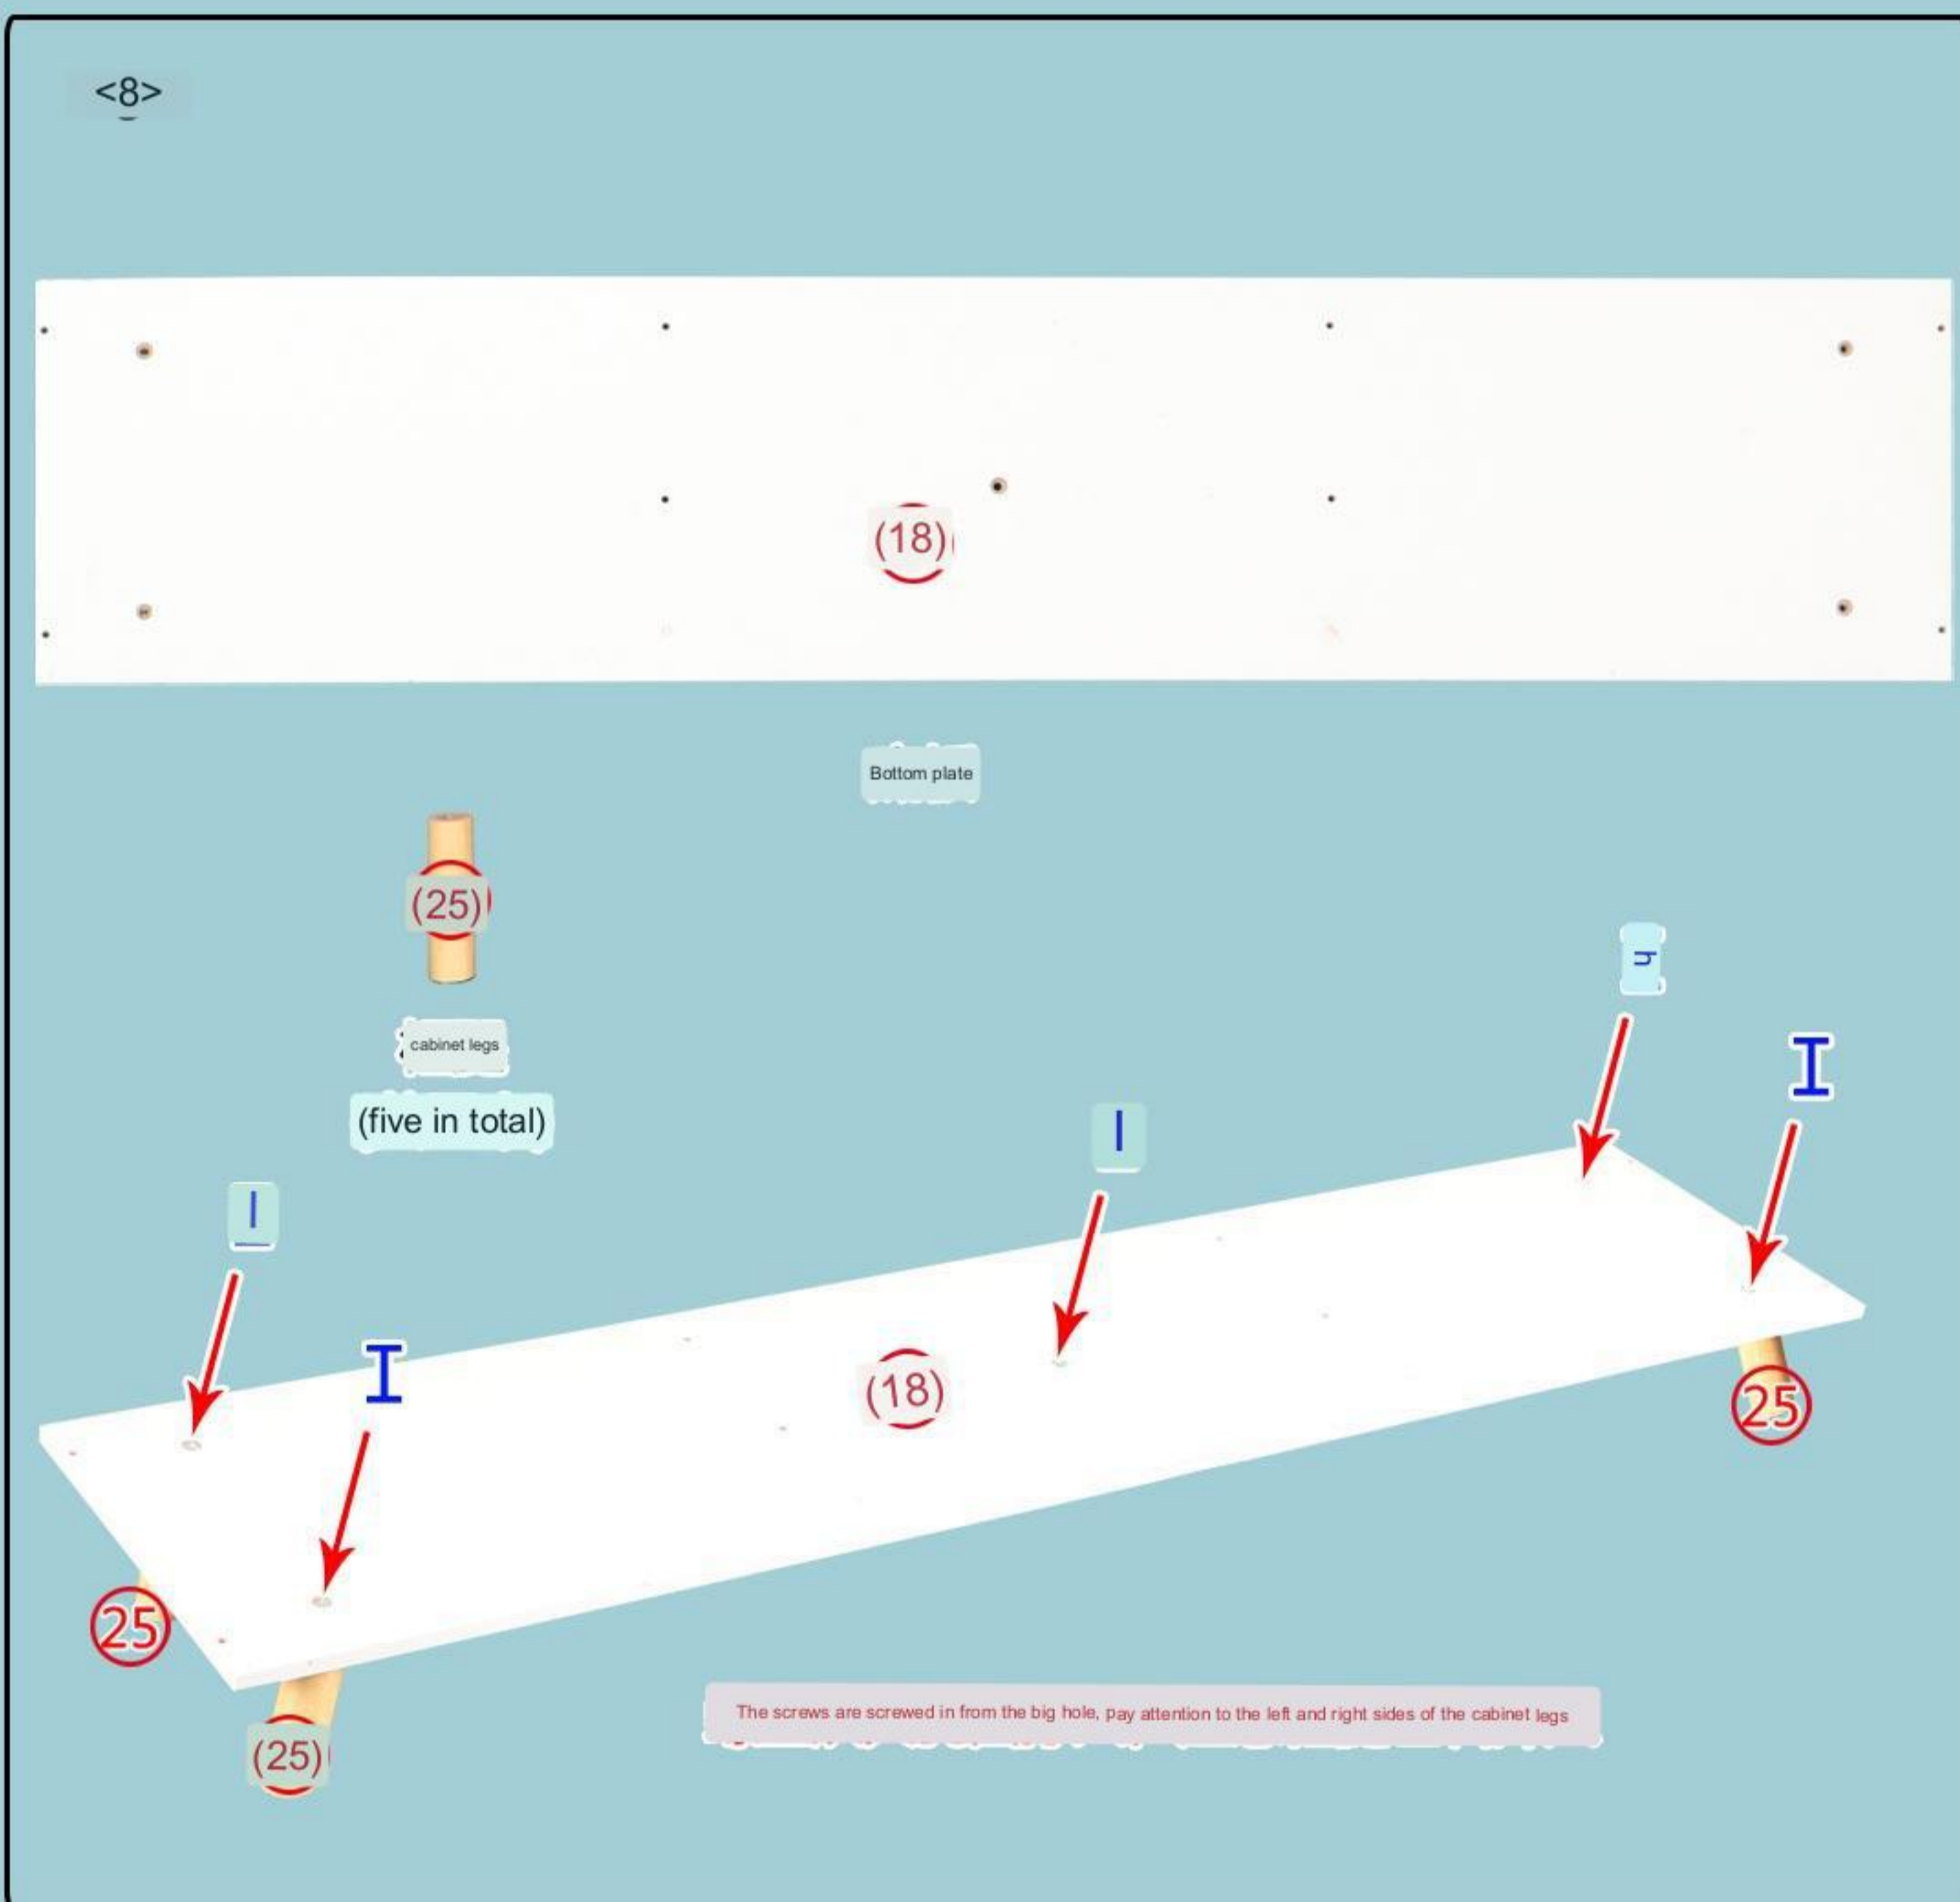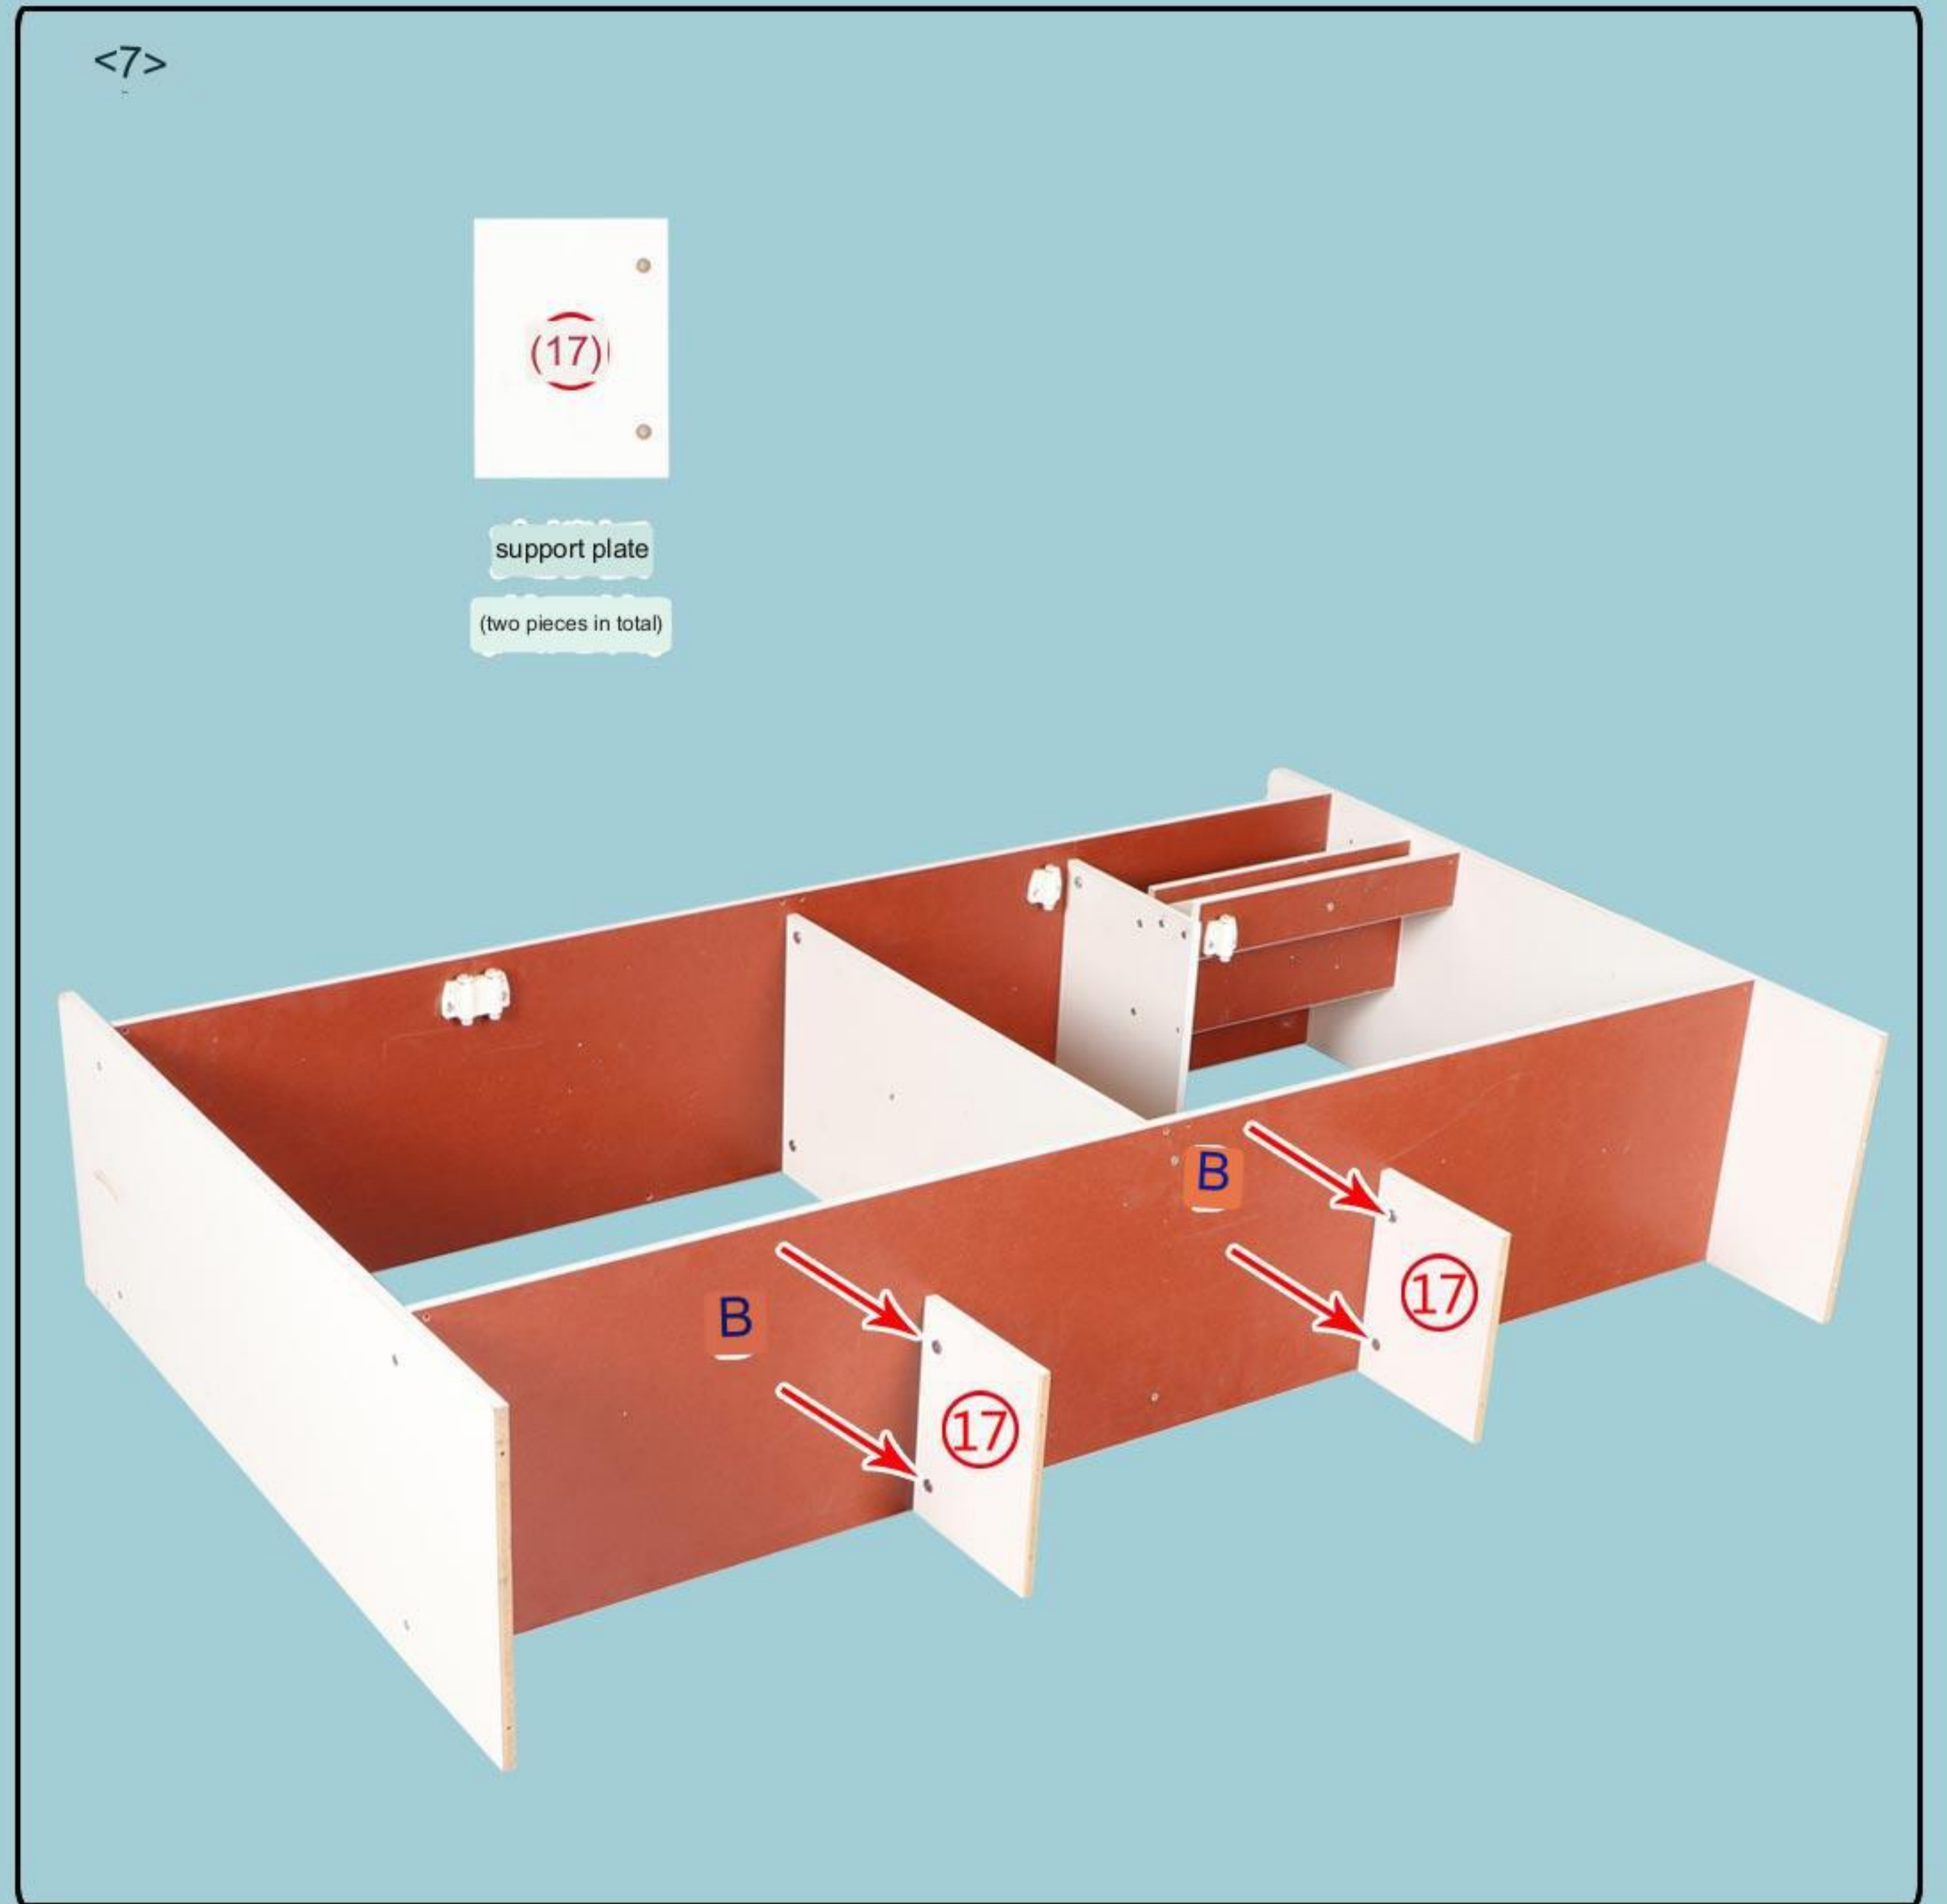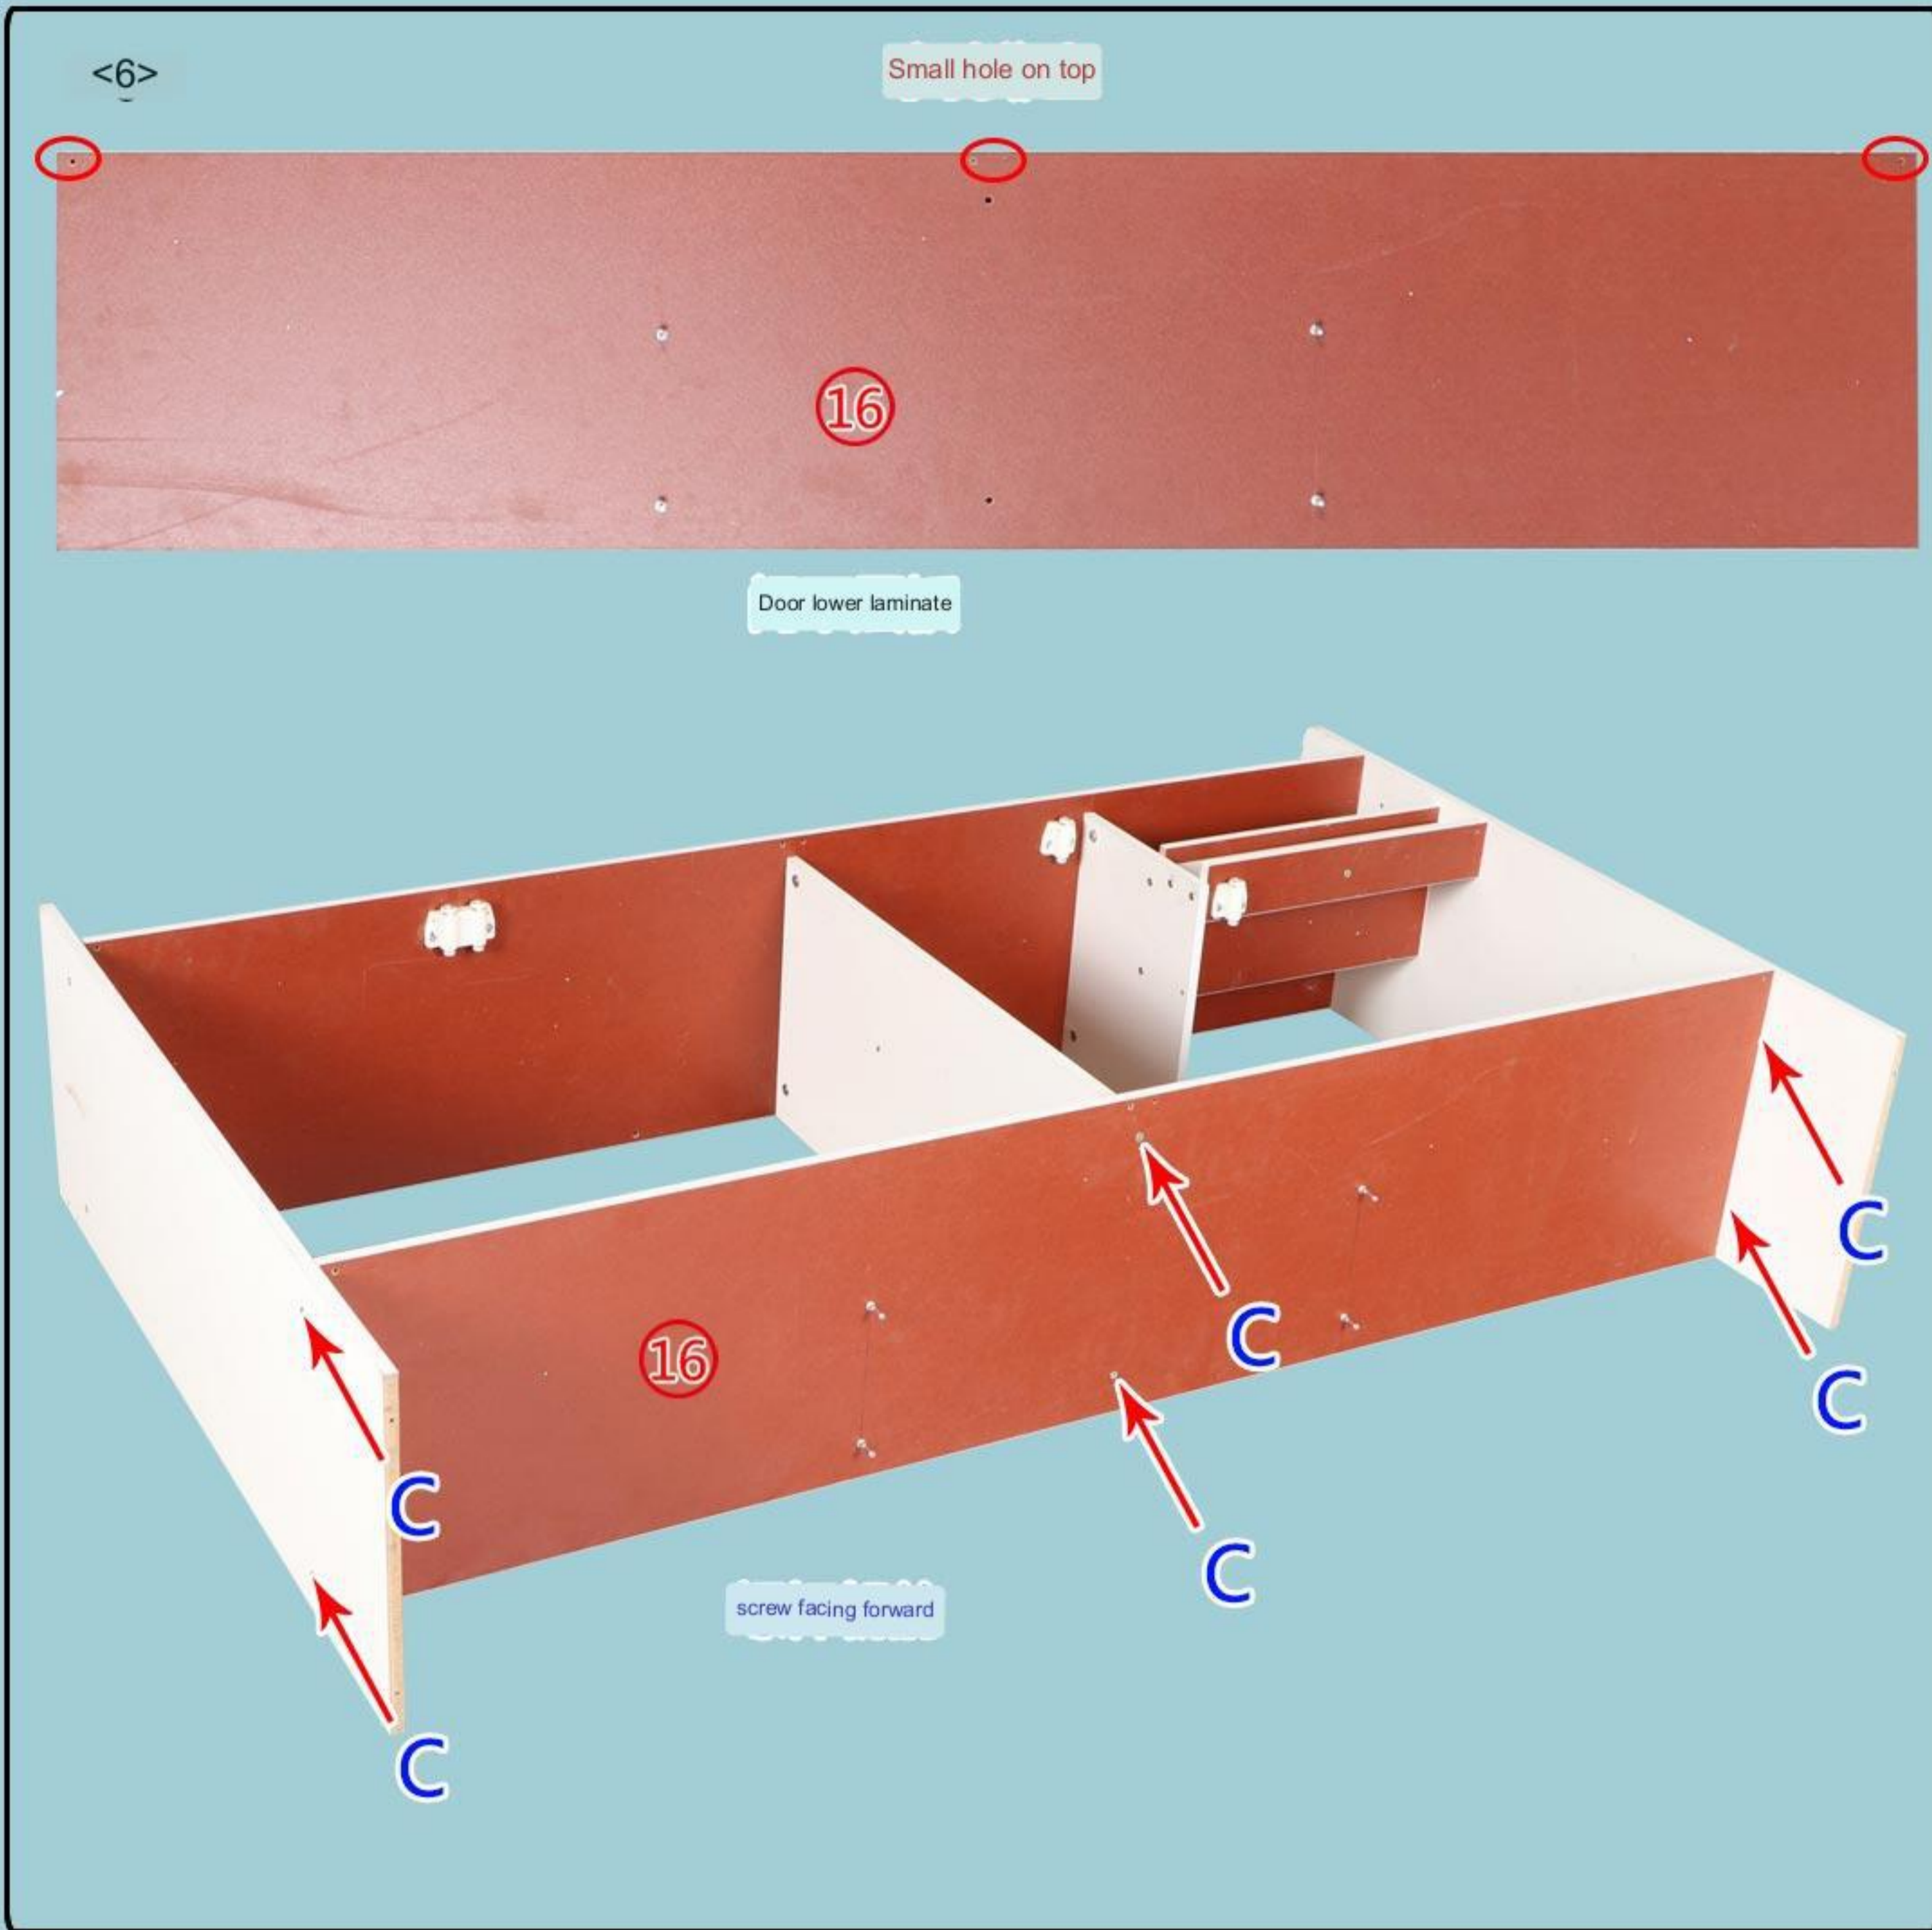

<12> The overall alignment, facing forward



<13> Put in large and small laminates



<14>



<15> Slowly push into the drawer

Method 1: Insert the metal pin after pushing in the drawer.

Method 2: After inserting the metal pin, the drawer is tilted 45° push in.

Complete drawing!

