




Instructions for using eccentric bolts:





Example

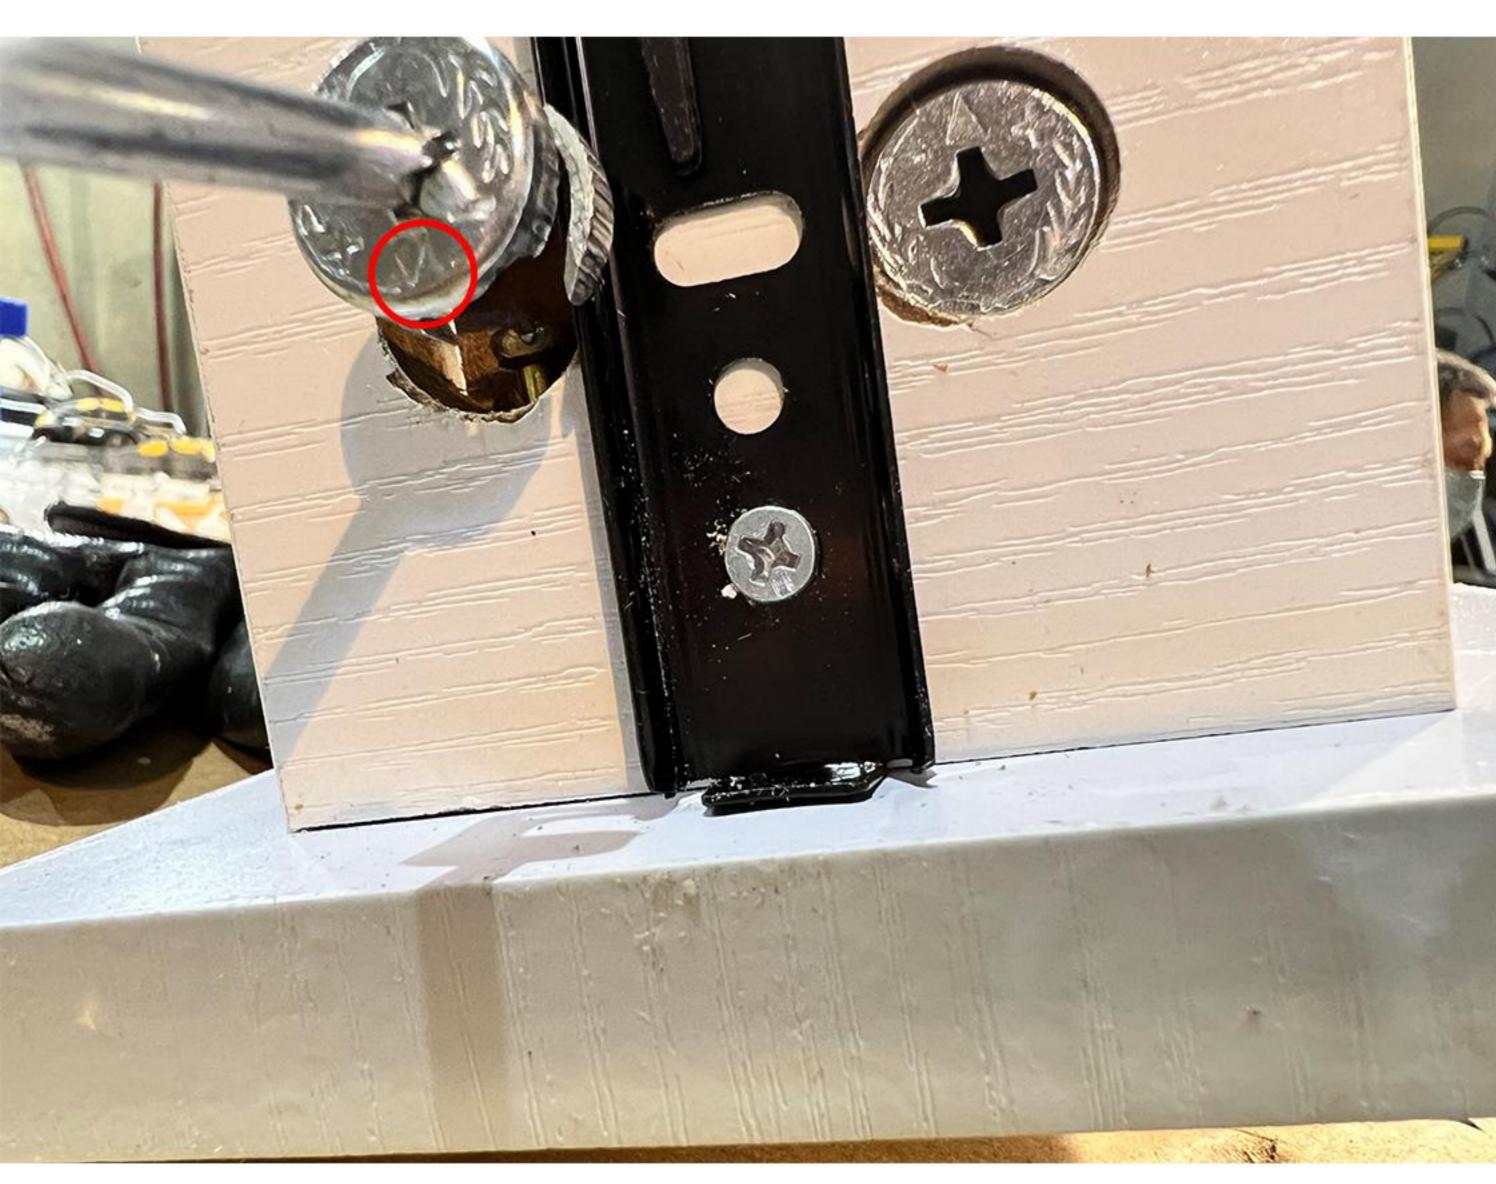


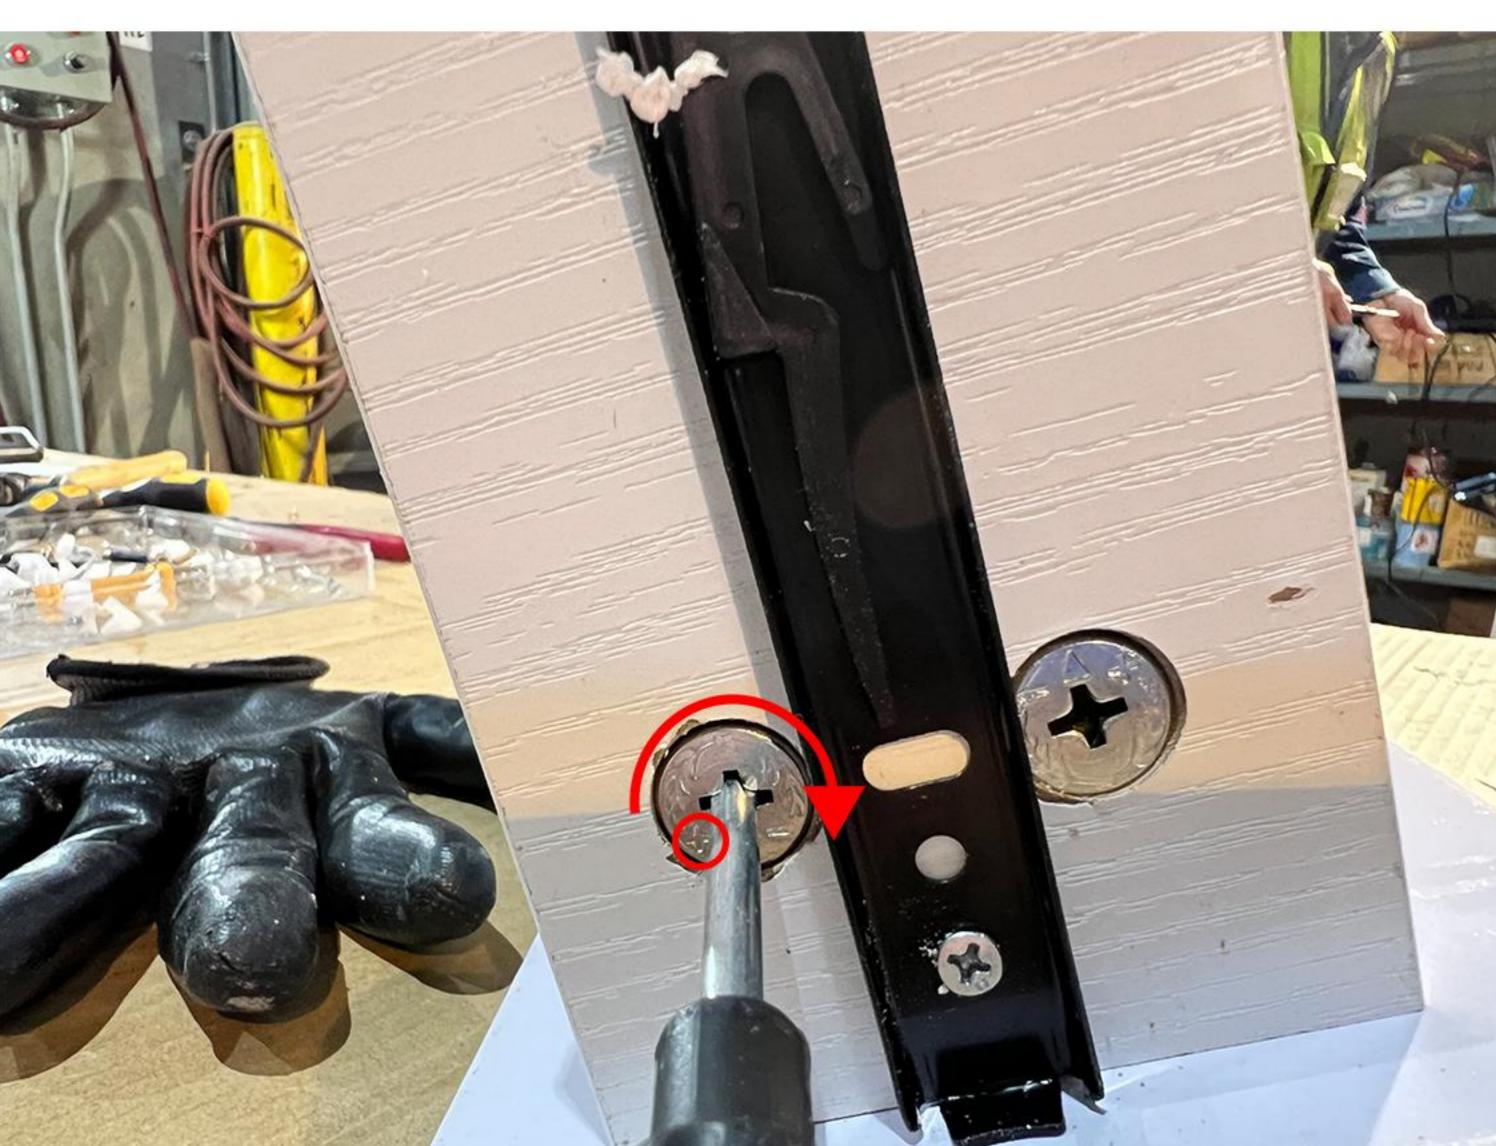

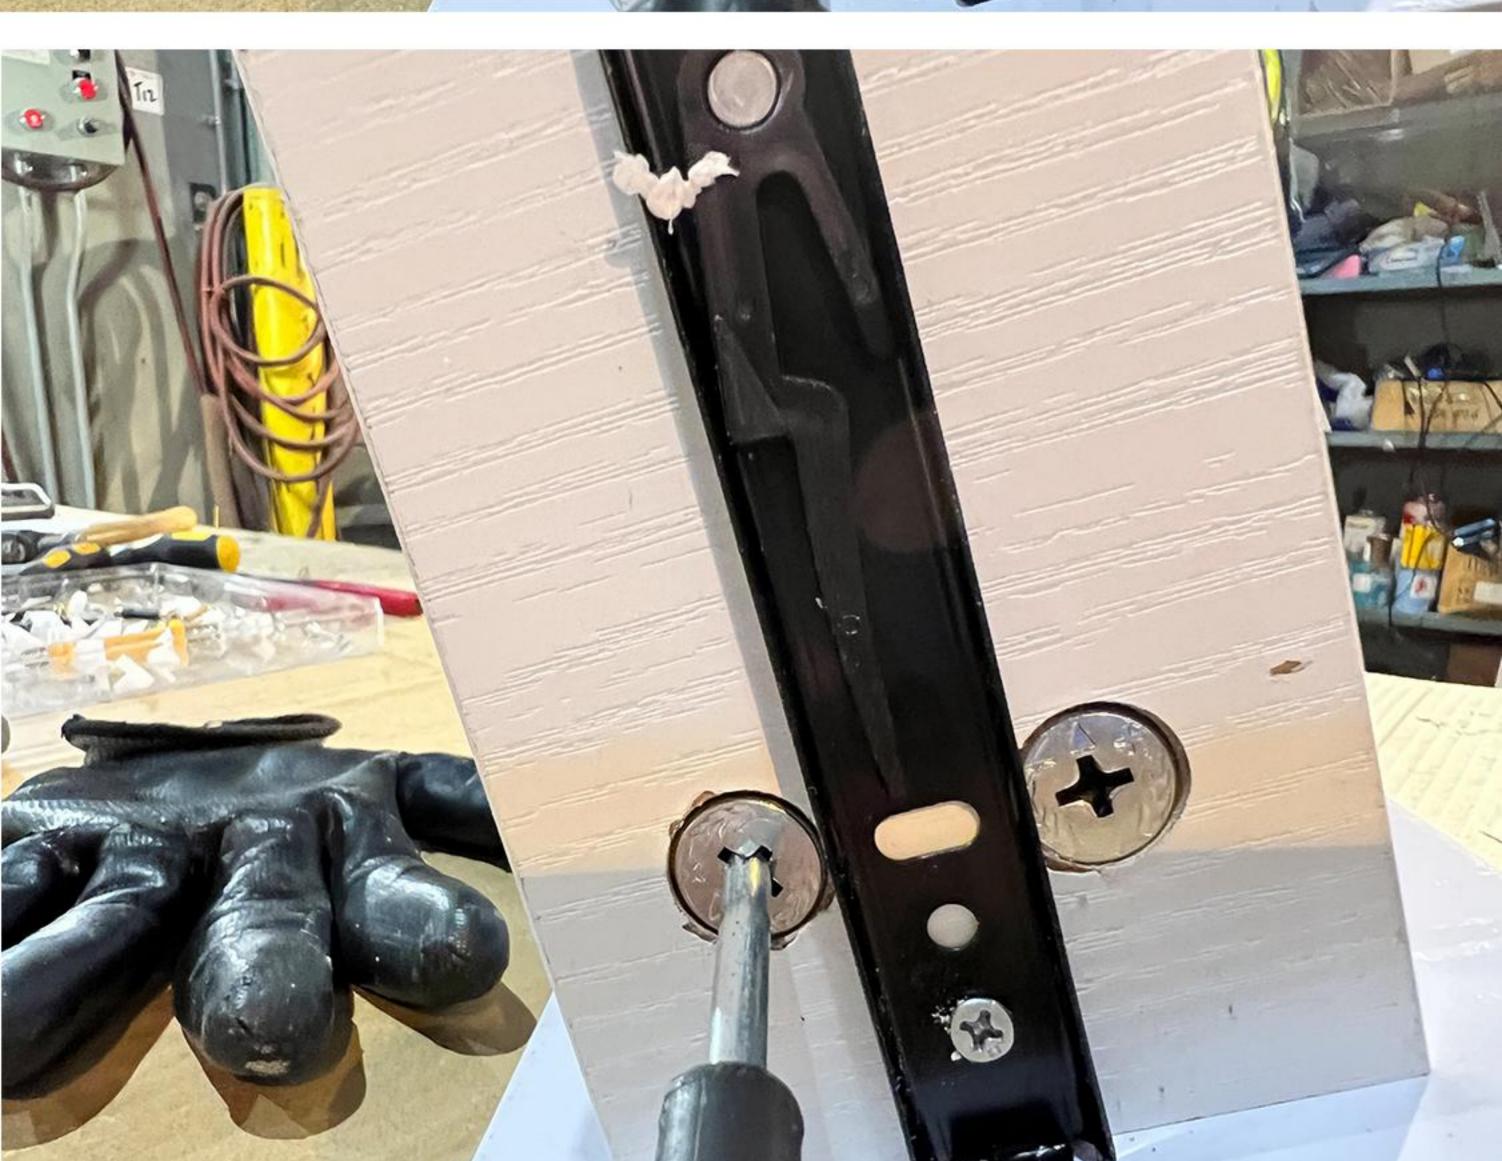


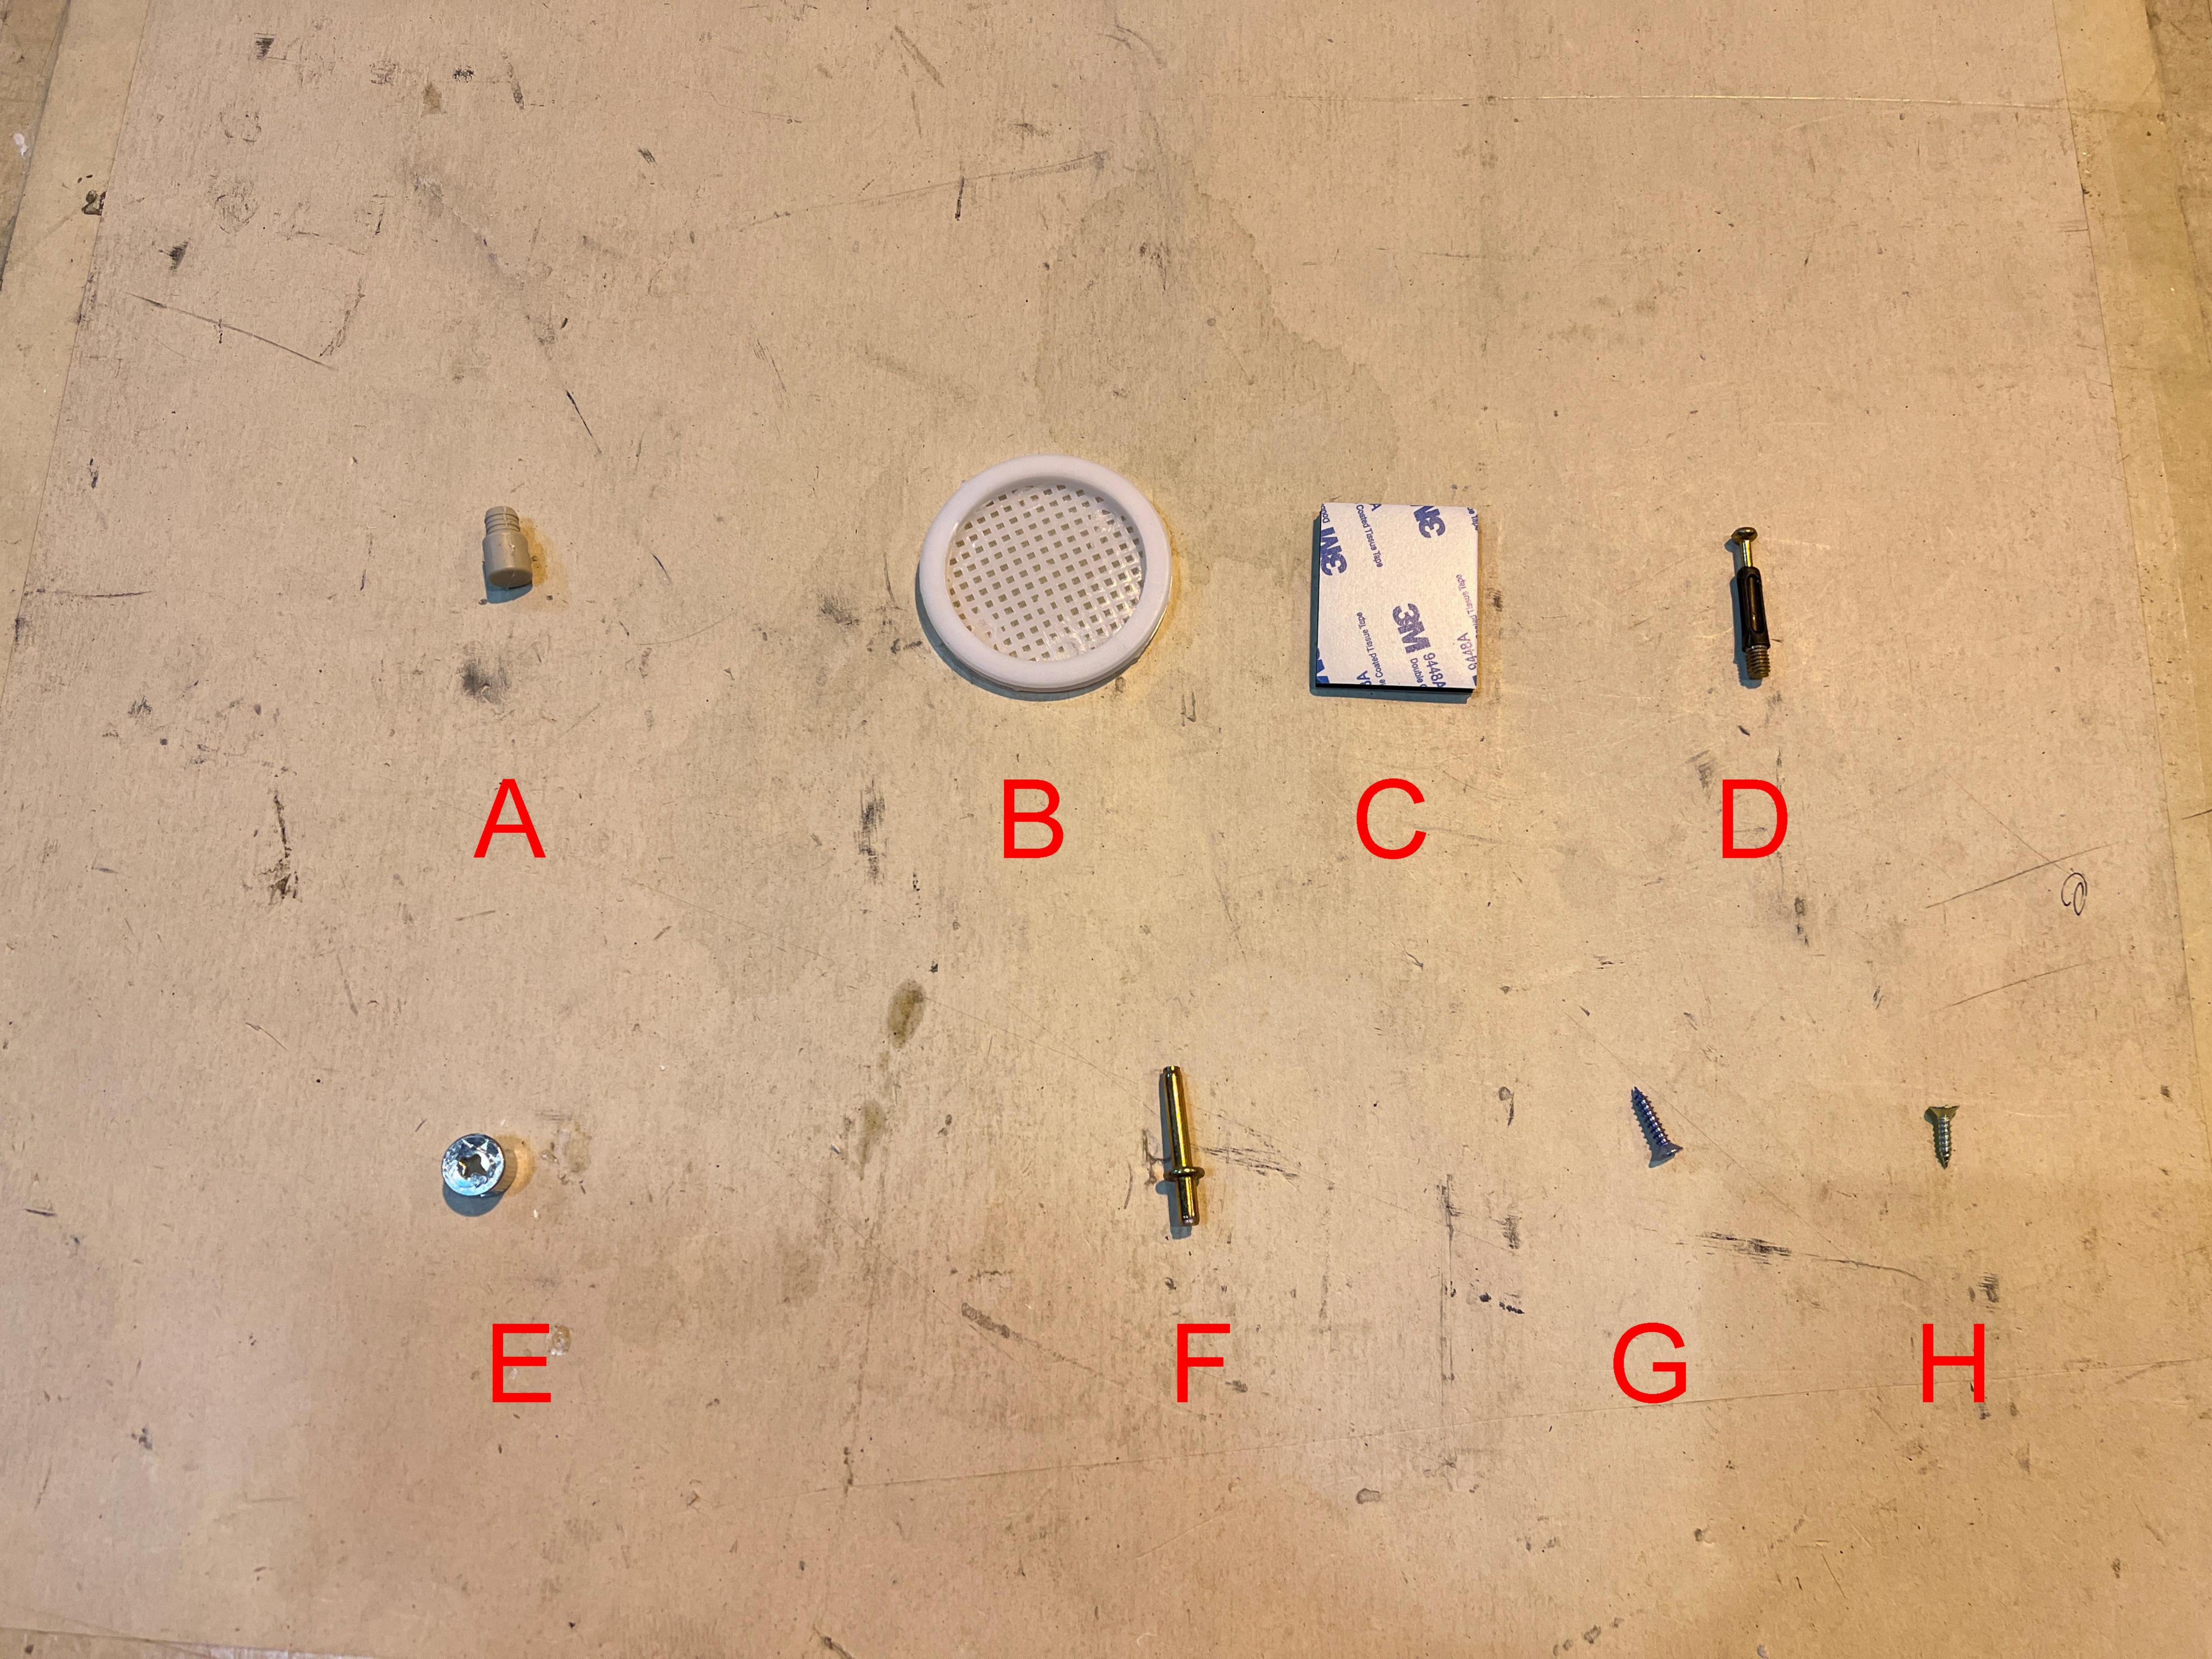


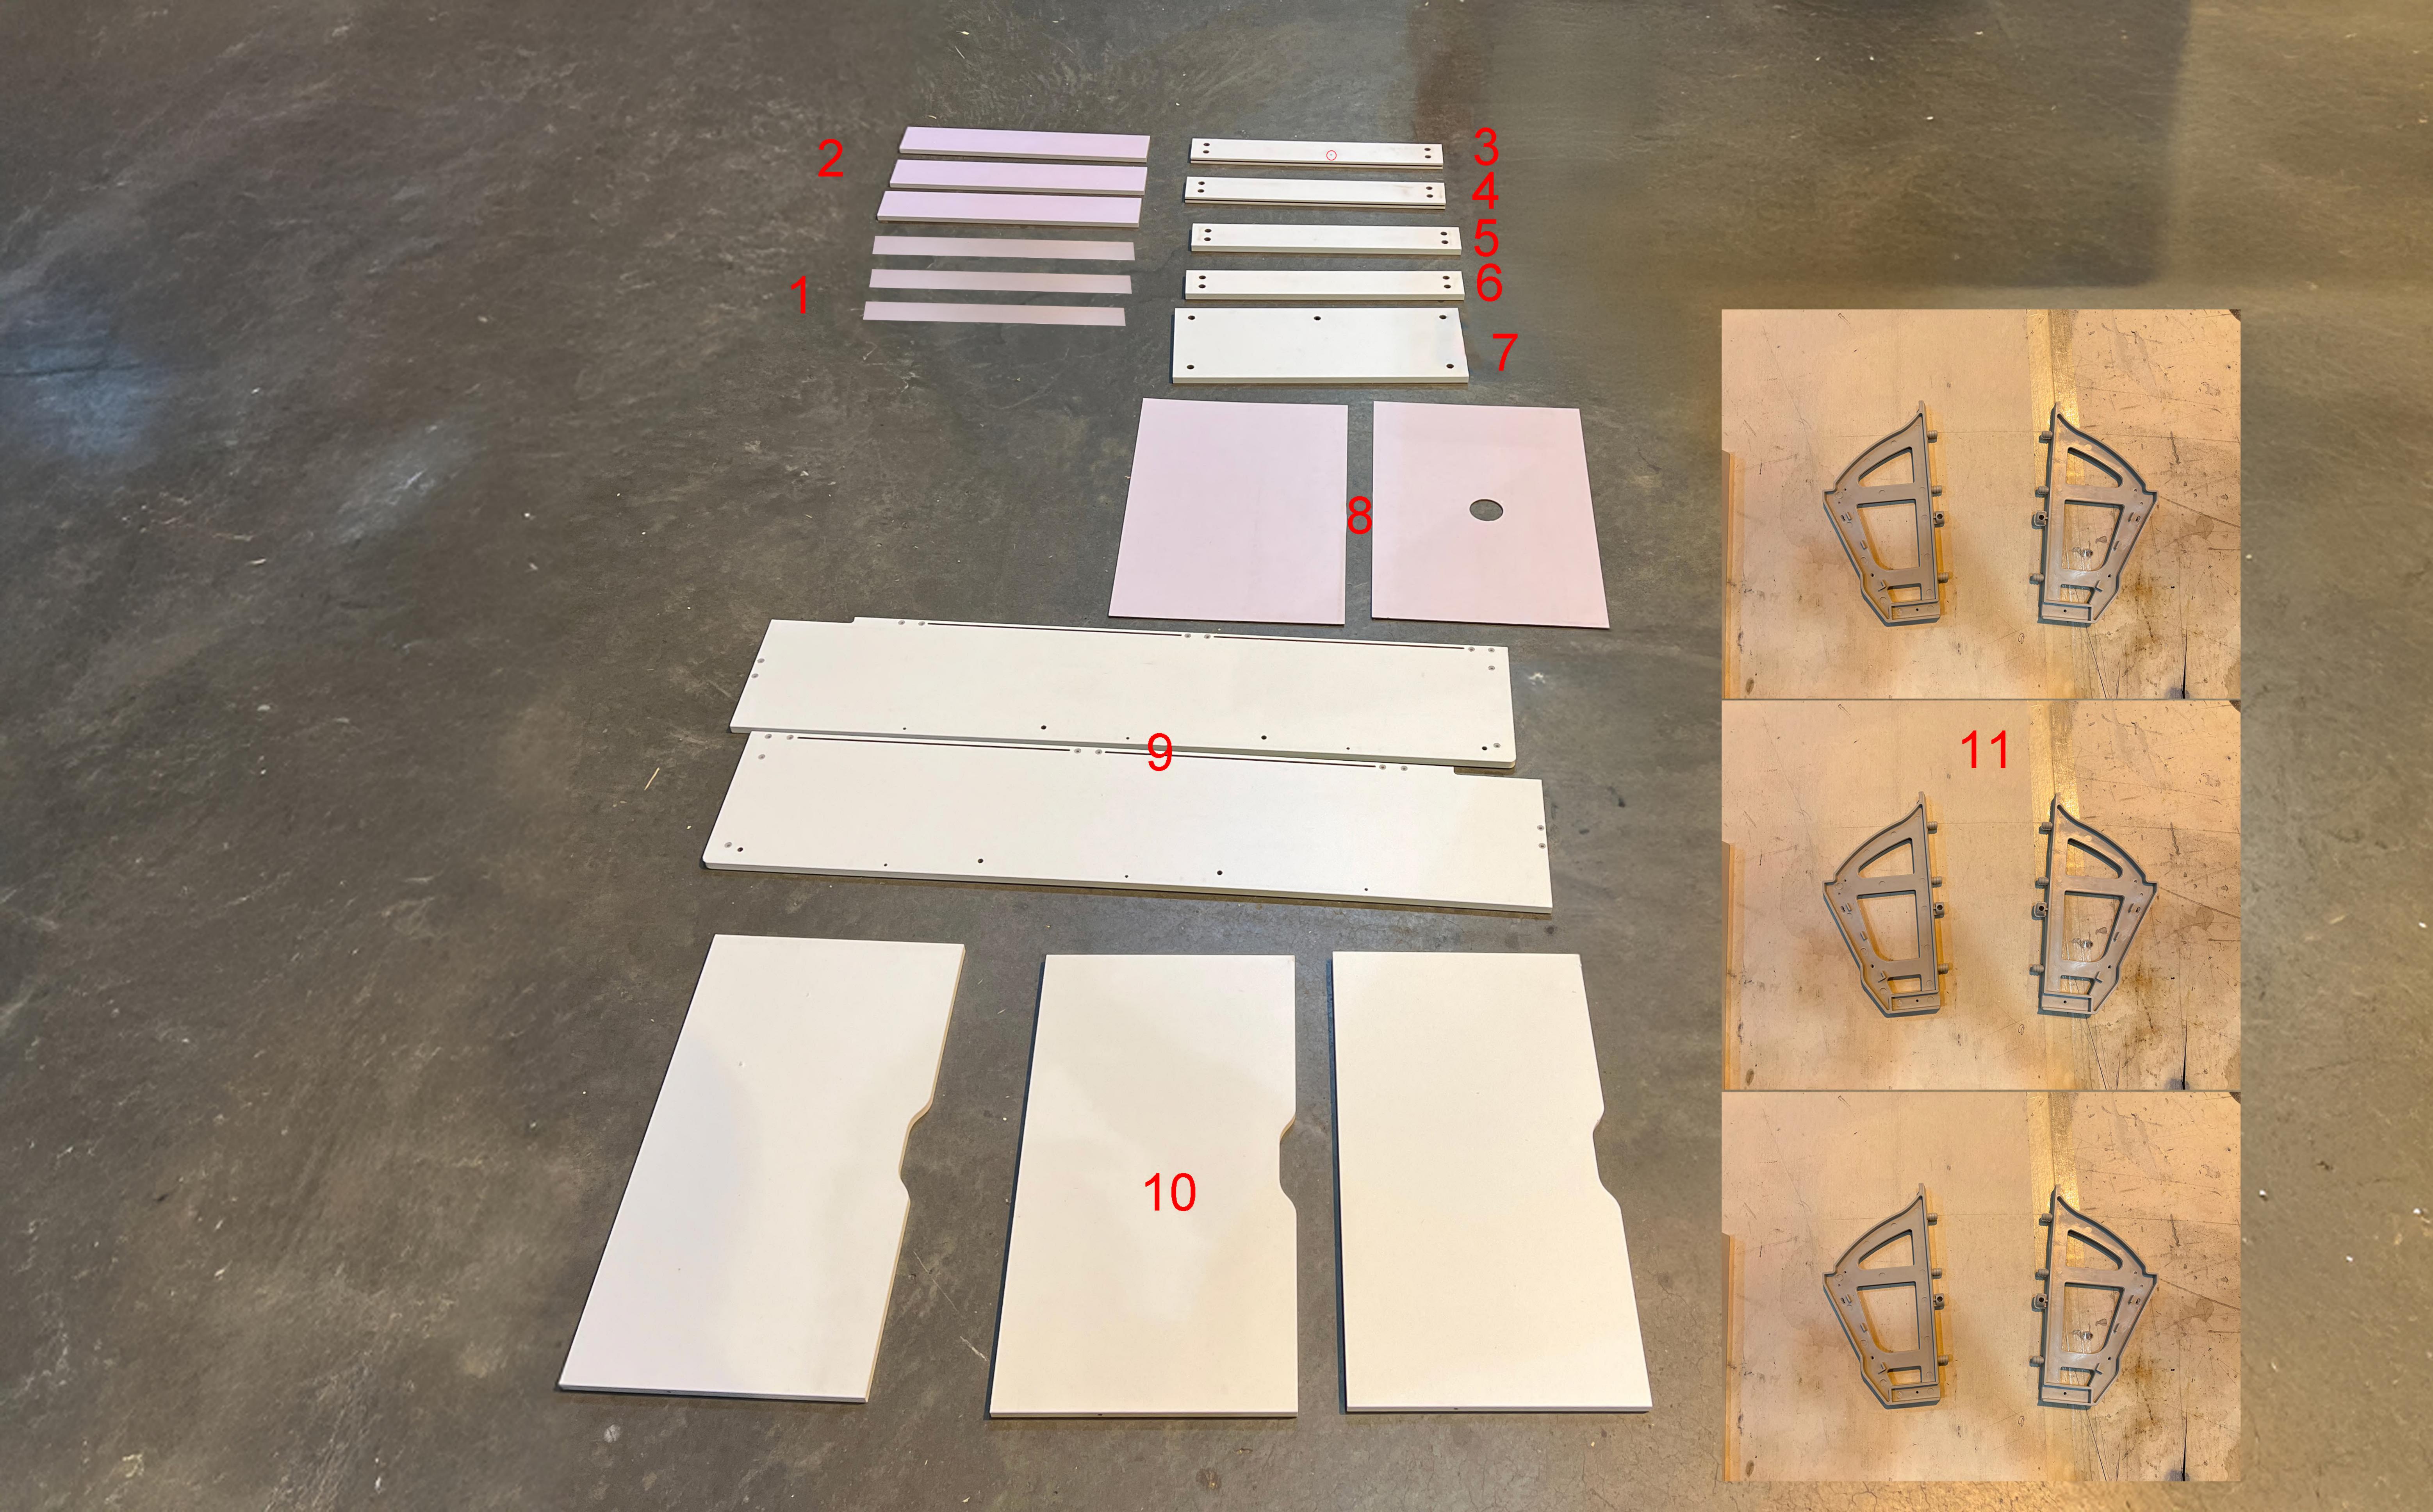


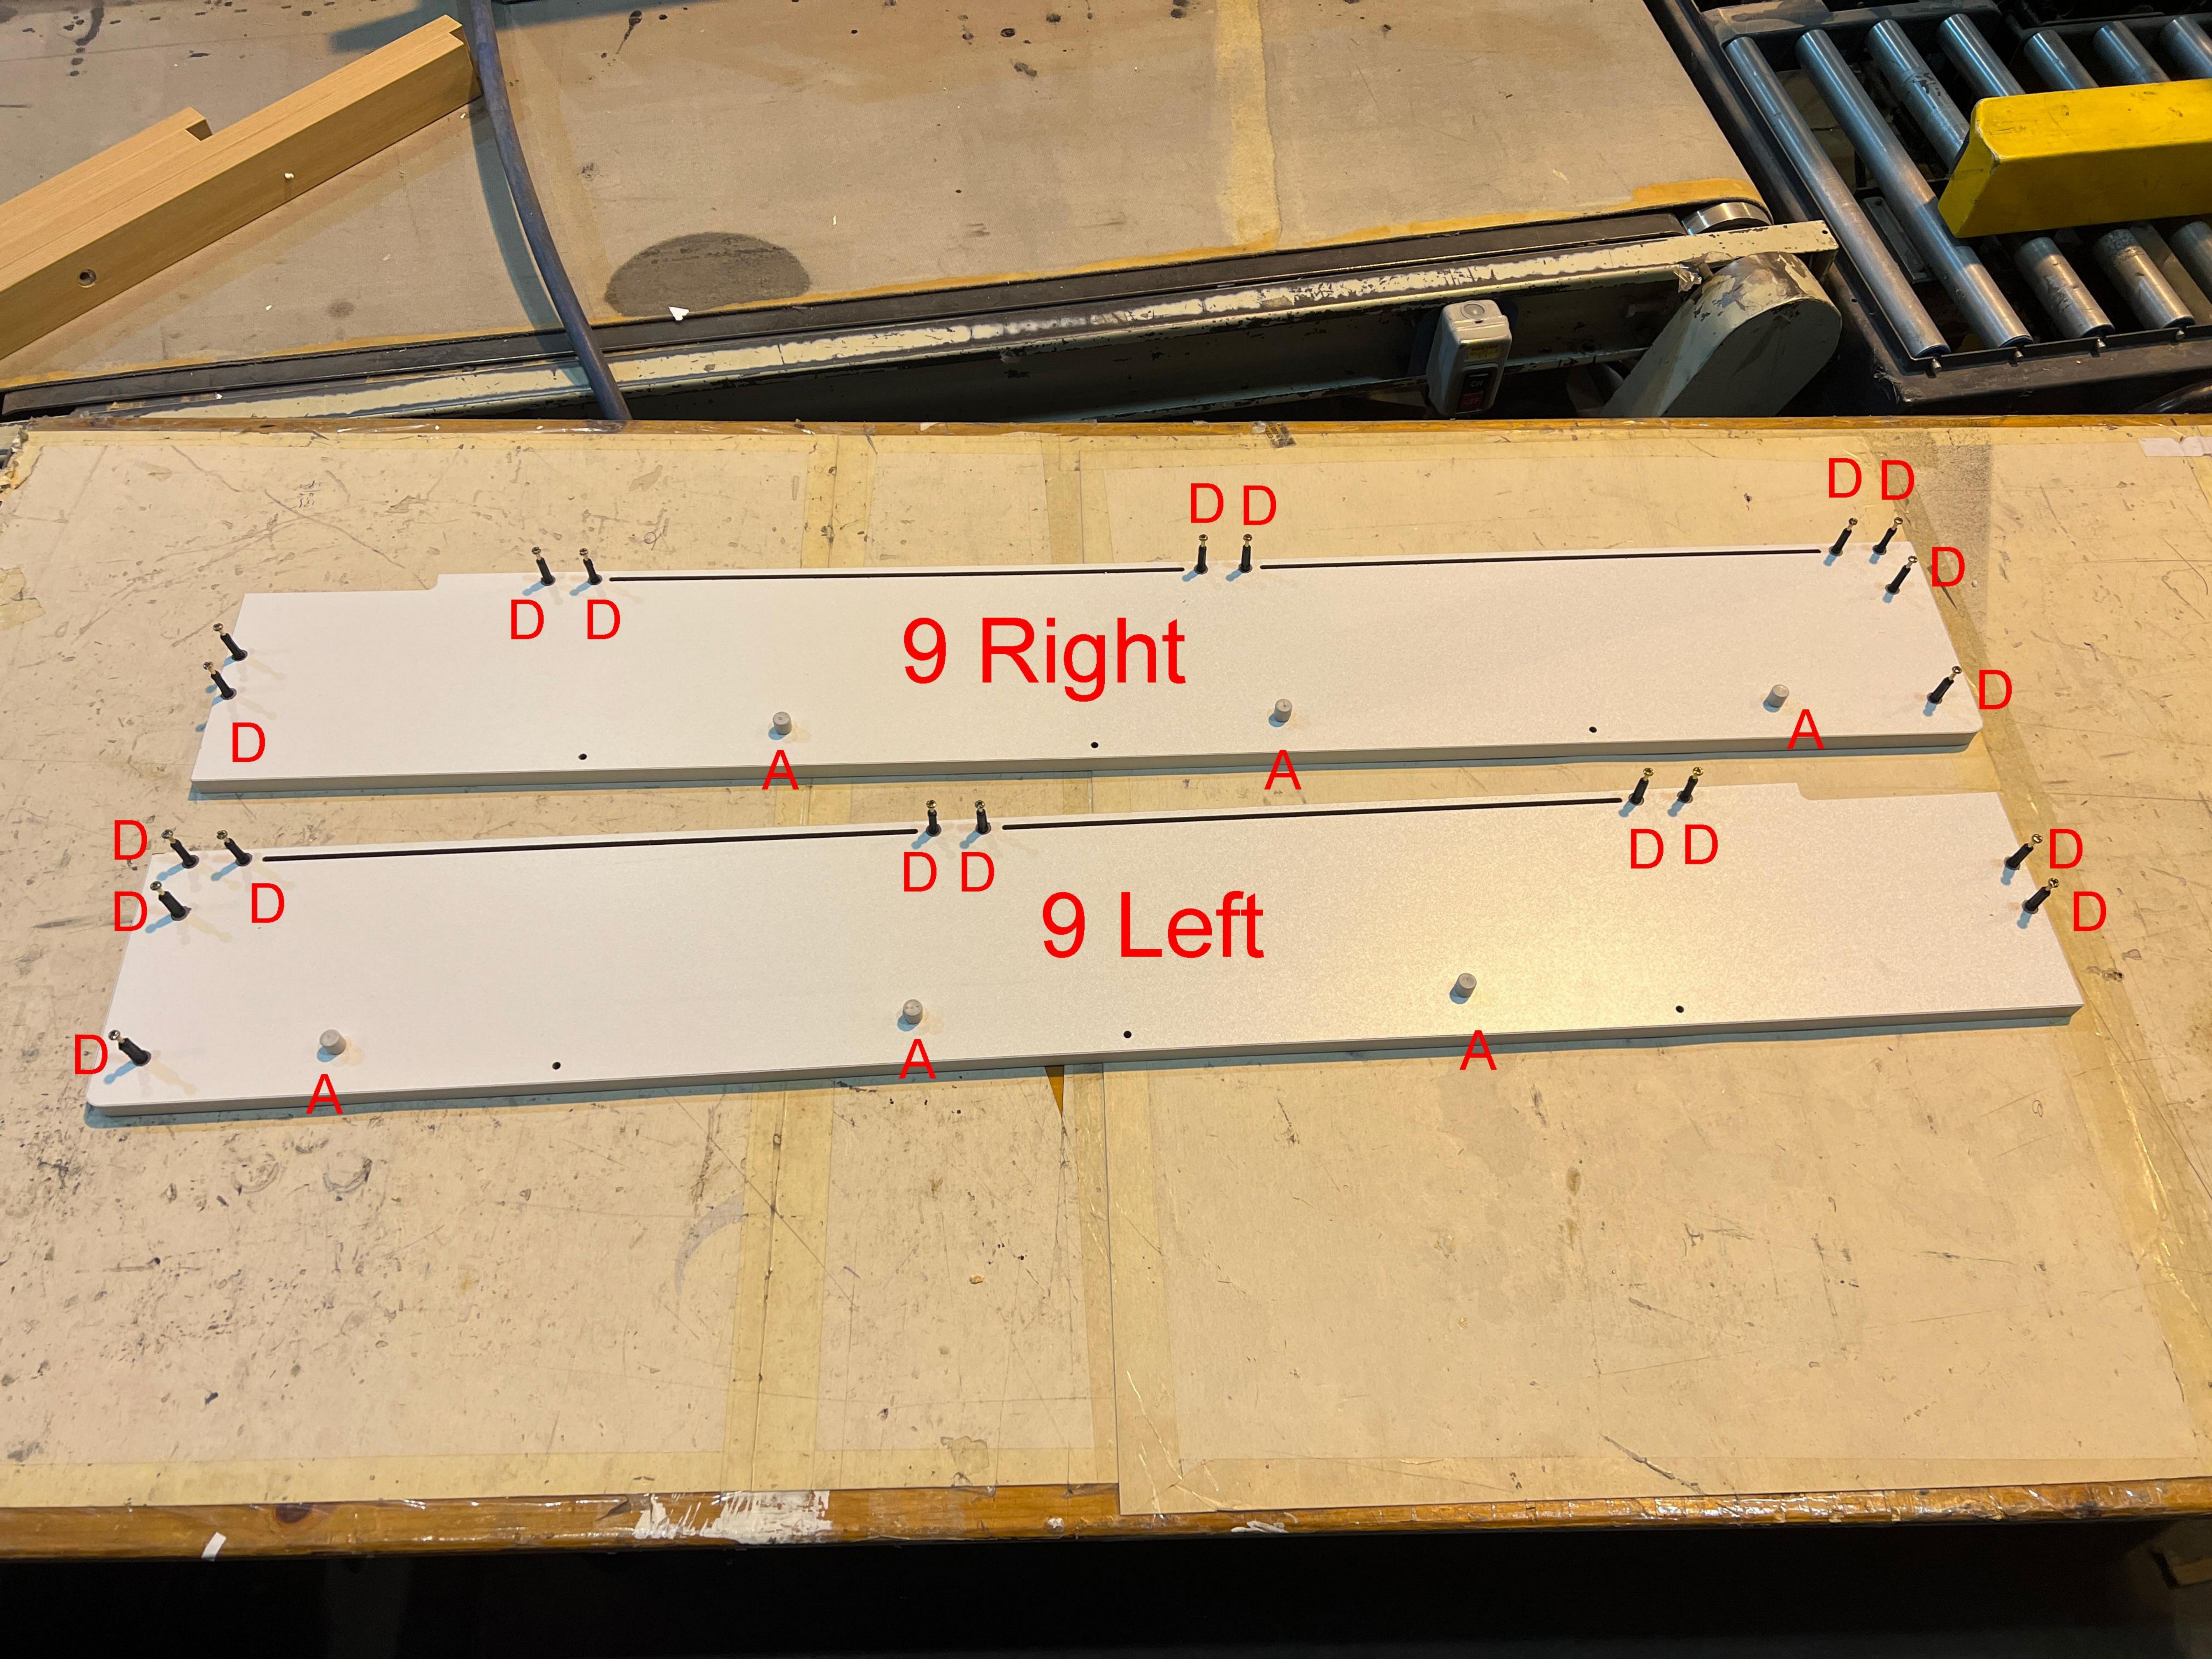





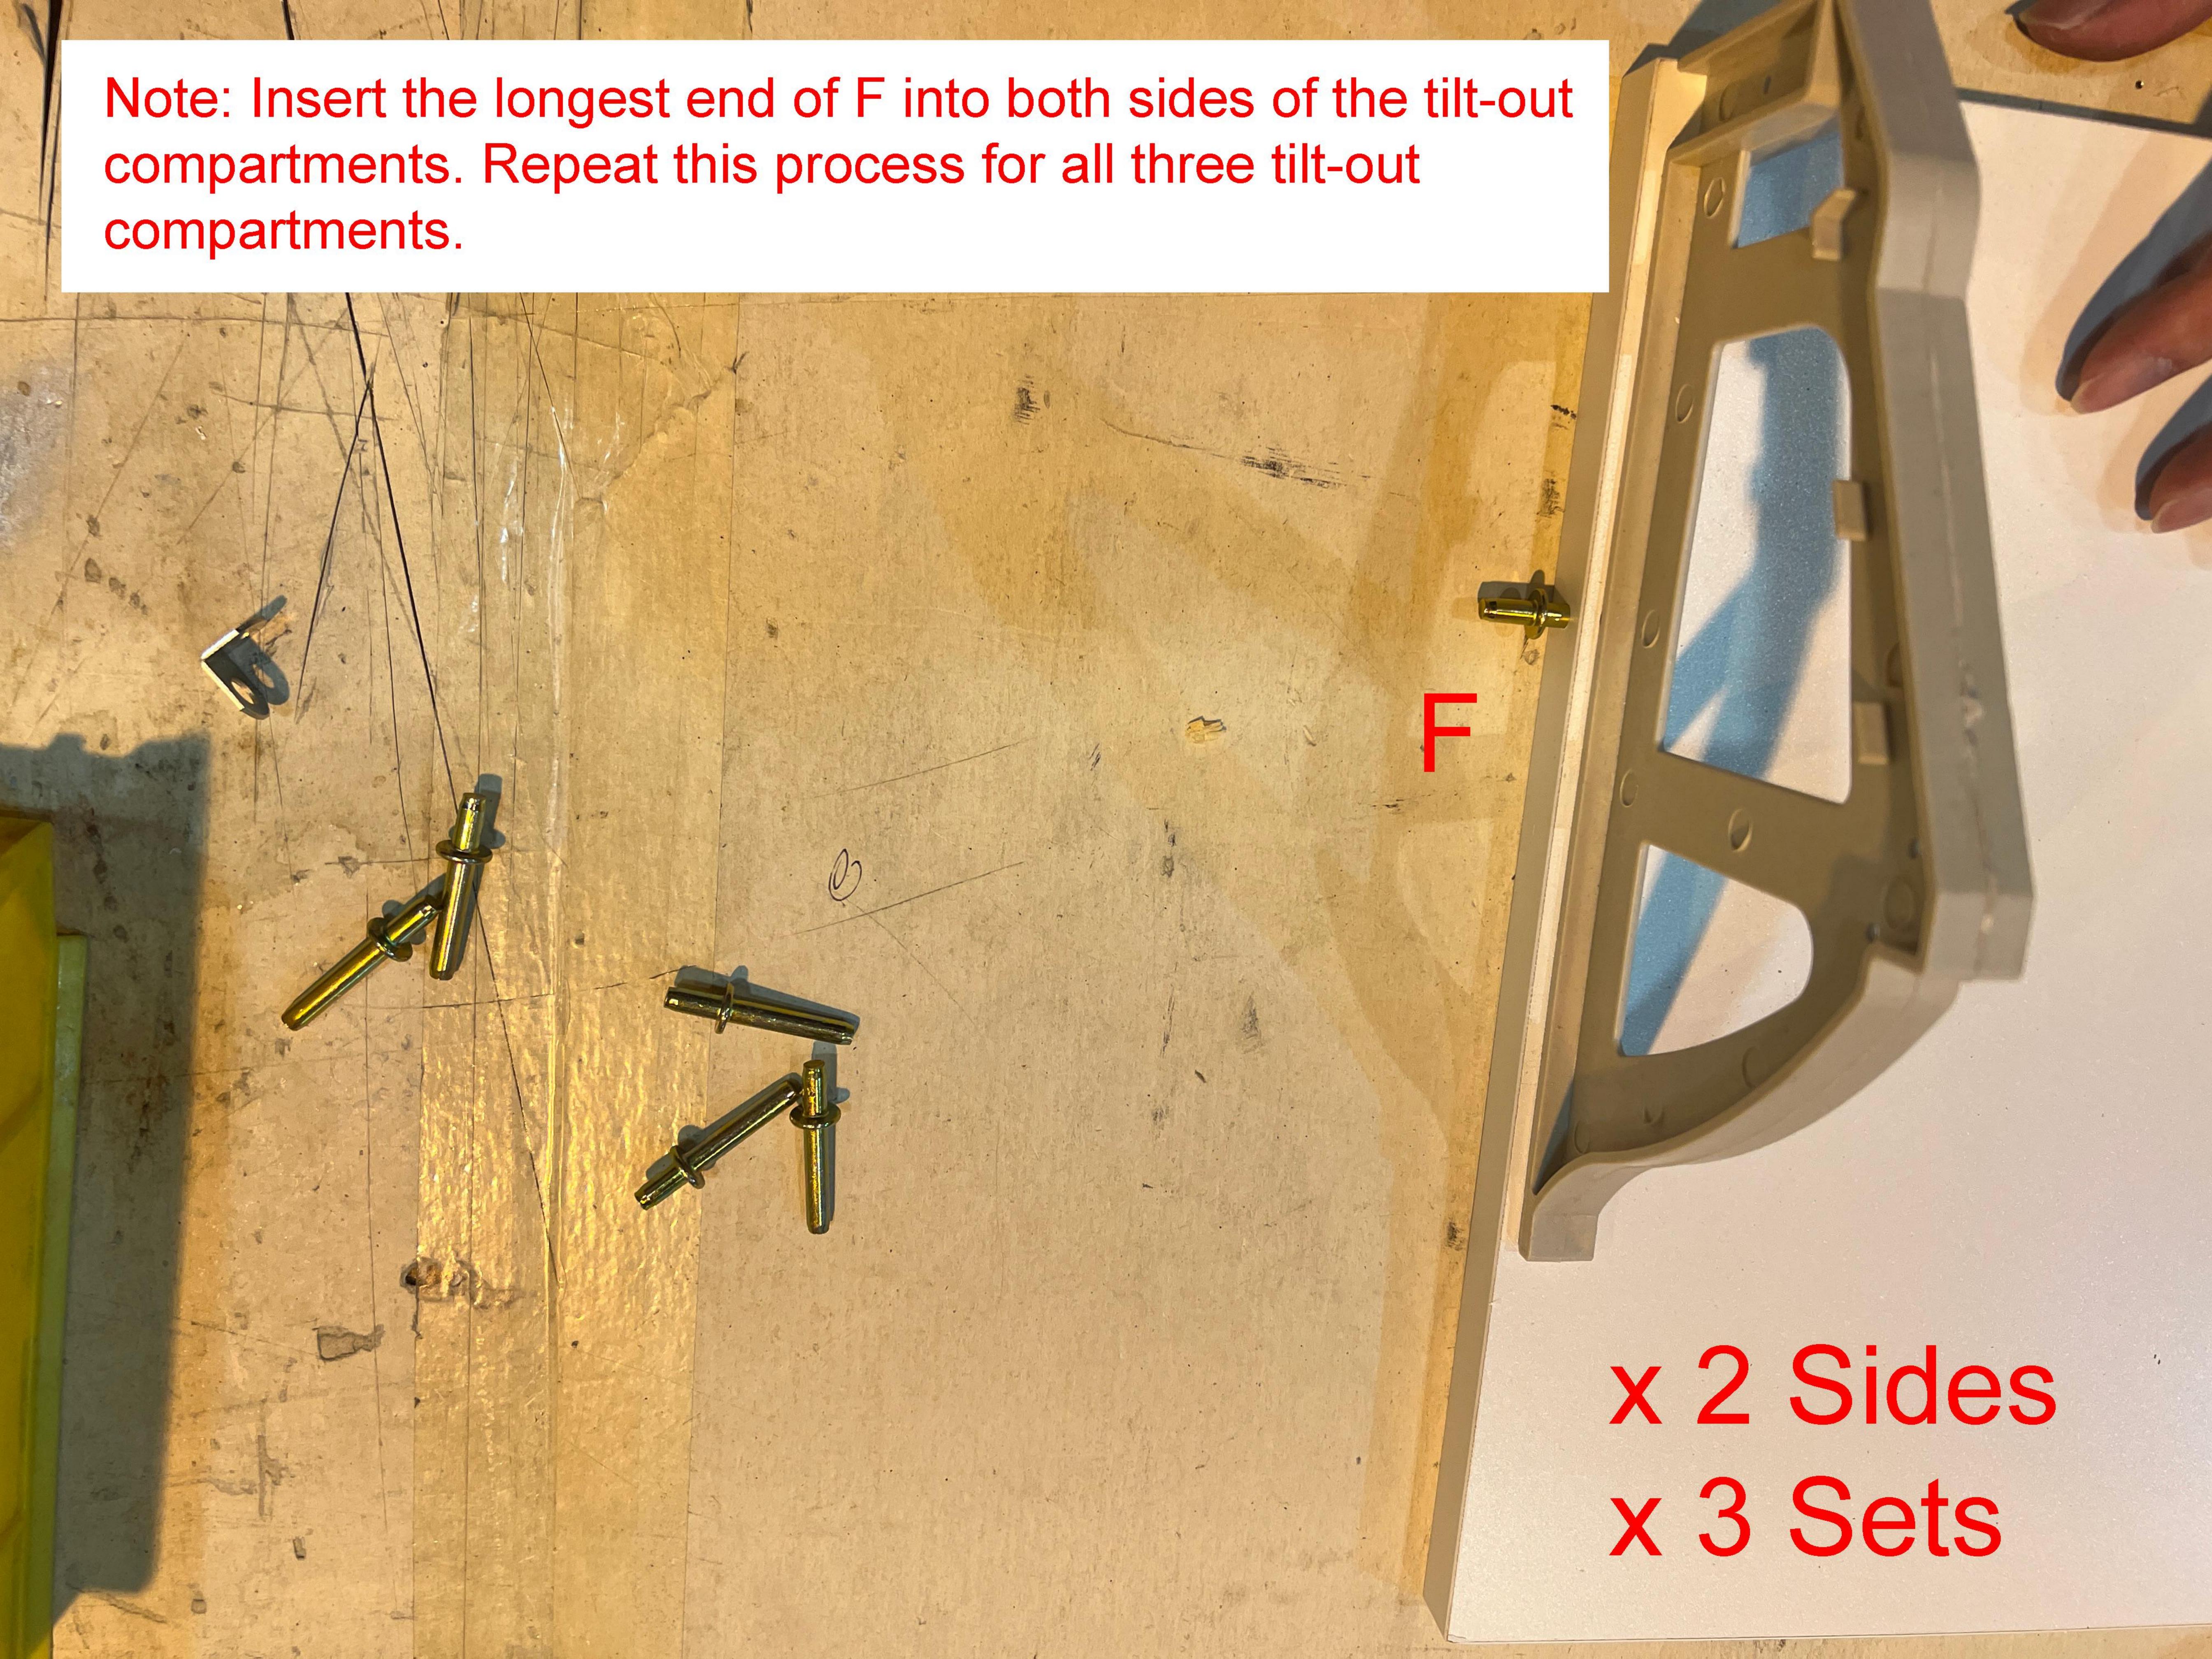


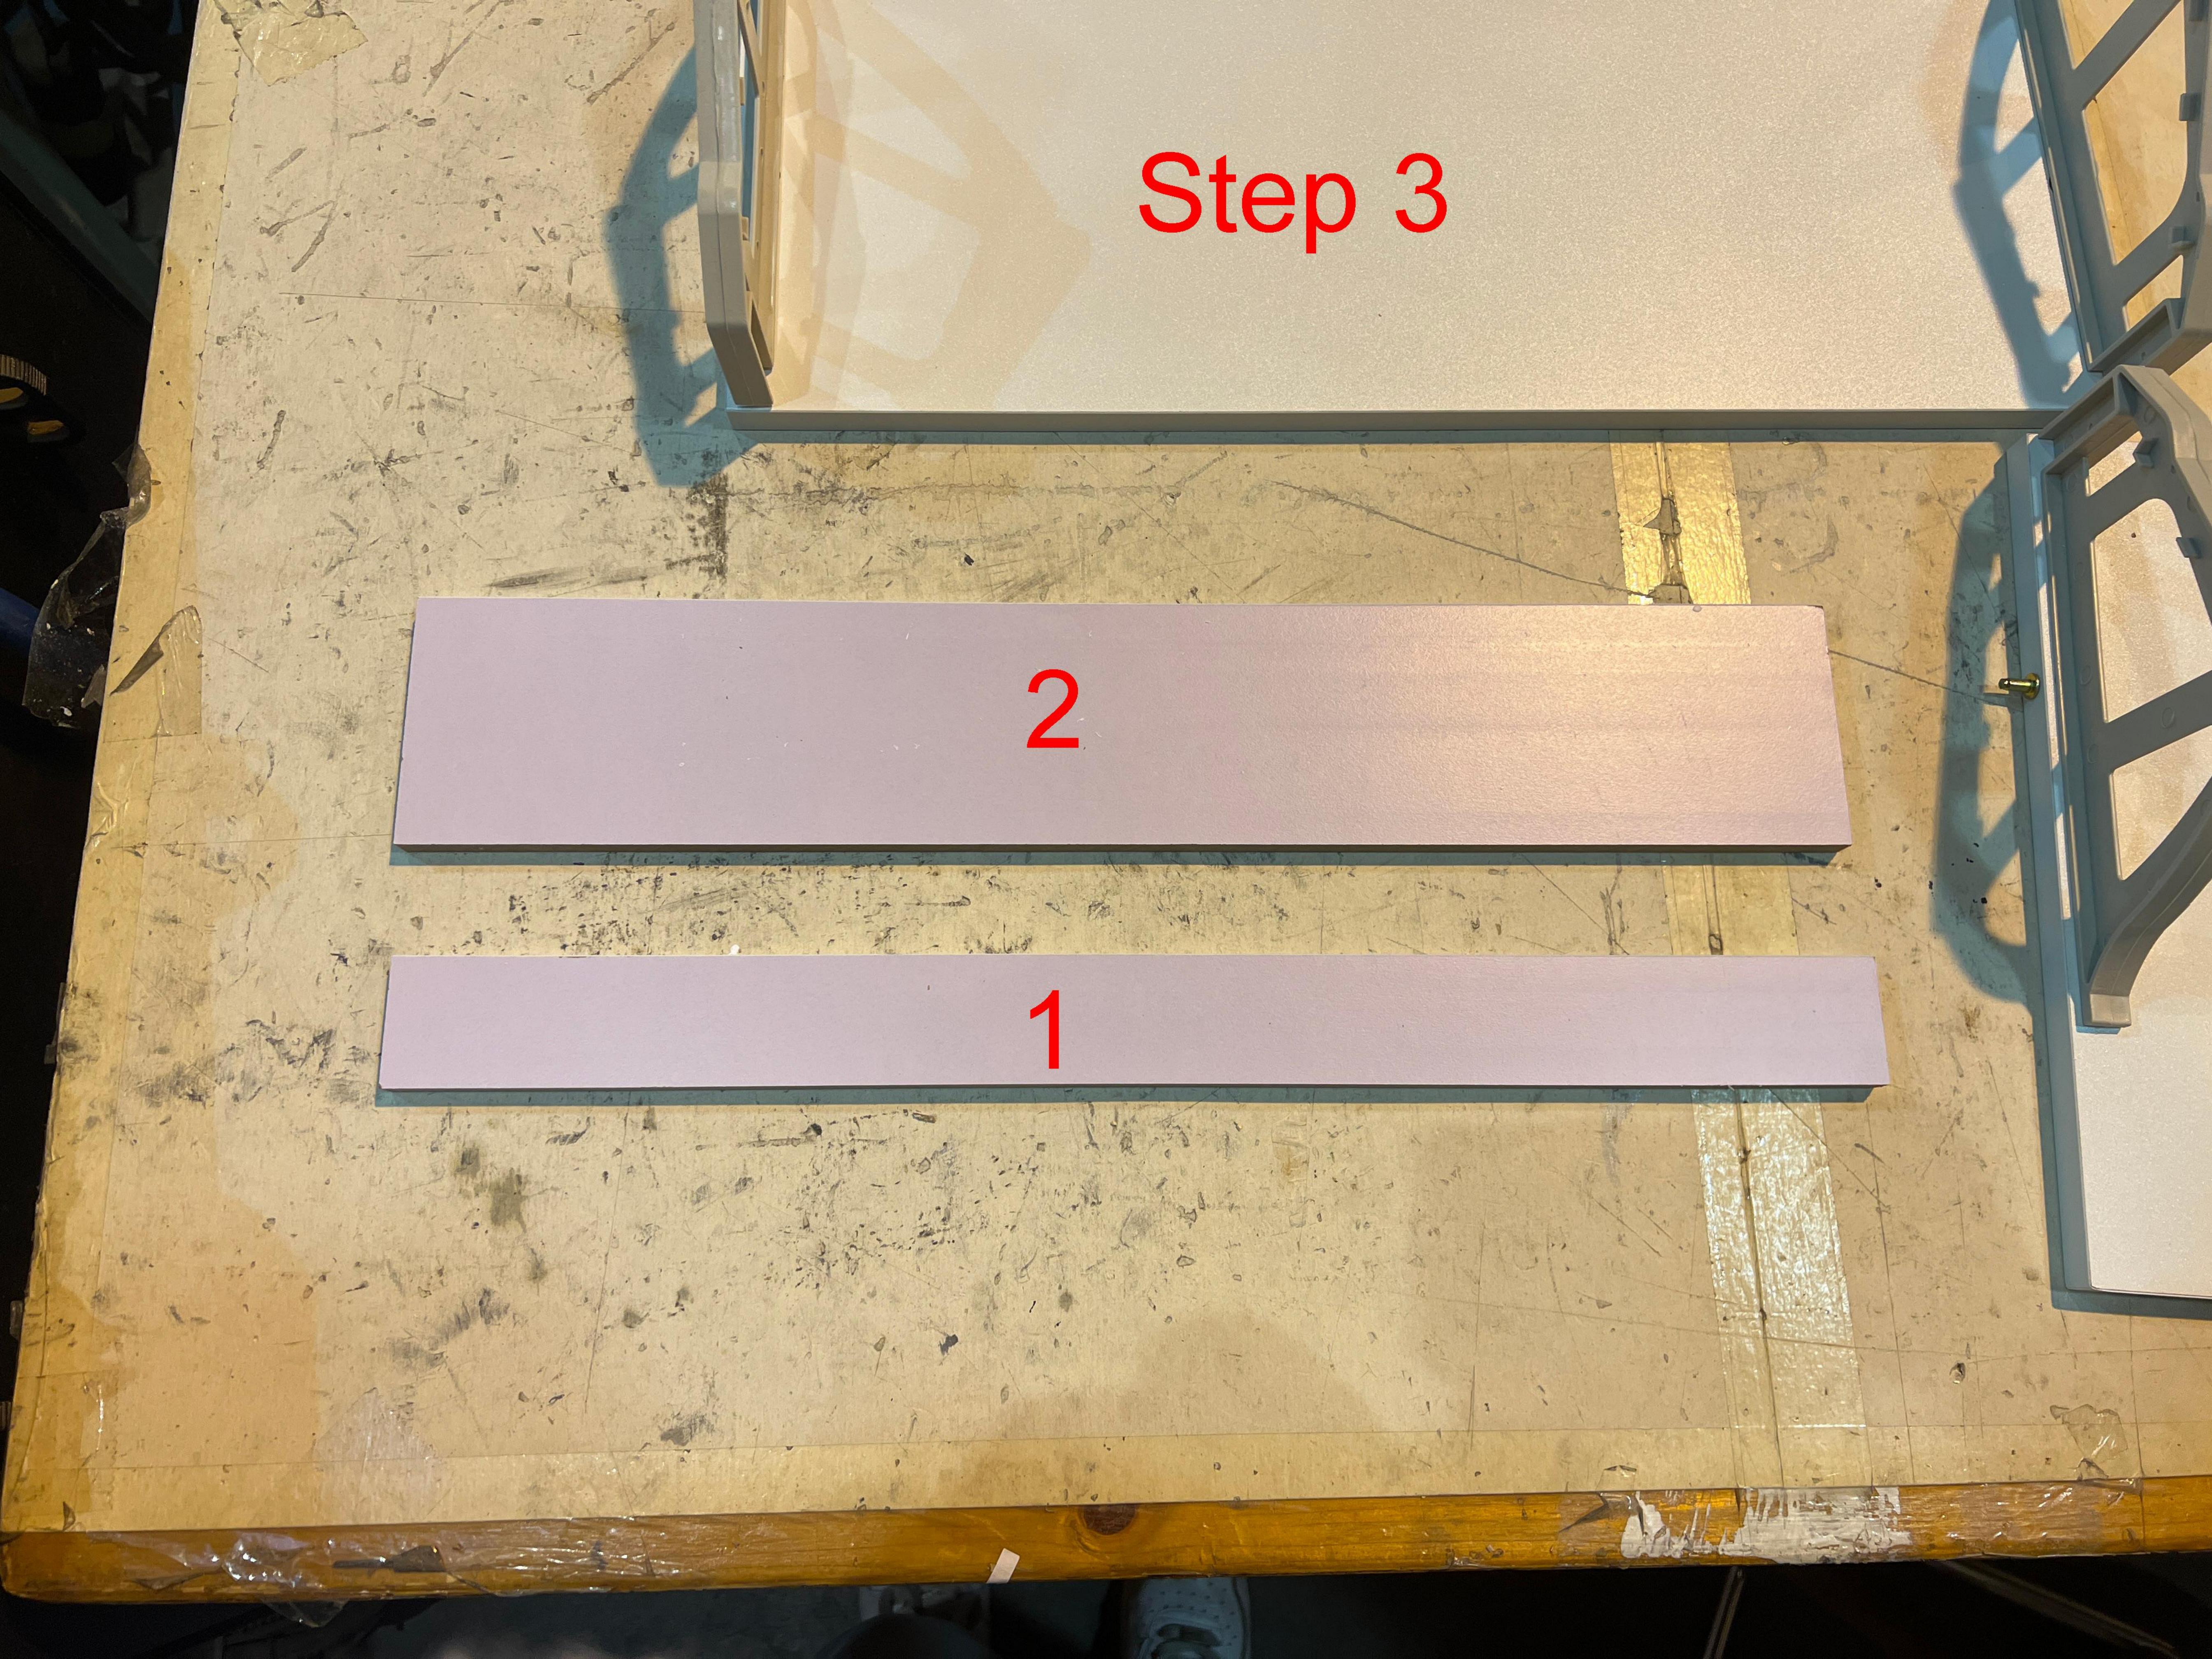

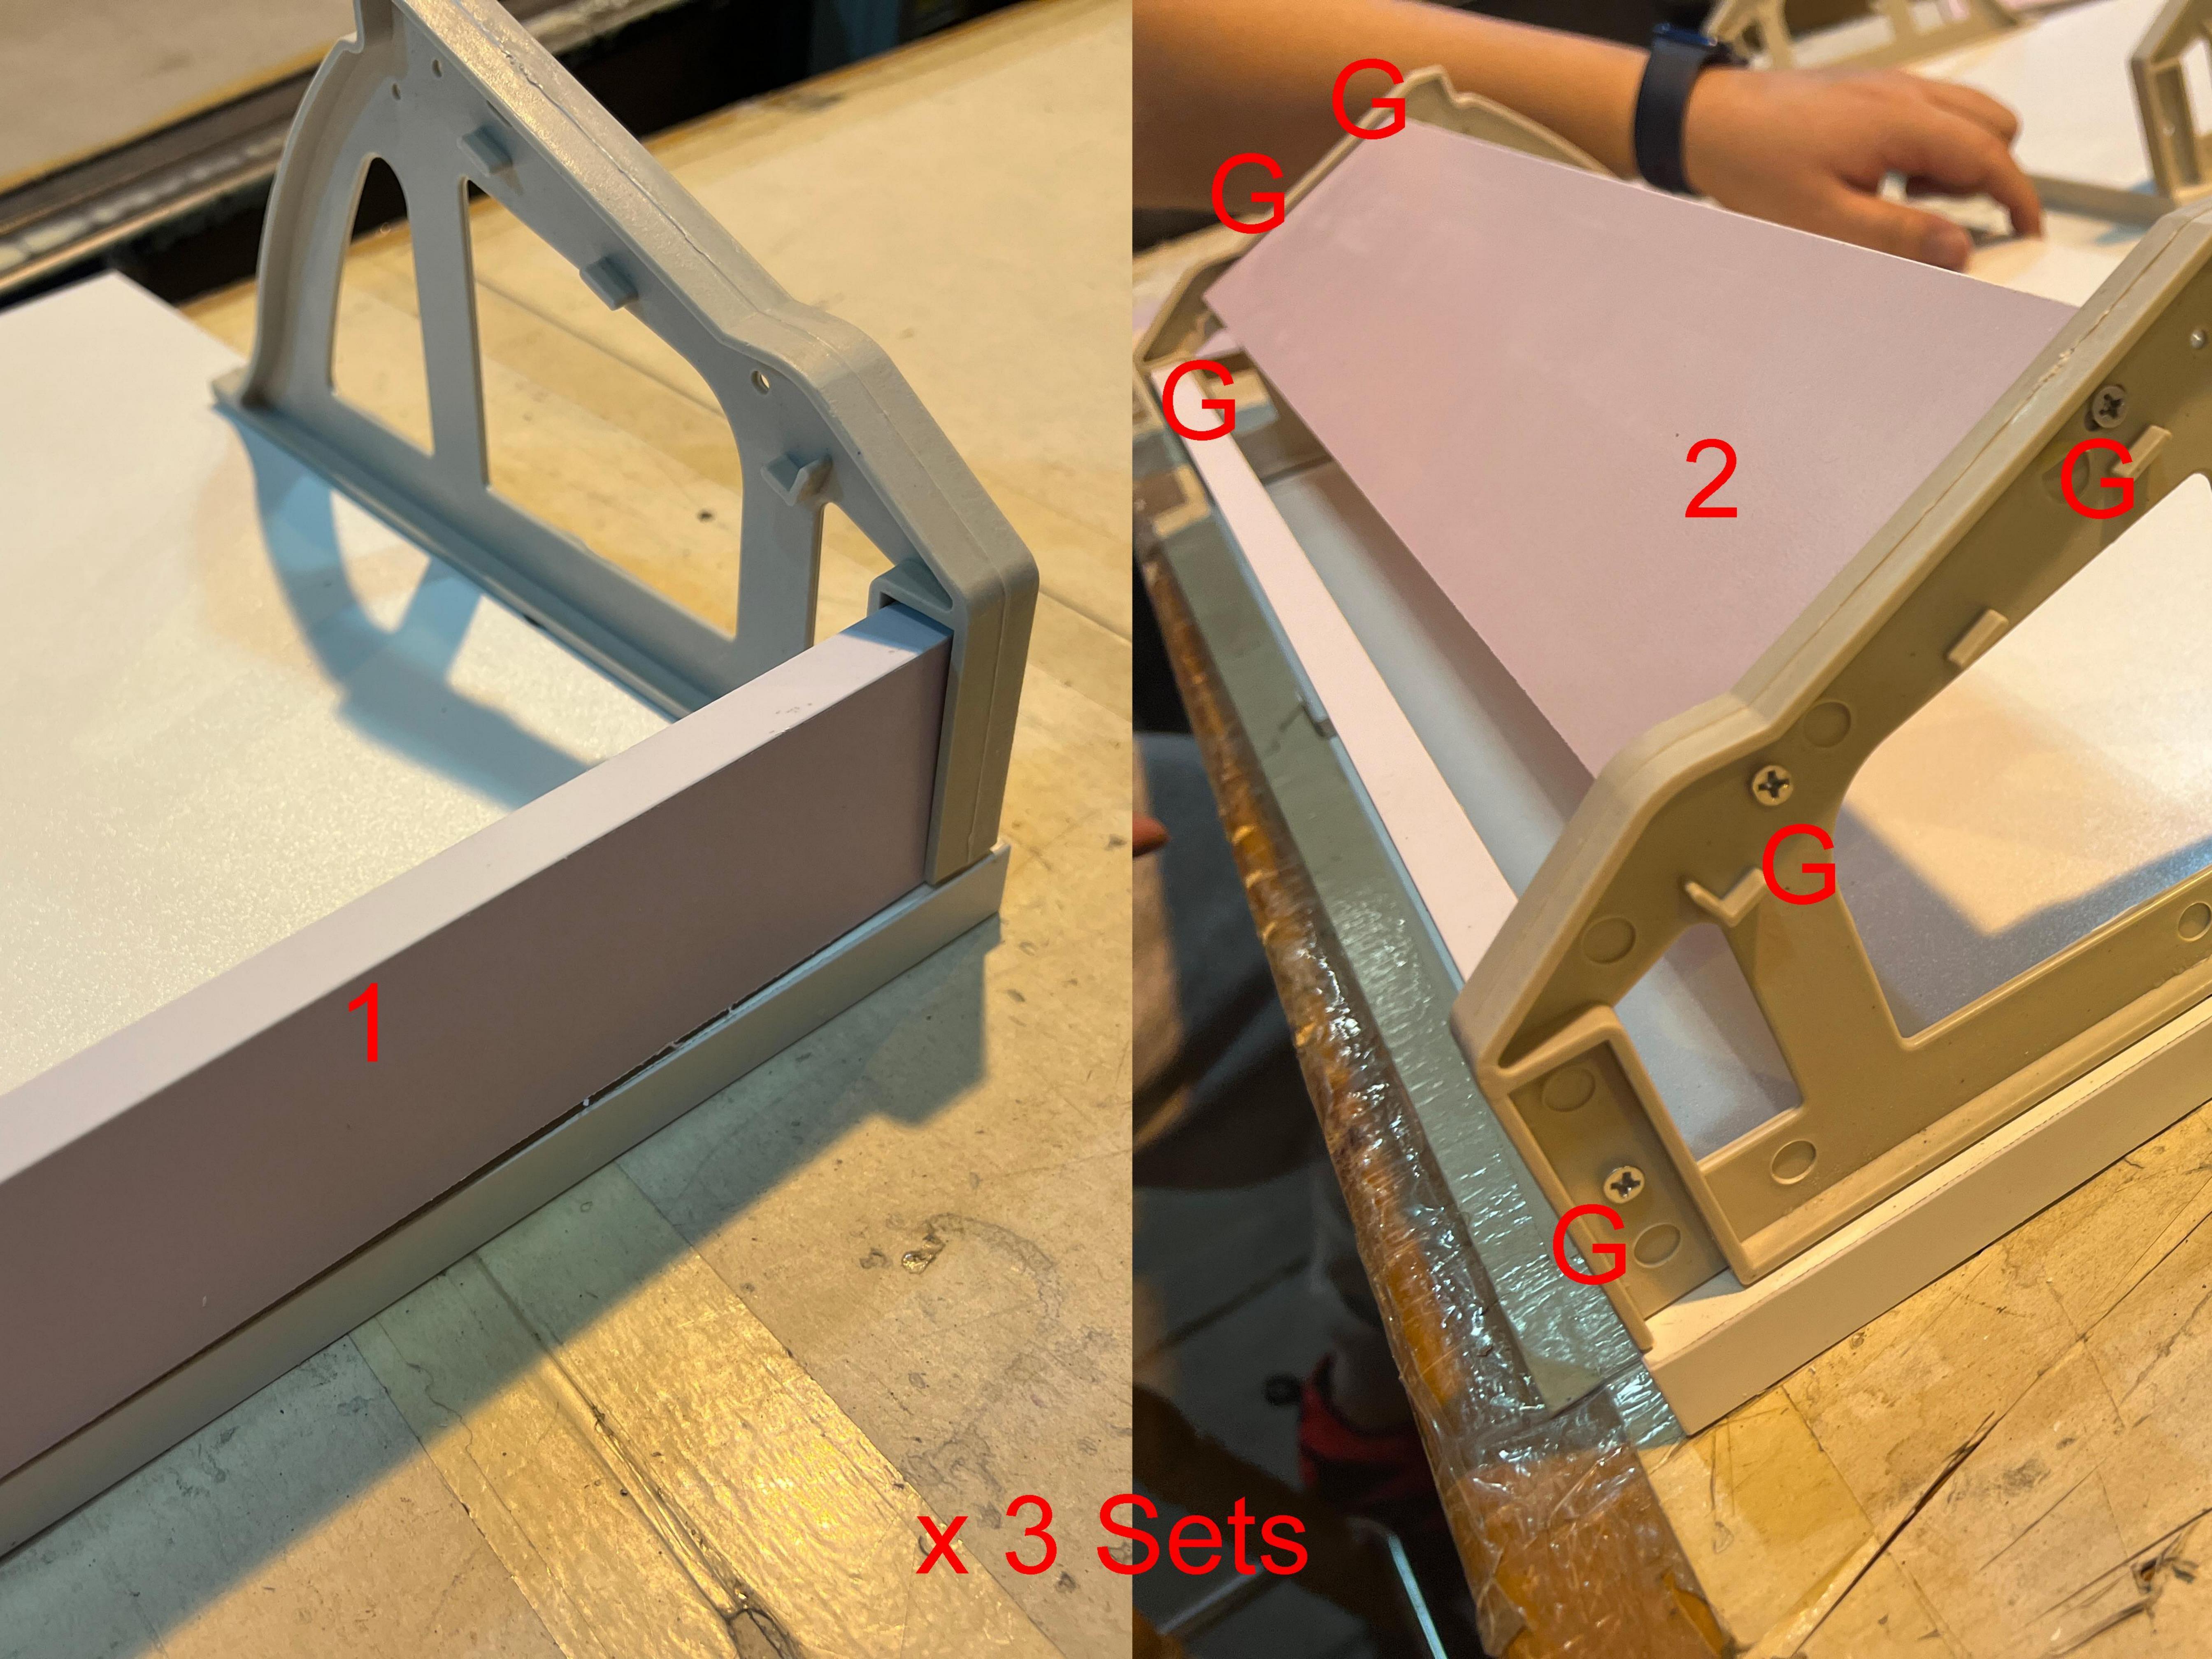

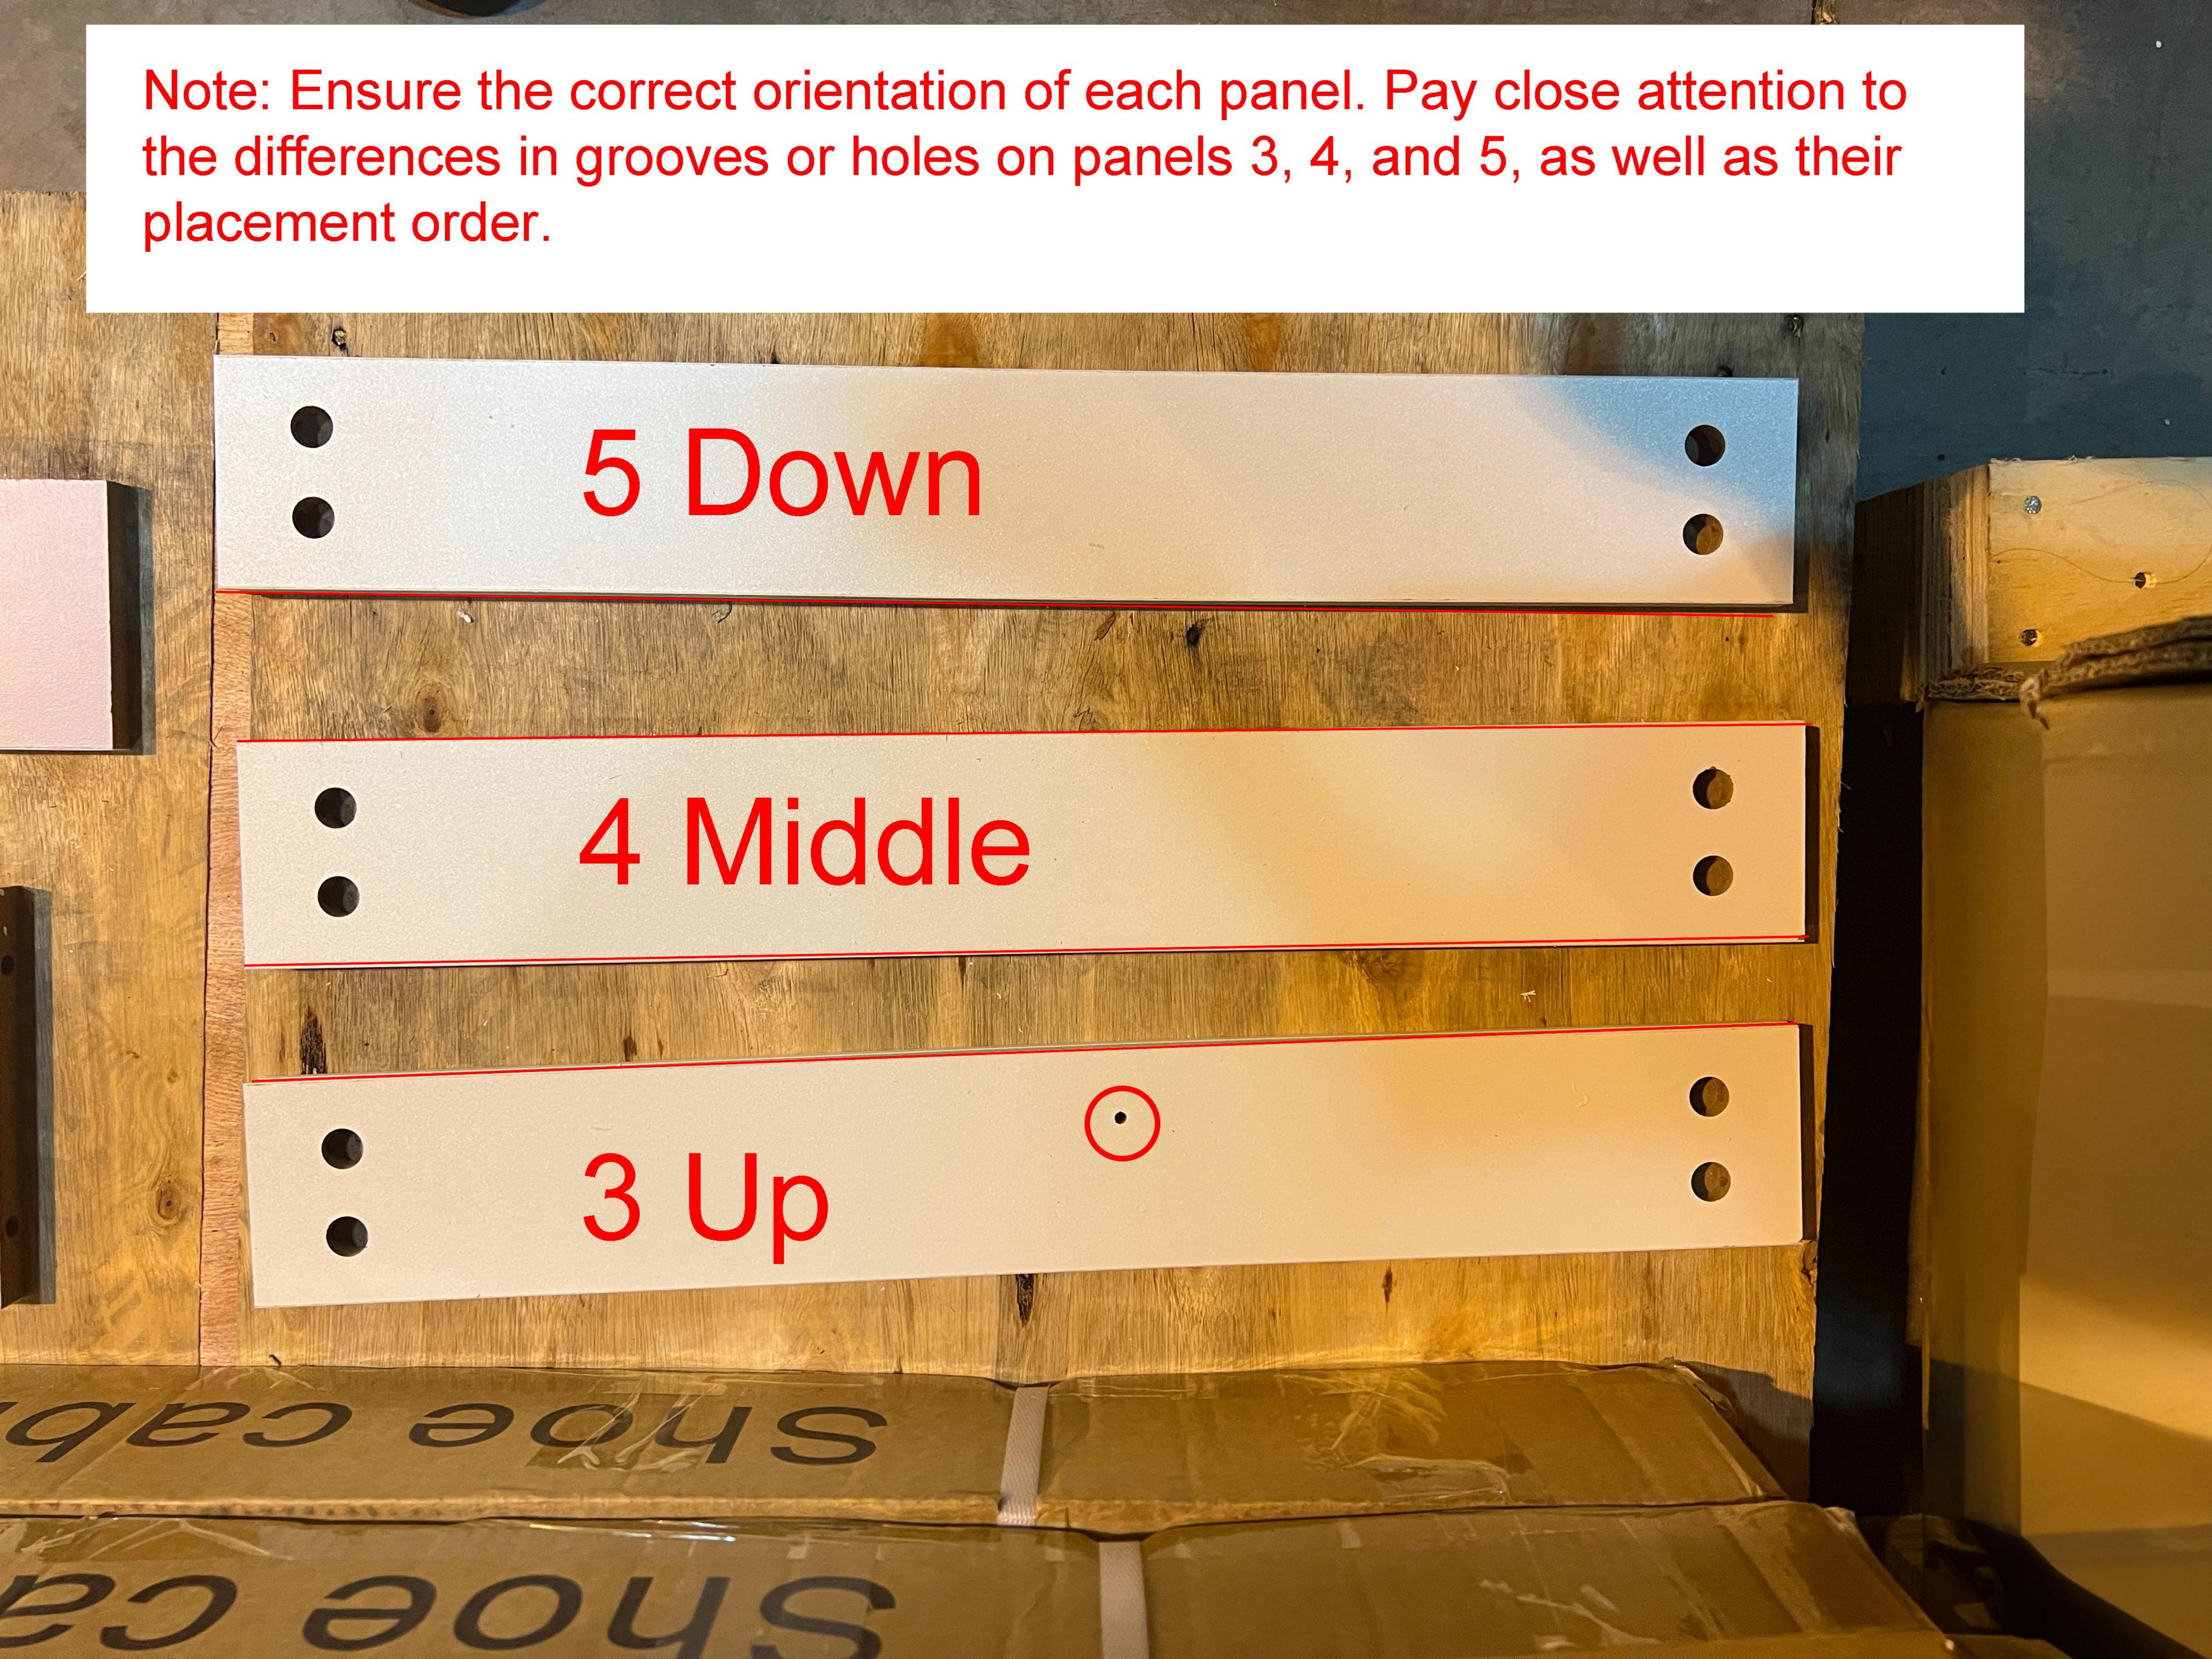

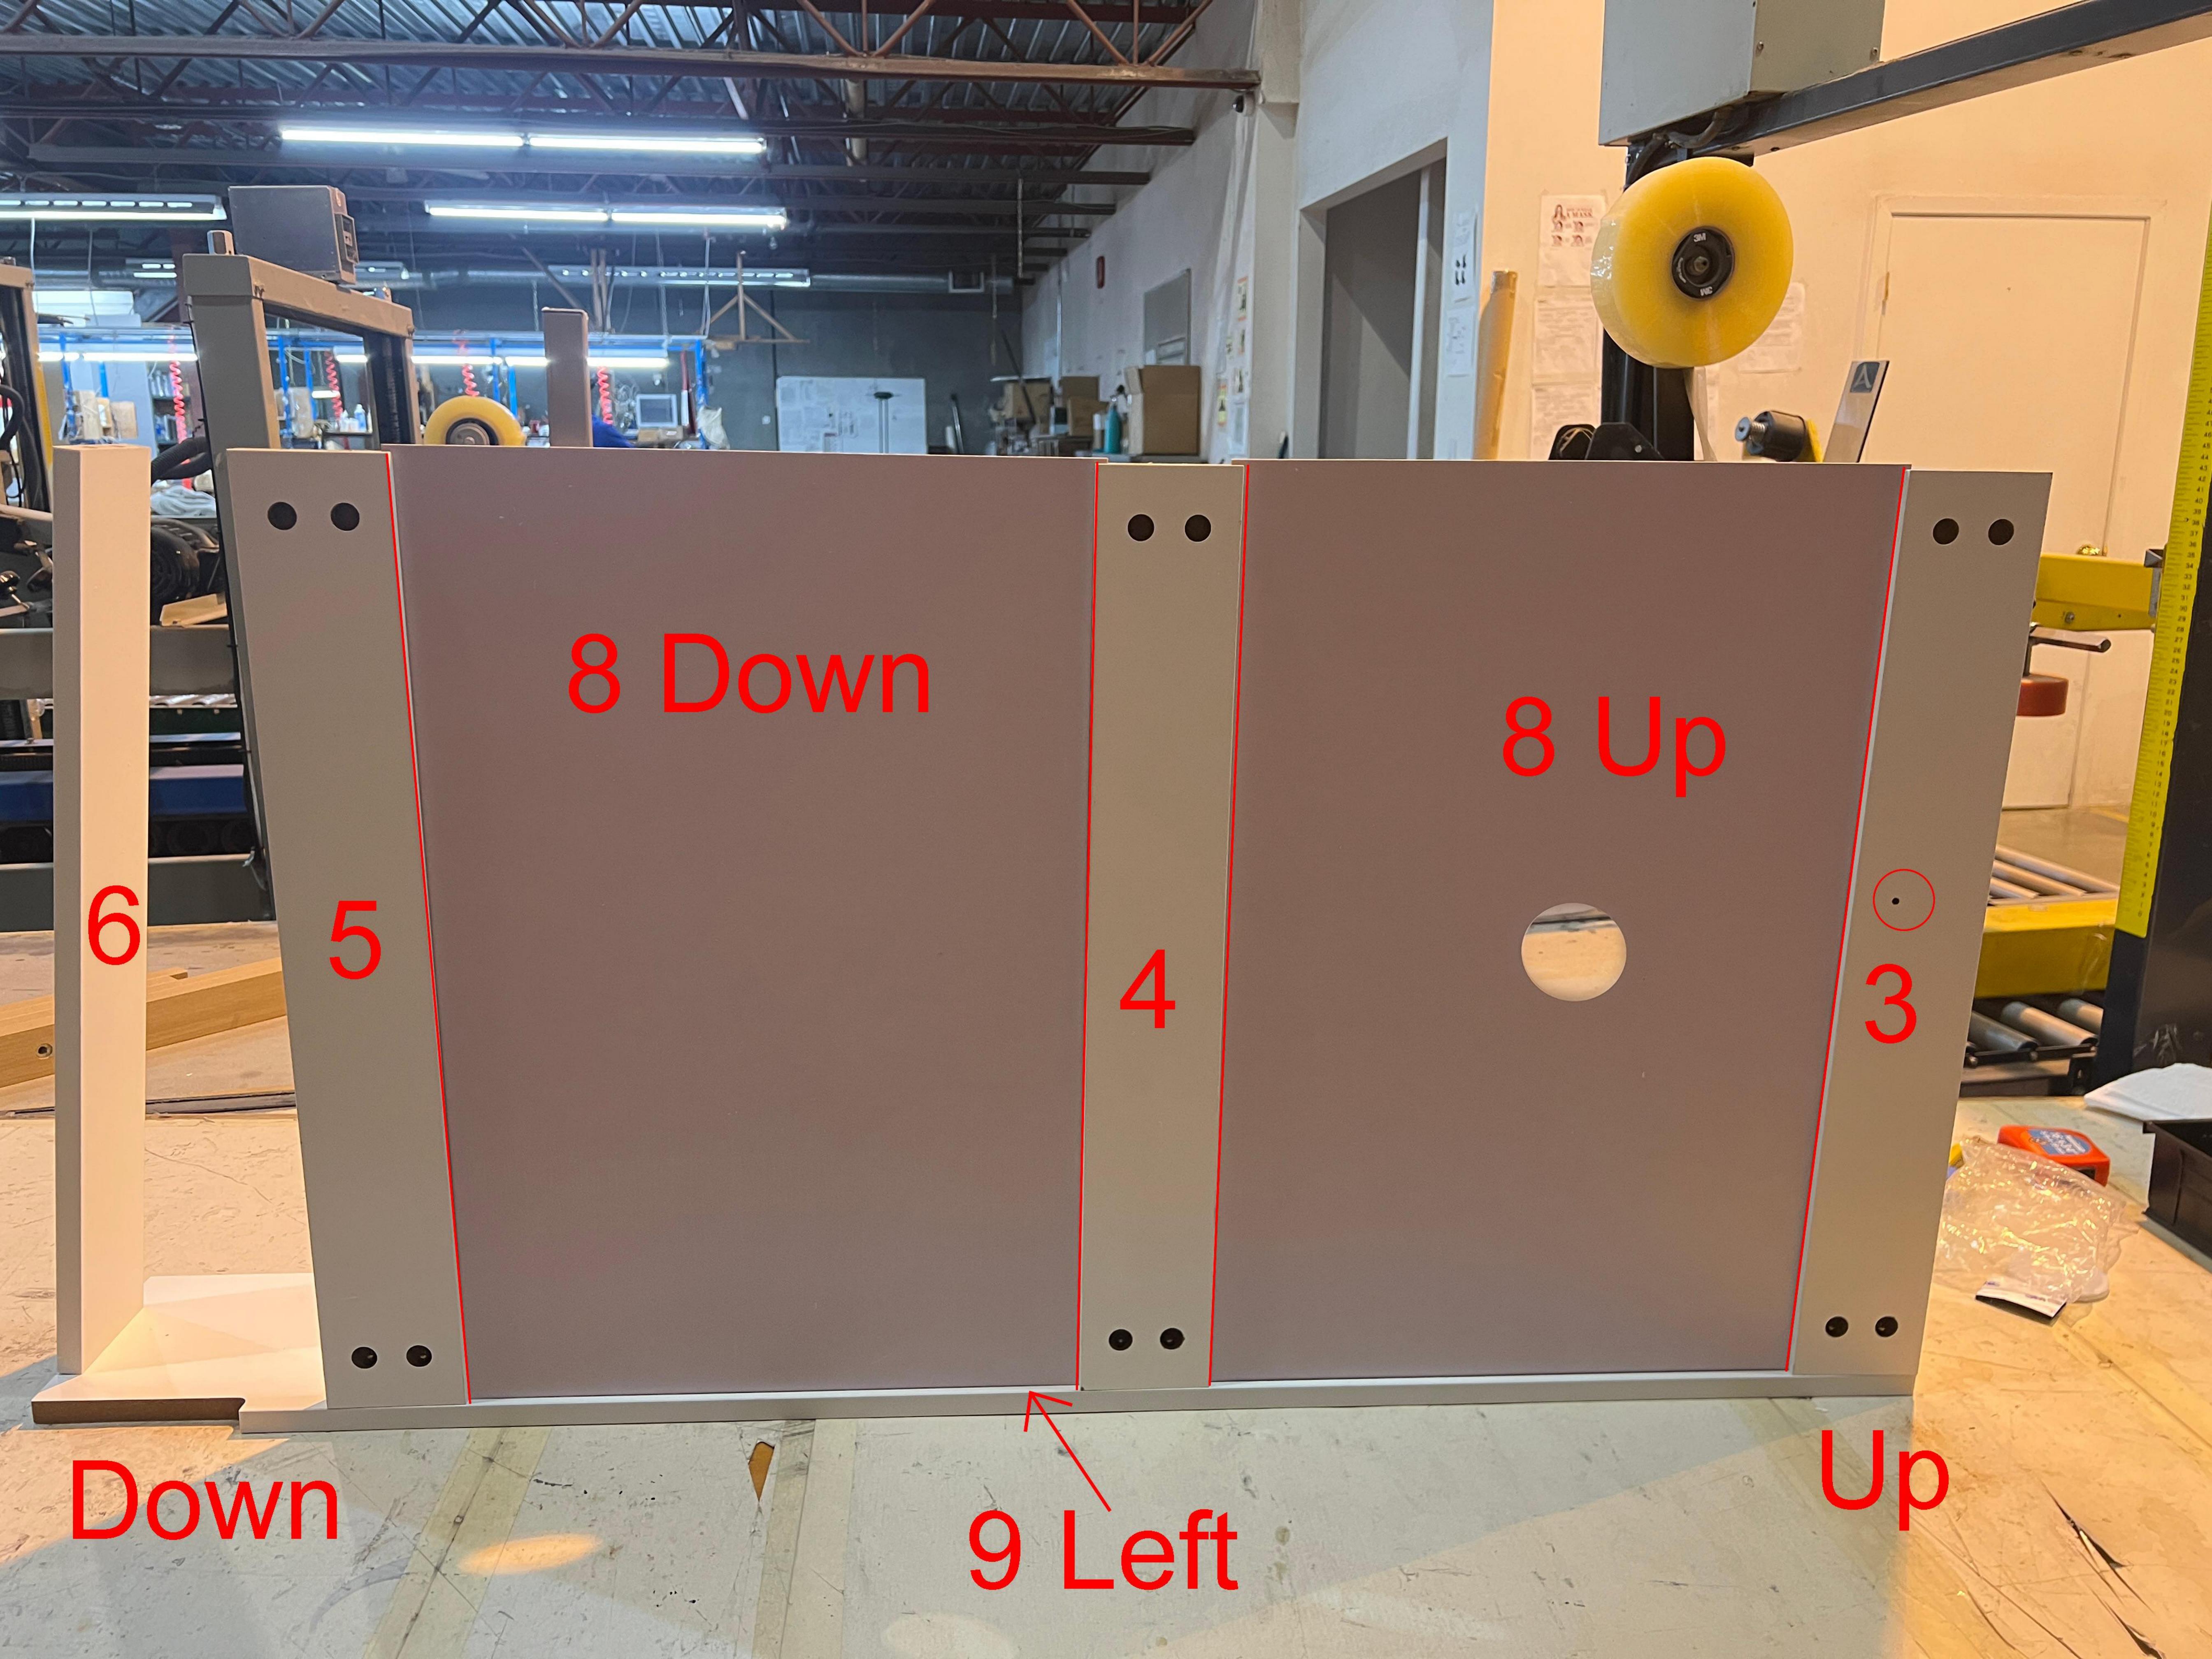

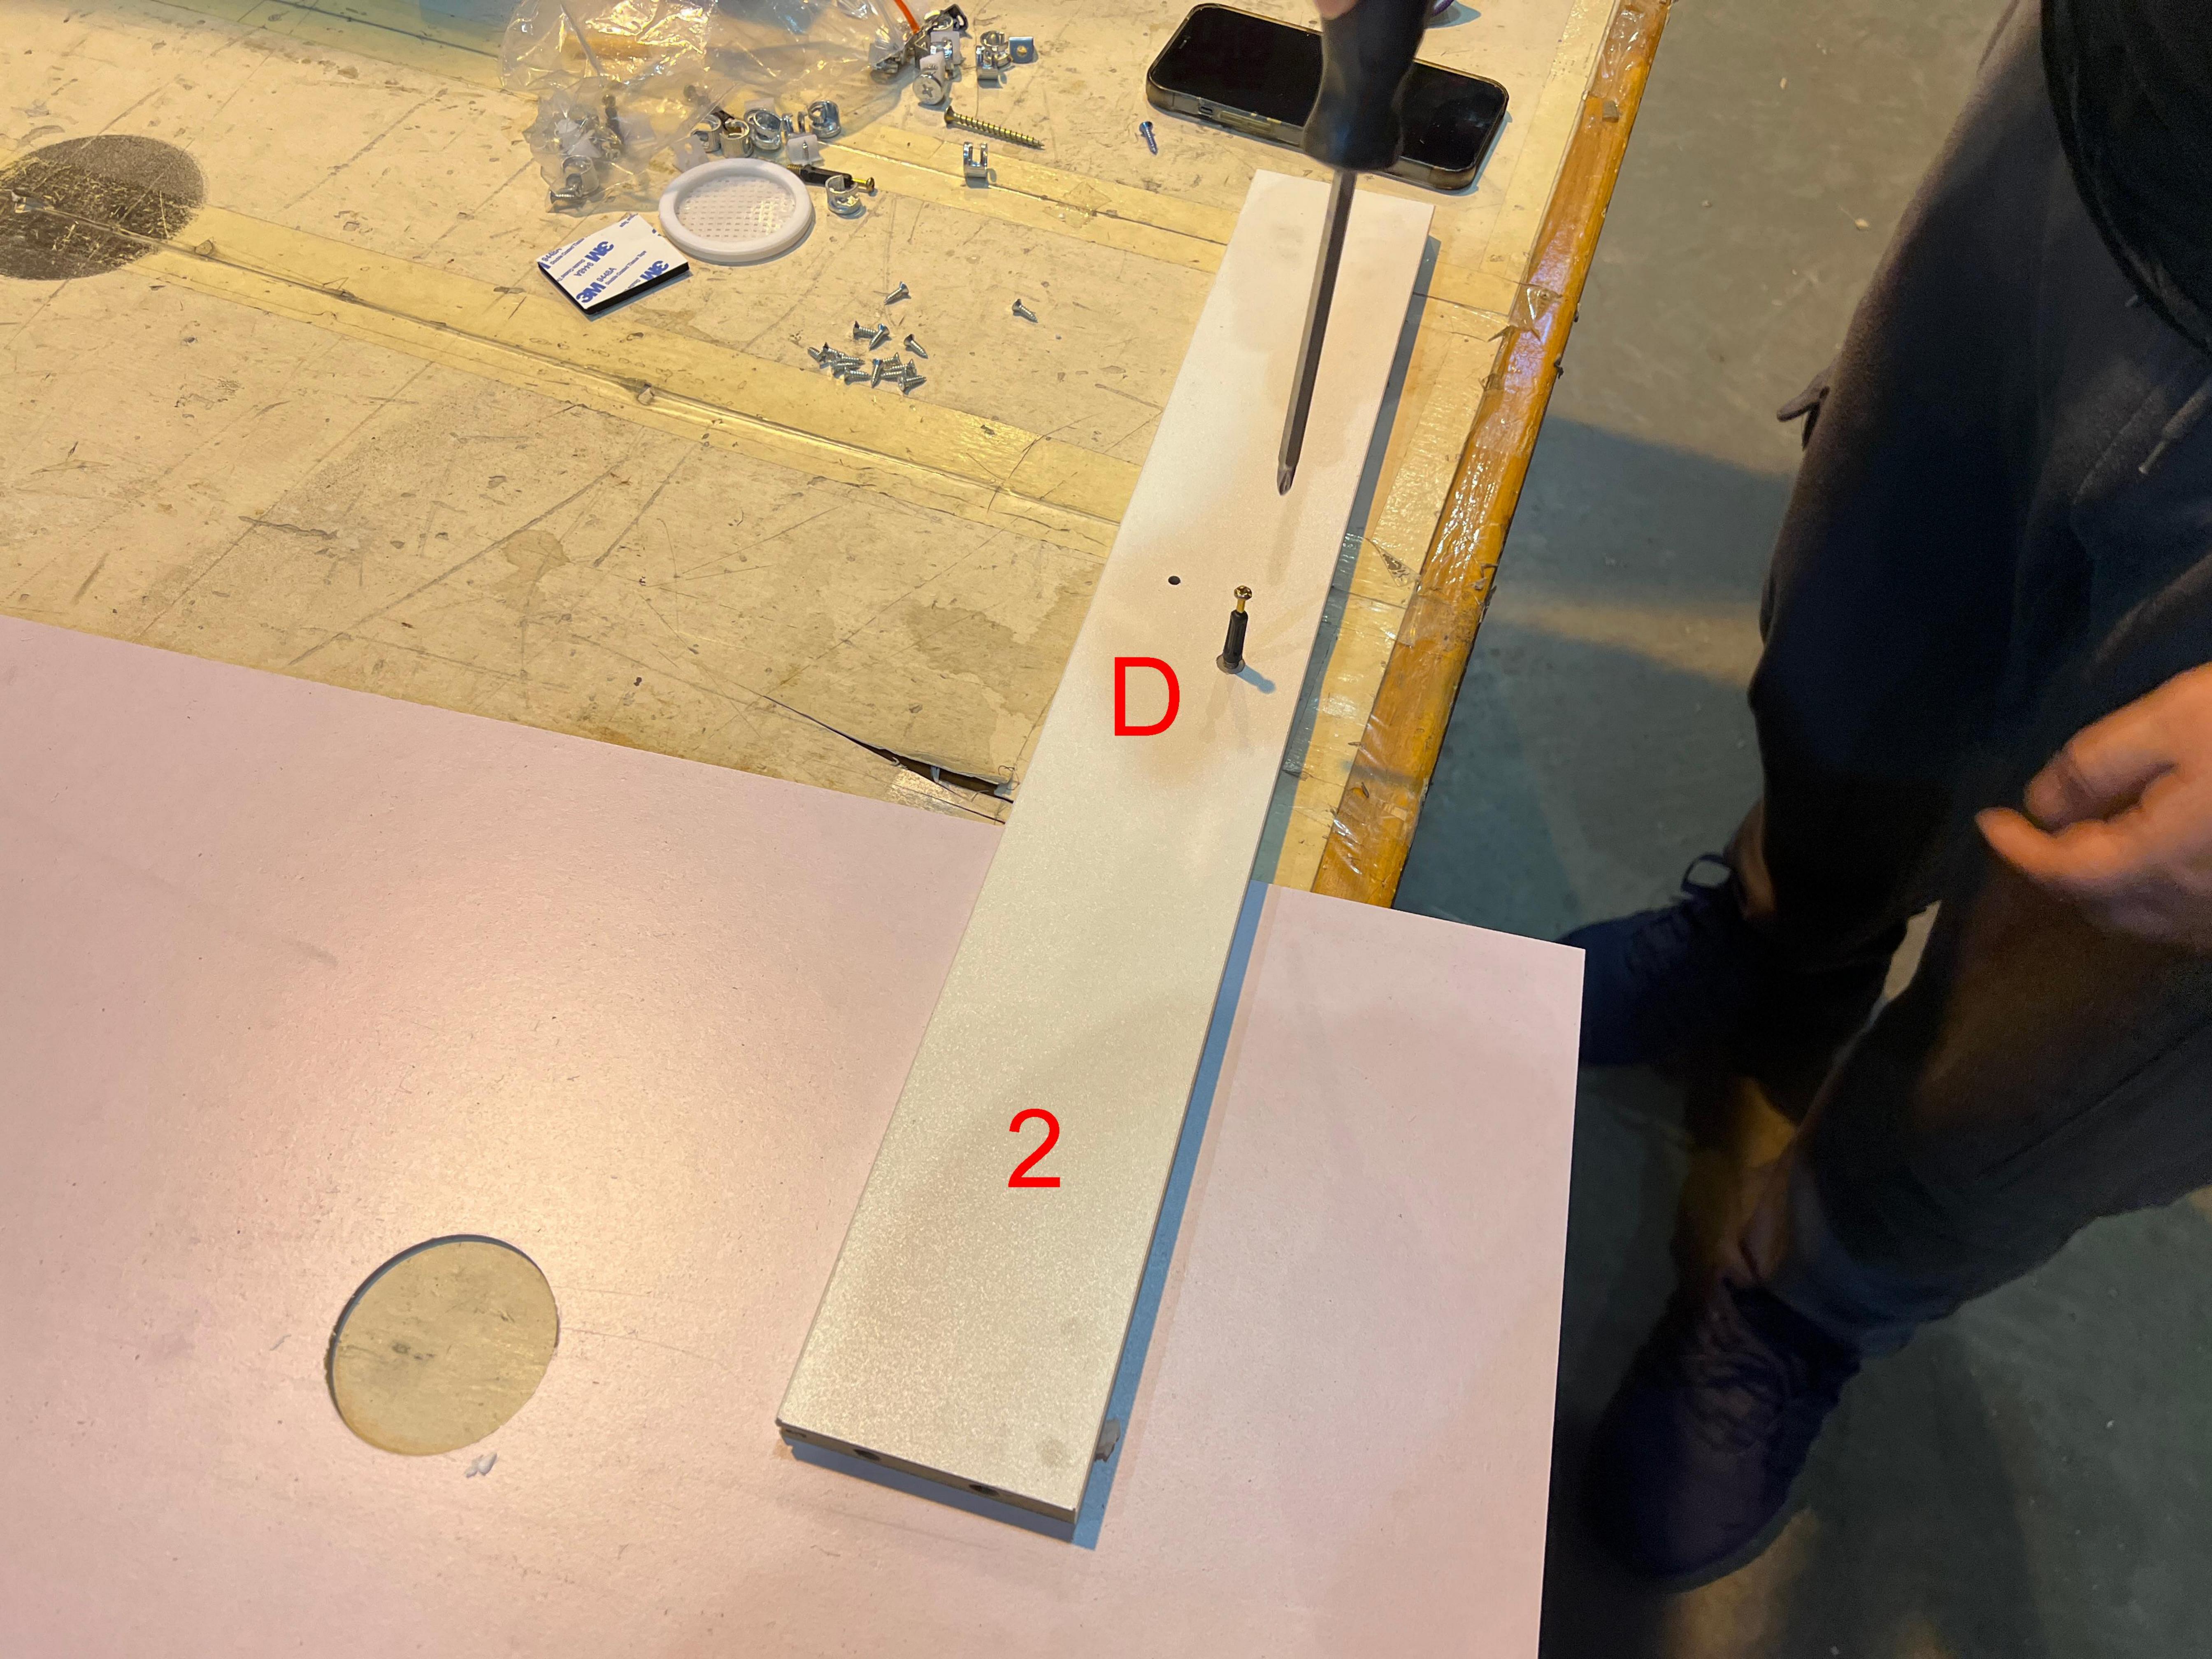





Step 5 x 3



Note: Pay close attention to the orientation of panel 9 (left side)—front, back, left, and right. The side with component A marks the front of the shoe cabinet. Install all three tilt-out compartments from Step 5 onto the pre-drilled holes of panel 9 (left side) by using the short end of component F.















