EDB005 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

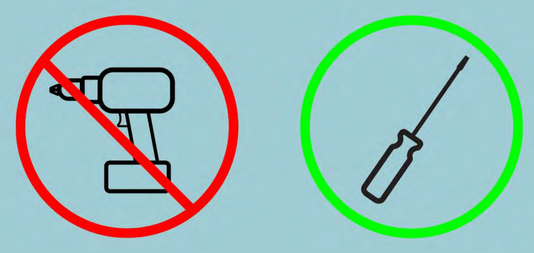

Finished product display

Panel disassembly diagram

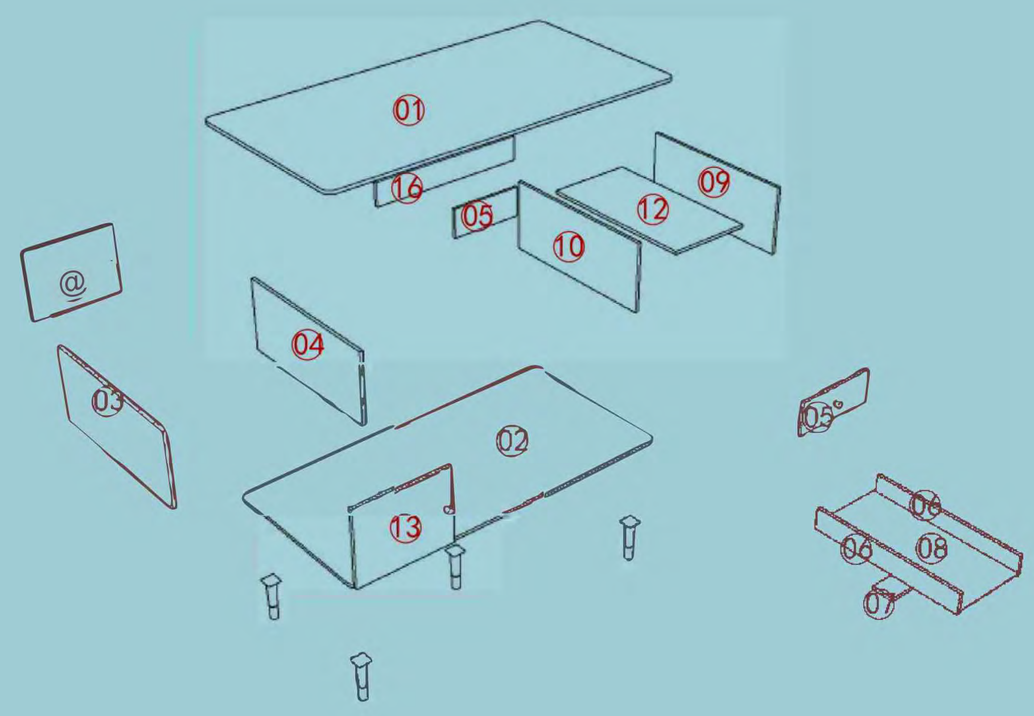

Product accessories and quantity:

Eccentric wheel + eccentric rod D14×14	4*40 self-tapping screws B4×22	4*16 handle B8×5	Screw Embedded door stopper L18×2	iron shelf pin KOX 3	spring spacer pin L8×2	screwdriver 1
Gold round table handle J15×4	Single hole door magnet L19×2	3.5*12 self-tapping screw A1×24	Extended metal legs with spacers M39×4	Metal leg with gasket M34×1		

Kind tips:

1. Please refer to the drawings to distinguish the boards during installation.

2. Tighten the screw seven times, and then tighten it after everything is completed!

3. Some boards have a red side, and the red side faces down or inward. 4. Please refer to the actual product for the shape and color of the product, and the content displayed in the manual is for reference only.

Product name and serial number:

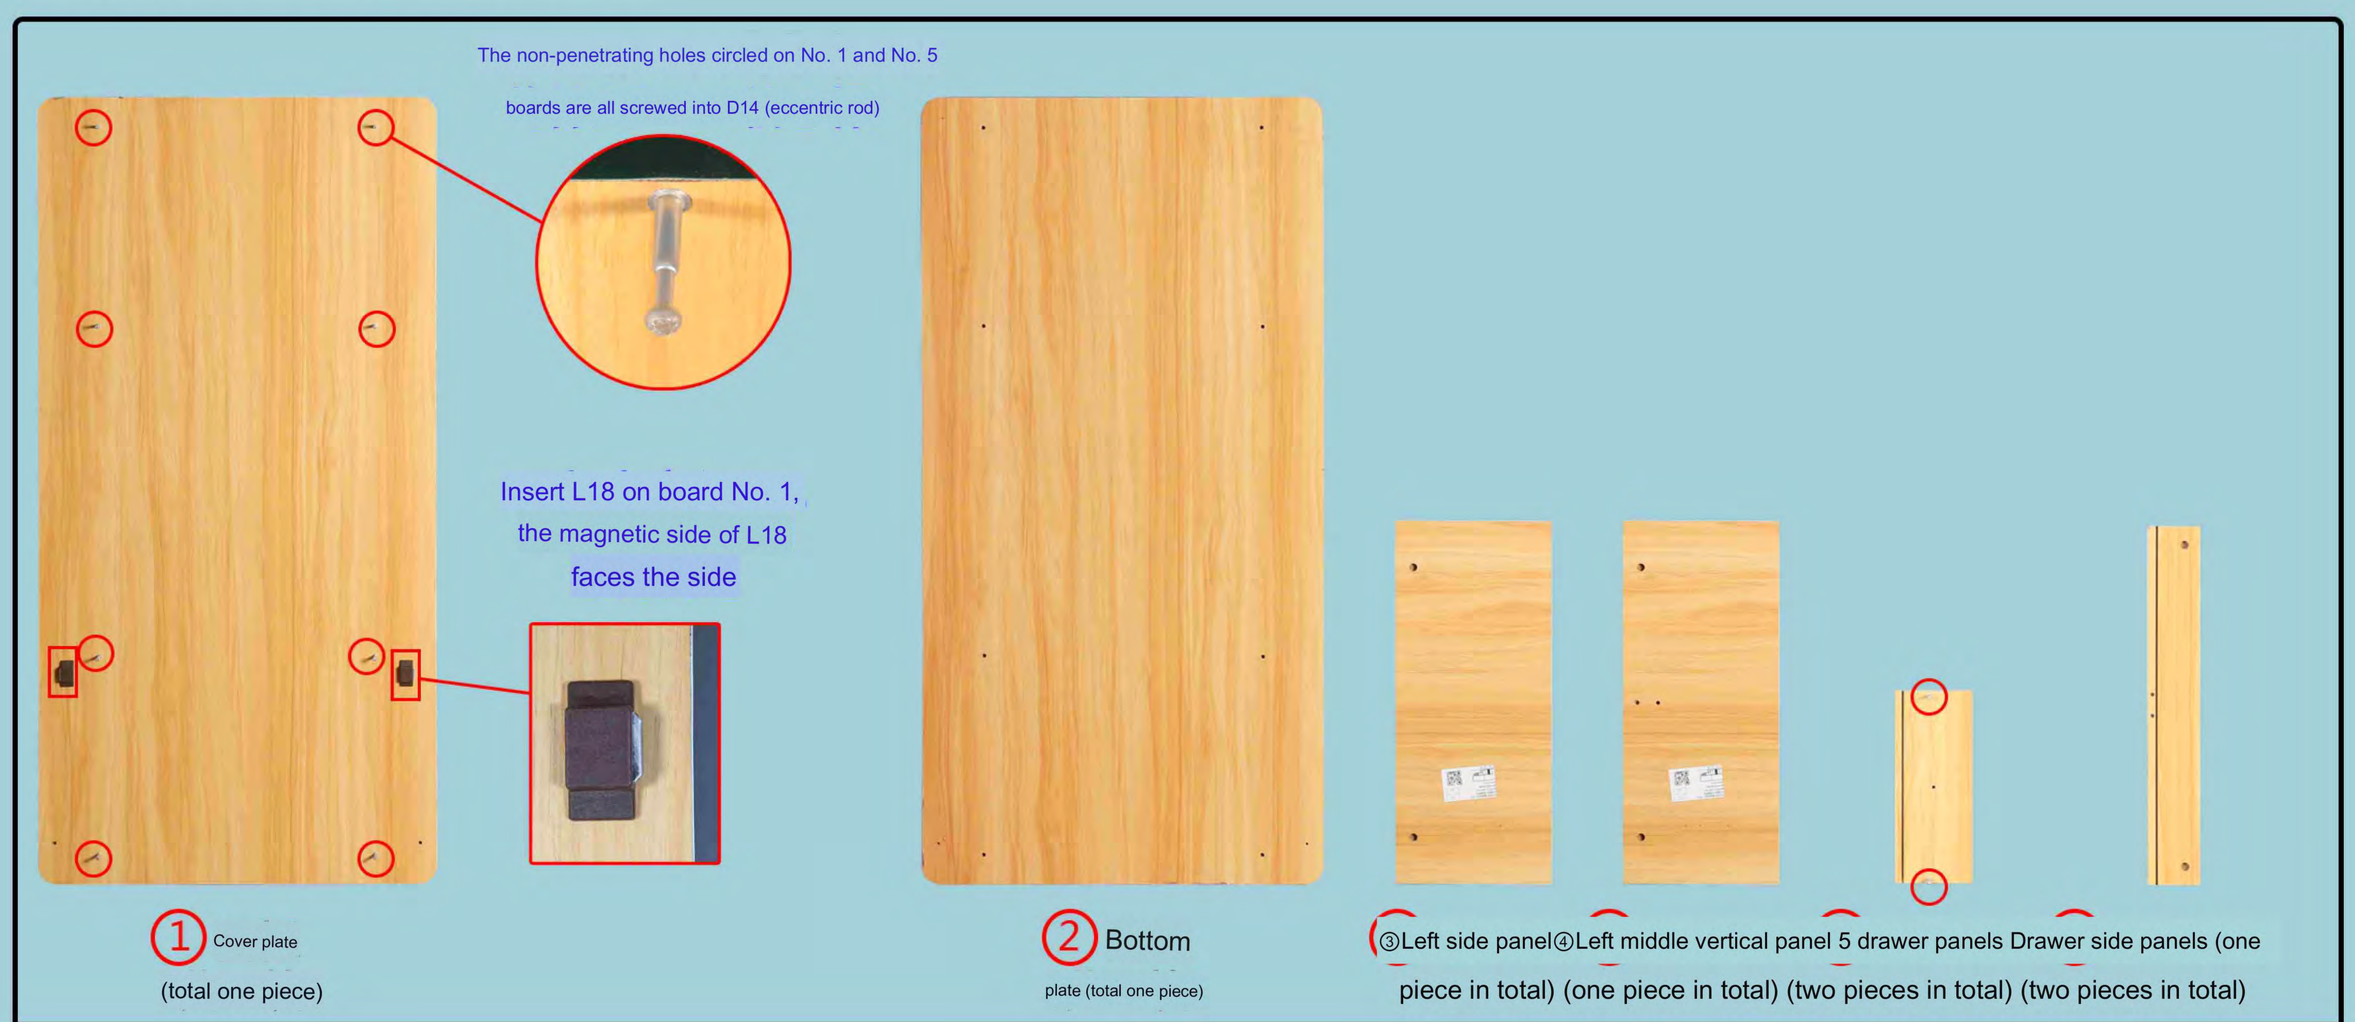

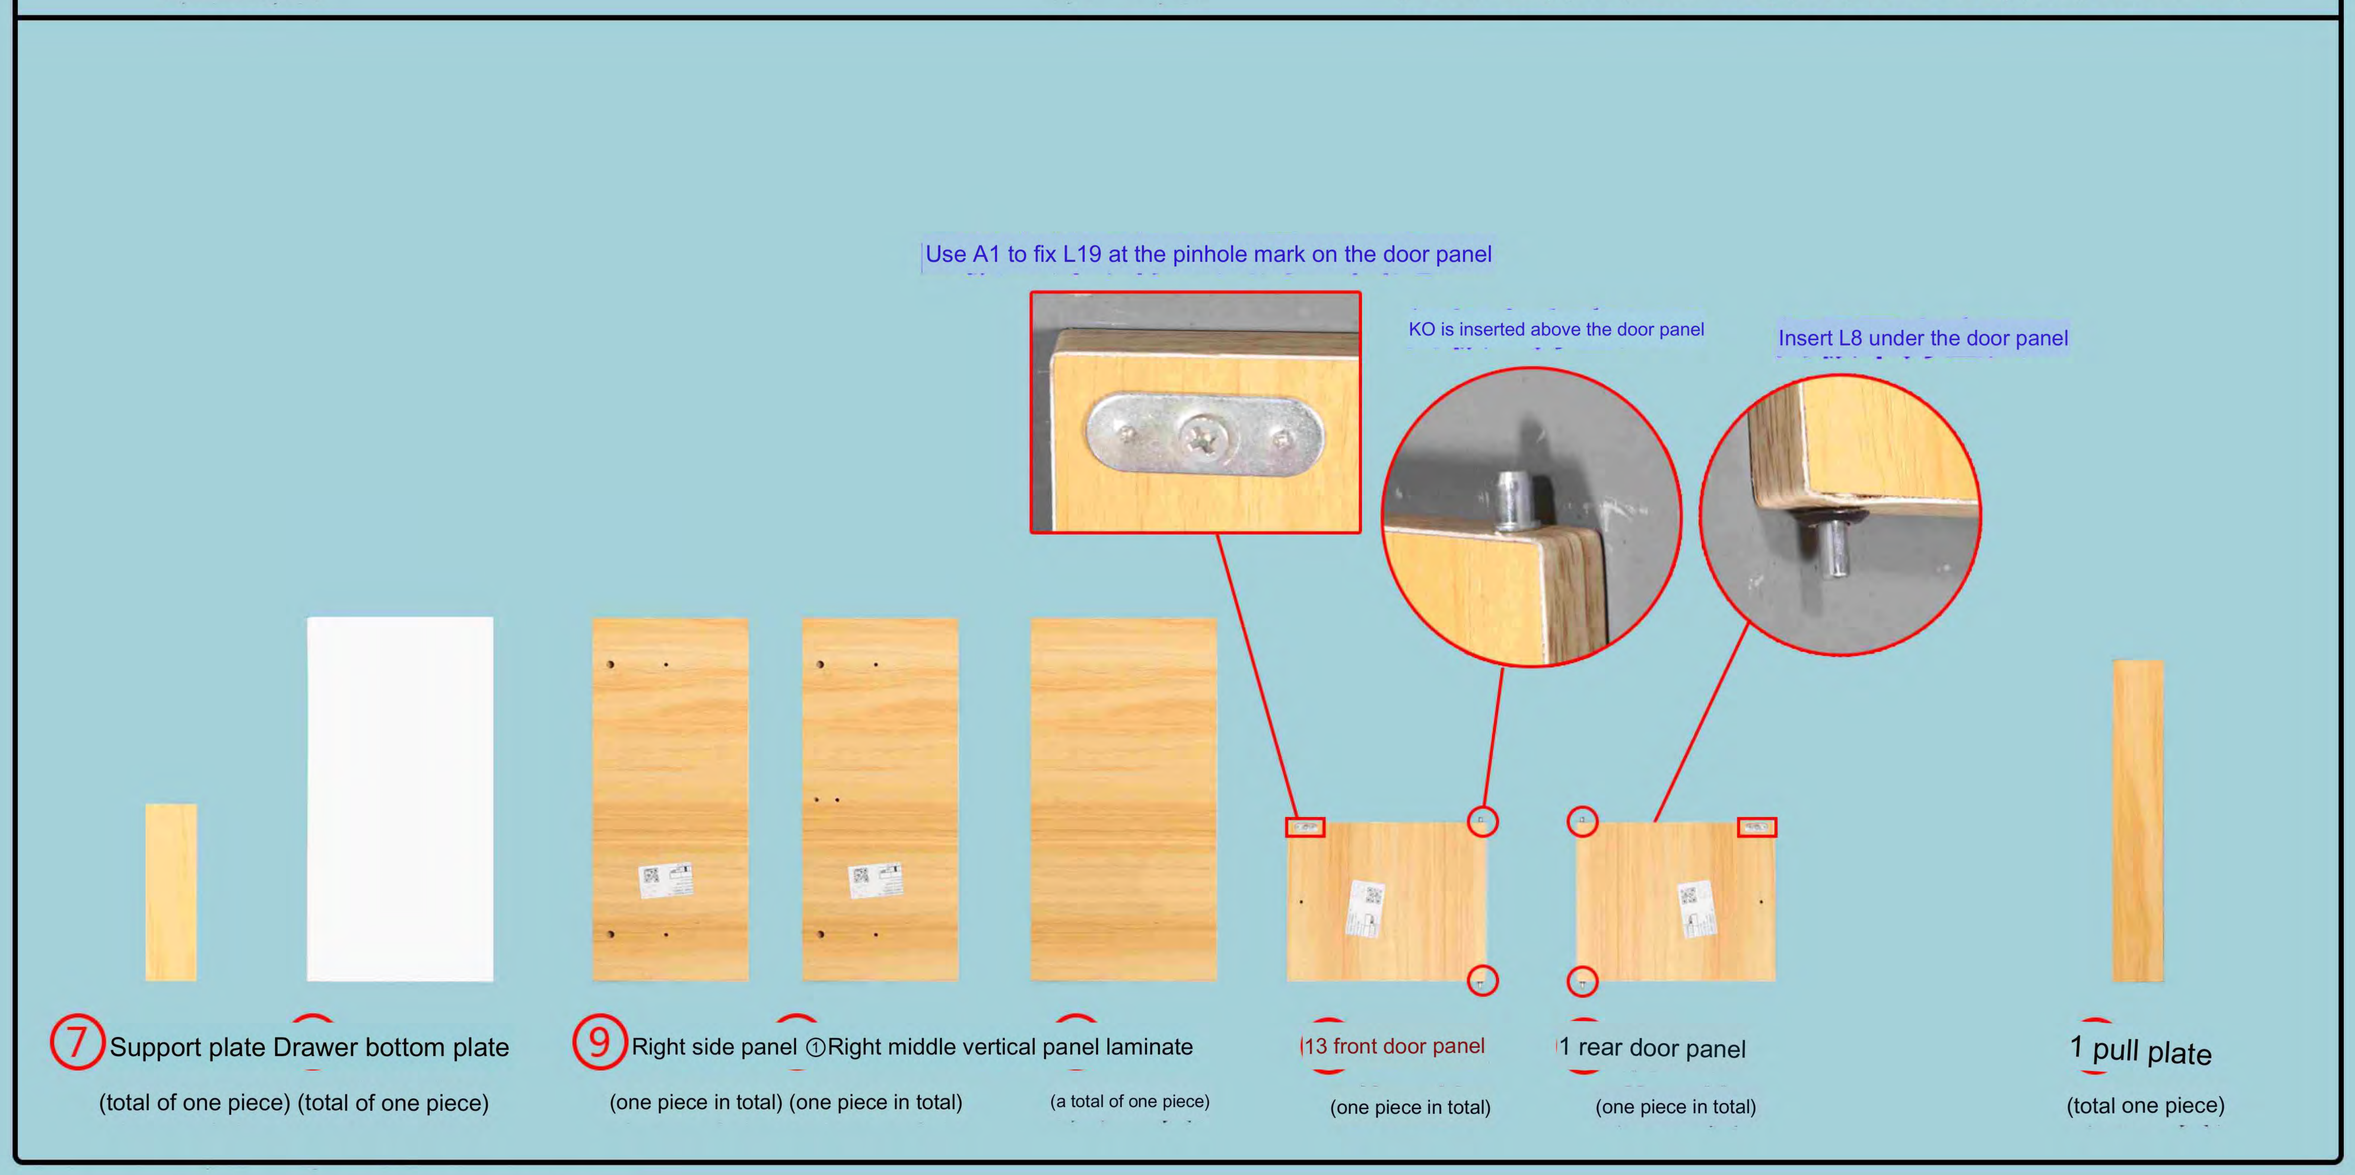

Eccentric installation principle:

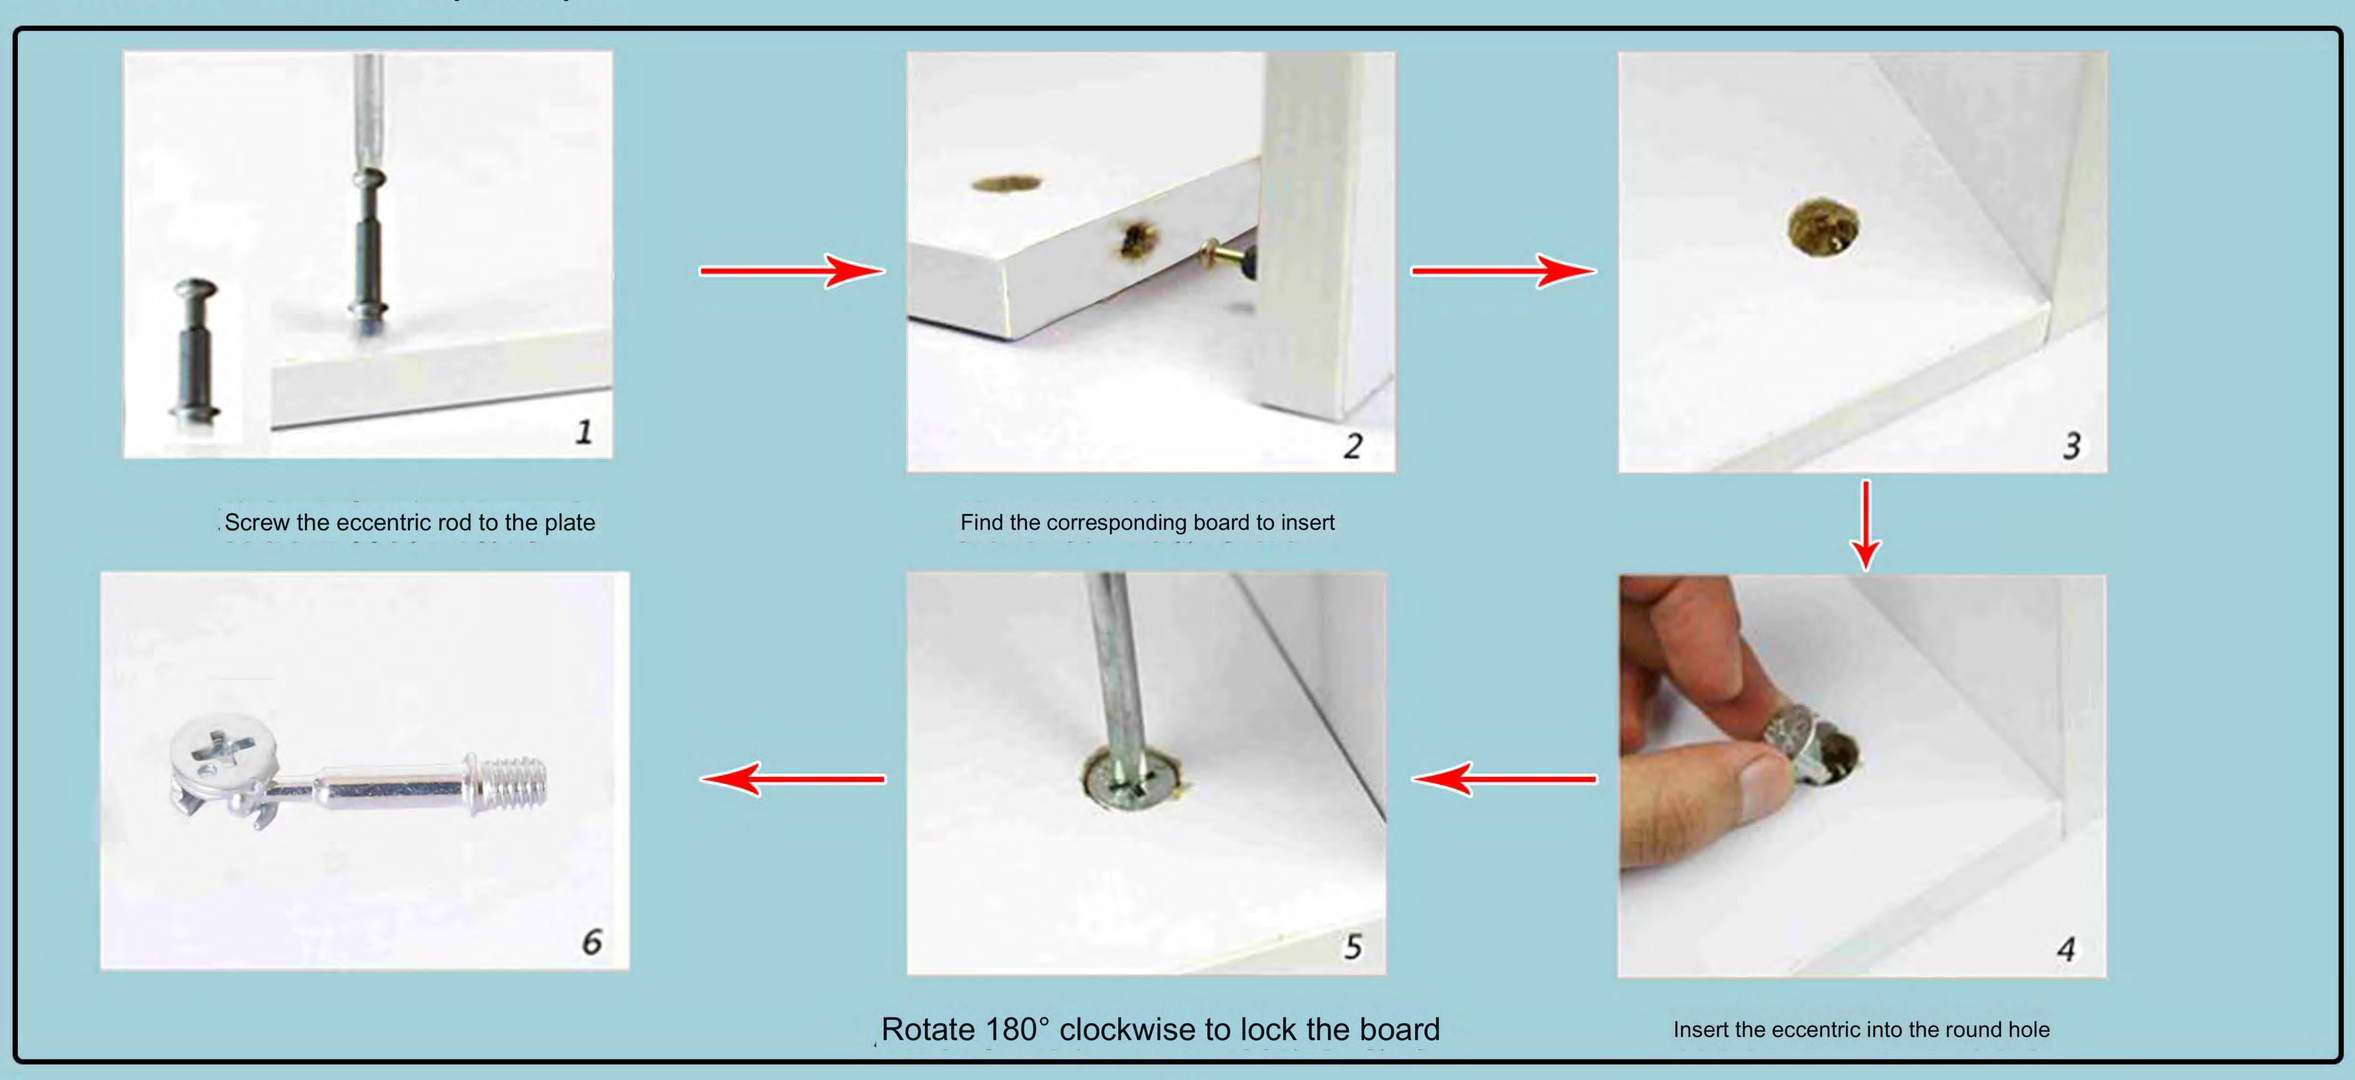

Start the installation; Step 1: The drawer is installed as follows:

<1>:

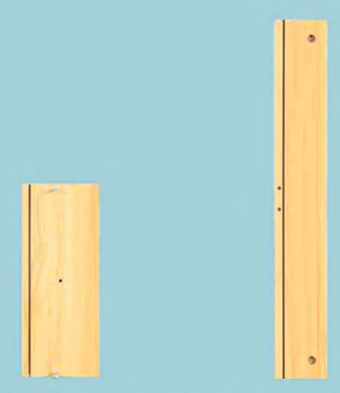

⑤ Drawer Front ⑥ Drawer Sides

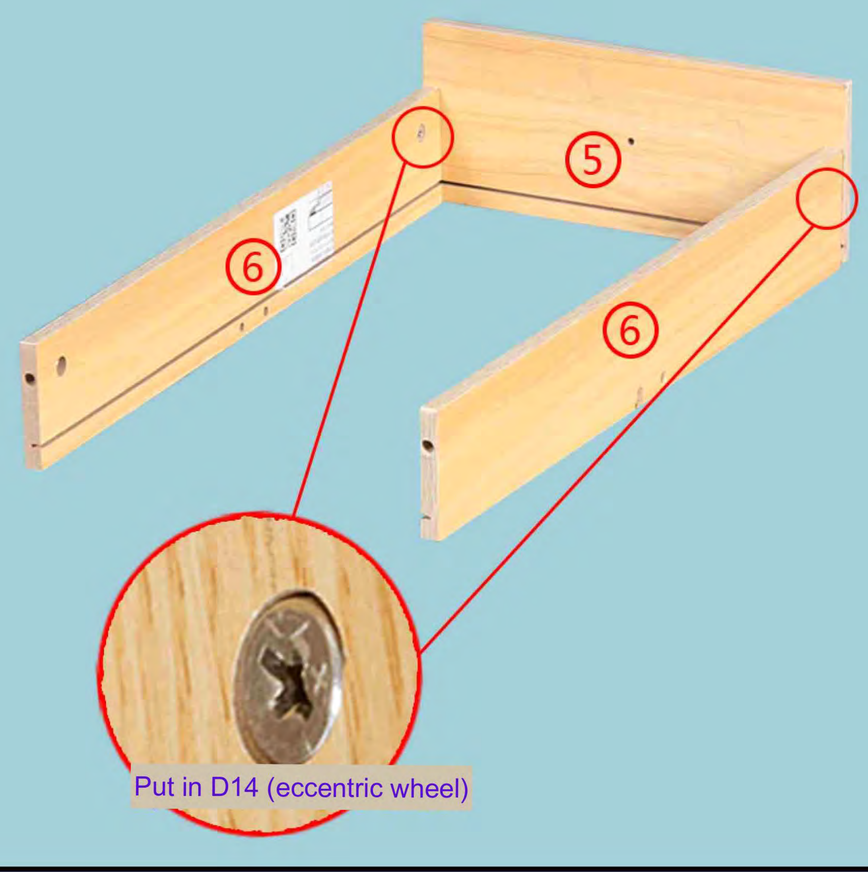

Eccentric wheel + eccentric rod

D14×2

<2>:

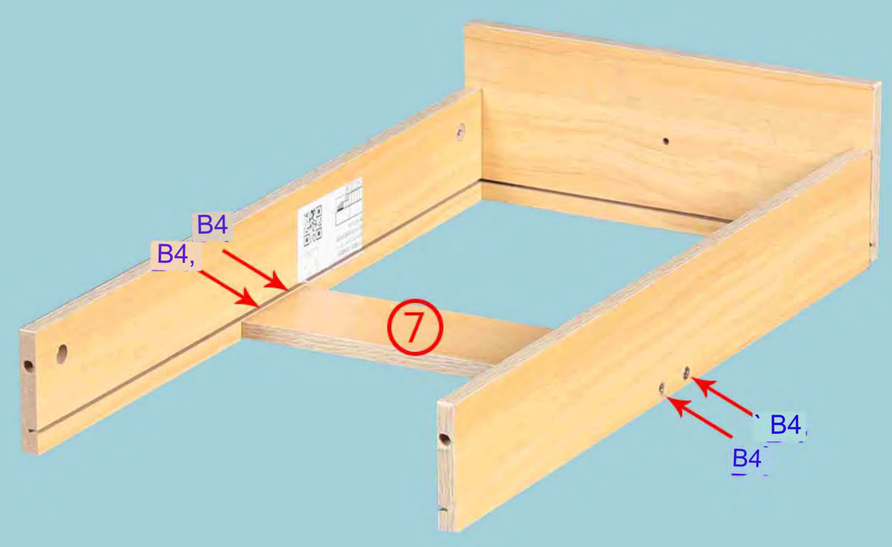

⑦ support plate

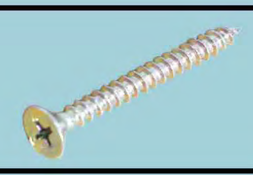

4*40 self-tapping screws

B4×4

<3>:

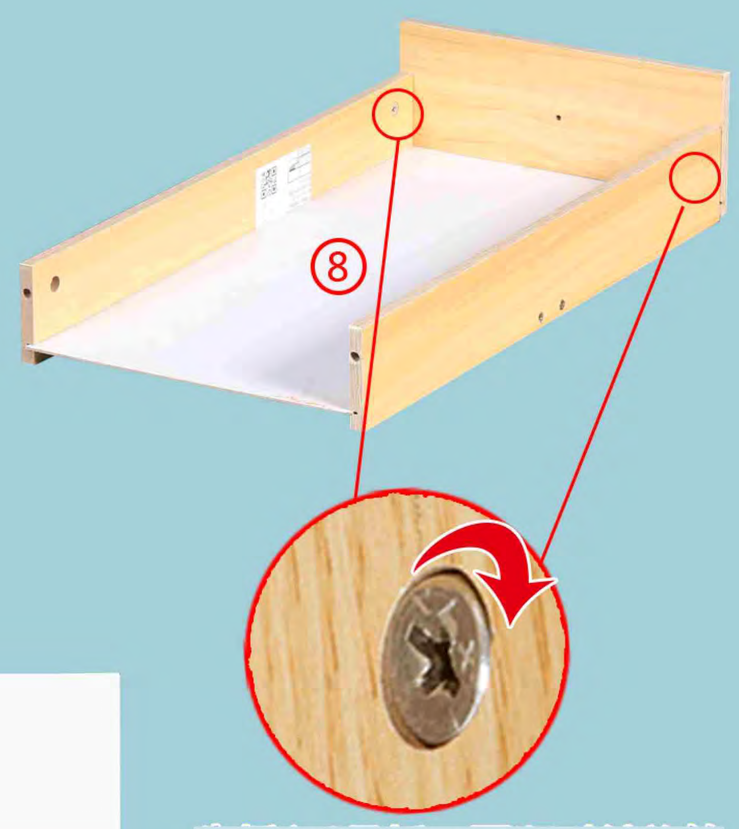

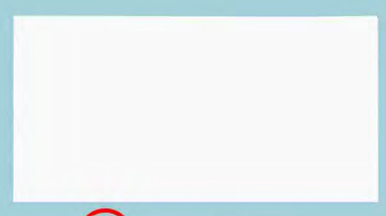

②Drawer Bottom

Insert No. 8 board first, then turn D14 (eccentric wheel) clockwise to lock the board

<4>:

⑤ drawer front

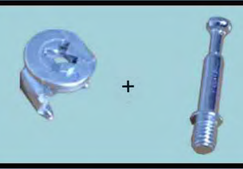

| Eccentric Wheel + Eccentric Rod

D14×2

<5>:

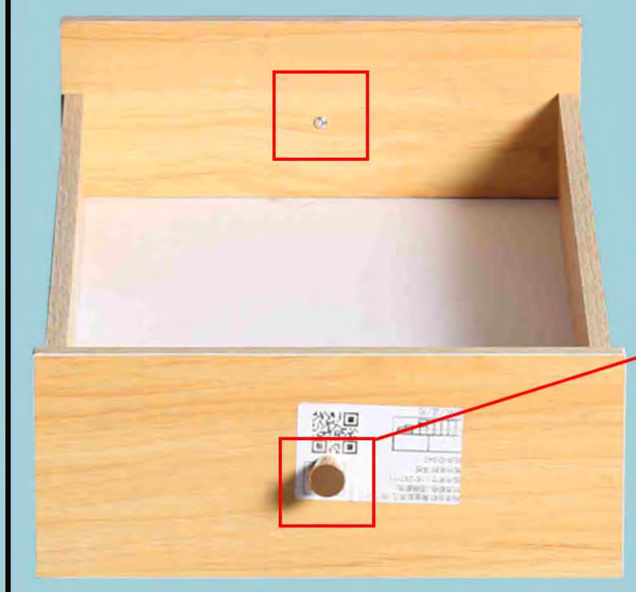

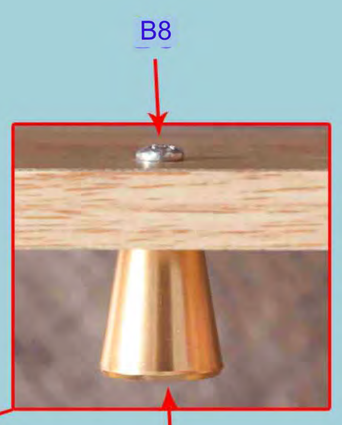

The drawer is installed

Gold round table handle

J15×2

4*16 handle screw

B8×2

Step 2: The overall installation is as follows:

<1>:

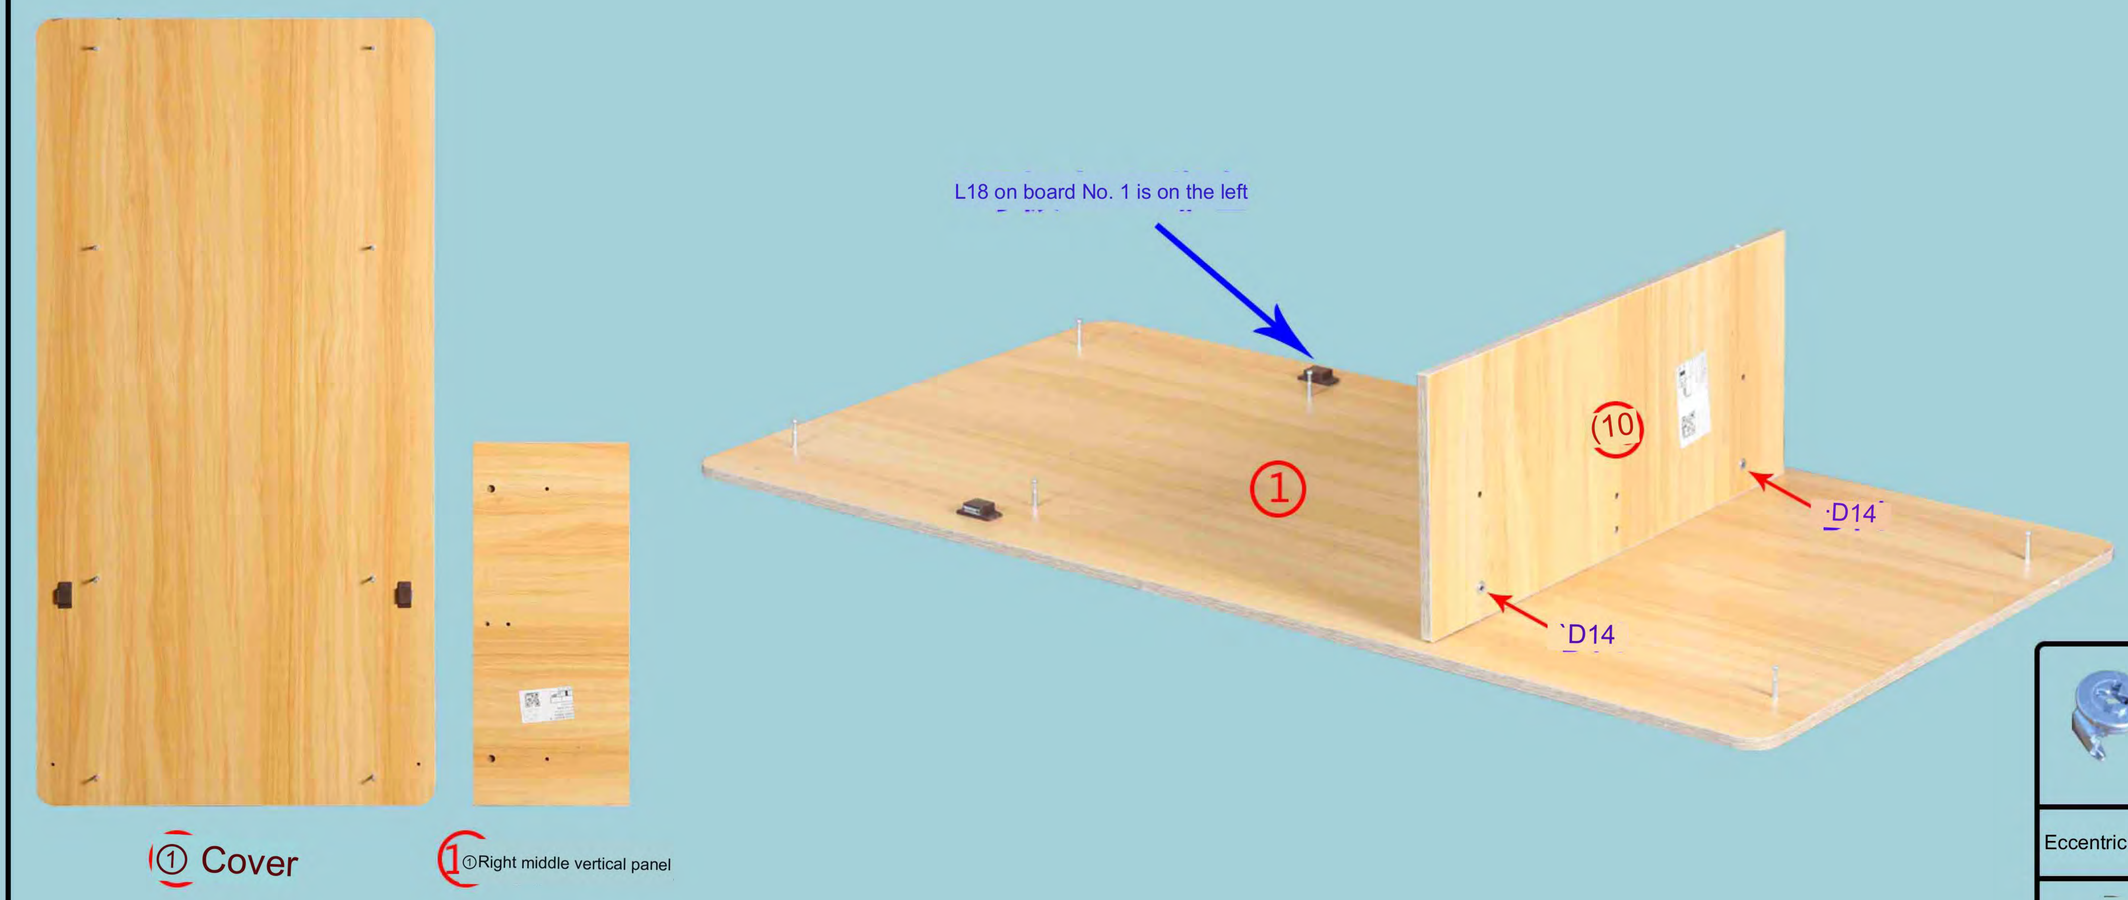

<2>:

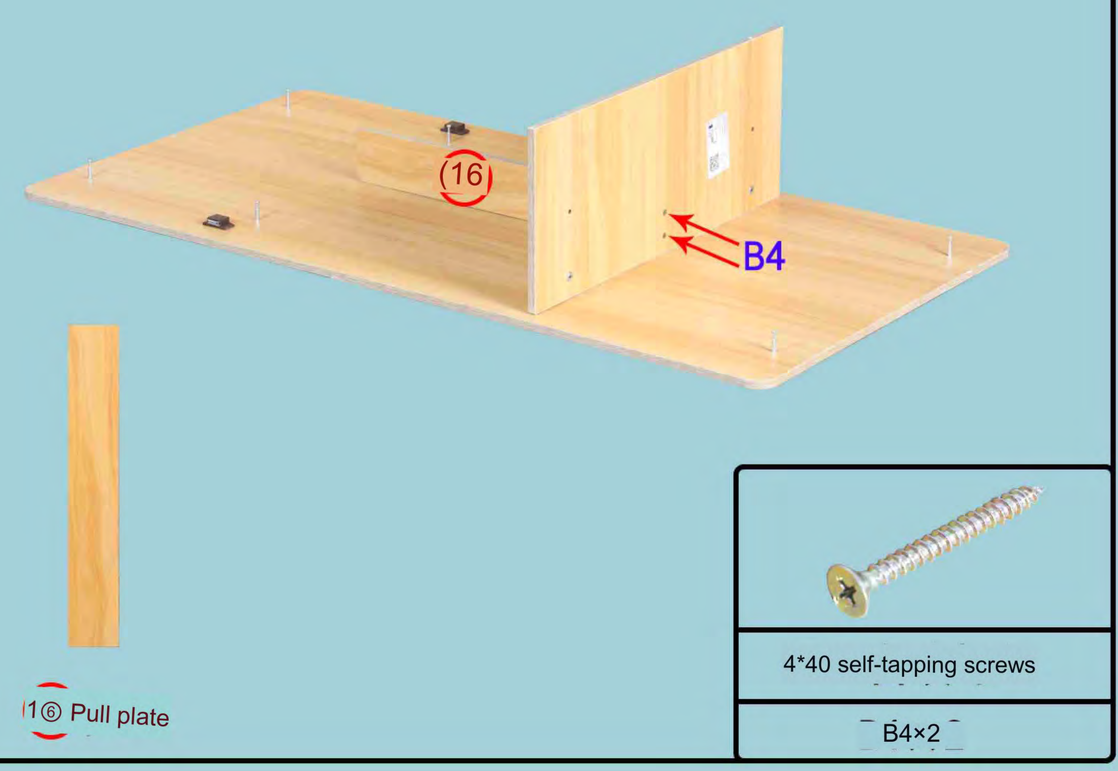

<3>:

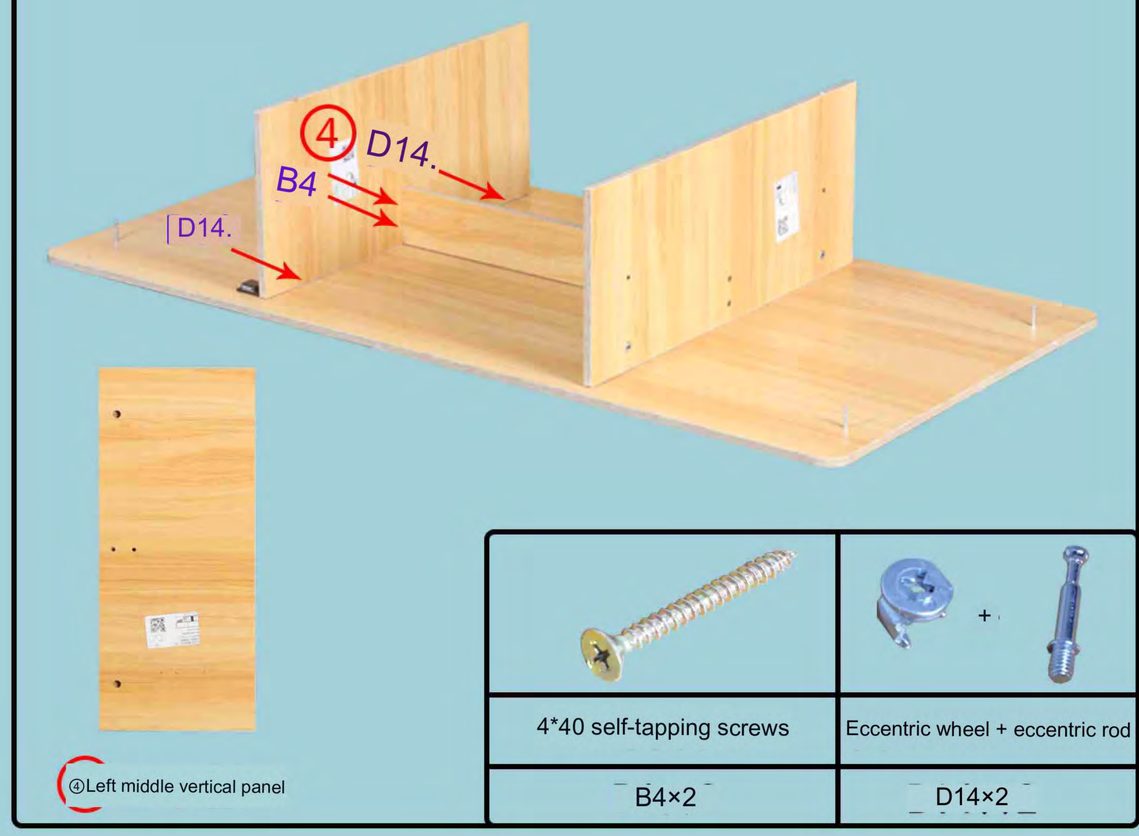

<4>:

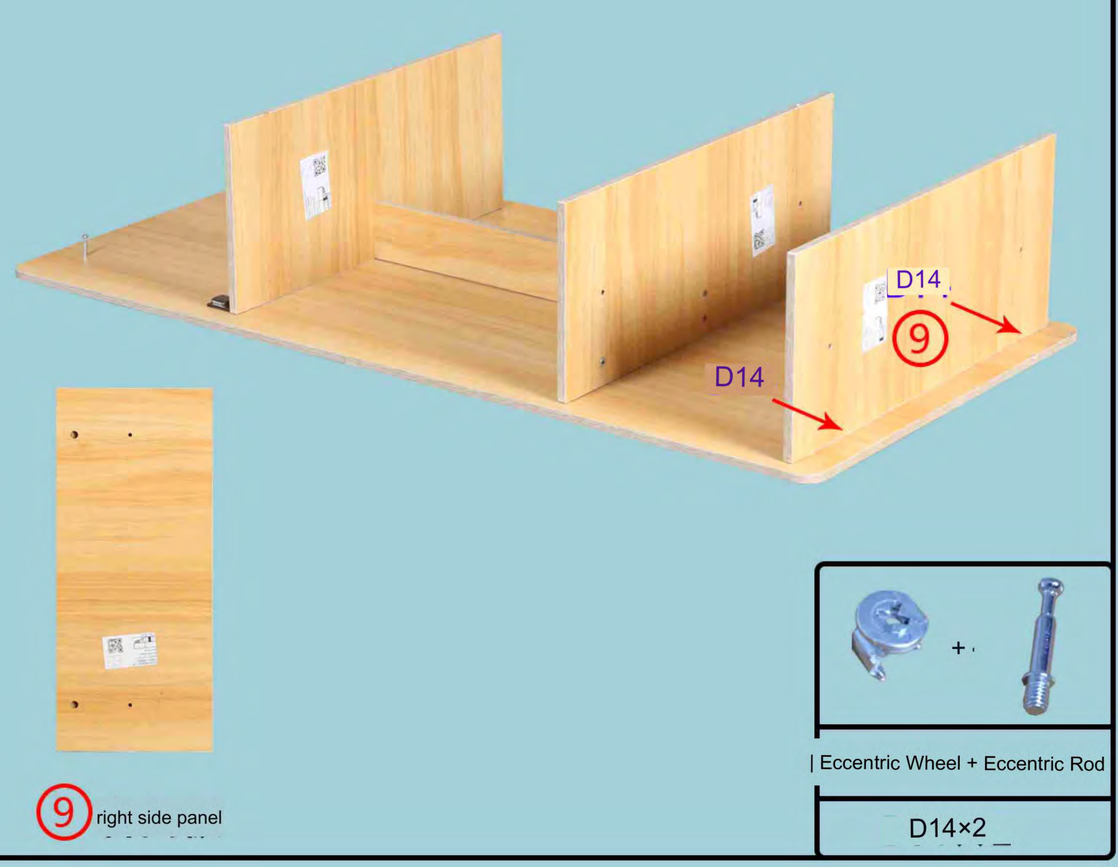

<5>:

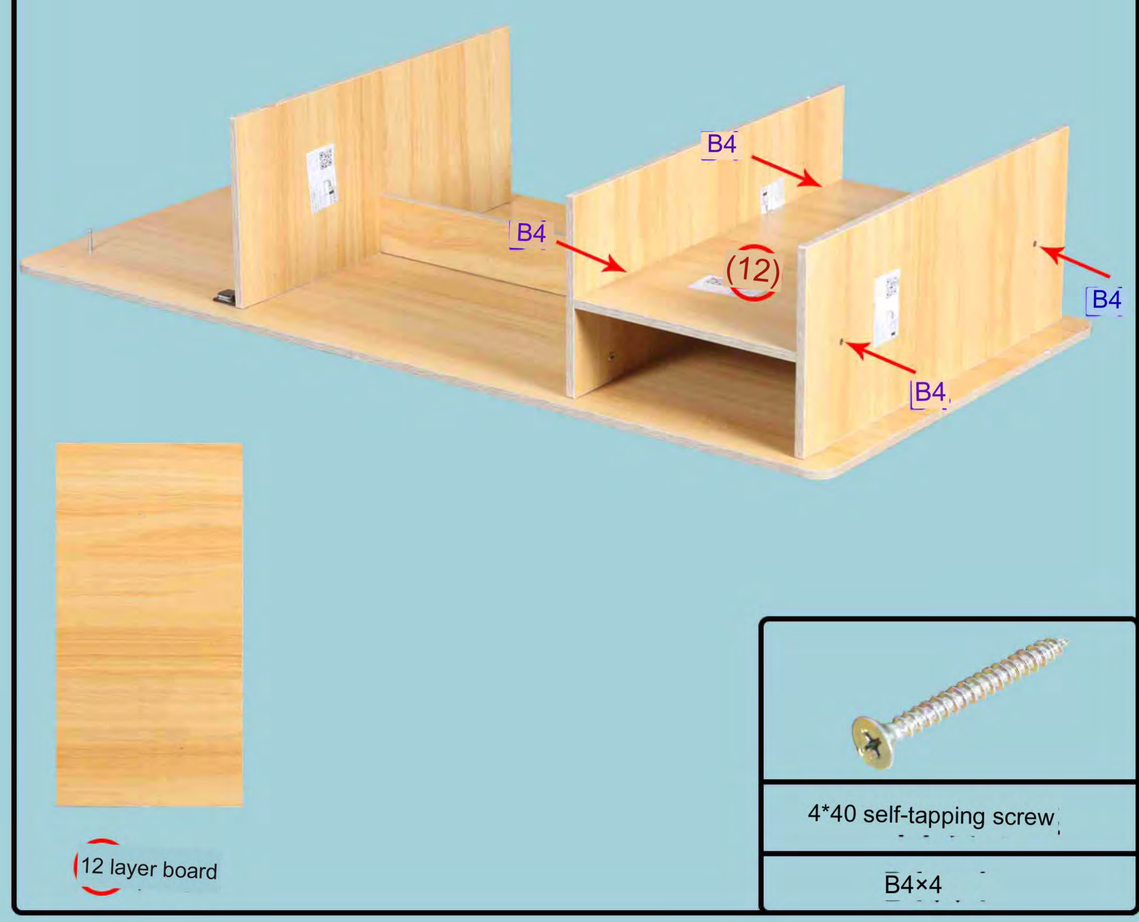

<6>:

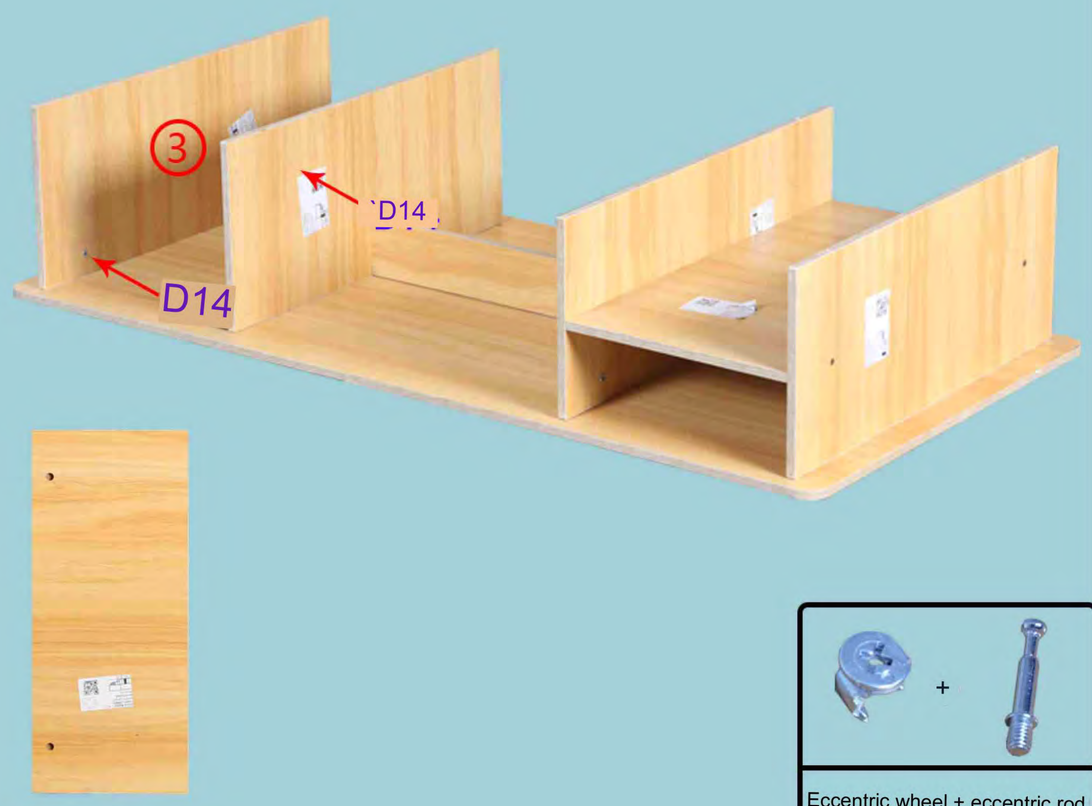

3 >Left panel

Eccentric wheel + eccentric rod

D14×2

<7>:

Notice : When installing, the small hole circled on the No. 2 board is on the left,

and the side with the pinhole mark on the No. 2 board is facing upwards

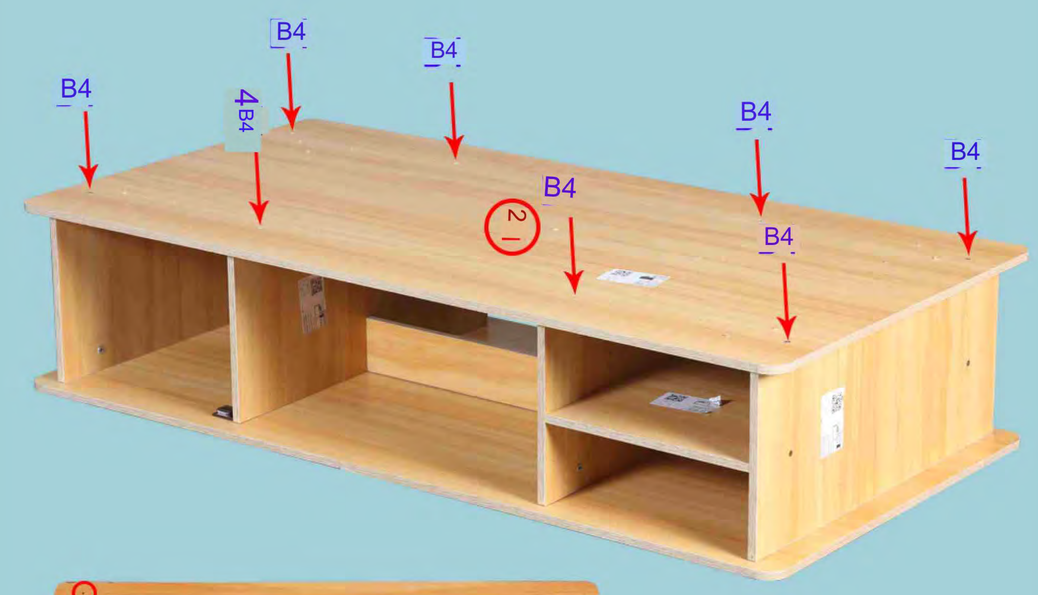

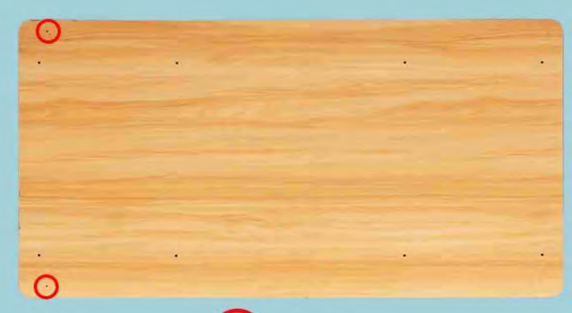

2 Bottom plate

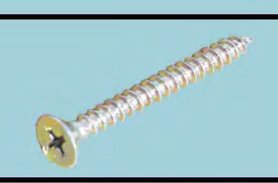

4*40 self-tapping screws

B4X8

<8> :

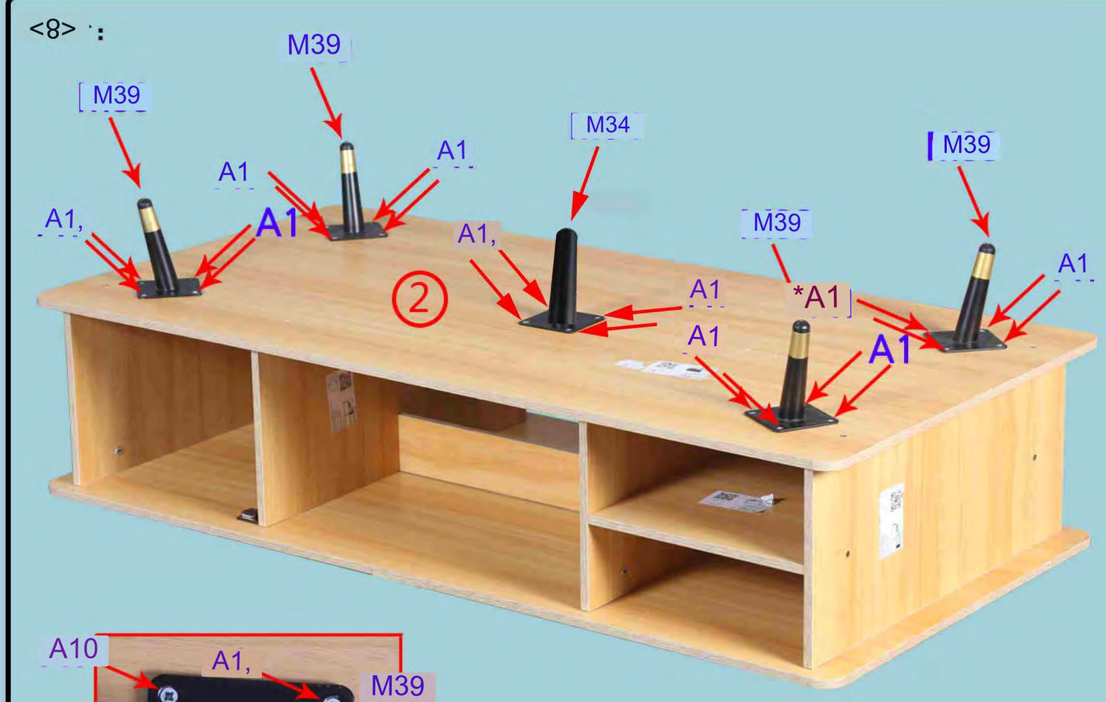

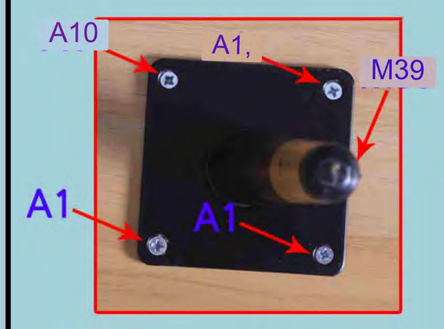

Fix the M39 with A1 at the pinhole

mark on the No. 2 board

3.5*12 self-tapping screws, extended metal legs with gaskets

A1×20

M39×4

<9>: The overall arrangement is as follows:

<10>:

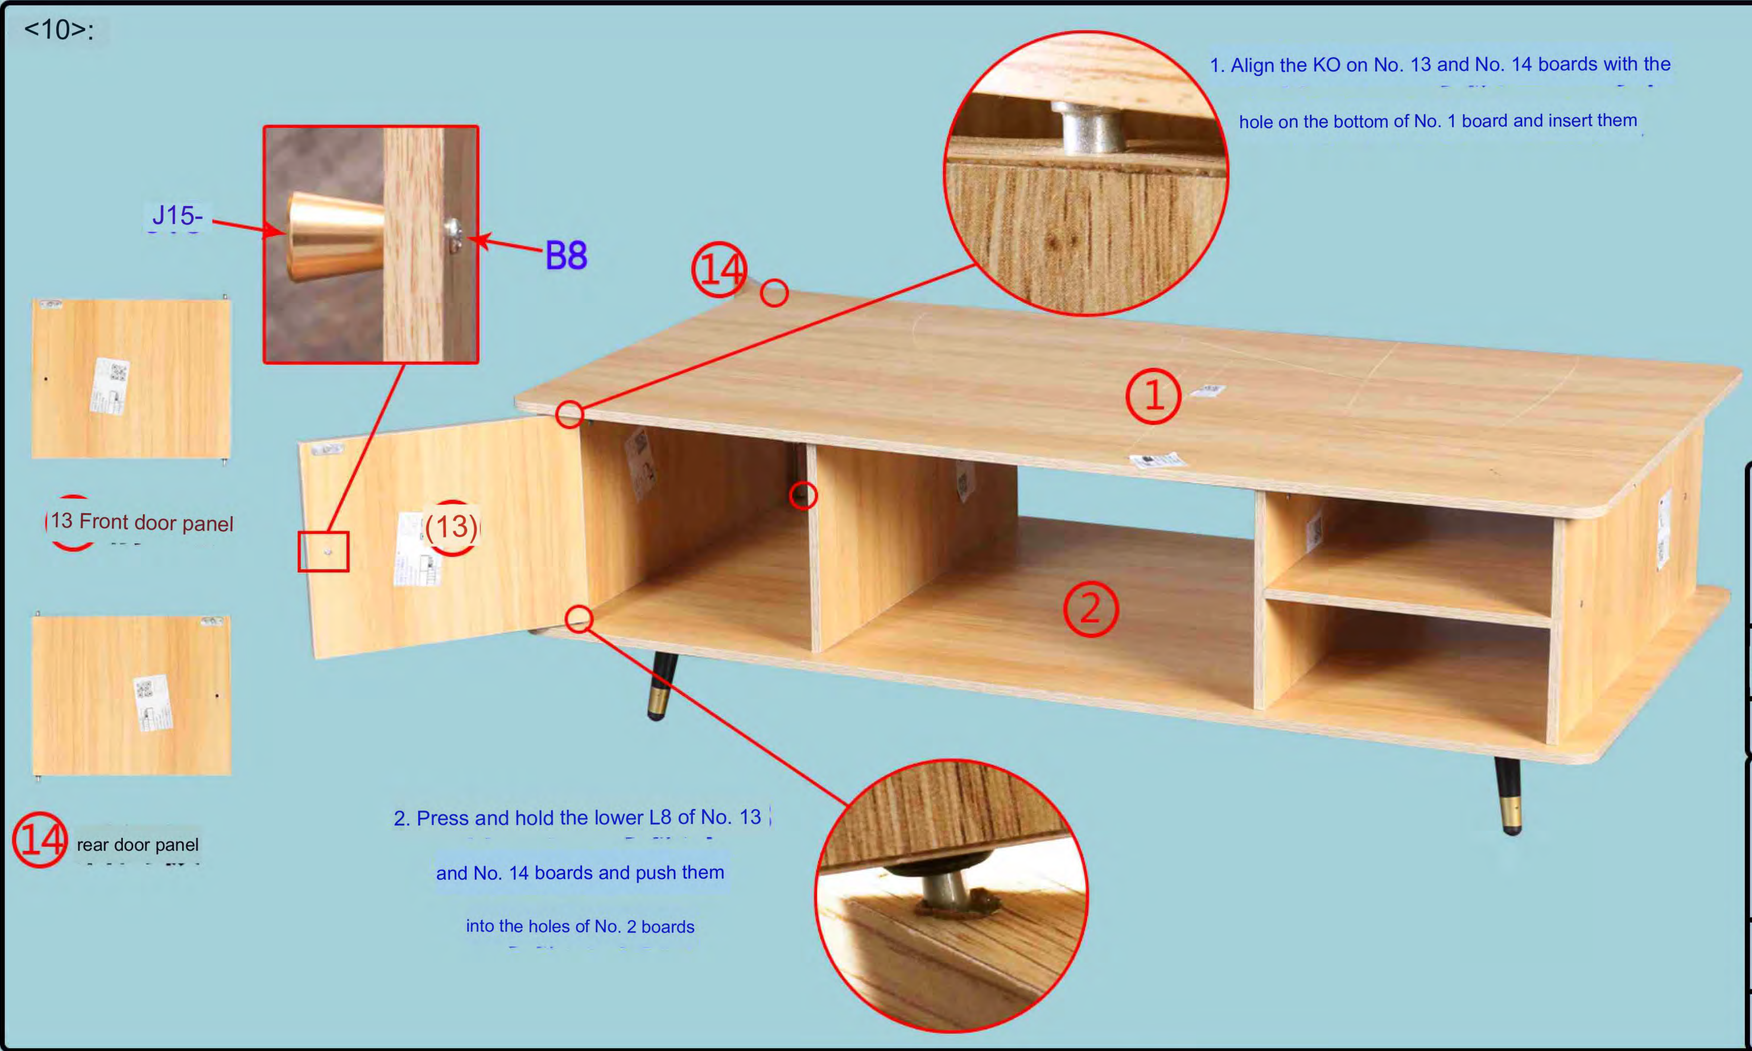

1. Align the KO on No. 13 and No. 14 boards with the

hole on the bottom of No. 1 board and insert them

13 Front door panel

14 rear door panel

2. Press and hold the lower L8 of No. 13

and No. 14 boards and push them

into the holes of No. 2 boards

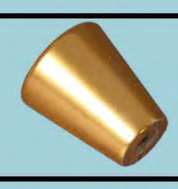

4*16 handle screw golden round table handle

B8×2

J15×2

Spring spacer

Iron shelf pin

pin L8×2

K0X2

<11>:

<12>:

Completion diagram